

SERVICE MANUAL

DAIHATSU

TYPE **A4B** Series

Automatic Transaxle
(Electrically-Controlled)

FOREWORD

This service manual describes the disassembling, check and assembling procedures for the unit of the FF, 4-speed, electronically-controlled automatic transaxle itself.
For the installation and removal procedure for the transaxle onto or from the vehicle, or the check procedure for the control system, refer to the Chassis Section.

Published in May, 2000



DAIHATSU MOTOR CO., LTD.

NO.9735

©2000 DAIHATSU MOTOR CO., LTD.

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Daihatsu Motor Co., Ltd.