

DAIHATSU SIRION

Chassis

Service manual

SECTION INDEX

SECTION NAME	SECTION
GENERAL INFORMATION	GI
MAINTENANCE	MA
FRONT AXLE & SUSPENSION	FS
REAR AXLE & SUSPENSION	RS
BRAKE (Including A.B.S)	BR
STEERING	SR
BODY	BO
BODY ELECTRICAL	BE
HARNESS & WIRING DIAGRAM	HW

