

INDEX



GENERAL INFORMATION	GI
MAINTENANCE	MA
ENGINE TUNING	ET
ENGINE MECHANICAL	EM
INTAKE & EXHAUST	IE
LUBRICATION SYSTEM	LU
COOLING SYSTEM	CO
FUEL SYSTEM	FU
ENGINE CONTROL SYSTEM	EF
EMISSION CONTROL SYSTEM	EC
IGNITION SYSTEM	IG
STARTING SYSTEM	ST
CHARGING SYSTEM	CH
CLUTCH	CL
MANUAL TRANSAXLE	MT
AUTOMATIC TRANSAXLE	AT
DIFFERENTIAL	DF
TRANSFER	TF
ENGINE MOUNTING	MTG
FRONT AXLE & SUSPENSION	FS
REAR AXLE & SUSPENSION	RS
DRIVE SHAFT & PROPELLER SHAFT	DPS
STEERING	SR
BRAKE	BR
ABS	ABS
BODY & BODY ELECTRICAL SYSTEM	BBE
HEATER & AIR CONDITIONER	AC
SRS AIRBAG SYSTEM	SAB
IMMOBILIZER SYSTEM	IMB

NOTE;

The sections denoted by  are not included in this manual.

As for those sections for which no entry is made in this manual, see the reference materials posted at the Foreword page.

Some changes have been made as to the configuration of this manual, compared with the conventional manual.