

HARNESS & WIRING DIAGRAM

WIRING DIAGRAM

POWER SOURCE /	
RELAY BLOCK	HW-2
POWER SOURCE /	
JUNCTION BLOCK	HW-4
CHARGING SYSTEM	HW-10
STARTING SYSTEM	HW-12
EFI SYSTEM	HW-18
ABS SYSTEM	HW-58
SRS AIRBAG SYSTEM	HW-60
A/T CONTROL SYSTEM	HW-62
VEHICLE SPEED SENSOR	HW-70
HEAD LAMP	HW-72
DAY-LIGHT SYSTEM	HW-74
HEAD LAMP	
LEVELING SYSTEM	HW-76
FRONT FOG LAMP	HW-78
REAR FOG LAMP	HW-80
TAIL LAMP & ILLMINATION	HW-82
TURN & HAZARD LAMP	HW-88
STOP LAMP	HW-90
BACK-UP LAMP	HW-92
INTERIOR LAMP	HW-94

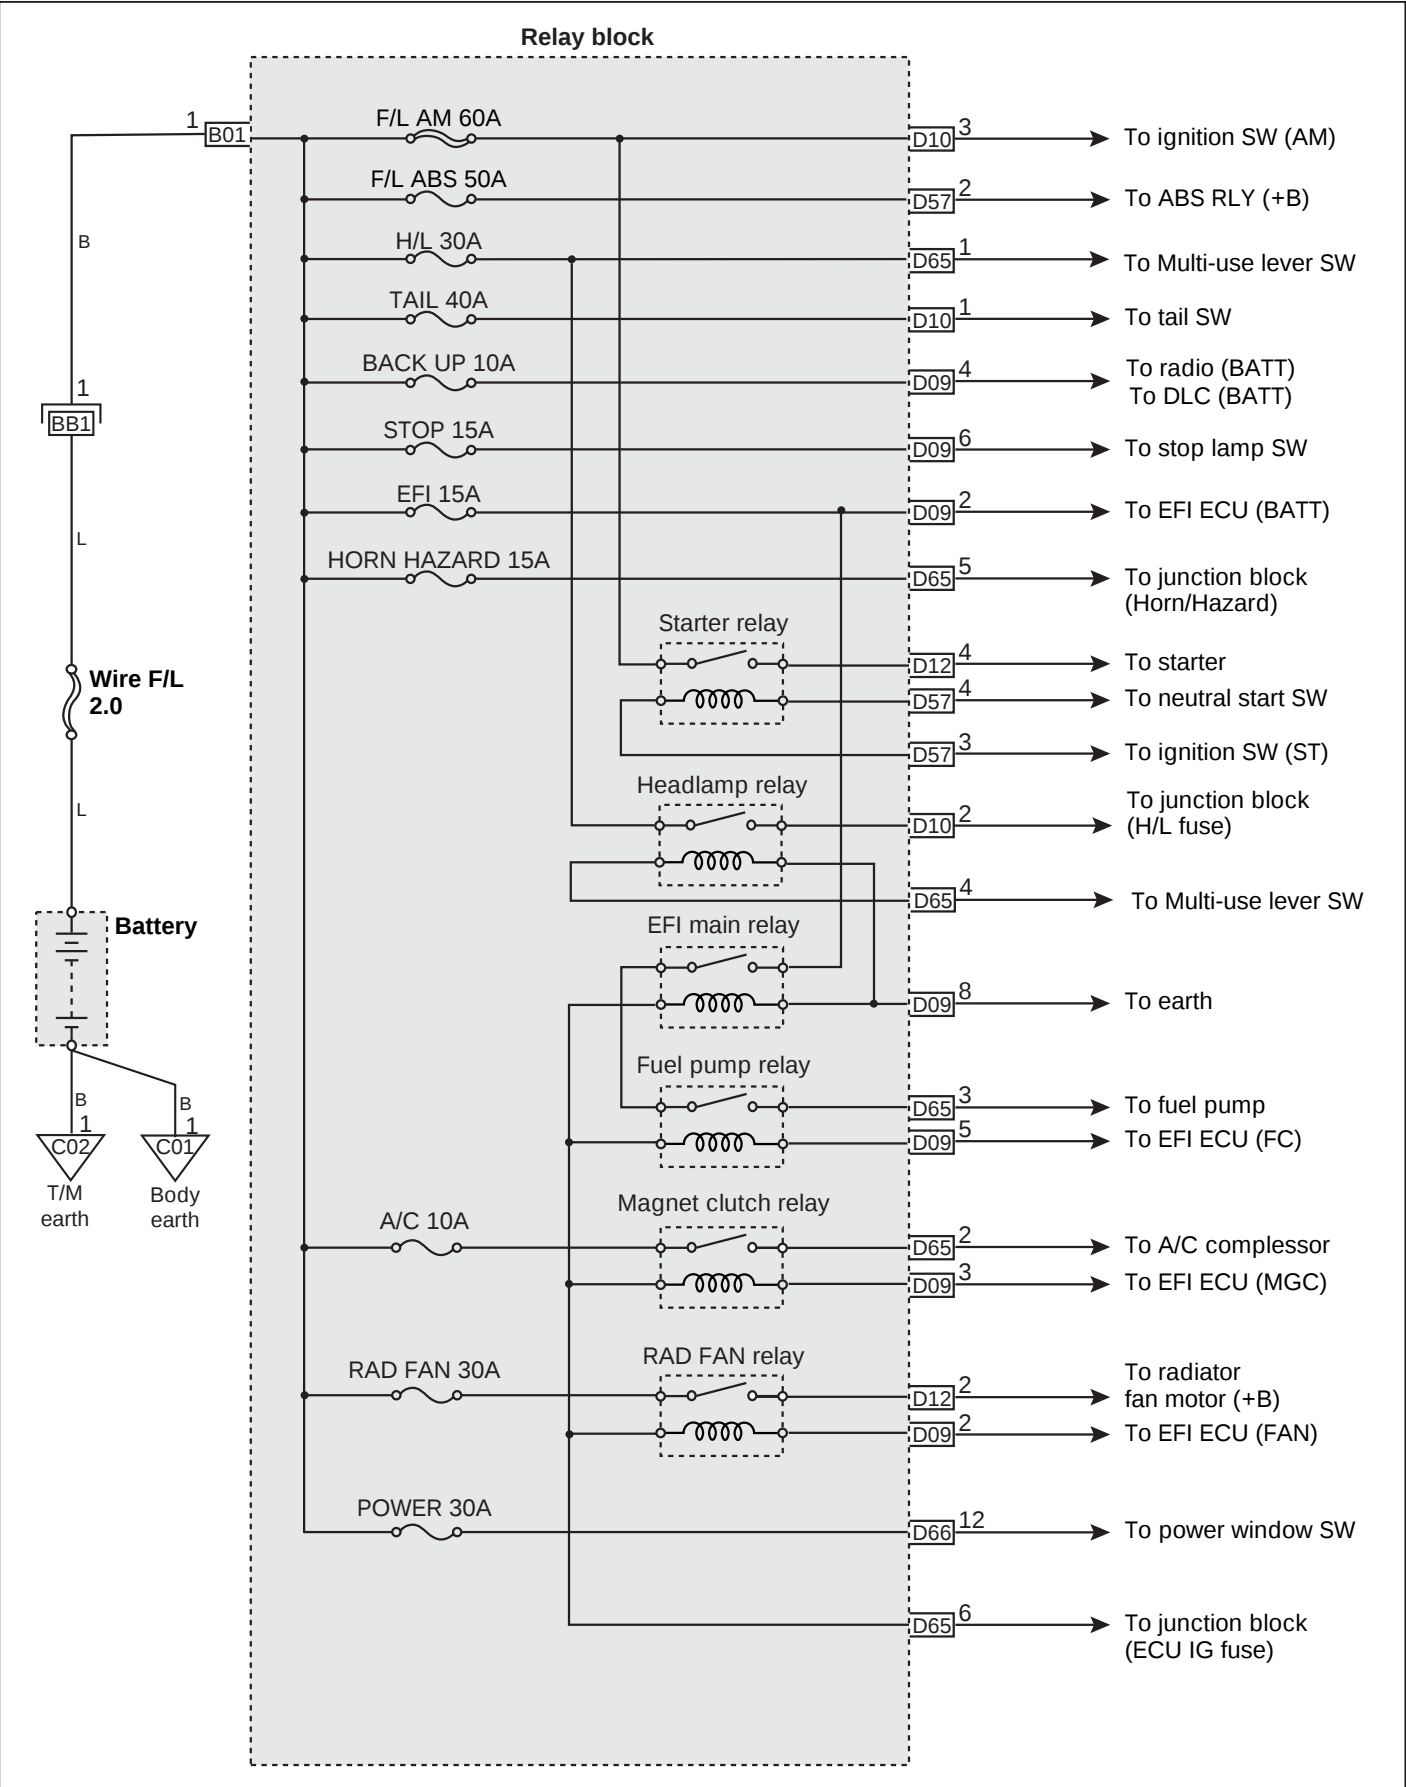
COMBINATION METER	HW-96
FRONT WIPER & WASHER	HW-104
REAR WIPER & WASHER	HW-106
REAR WINDOW	
DEFOGGER	HW-108
REMOTE CONTROL	
MIRROR	HW-110
POWER WINDOW	HW-112
ITC SYSTEM	HW-116
IMB SYSTEM	HW-124
AIR CONDITIONER &	
HEATER	HW-128
RADIATOR FAN	HW-132
HORN	HW-134
RADIO &	
CIGARETTE LIGHTER	HW-136
CLOCK	HW-138
DATA LINK CONNECTOR	HW-140
CONNECTOR LIST	HW-142
LOCATION OF CONNECTORS	
RHD VEHICLE	HW-168
LHD VEHICLE	HW-172

For the table showing wire harness codes that are used in the circuit diagrams in this manual.


Sign	Wire harness	Sign	Wire harness	Sign	Wire harness	Sign	Wire harness
A	Engine wire	G	Cowl wire RH (LHD)	M	Floor wire No.1	S	Back door wire No.2
B	Engine wire No.2	H	Front door wire RH (RHD)	N	Rear door wire LH	T	Turn switch wire (RHD)
C	Engine wire No.3	I	Front door wire LH (RHD)	O	Floor wire No.2	U	Turn switch wire (LHD)
D	Cowl wire LH (RHD)	J	Front door wire RH (LHD)	P	Floor wire No.4	V	Fuel pump wire
E	Cowl wire RH (RHD)	K	Front door wire LH (LHD)	Q	Roof wire	W	Rear window wire
F	Cowl wire LH (LHD)	L	Rear door wire RH	R	Back door wire No.1	X	—————

WIRING DIAGRAM

POWER SOURCE / RELAY BLOCK (RHD)




POWER SOURCE / RELAY BLOCK (LHD)

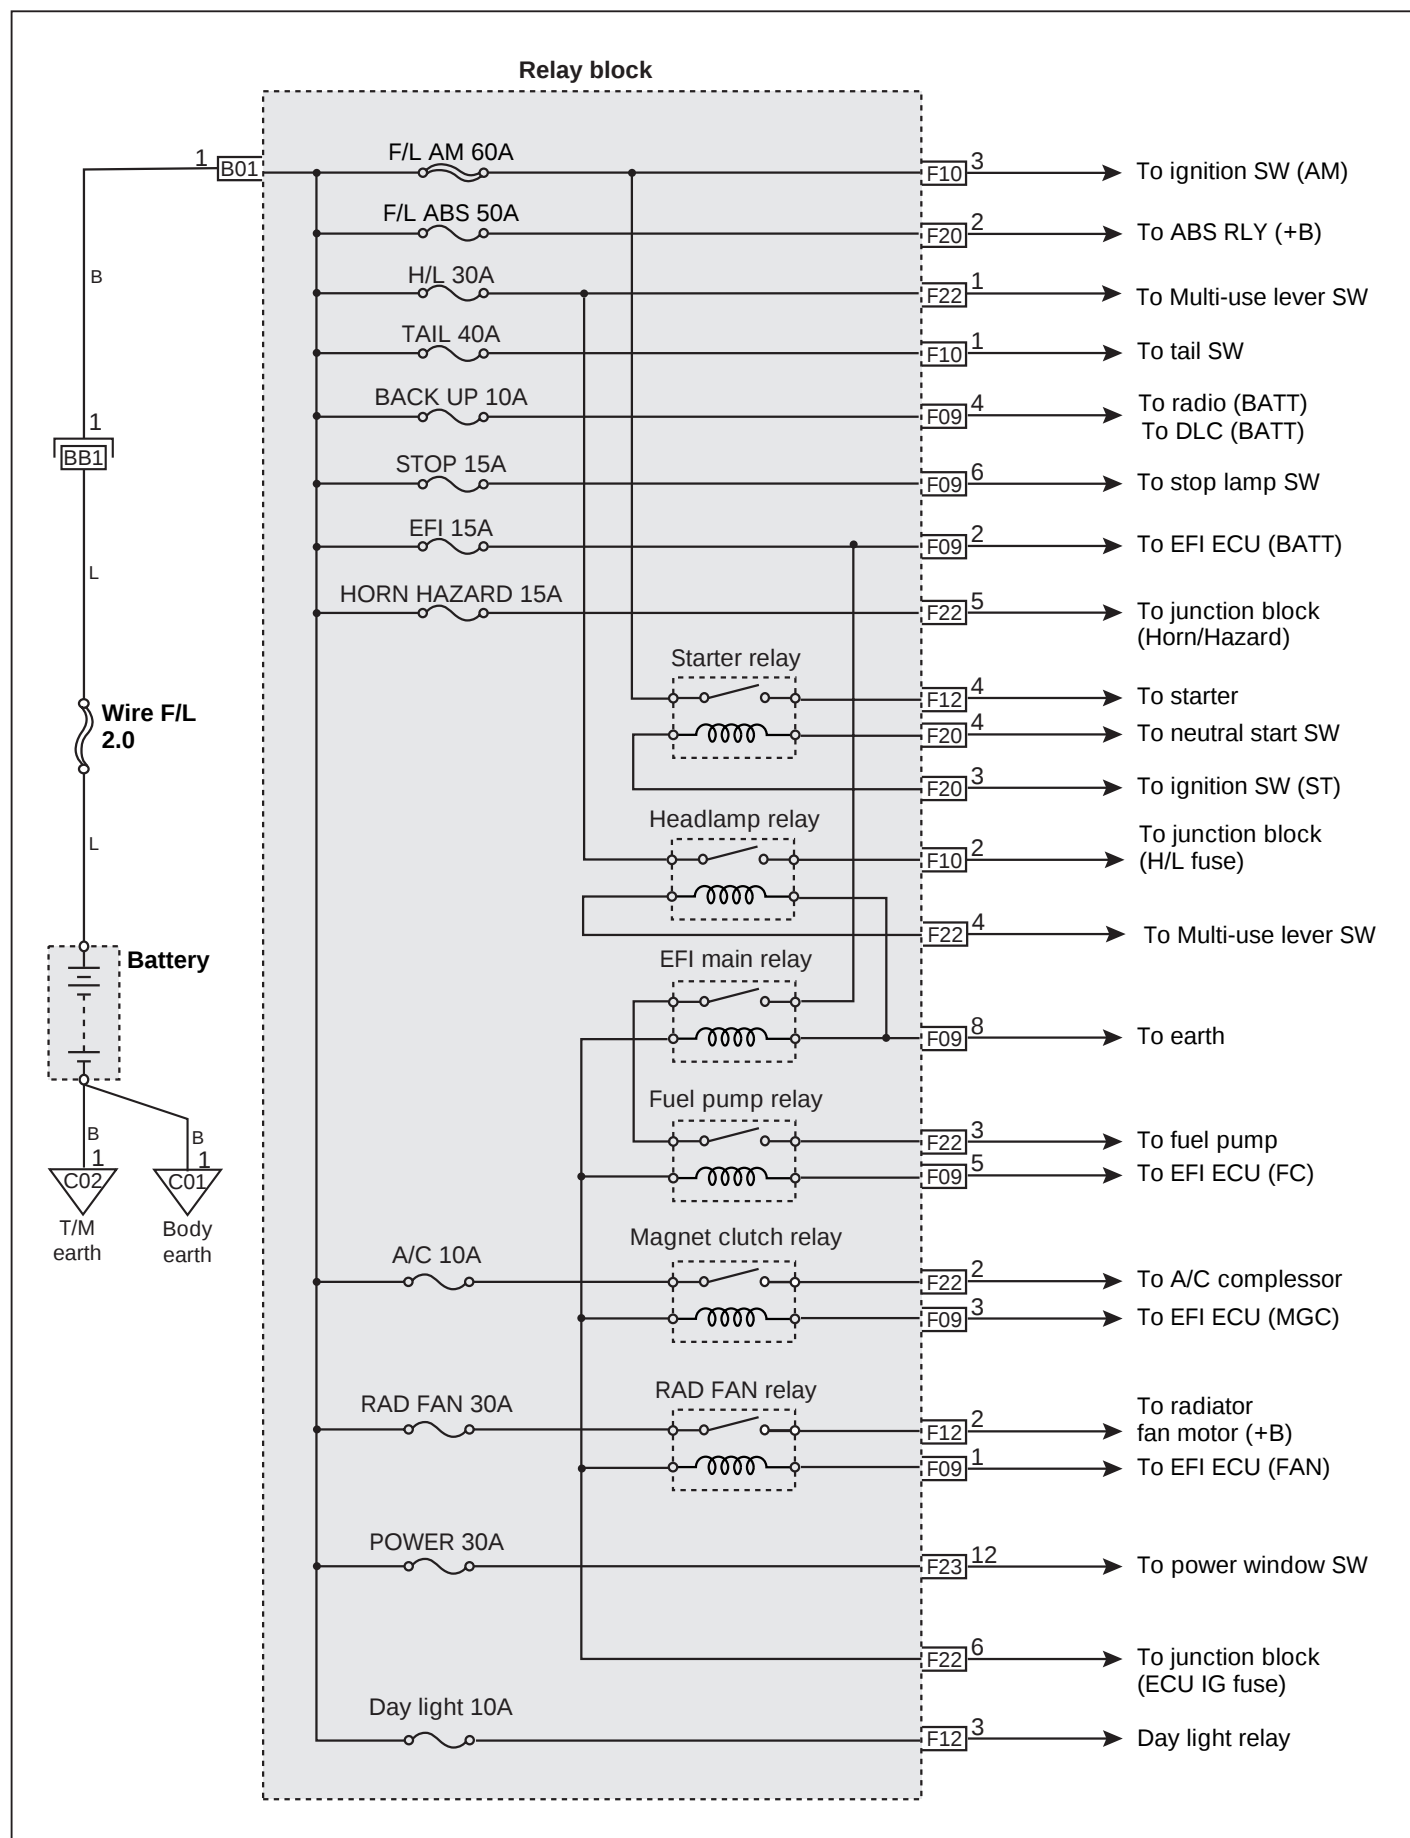


HW-4

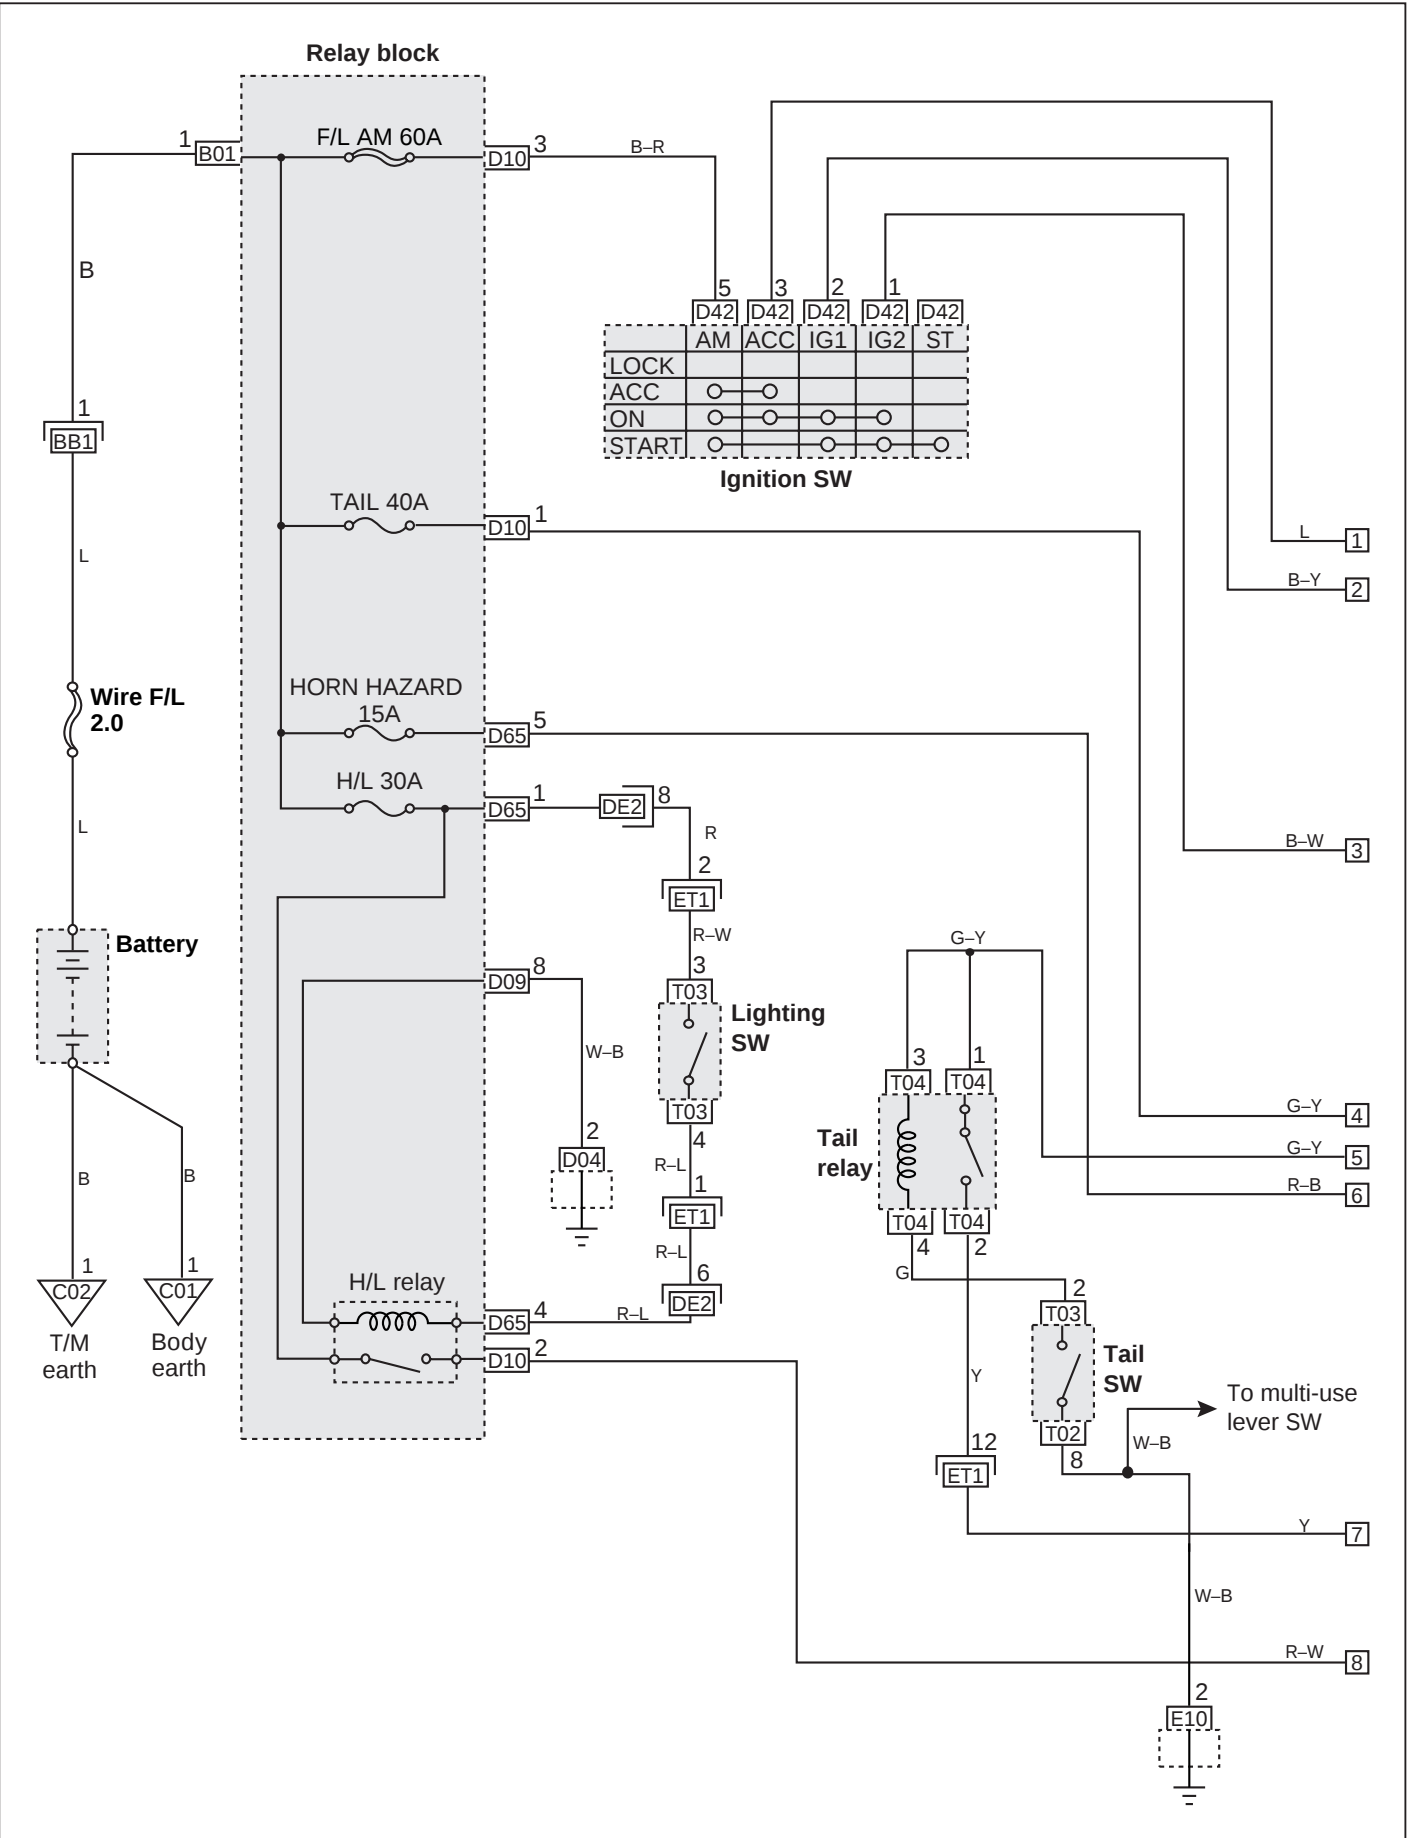POWER SOURCE / JUNCTION BLOCK (RHD) -1




POWER SOURCE / JUNCTION BLOCK (RHD) -2

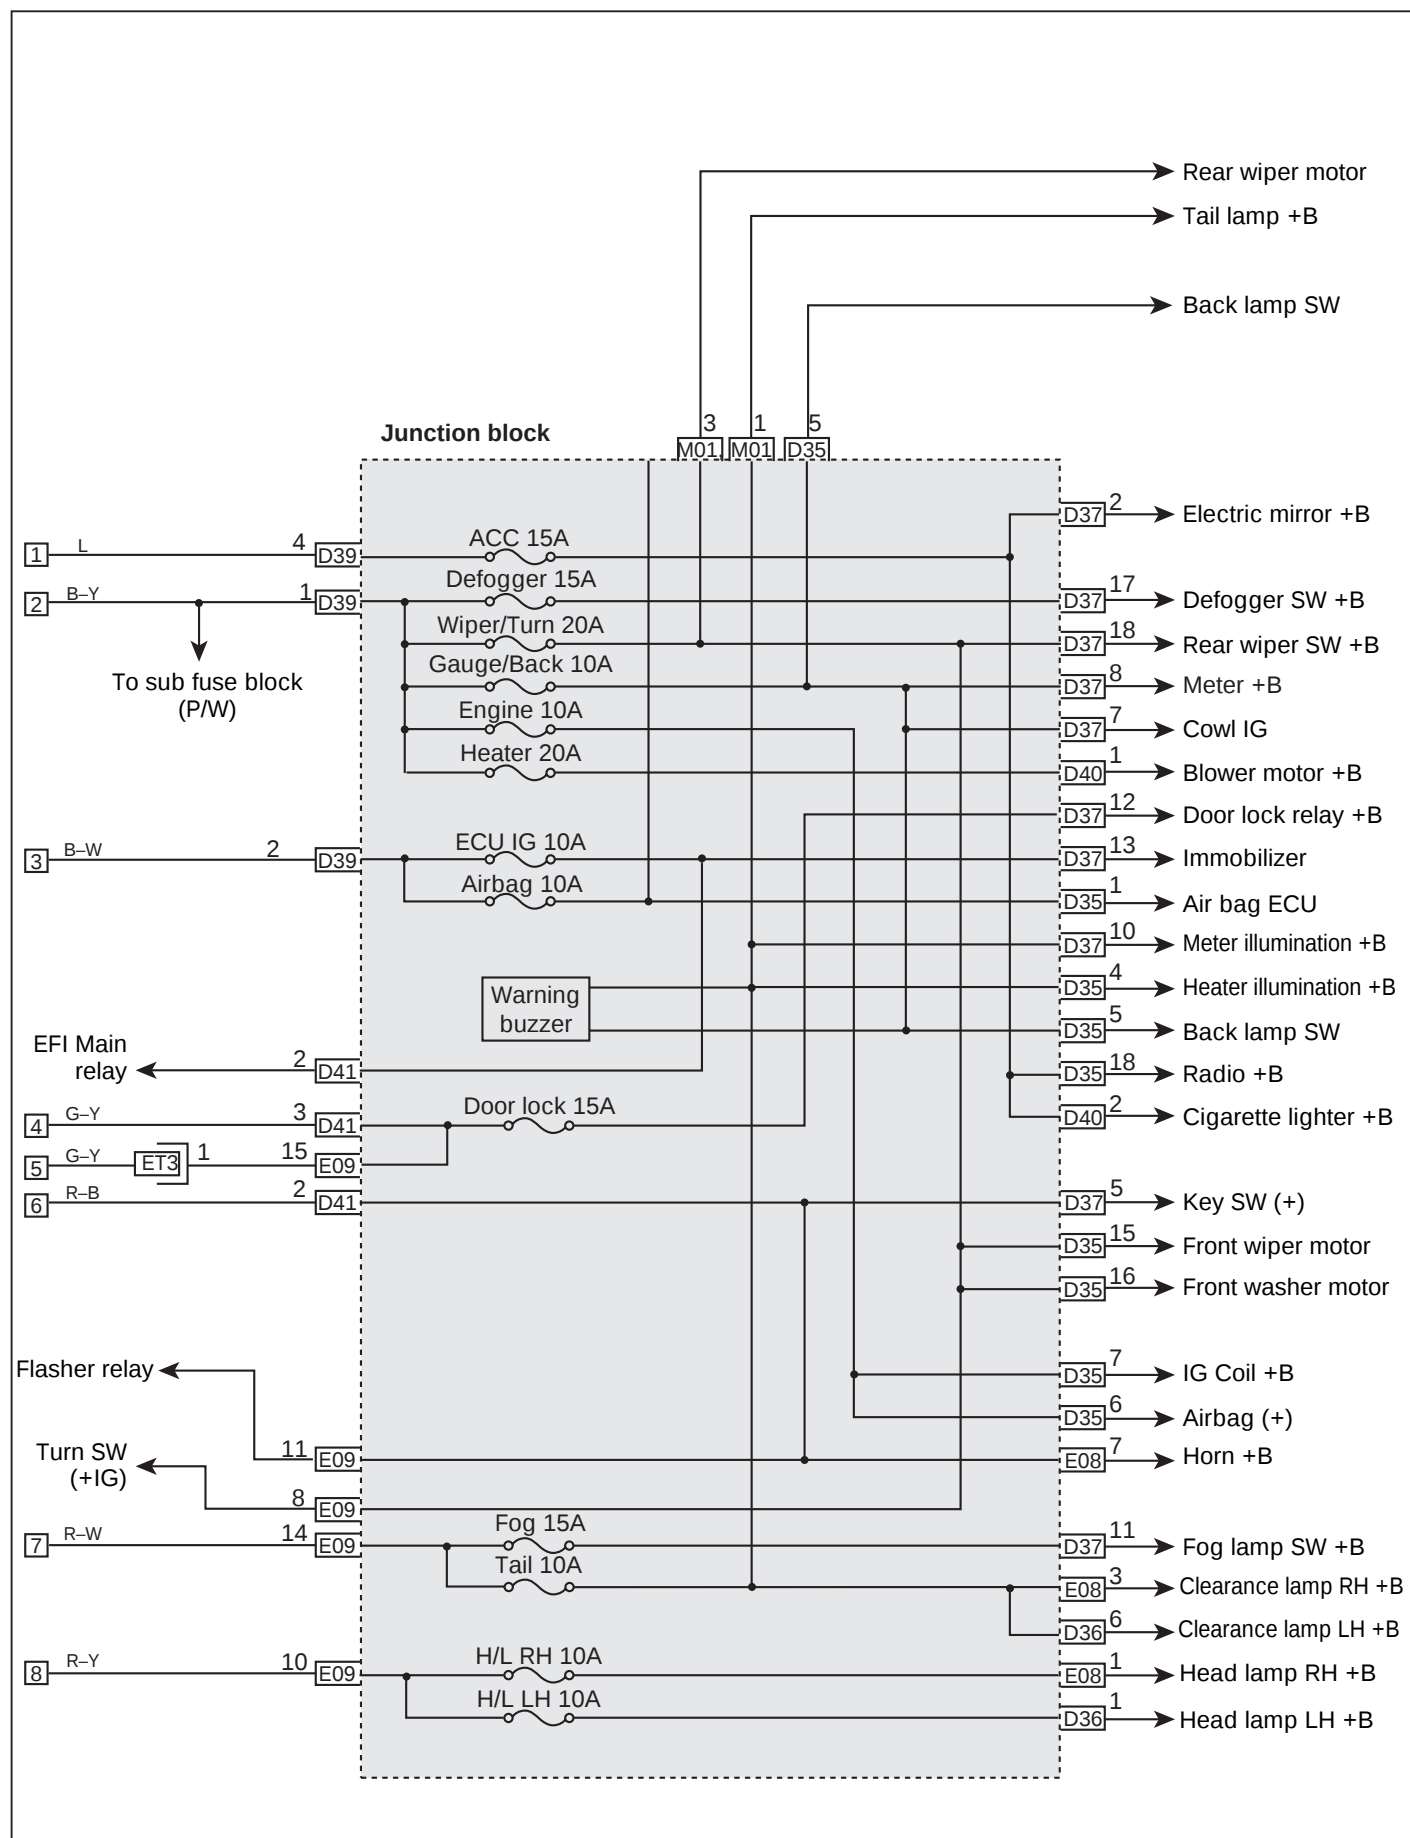

HW-6

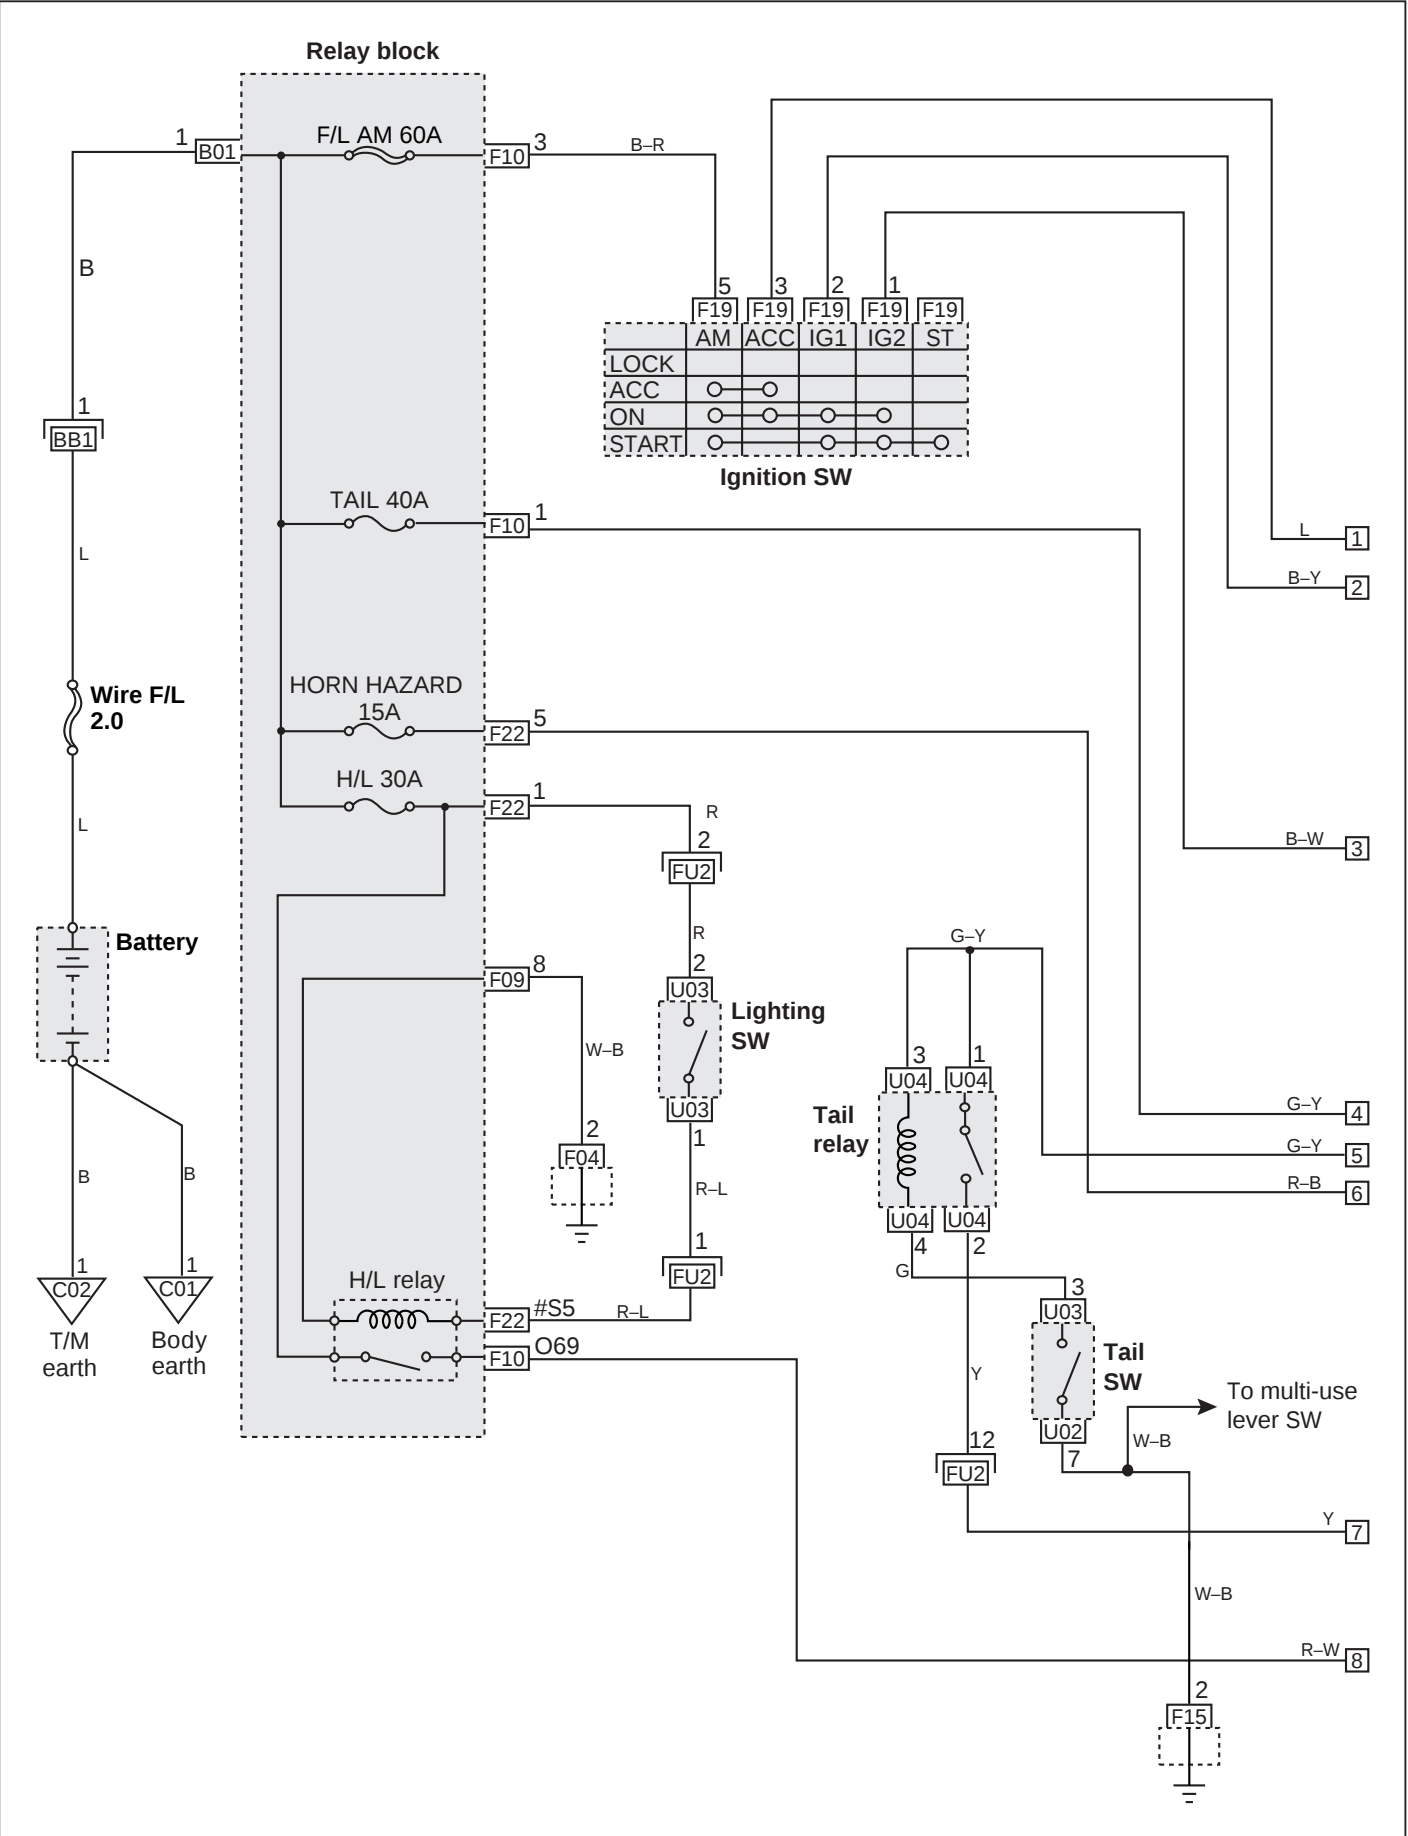
POWER SOURCE / JUNCTION BLOCK (w/o DAY-LIGHT SYSTEM / LHD) -1






HW-8

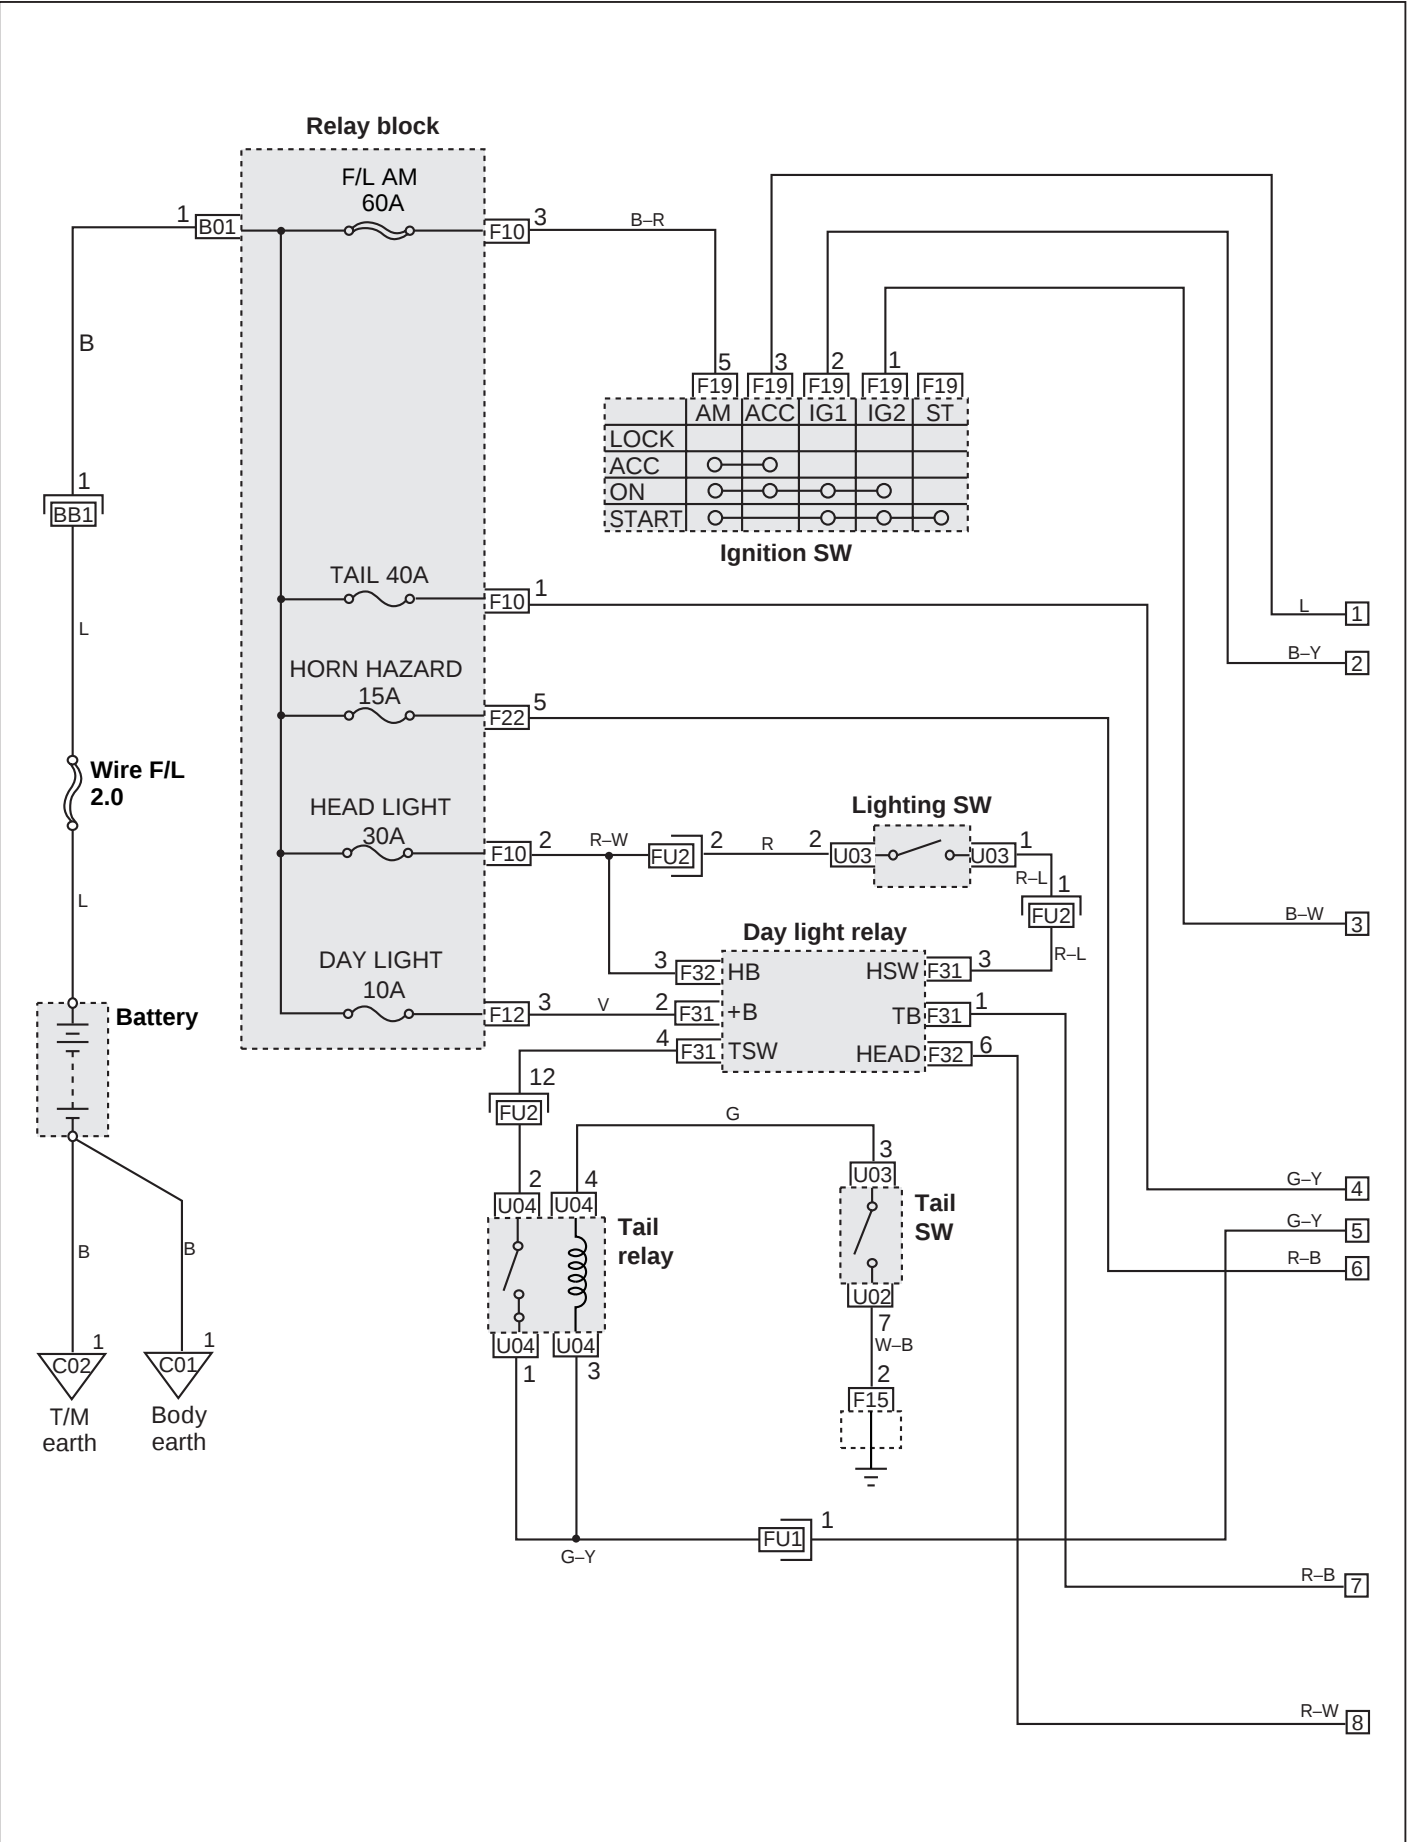
POWER SOURCE / JUNCTION BLOCK (w/ DAY-LIGHT SYSTEM / LHD) -1



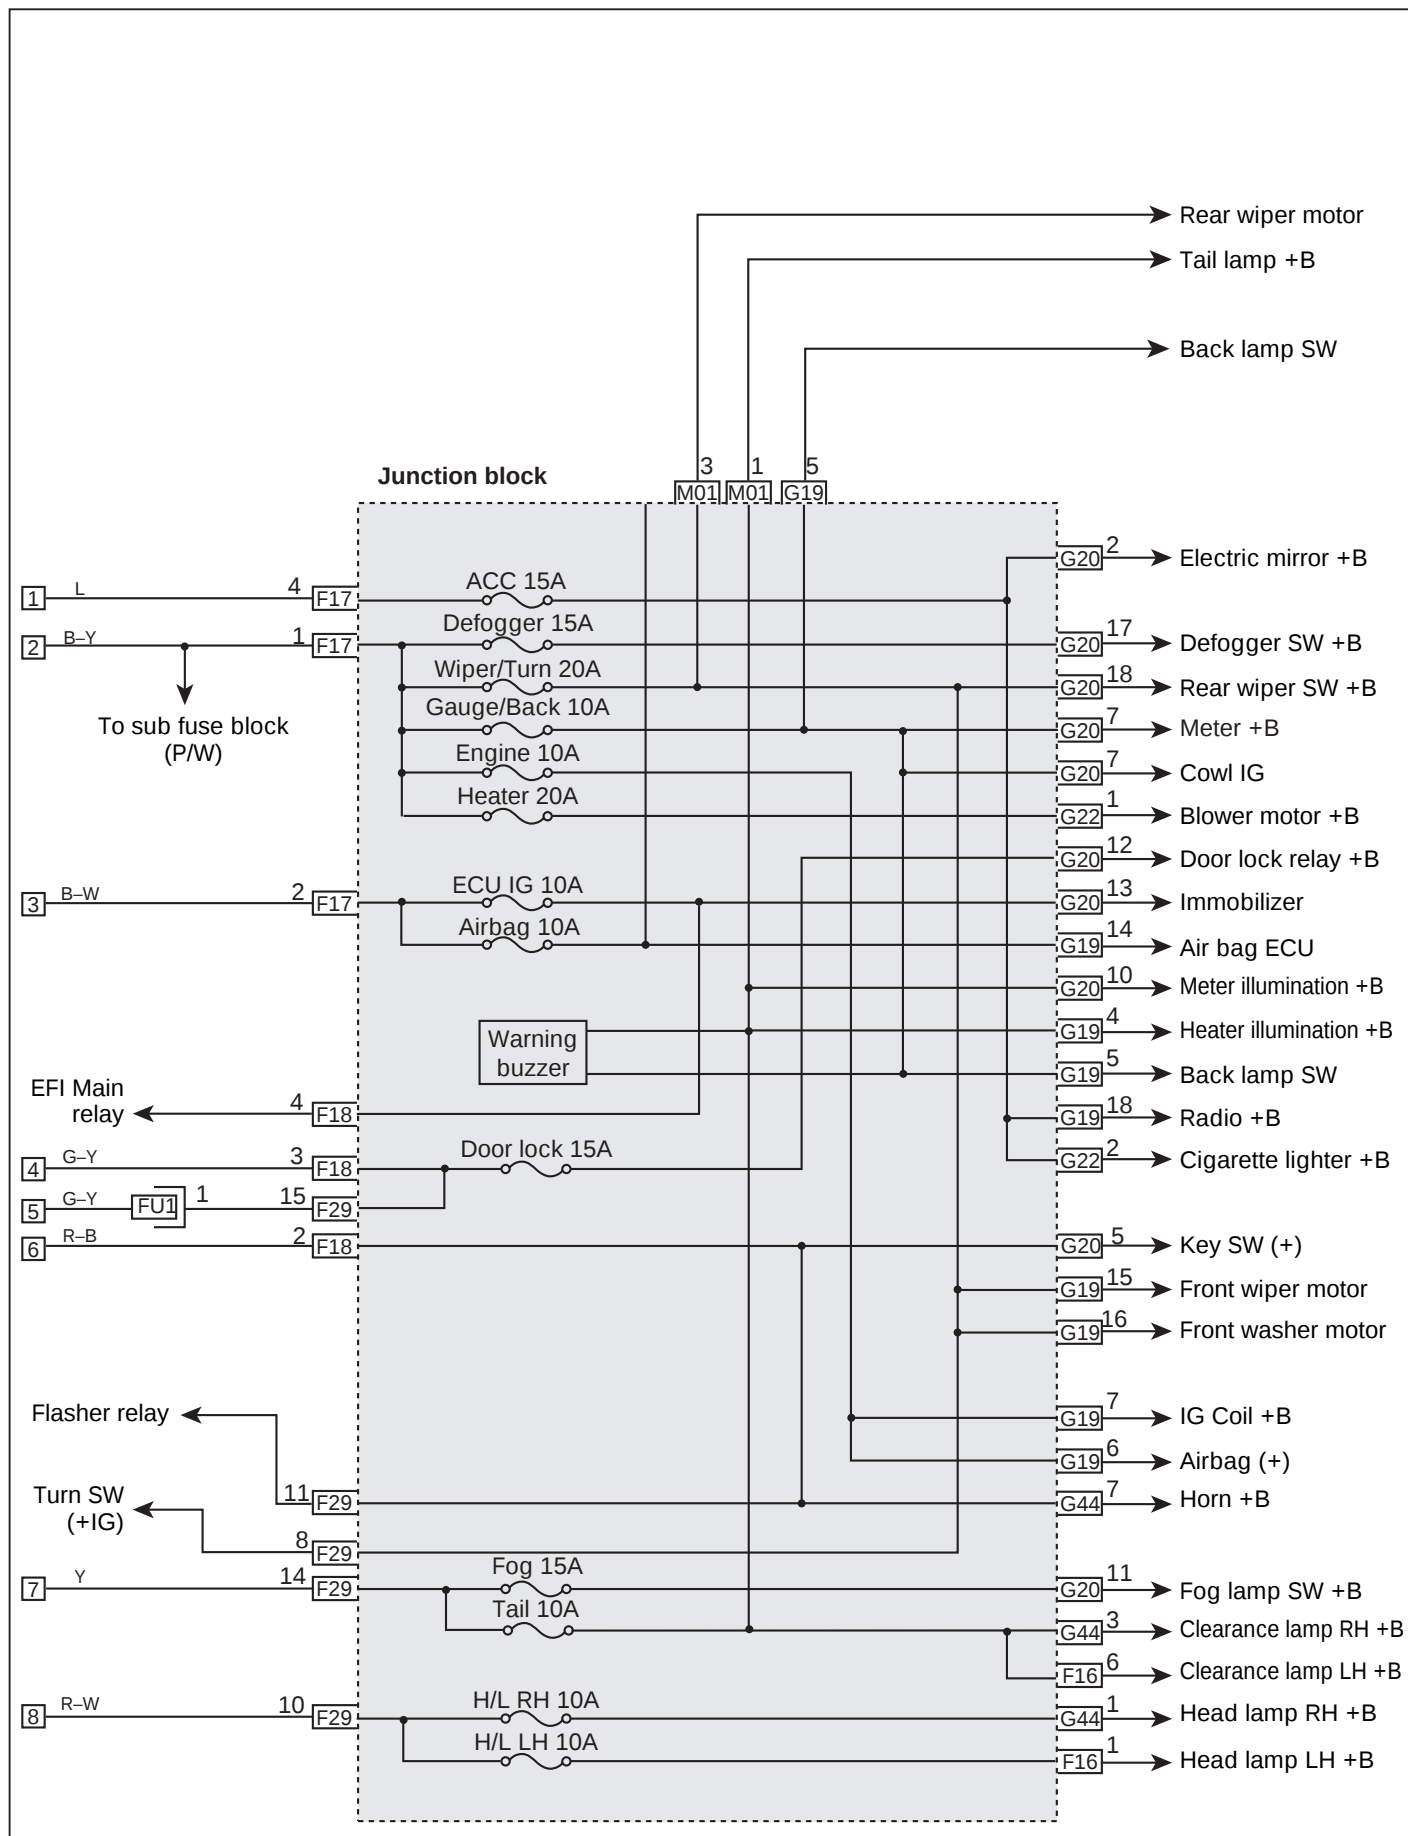
POWER SOURCE / JUNCTION BLOCK (w/ DAY-LIGHT SYSTEM / LHD) -2



CHARGING SYSTEM (RHD)

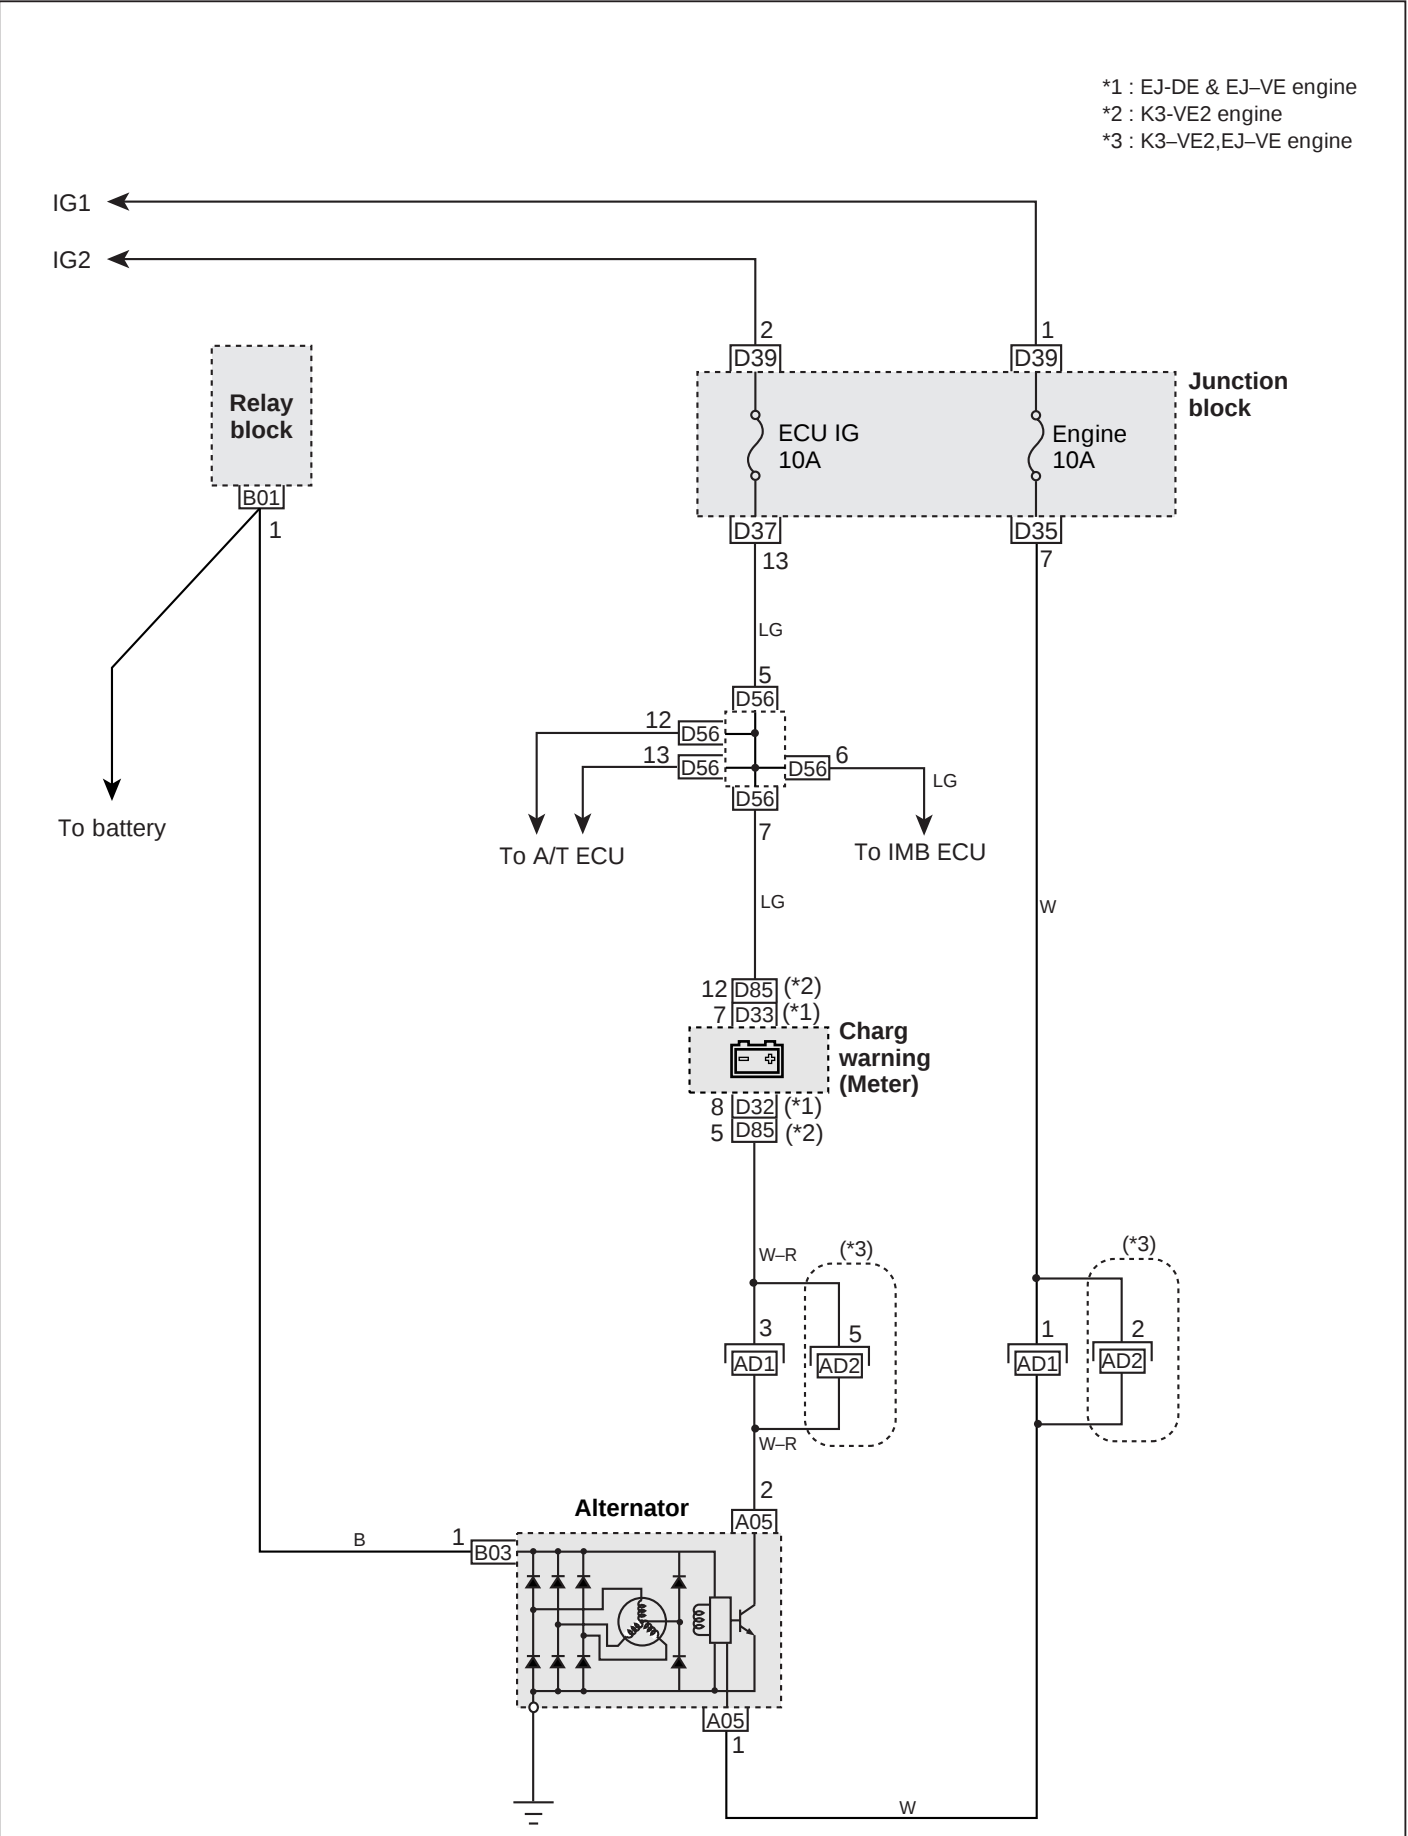


CHARGING SYSTEM (LHD)

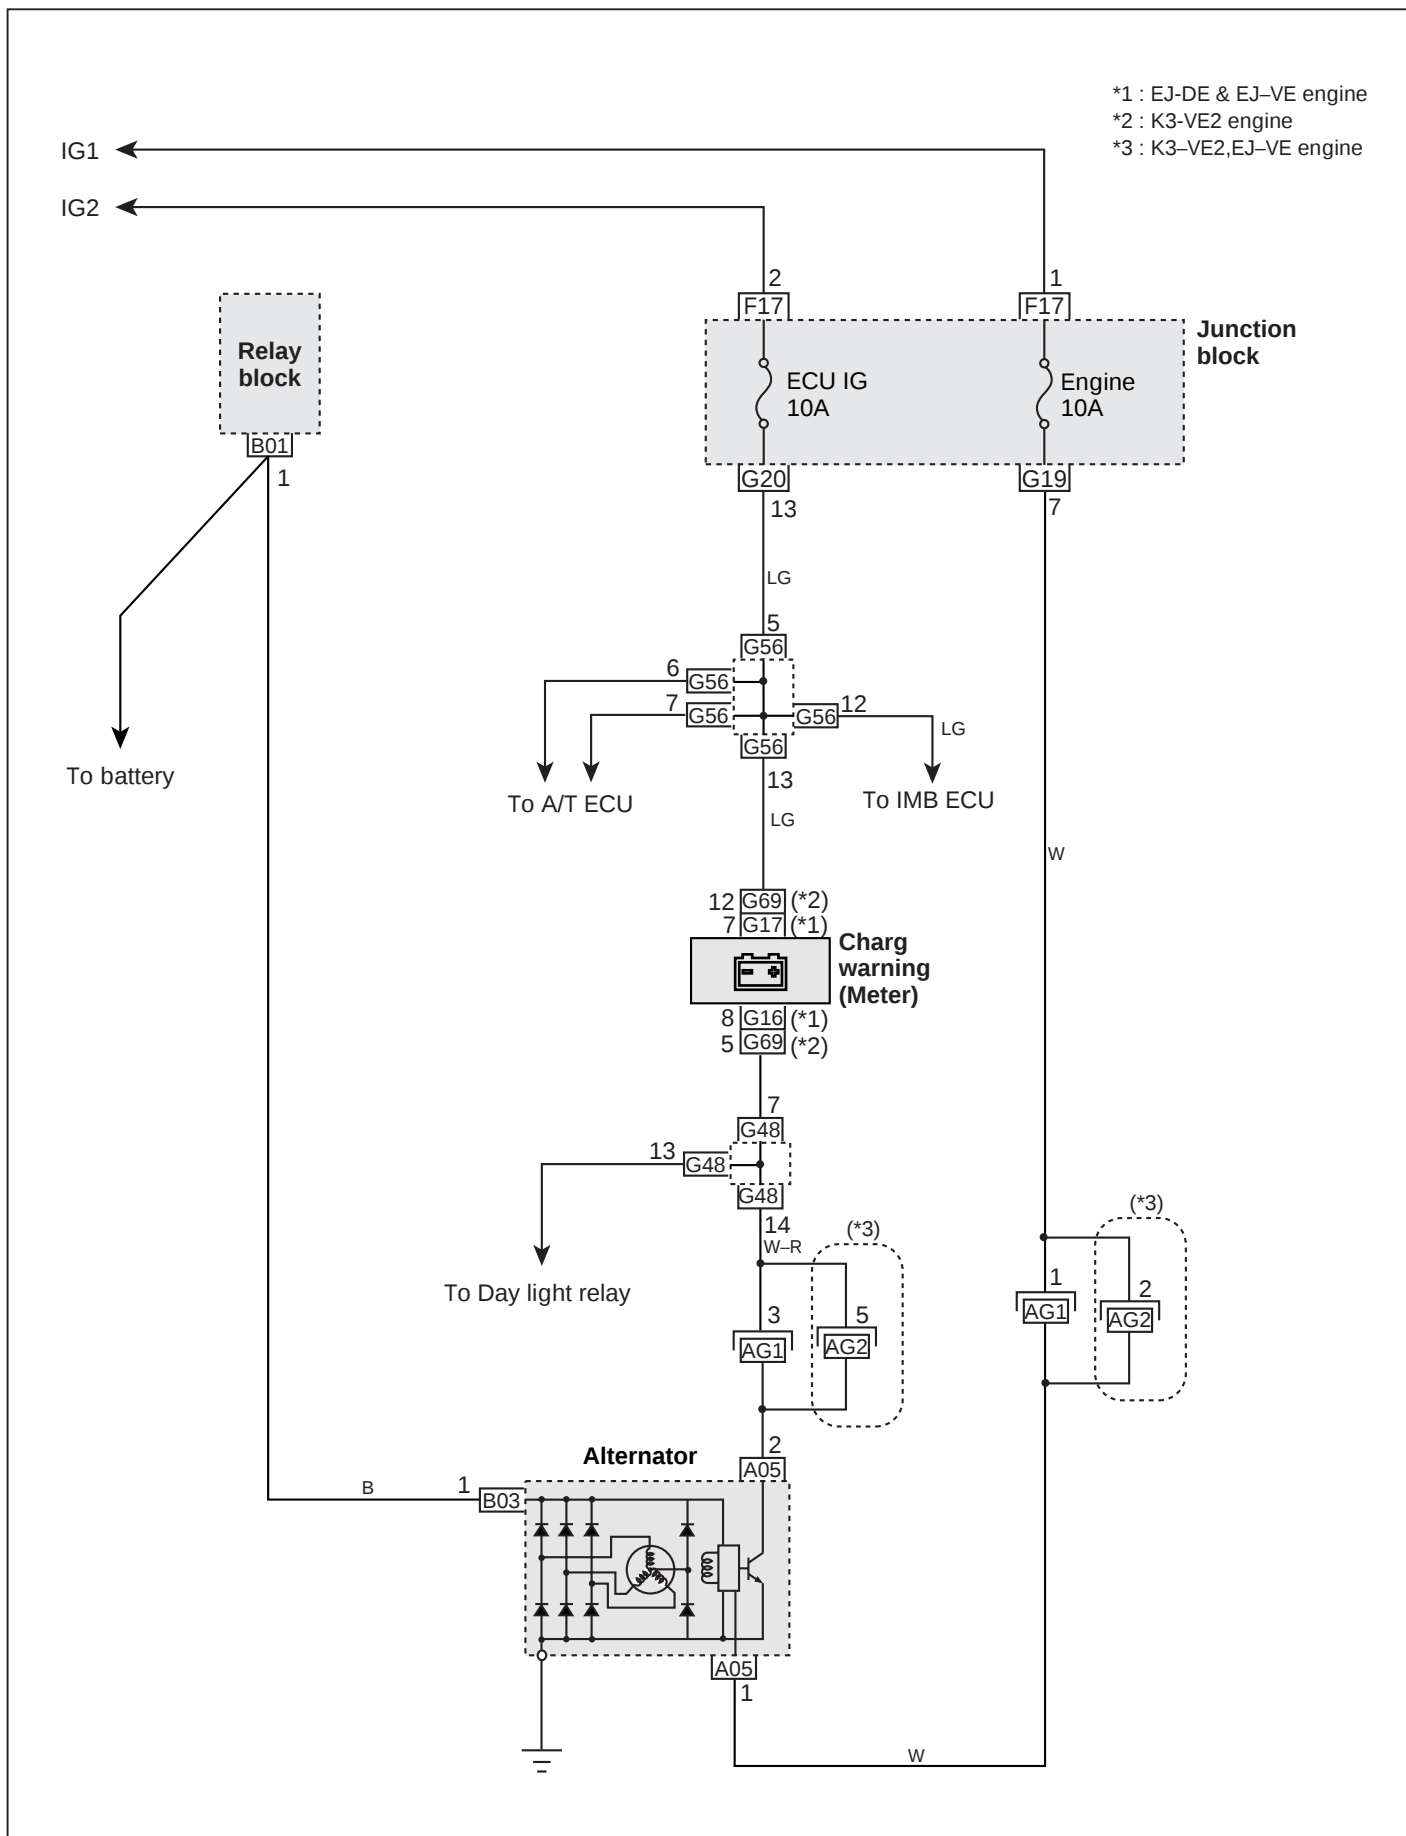

STARTING SYSTEM (A/T / EJ-DE , EJ-VE ENGINE / RHD)




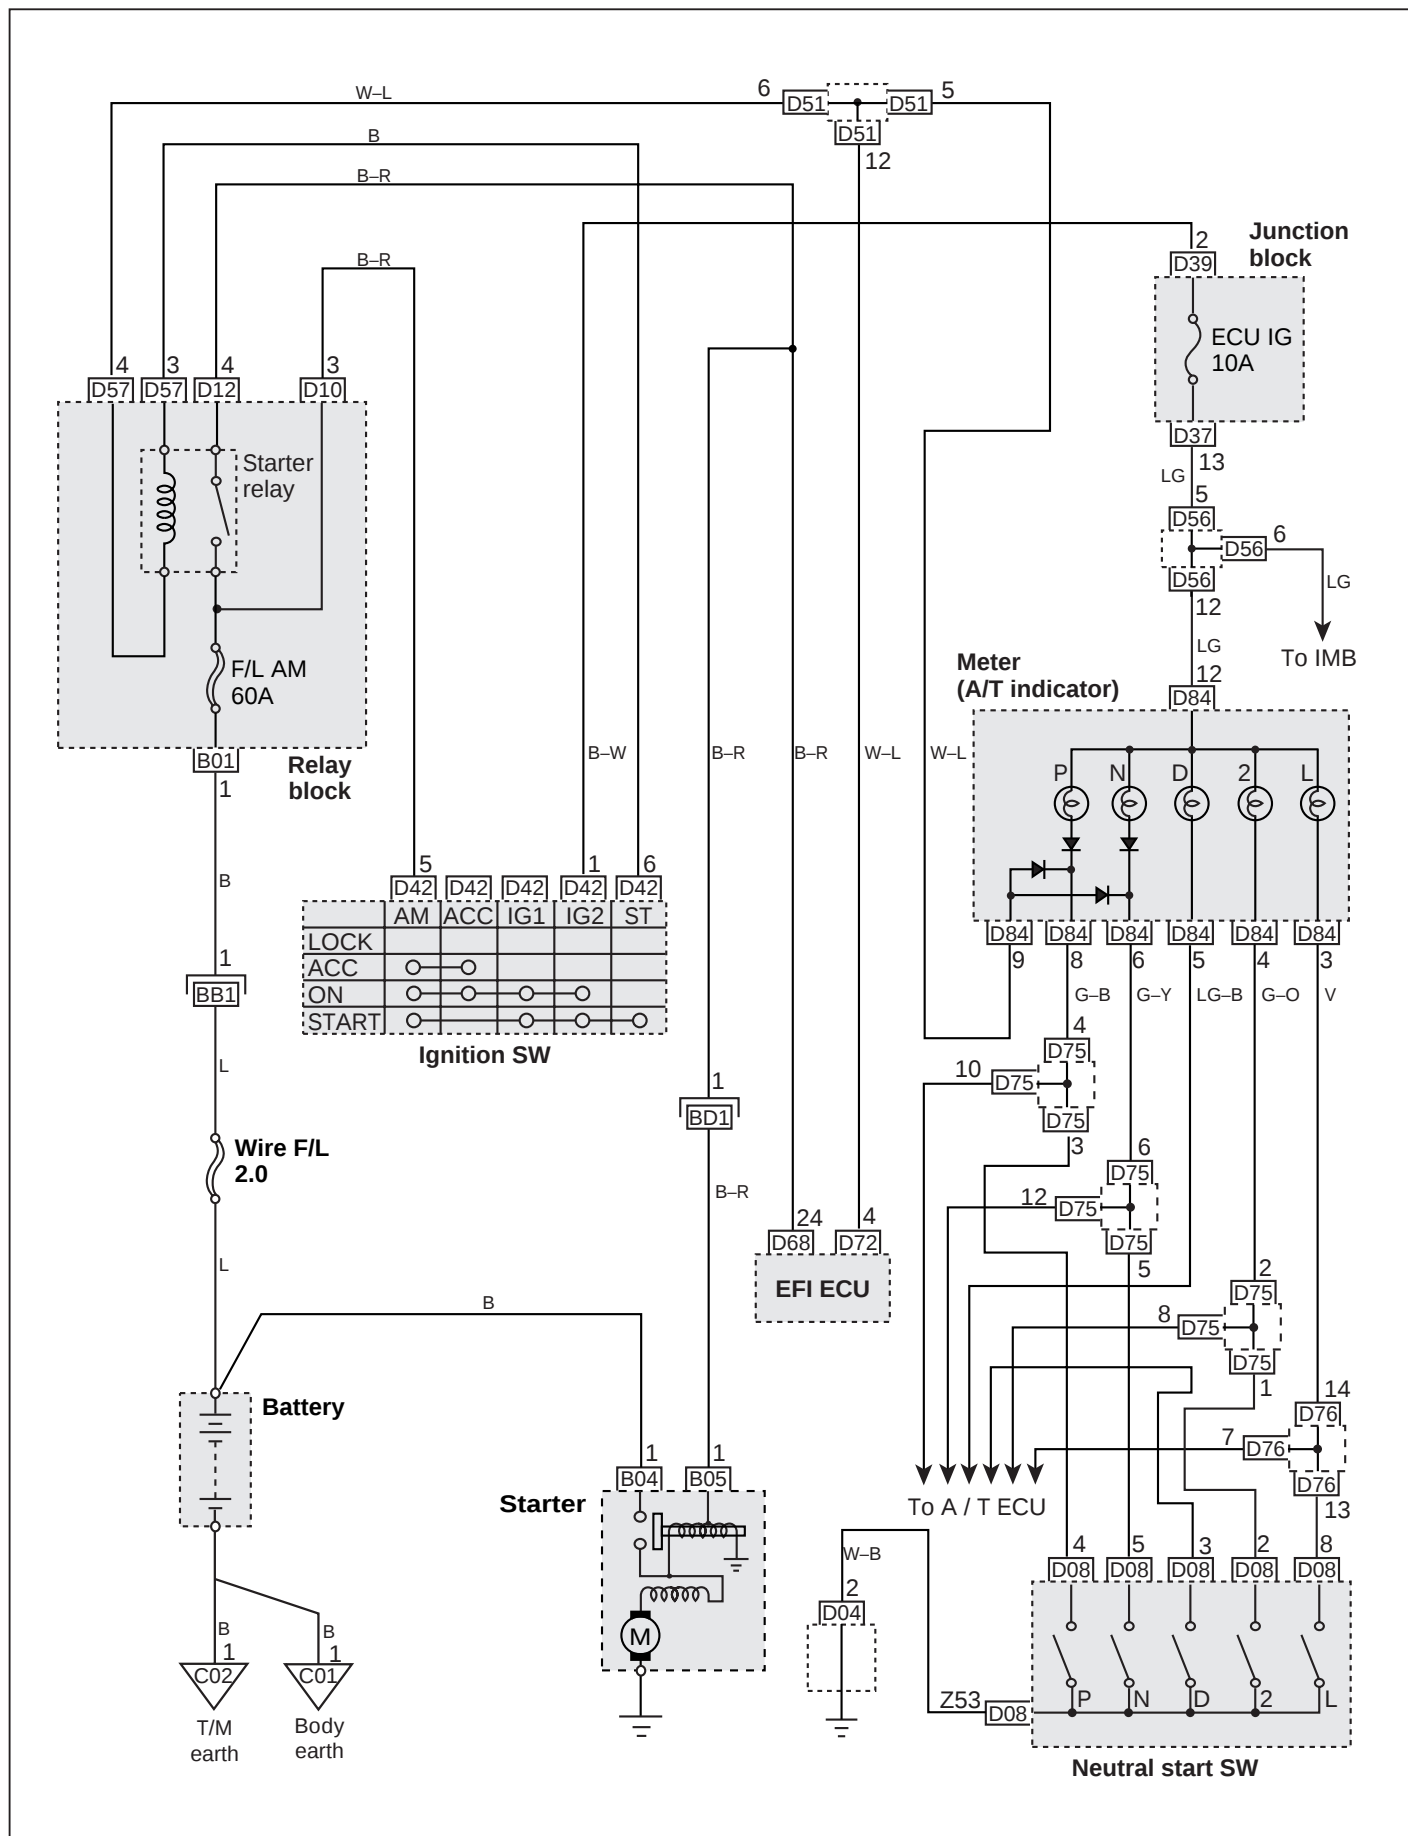STARTING SYSTEM (A/T / K3-VE2 ENGINE / RHD)




HW-14

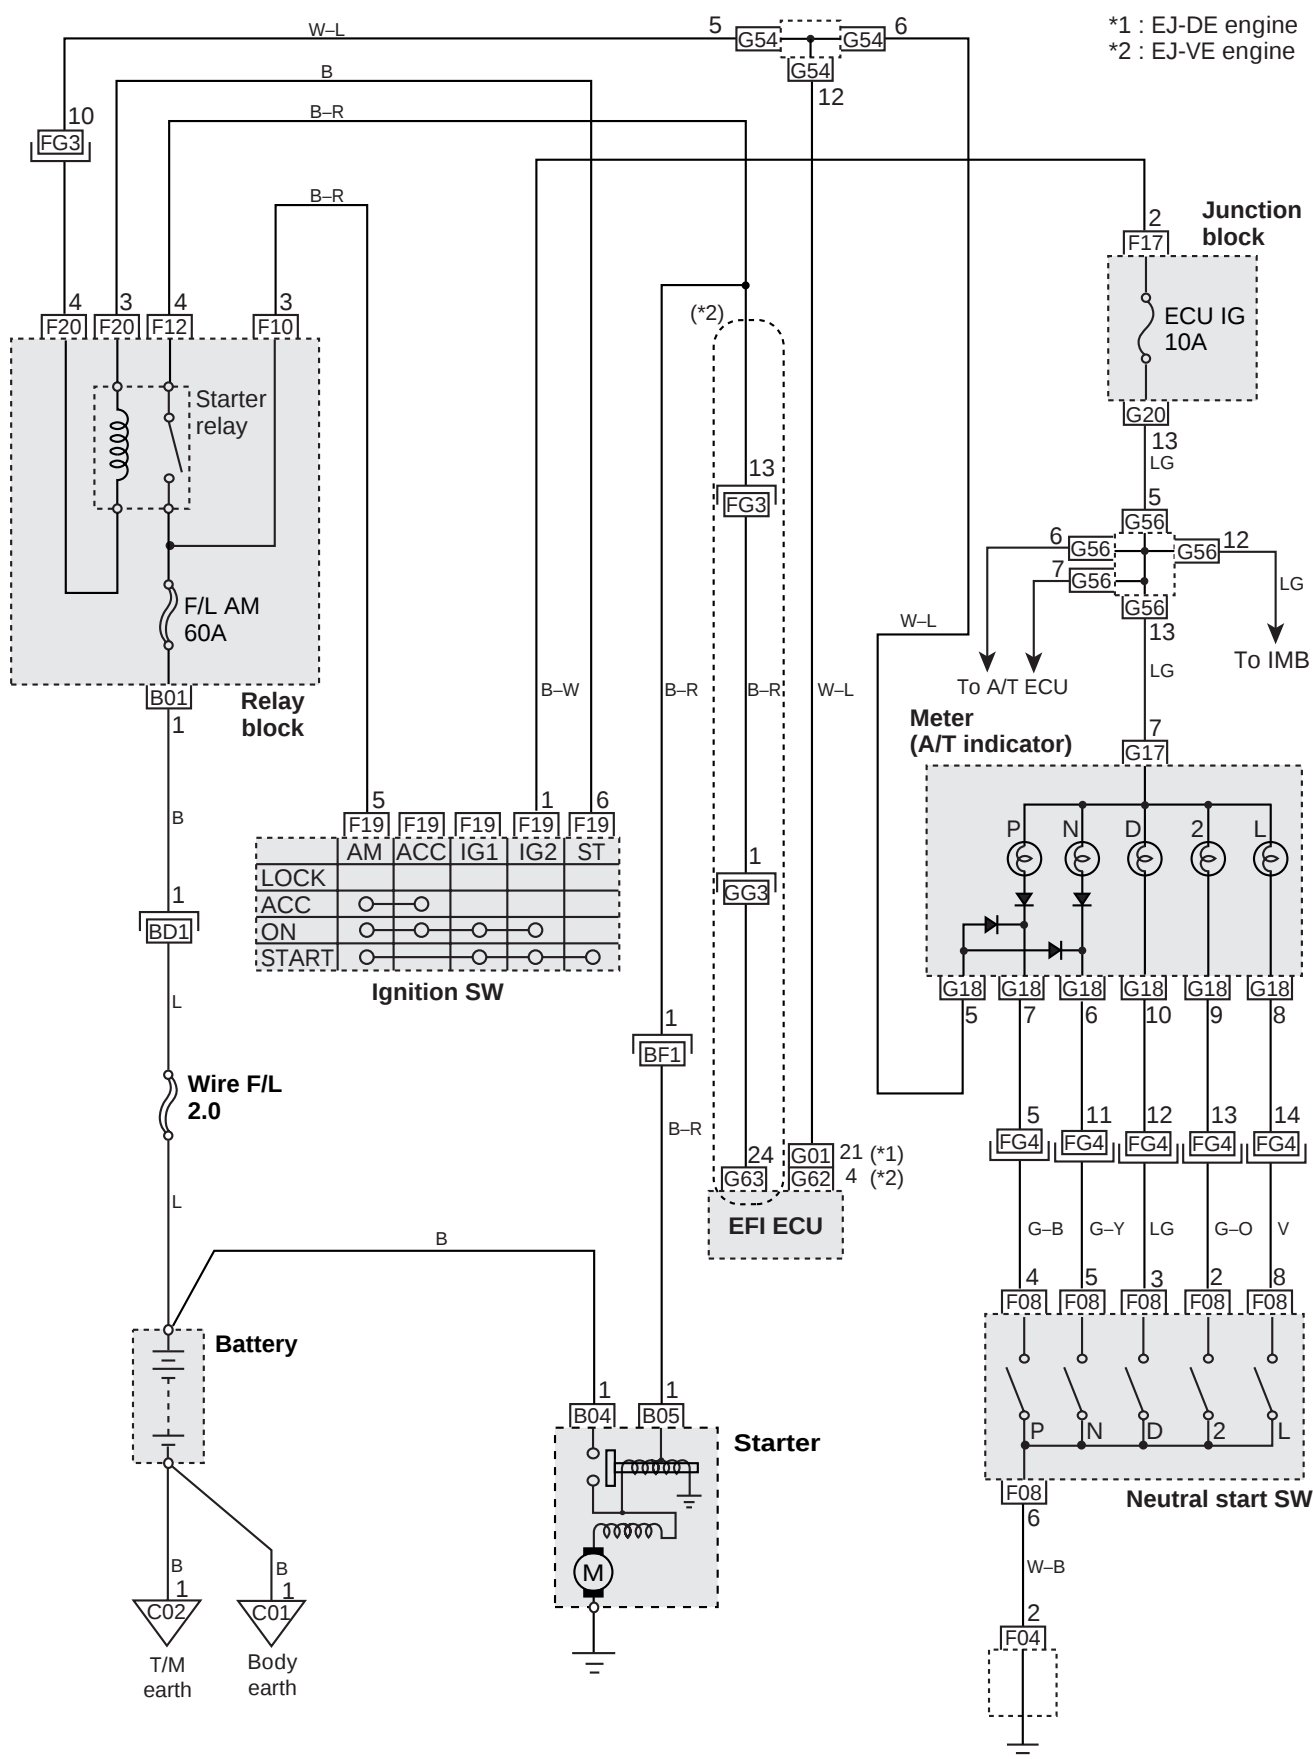STARTING SYSTEM (A/T / EJ-DE , EJ-VE ENGINE / LHD)




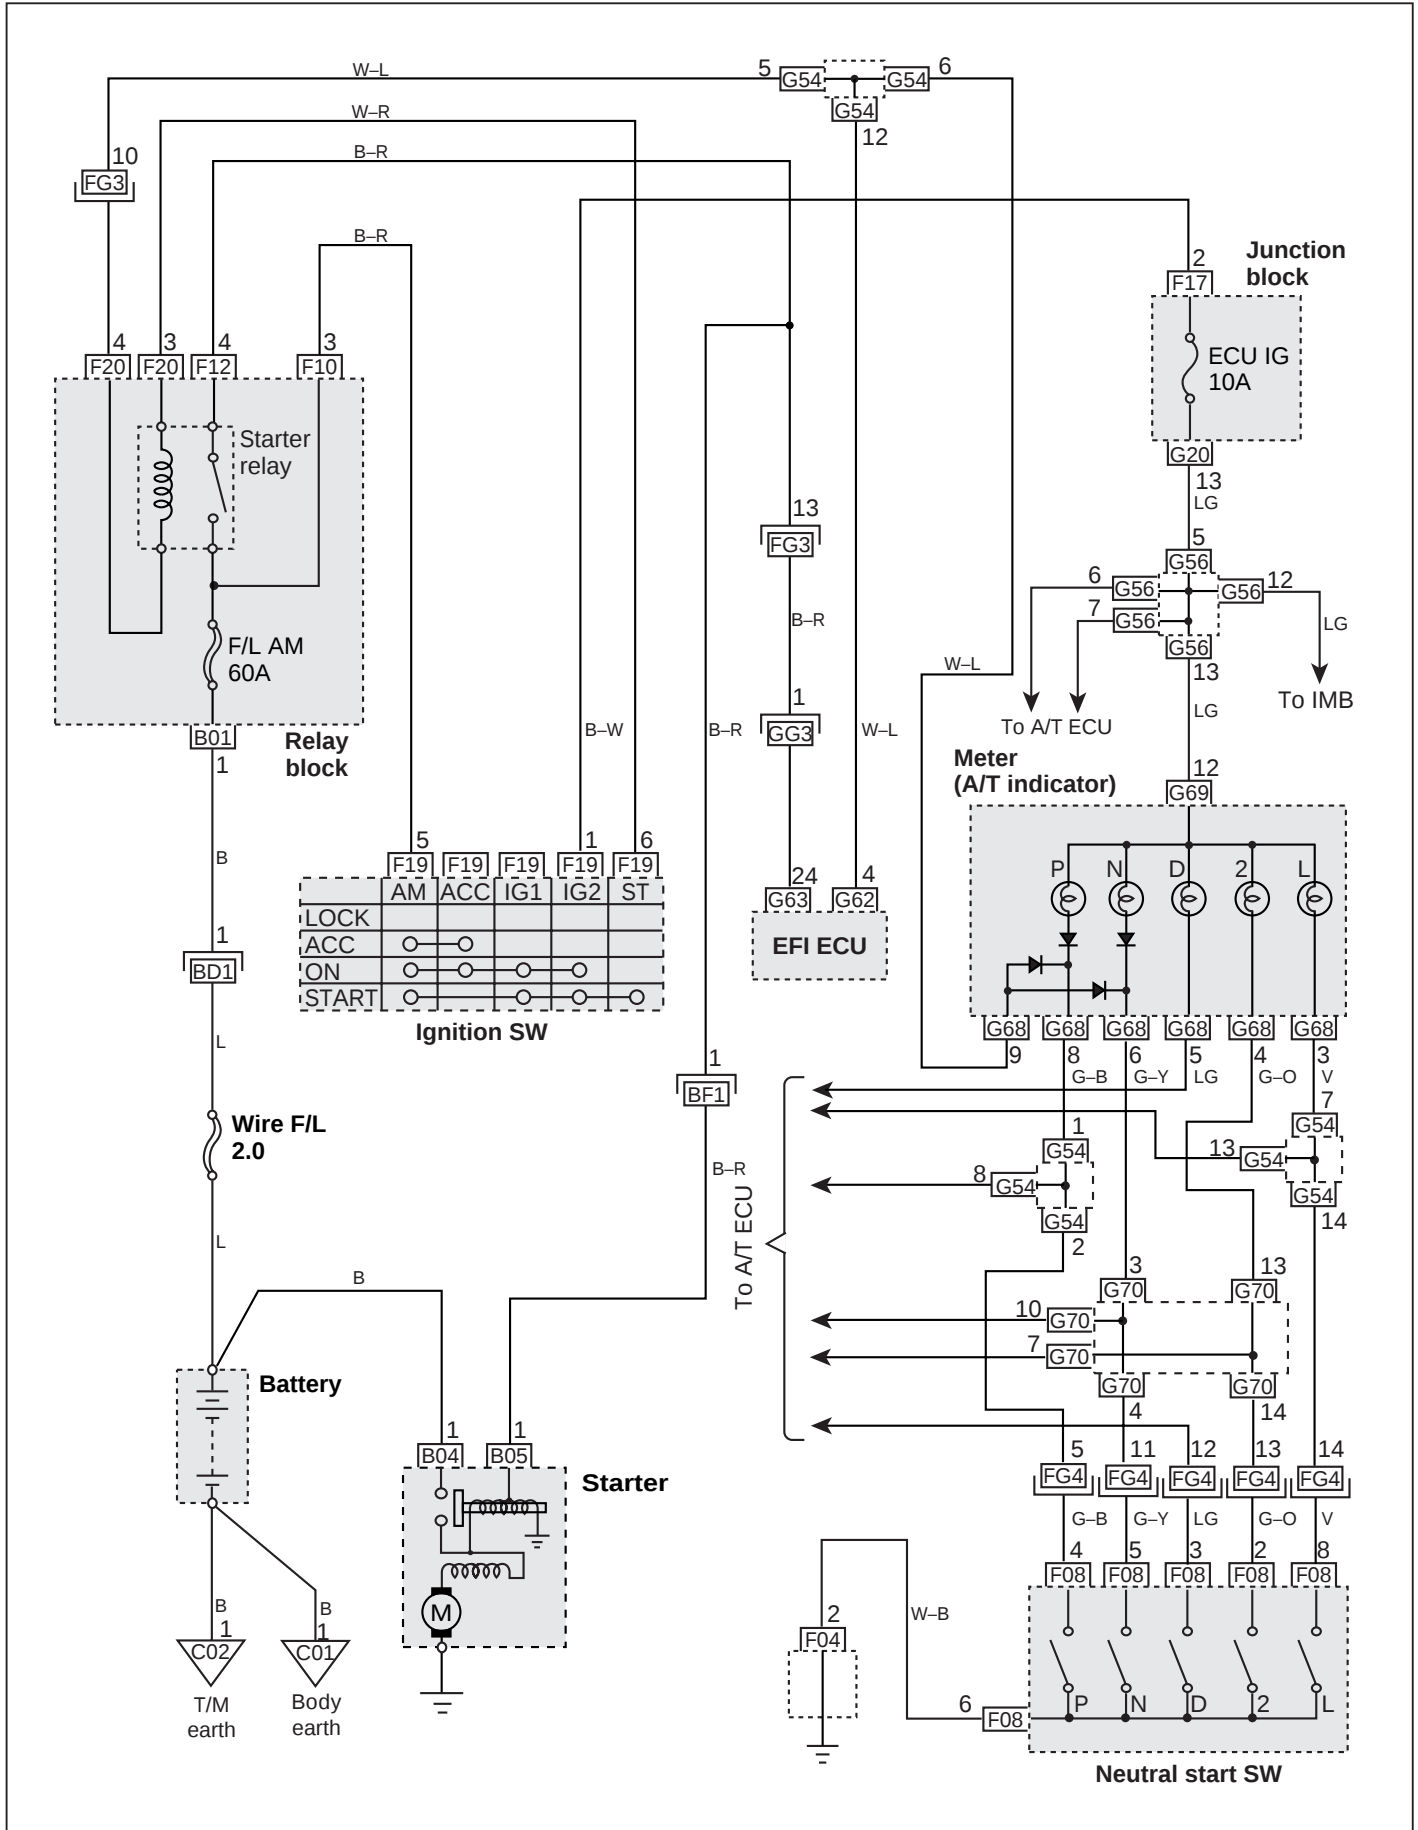STARTING SYSTEM (A/T / K3-VE2 ENGINE / LHD)




HW-16

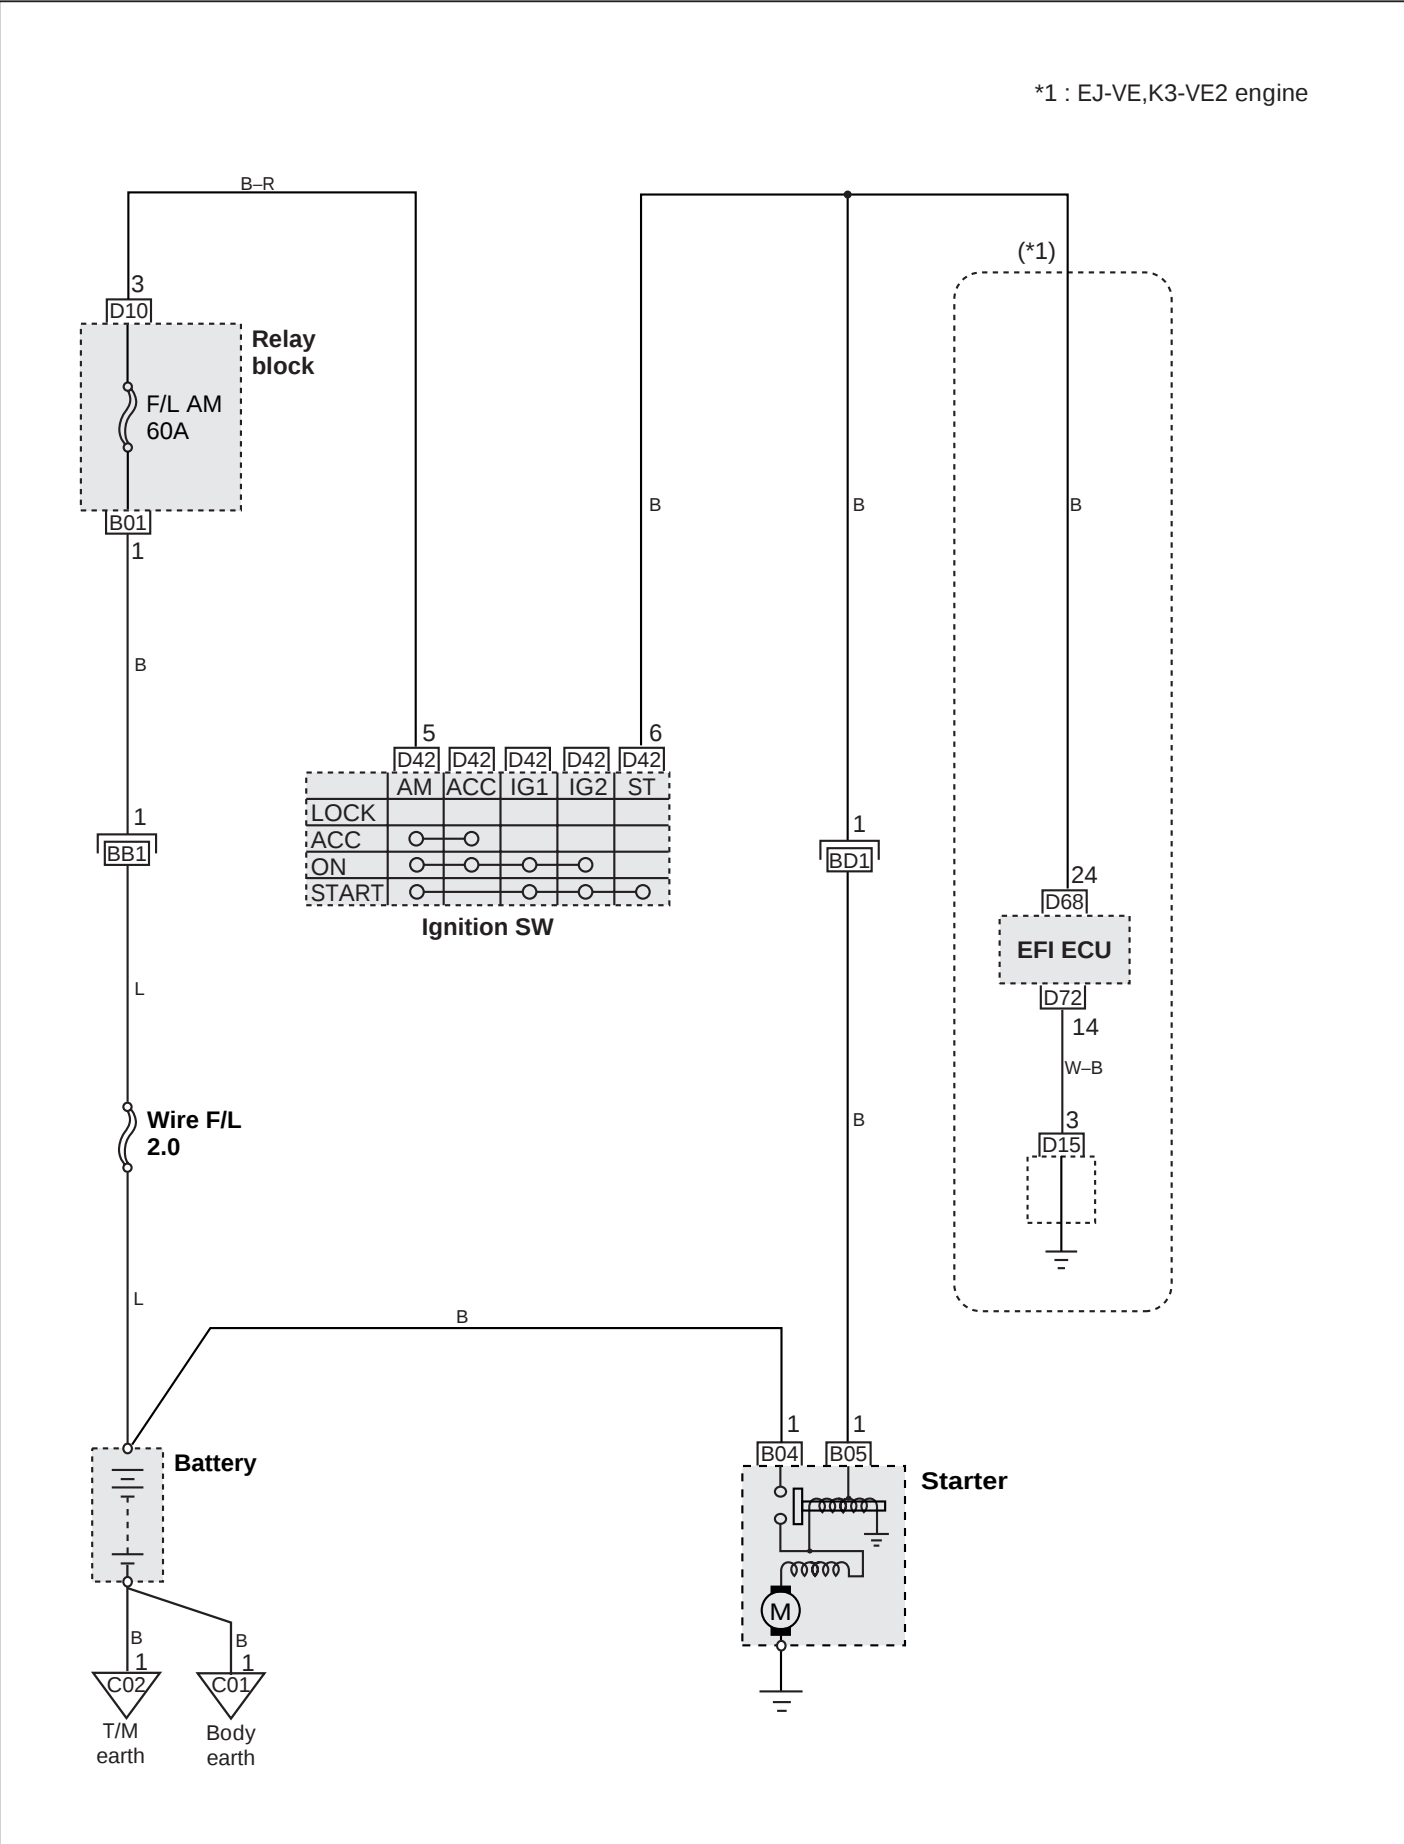STARTING SYSTEM (M/T / RHD)




STARTING SYSTEM (M/T / LHD)

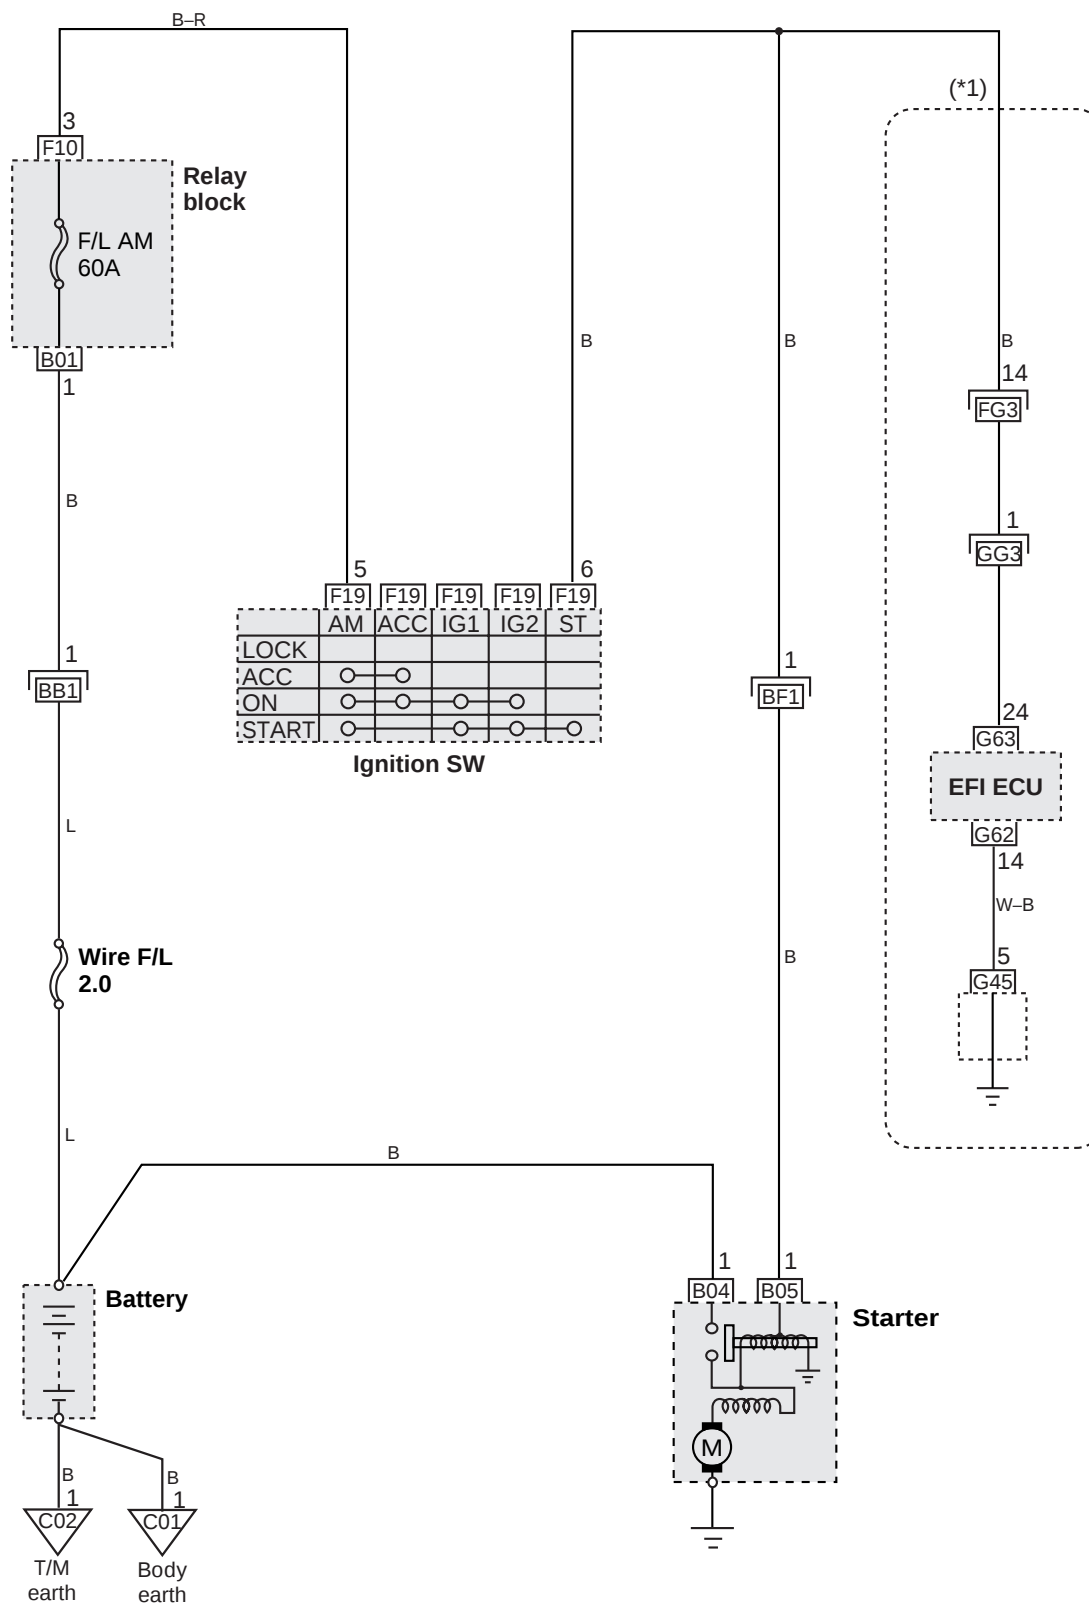*1 : EJ-VE,K3-VE2 engine




HW-18

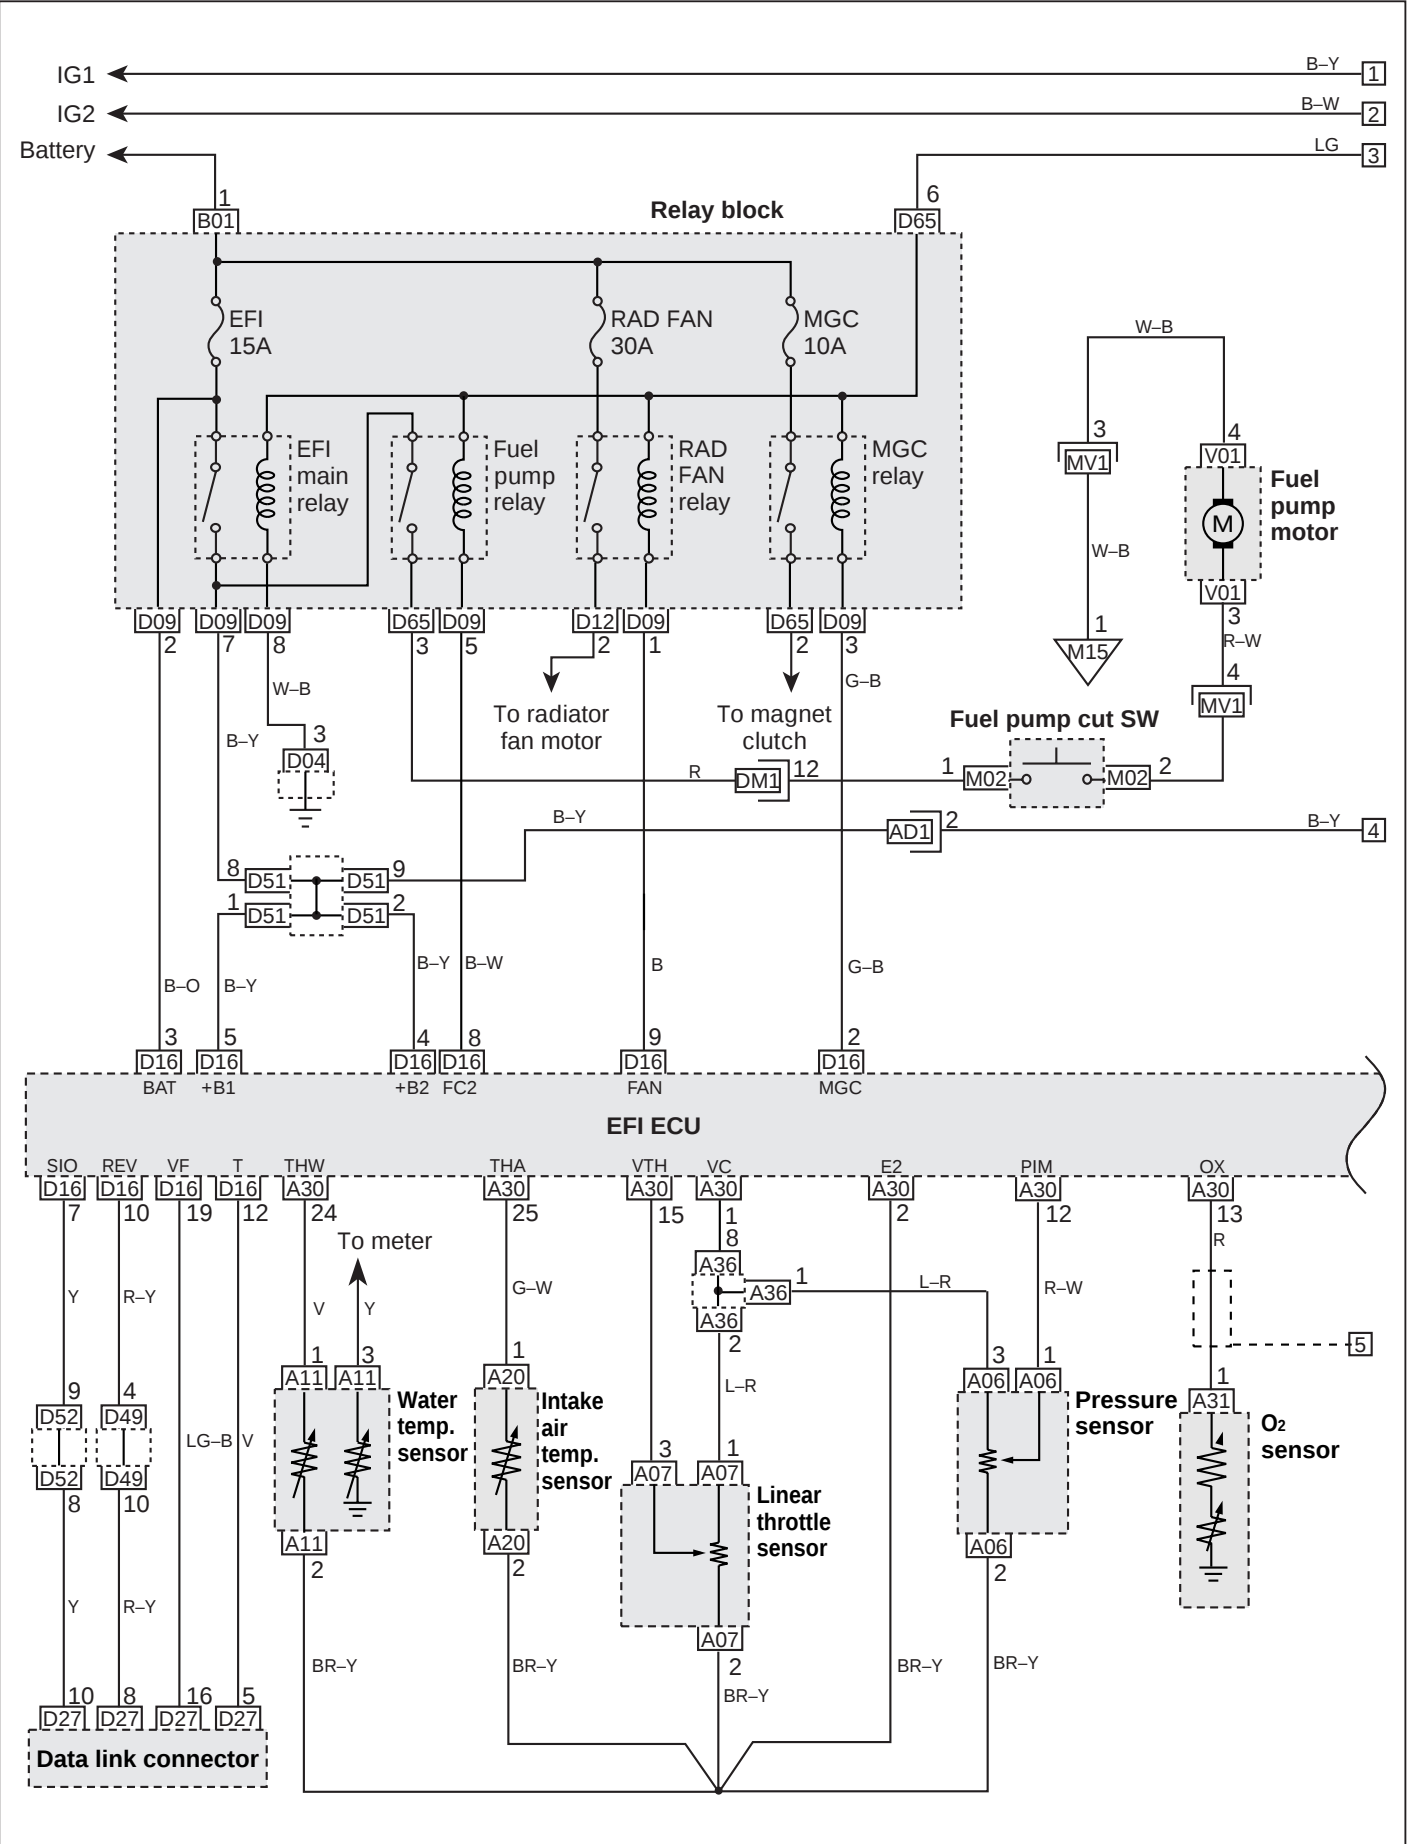EFI SYSTEM (EJ-DE ENGINE / RHD) -1




EFI SYSTEM (EJ-DE ENGINE / RHD) -2

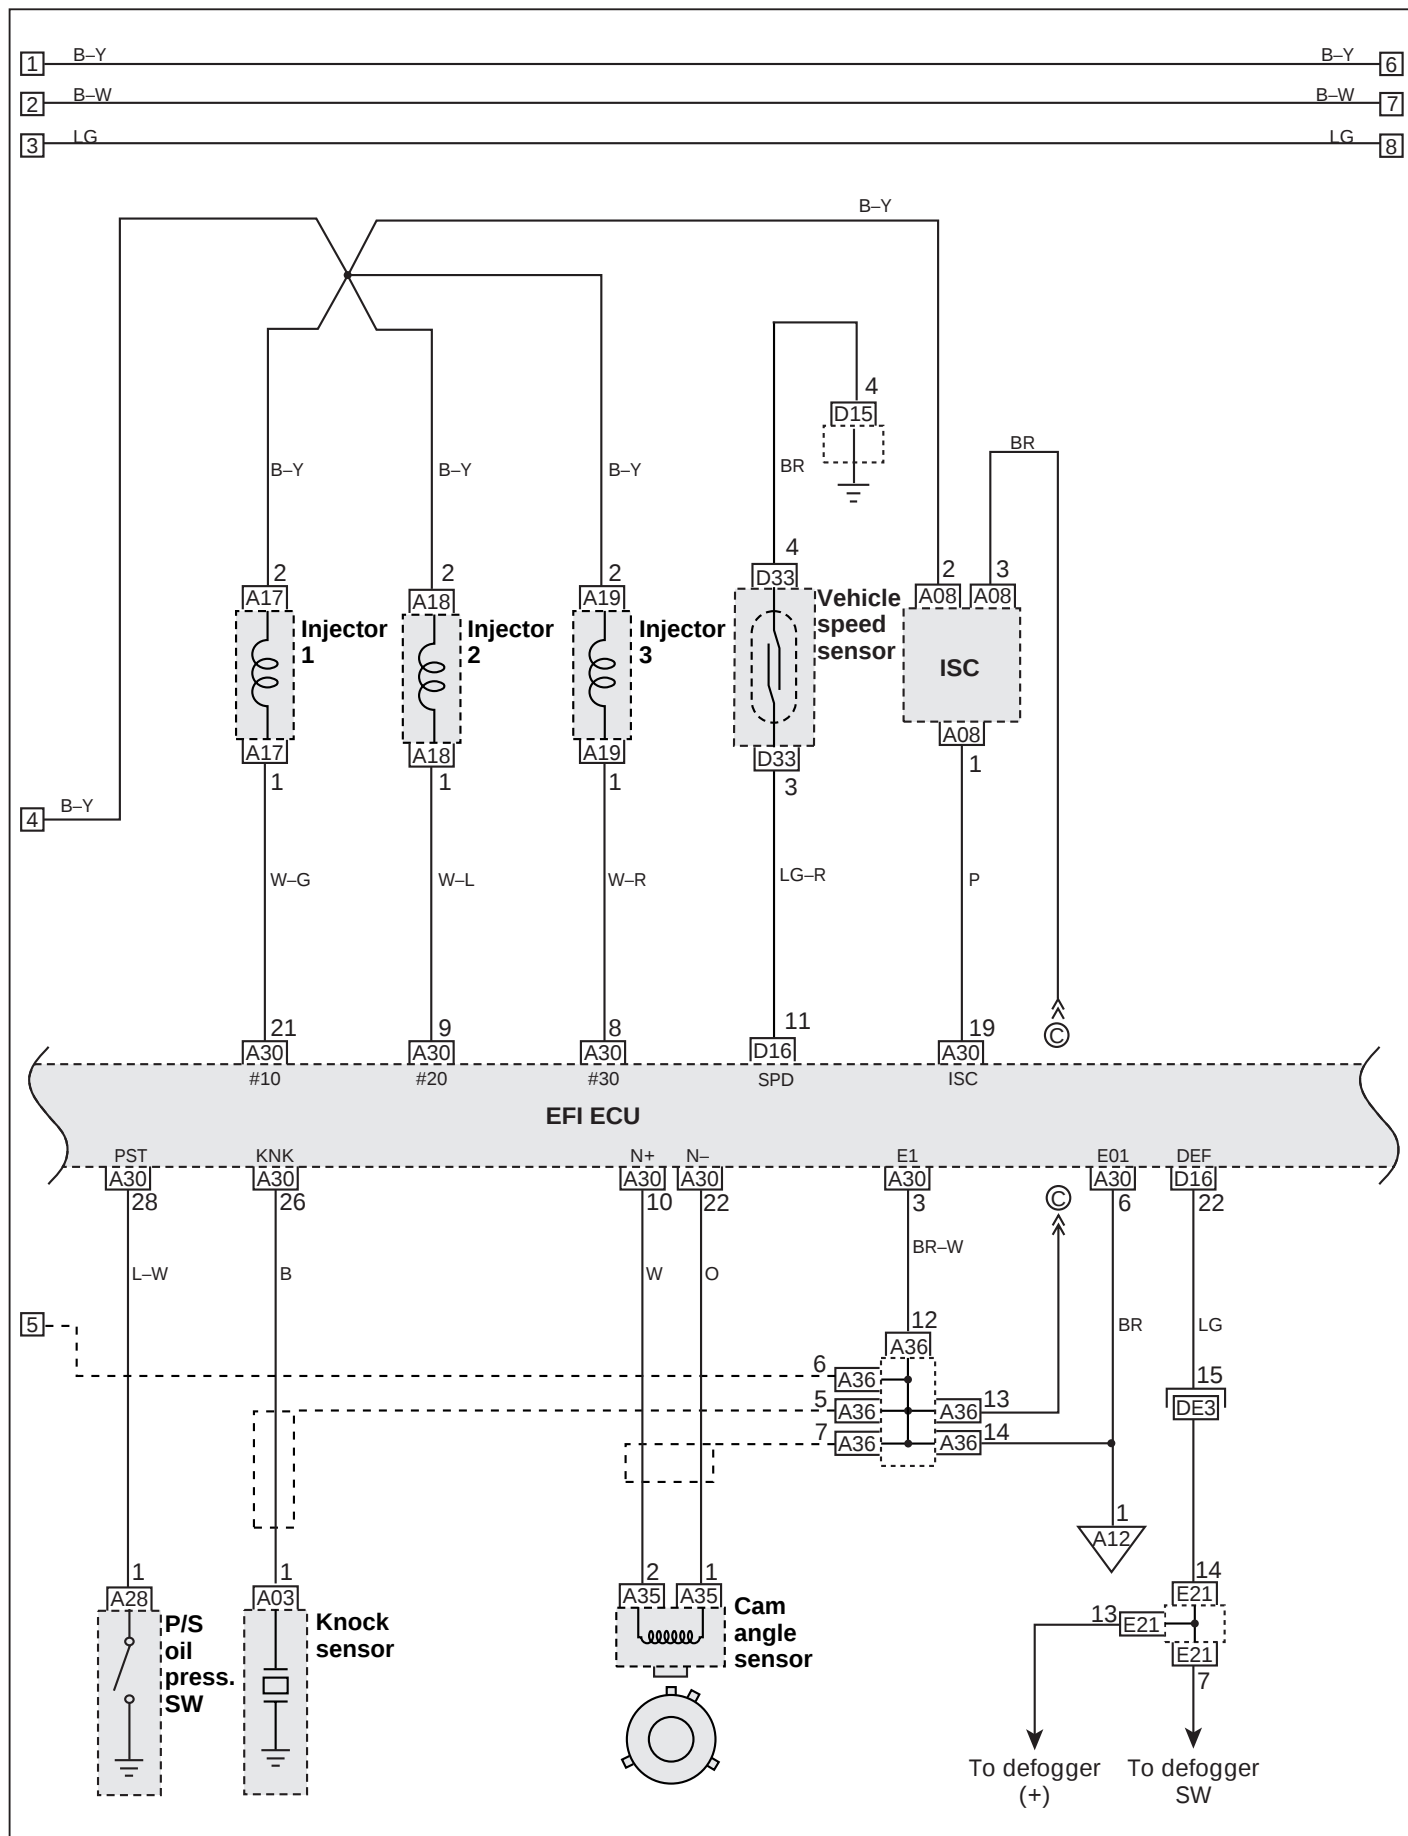

HW-20

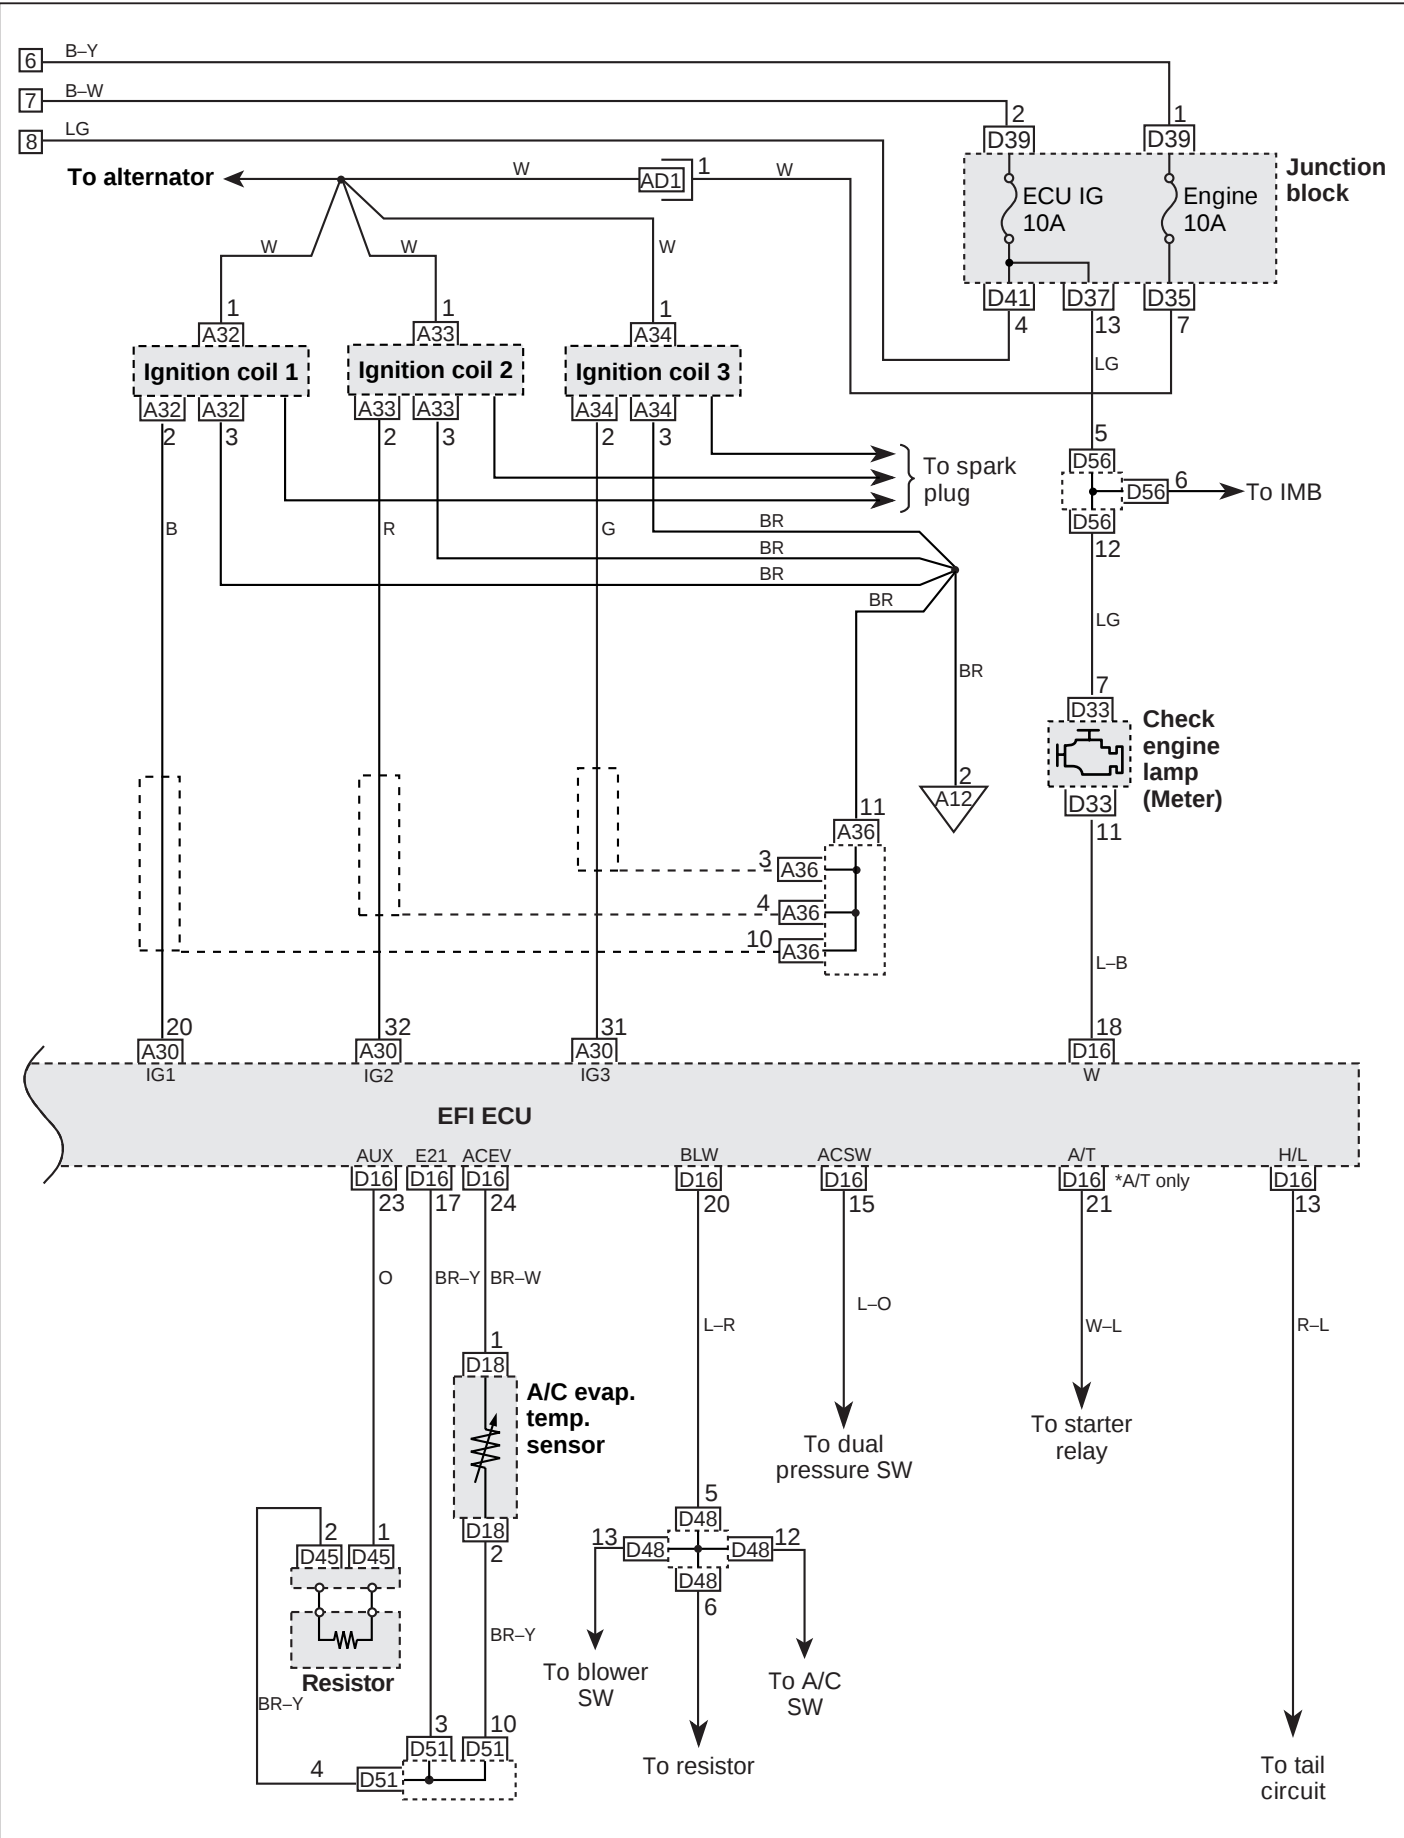EFI SYSTEM (EJ-DE ENGINE / RHD) -3




MEMO

Handwriting practice area with 25 horizontal dashed lines.


EFI SYSTEM (EJ-DE ENGINE / LHD) -1



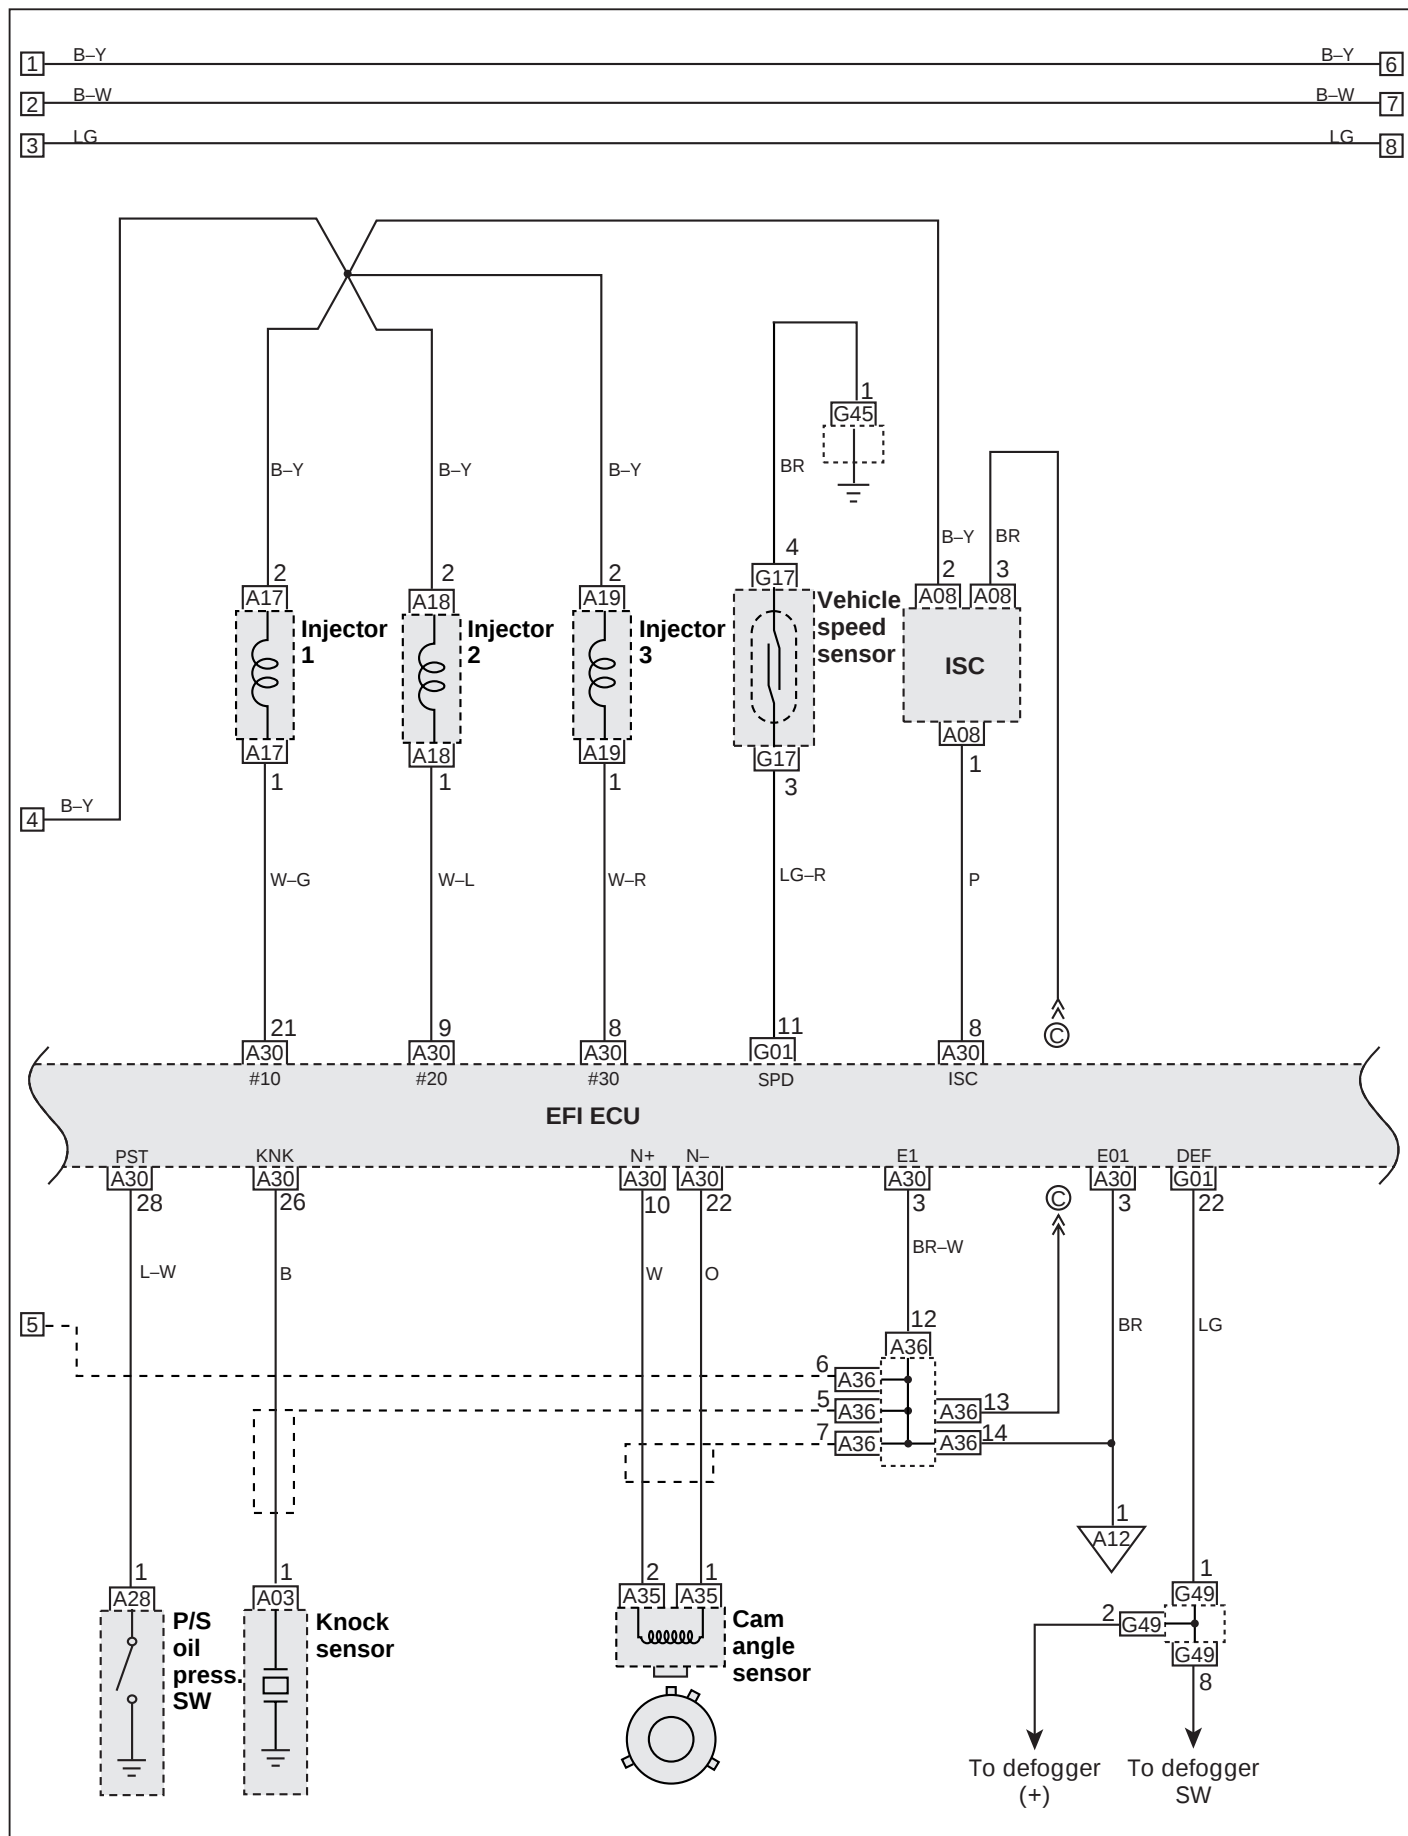EFI SYSTEM (EJ-DE ENGINE / LHD) -2



EFI SYSTEM (EJ-DE ENGINE / LHD) -3

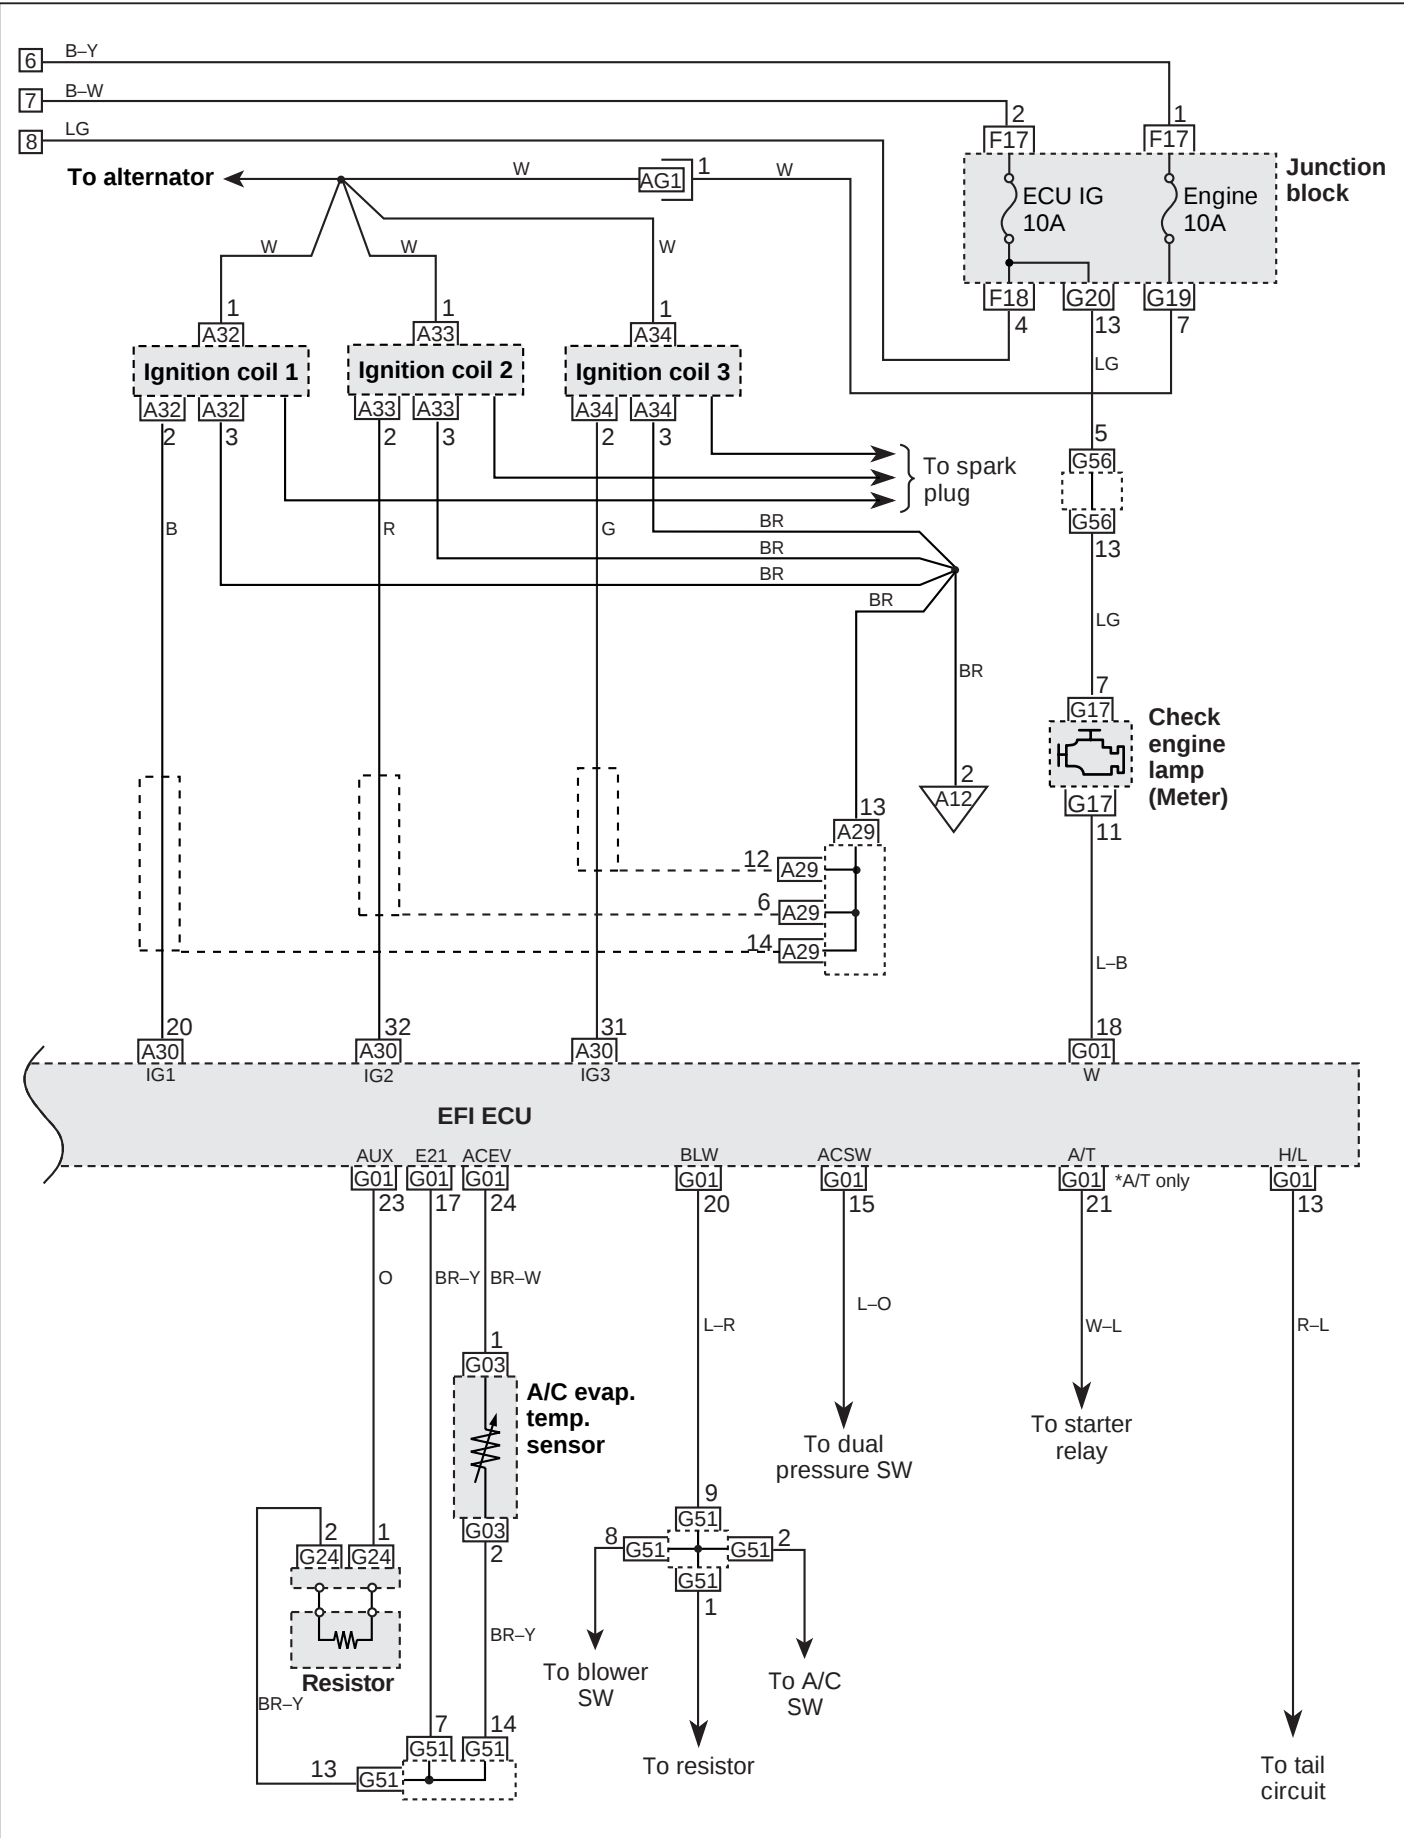


MEMO


Handwriting practice lines consisting of 25 sets of three horizontal dashed lines.

HW-26

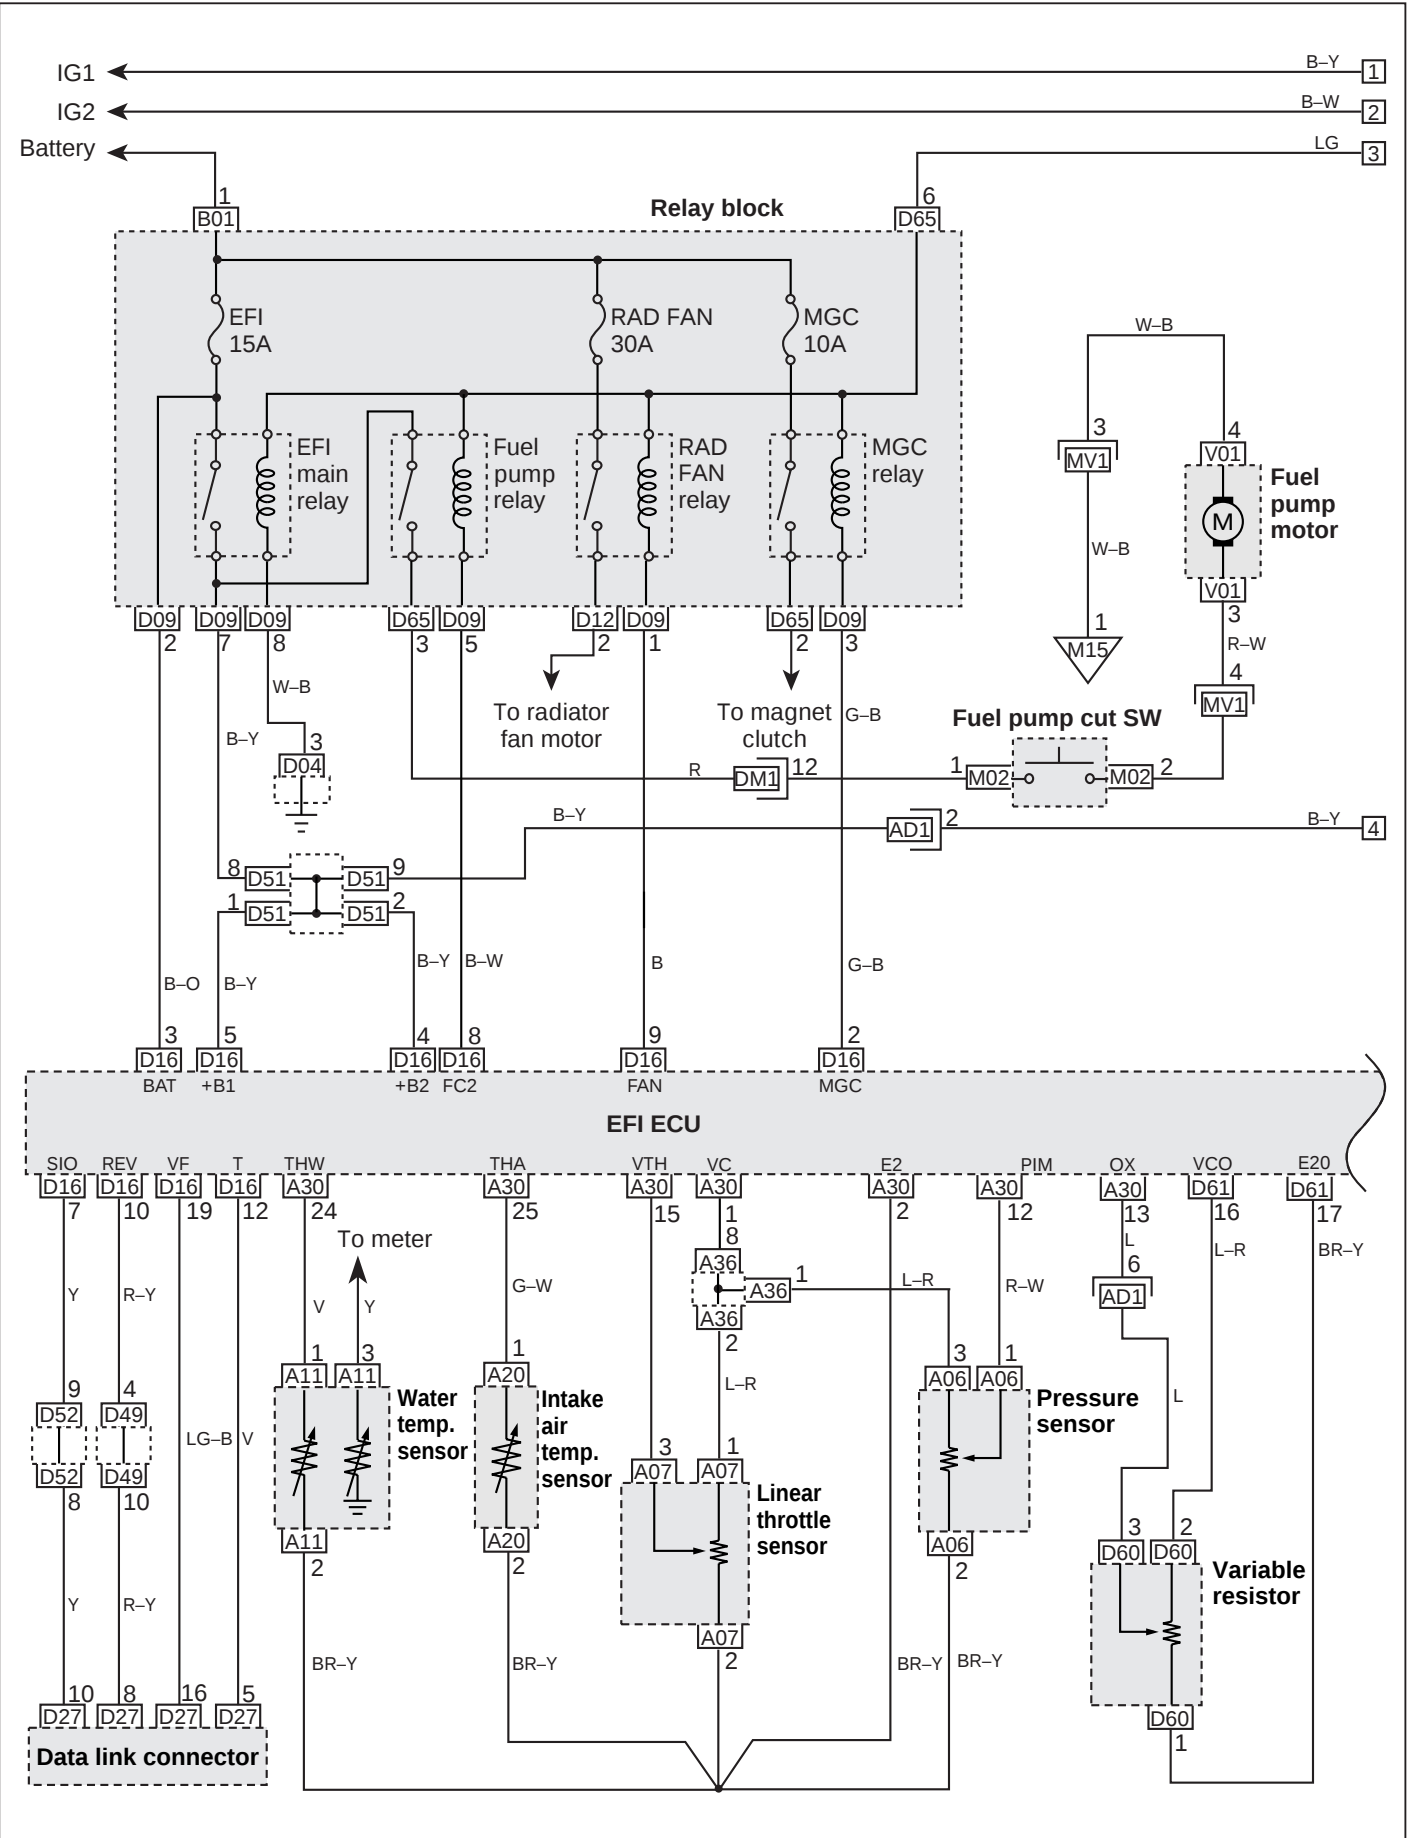
EFI SYSTEM (EJ-DE ENGINE LEADED SPEC / RHD) -1



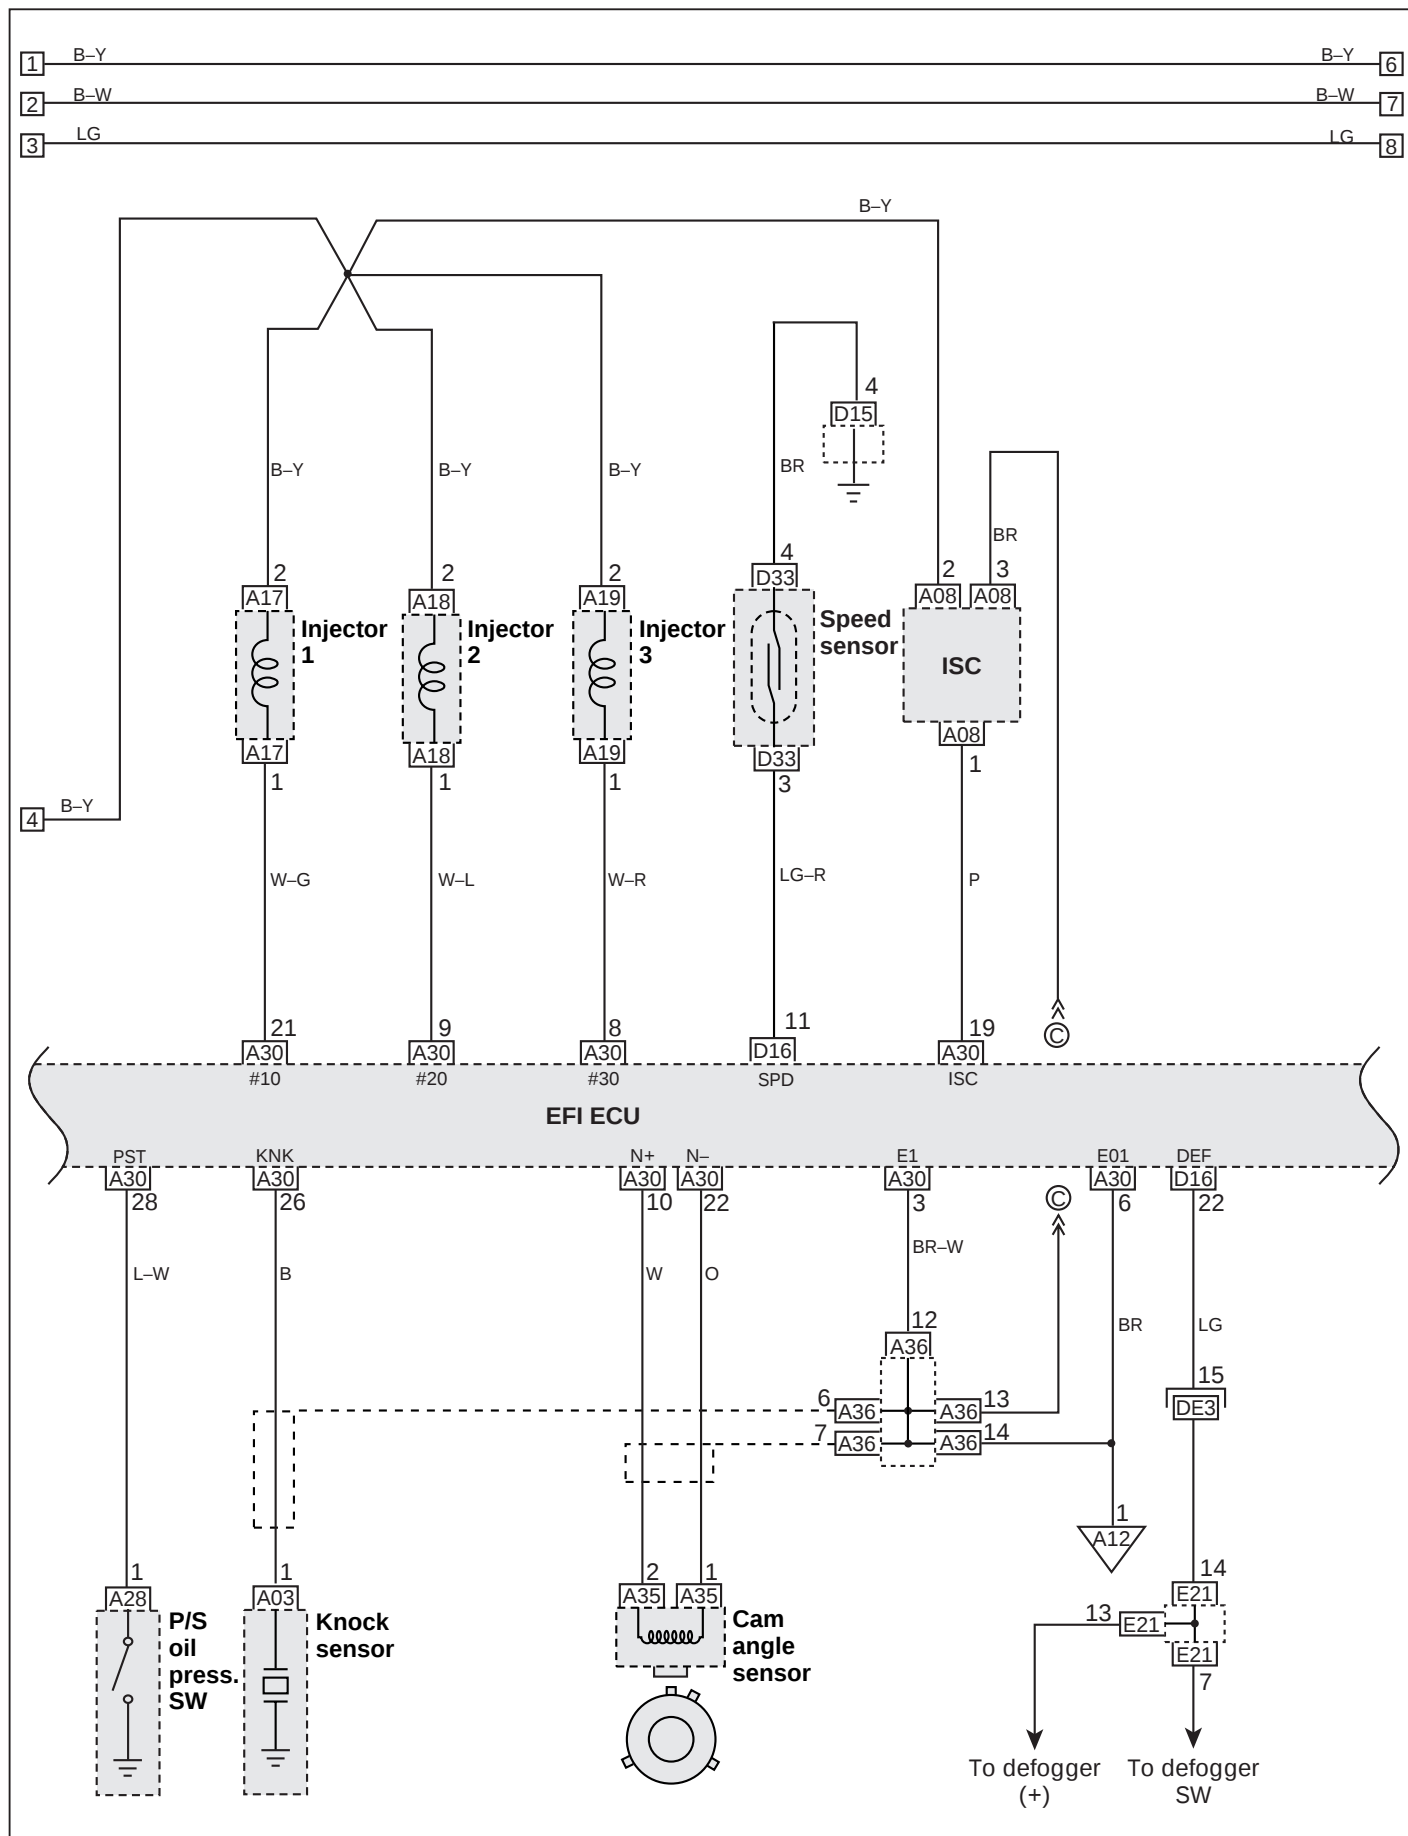EFI SYSTEM (EJ-DE ENGINE LEADED SPEC / RHD) -2



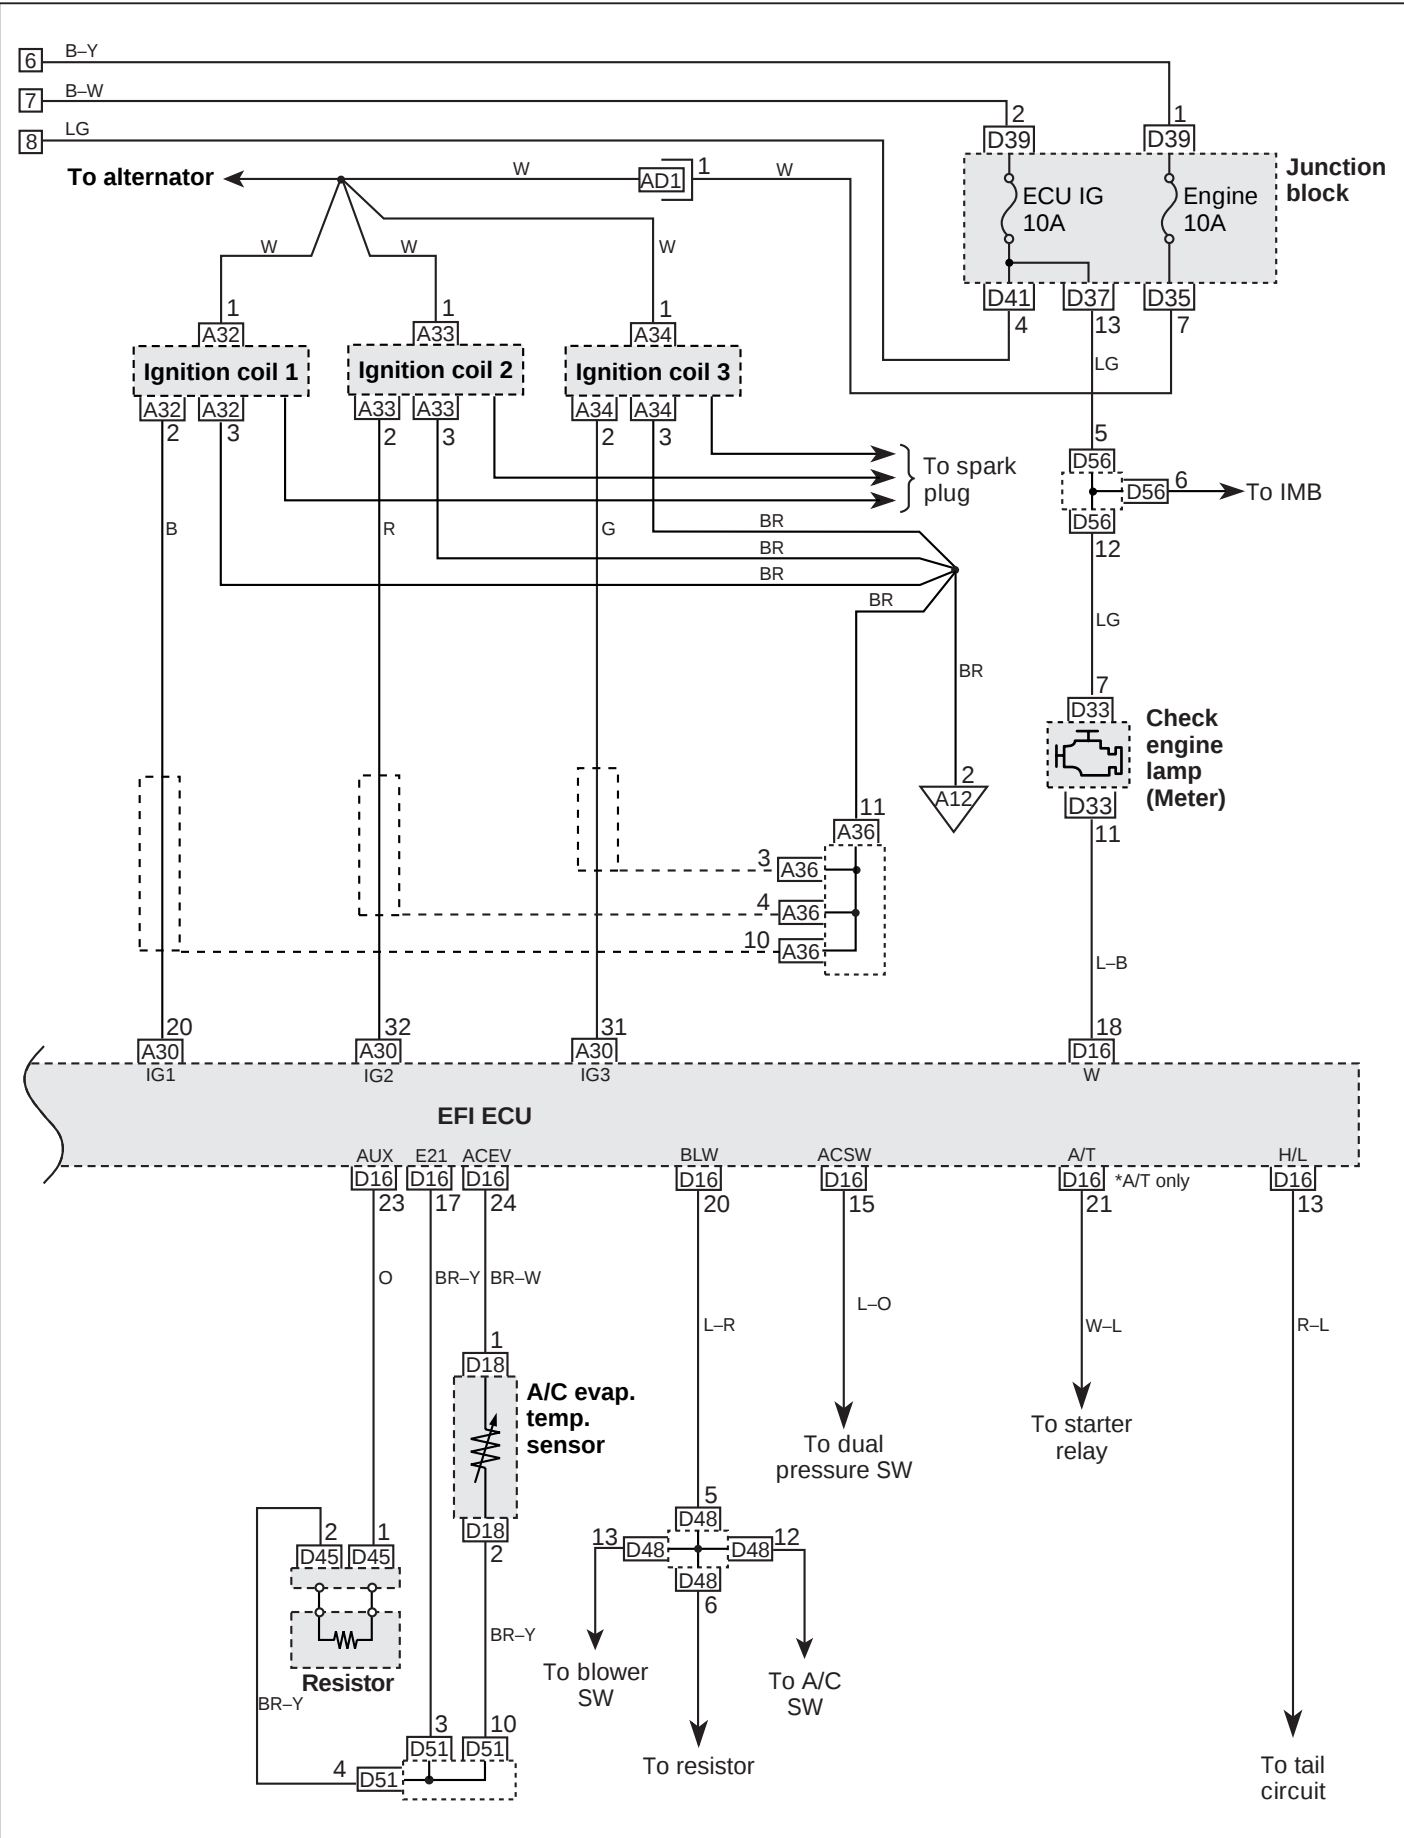EFI SYSTEM (EJ-DE ENGINE LEADED SPEC / RHD) -3




MEMO


Handwriting practice lines consisting of 28 horizontal dashed lines.

HW-30

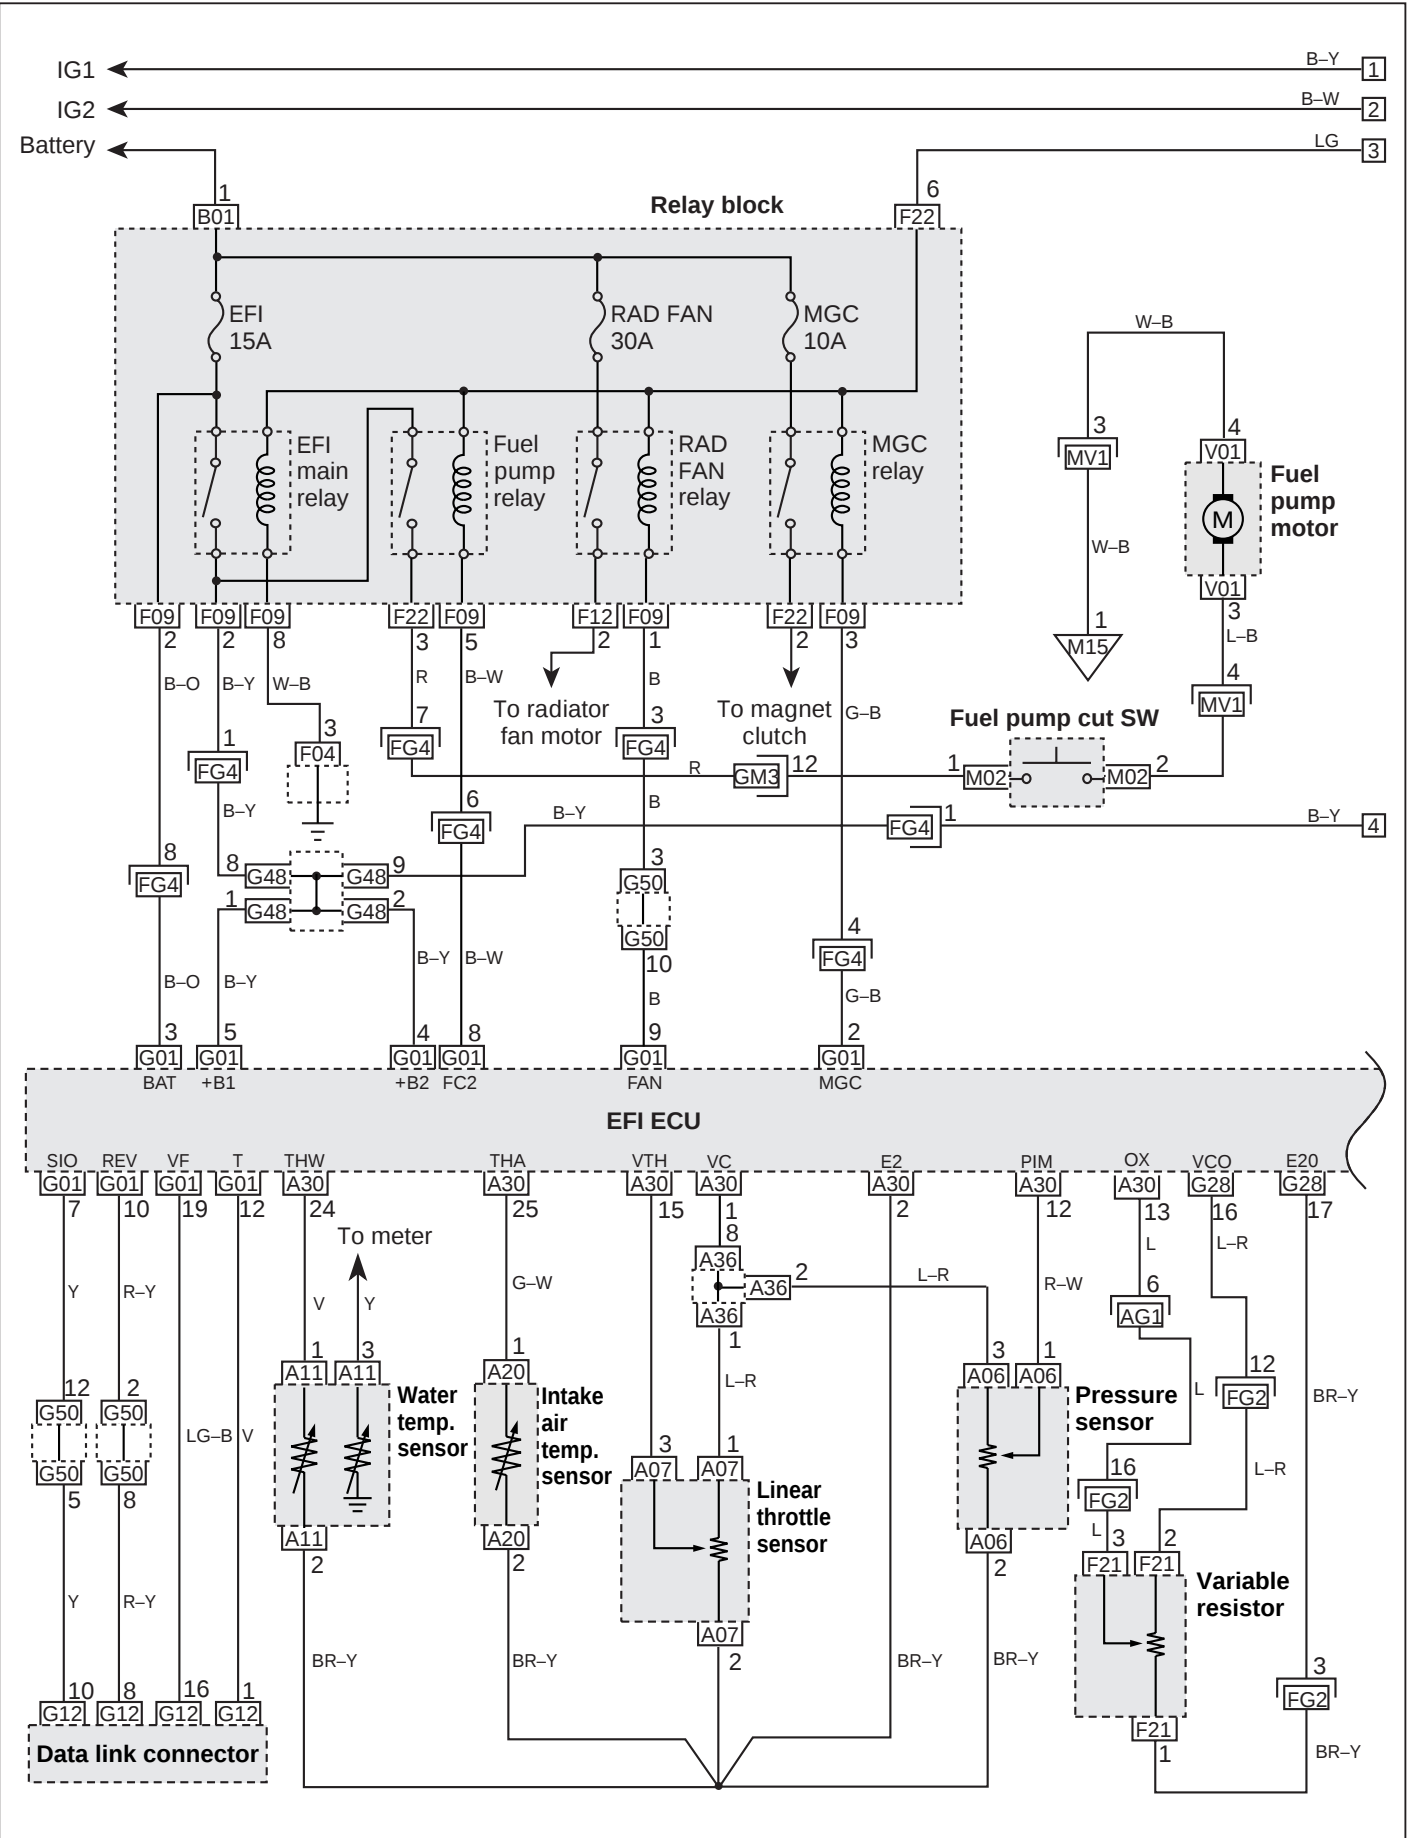
EFI SYSTEM (EJ-DE ENGINE LEADED SPEC / LHD) -1



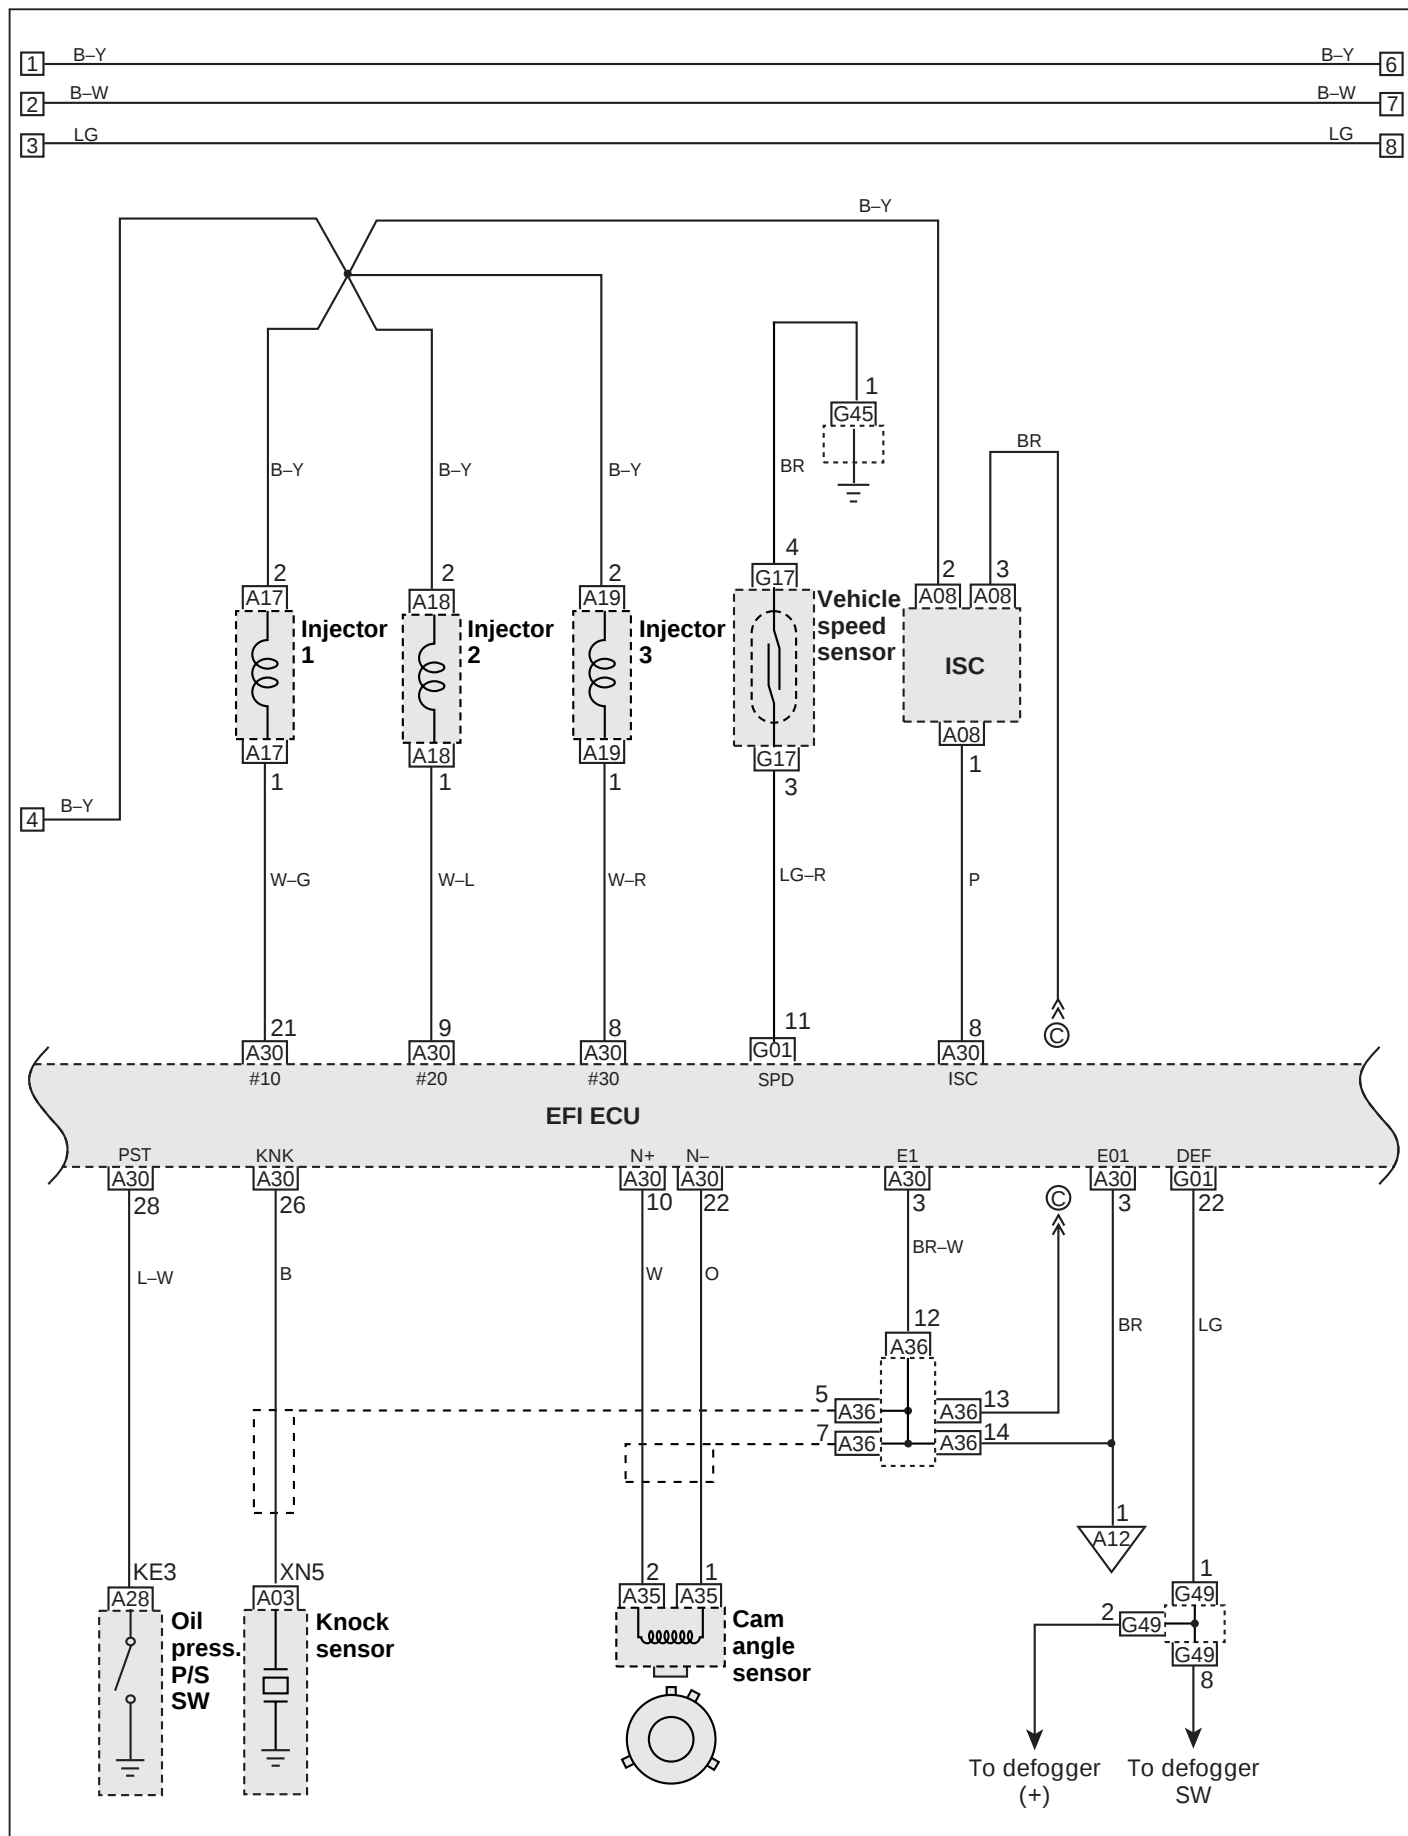EFI SYSTEM (EJ-DE ENGINE LEADED SPEC / LHD) -2



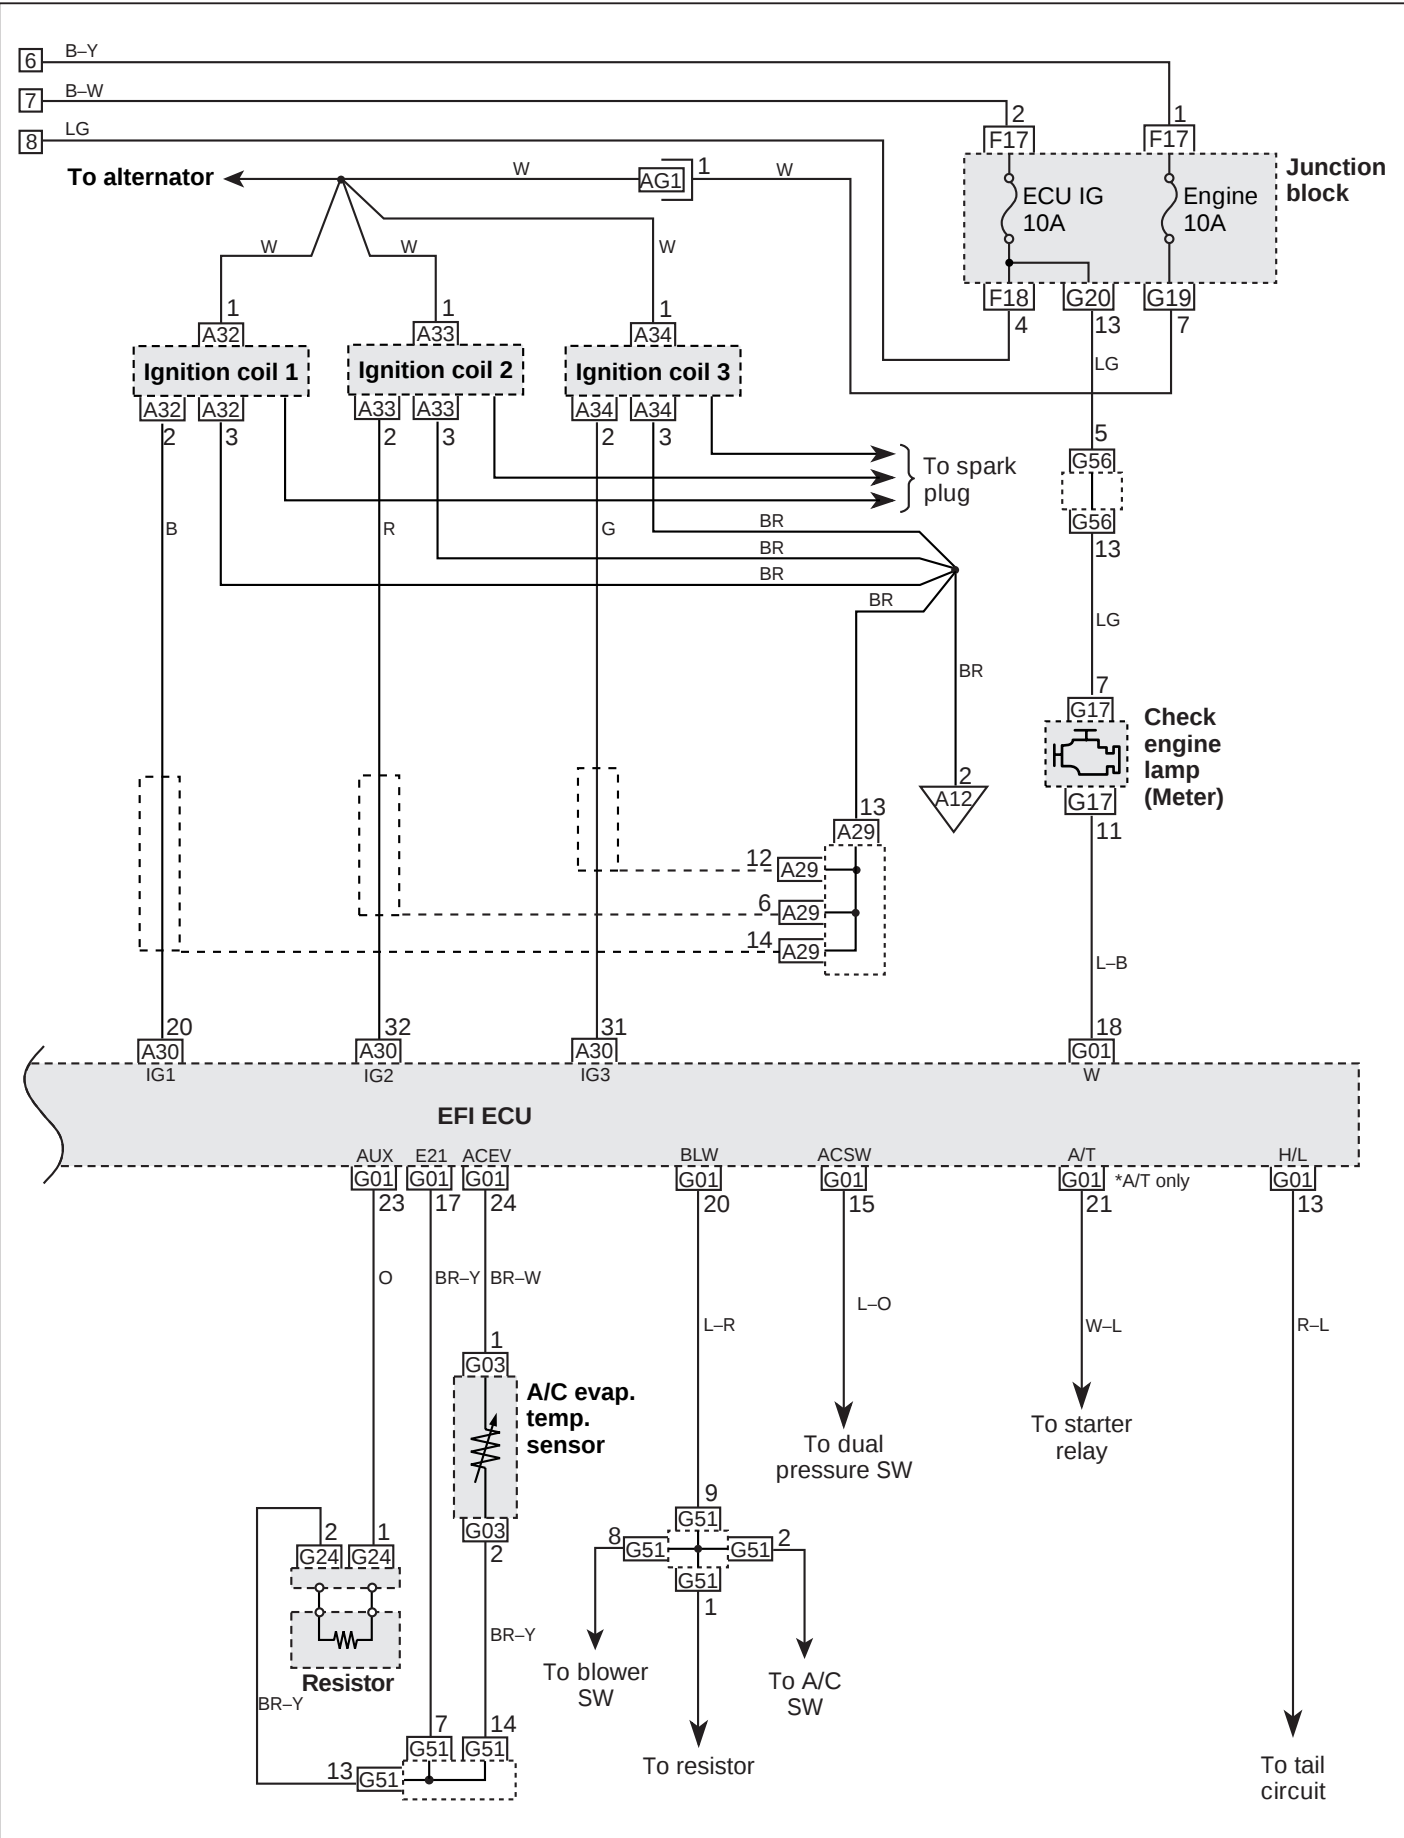
EFI SYSTEM (EJ-DE ENGINE LEADED SPEC / LHD) -3




MEMO

Handwriting practice area with 25 horizontal dashed lines.

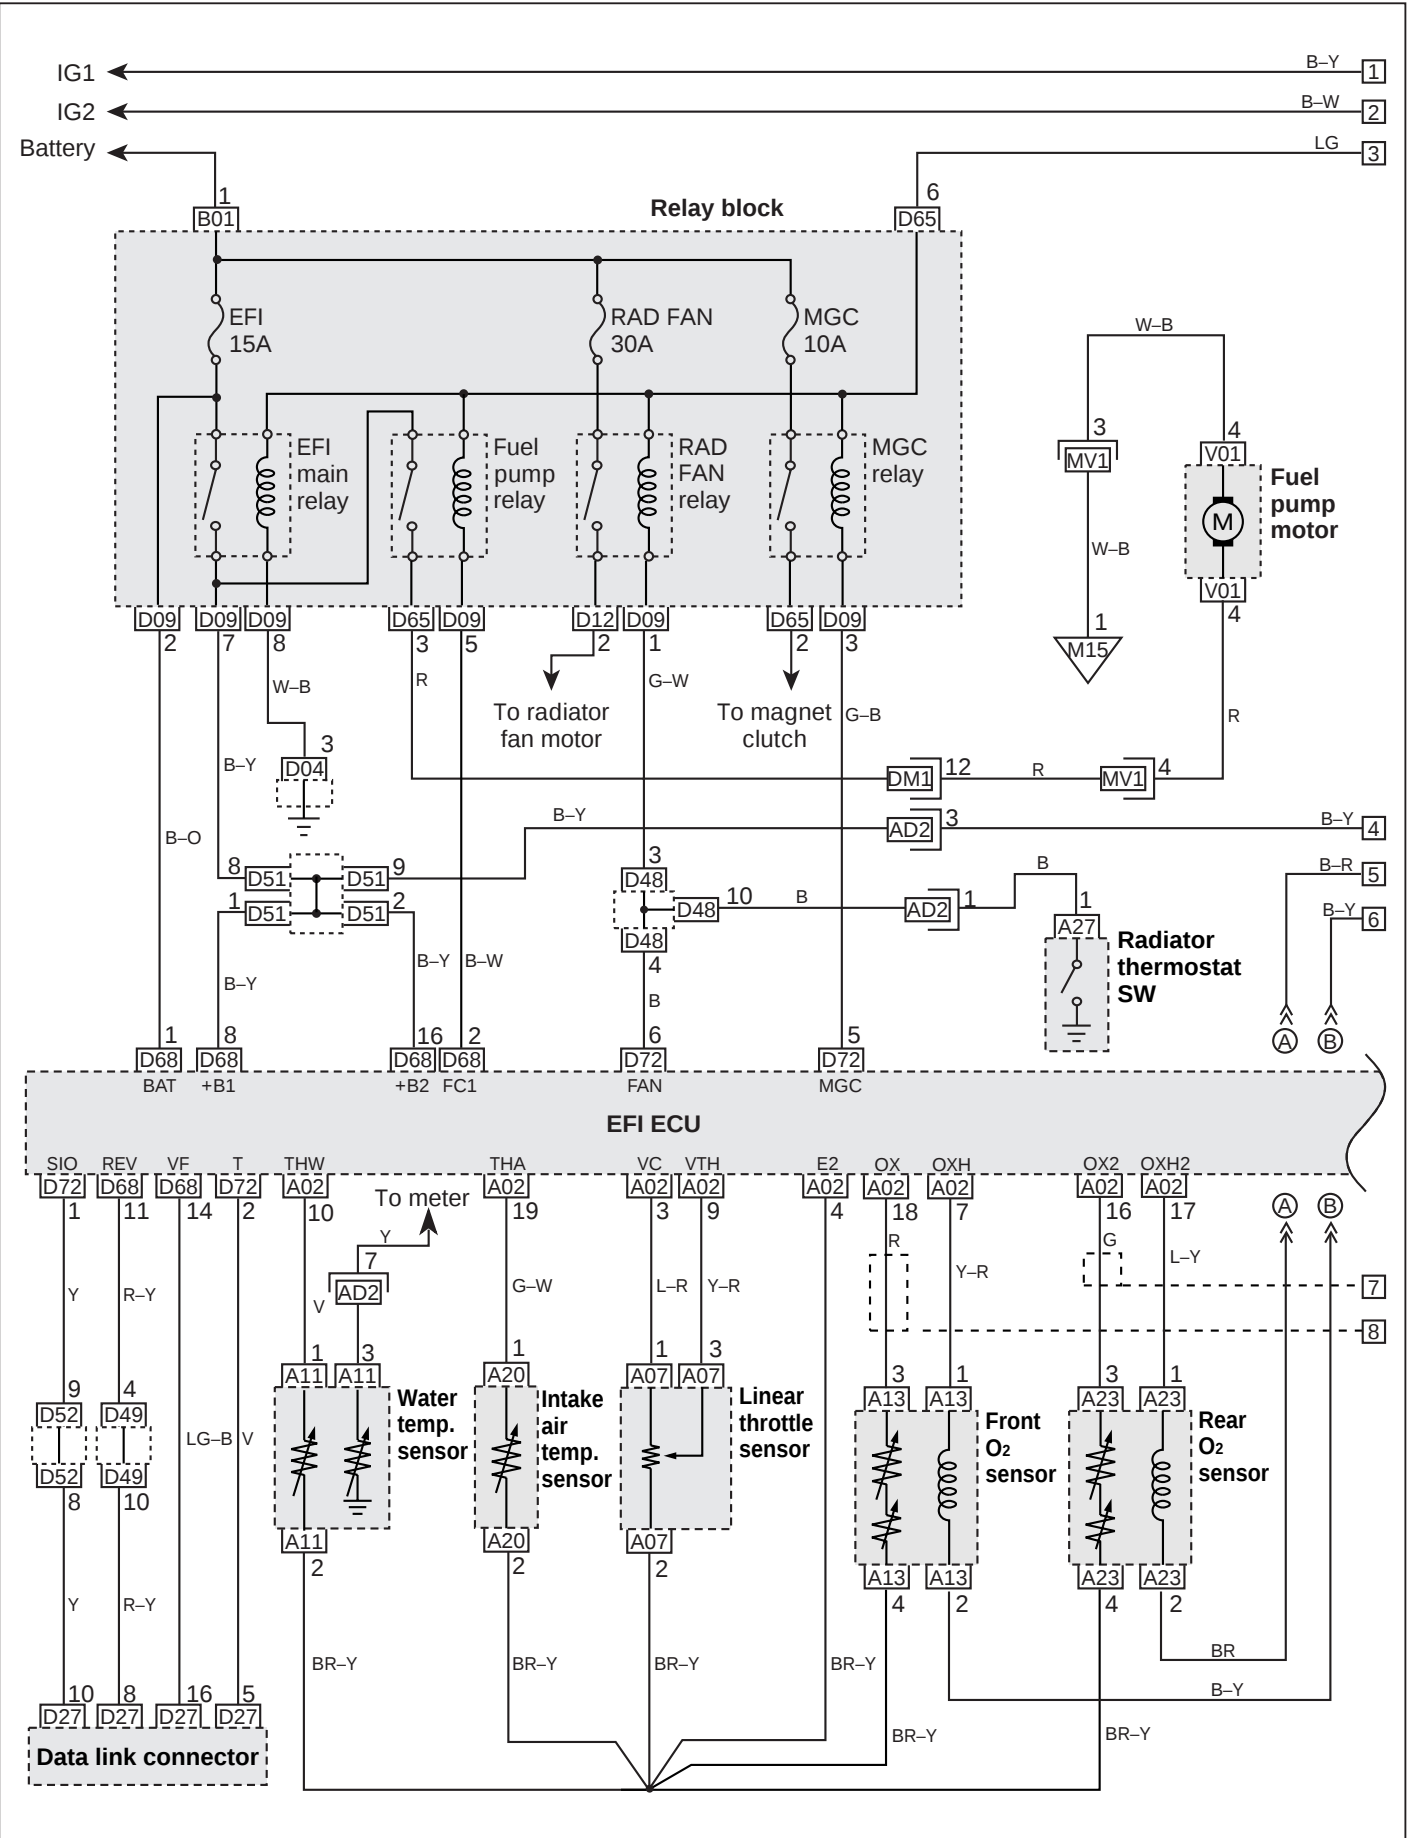EFI SYSTEM (EJ-VE ENGINE / RHD) -1



EFI SYSTEM (EJ-VE ENGINE / RHD) -2

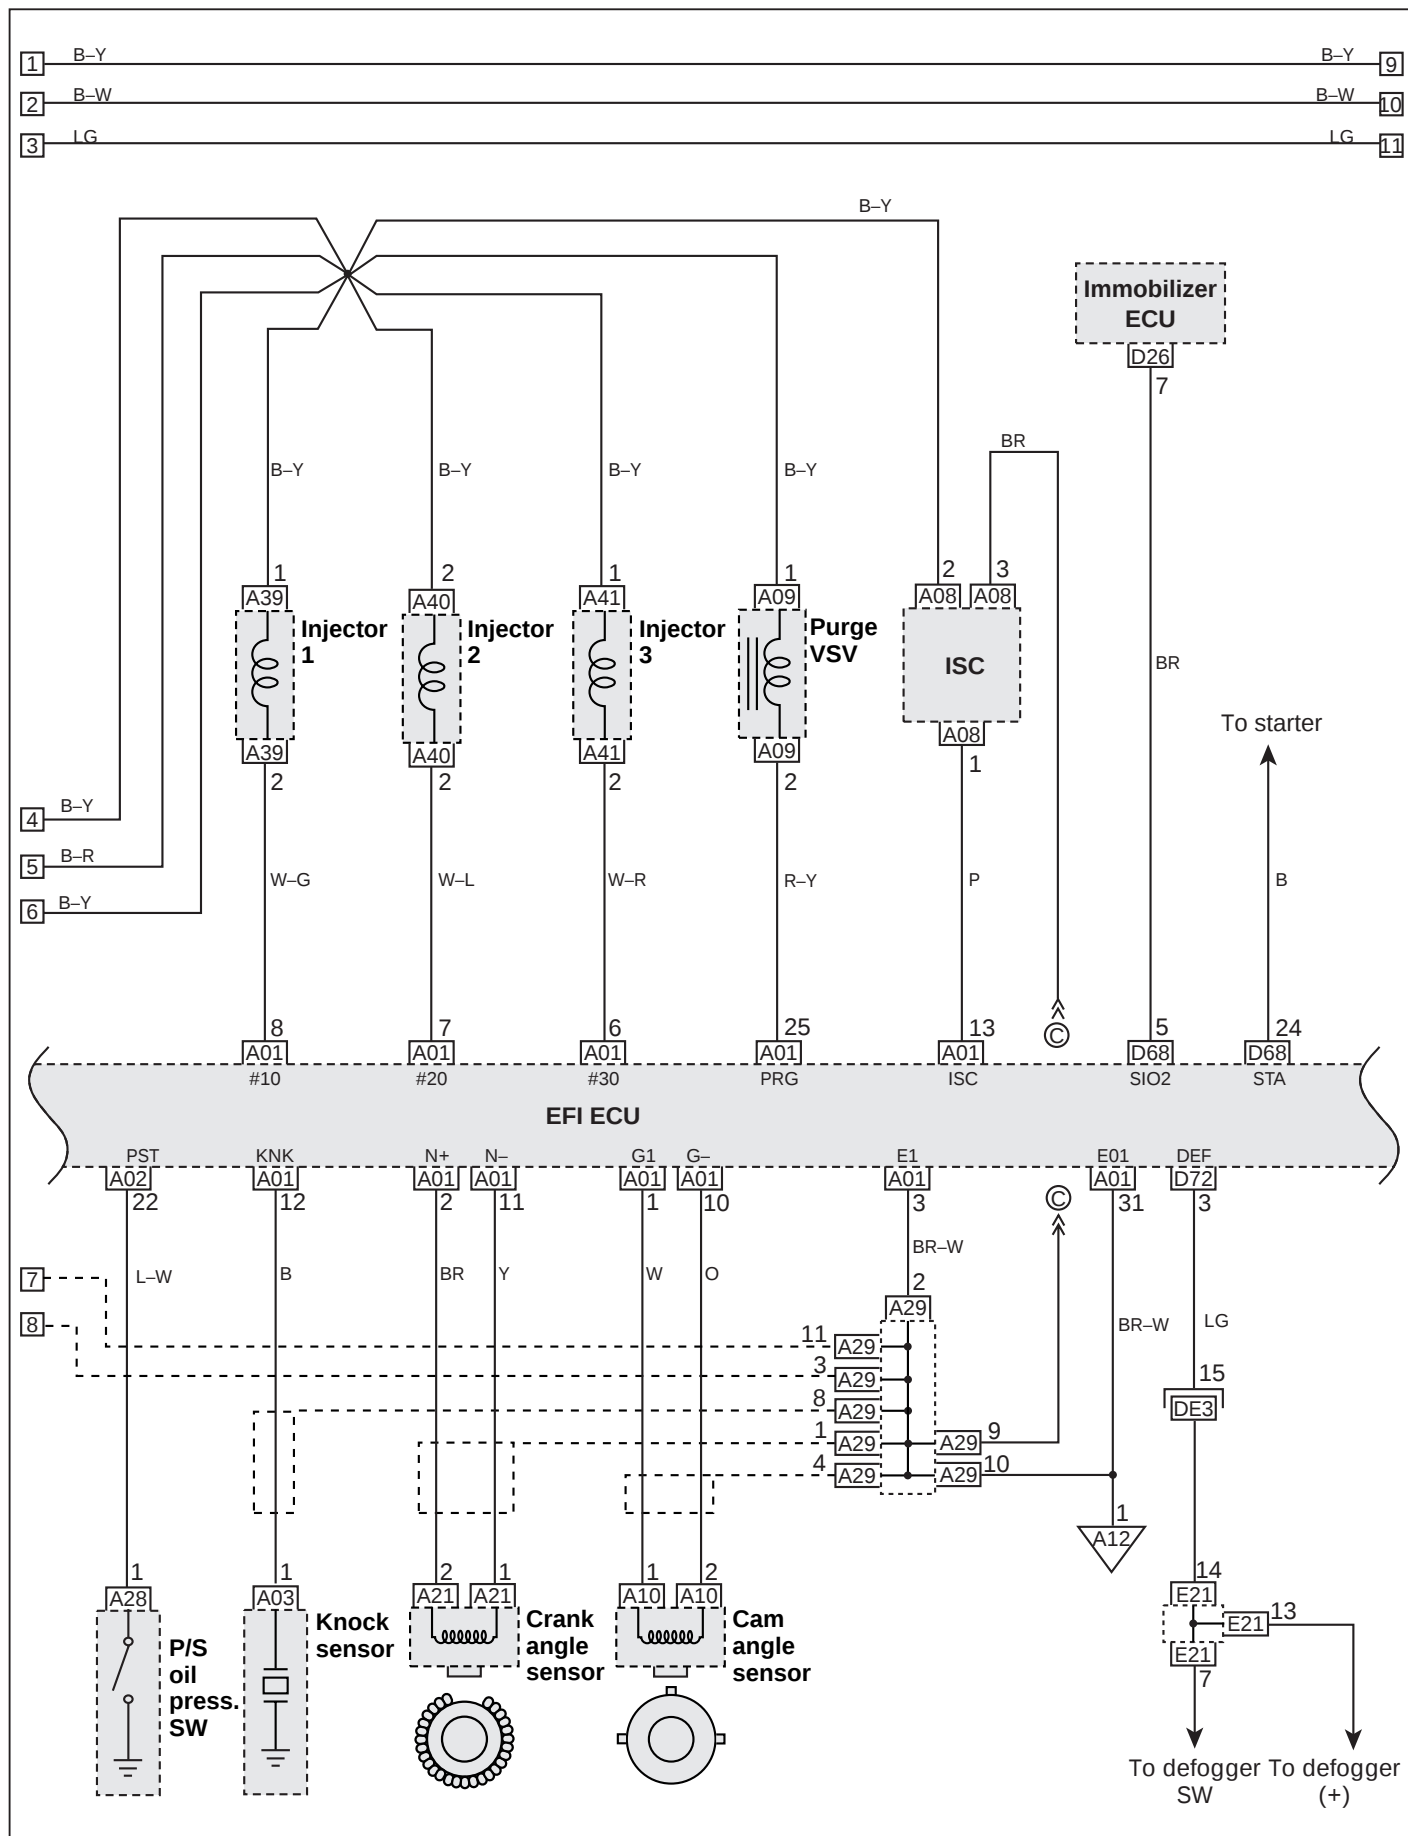


EFI SYSTEM (EJ-VE ENGINE / RHD) -3




MEMO

Handwriting practice lines consisting of 28 horizontal dashed lines.

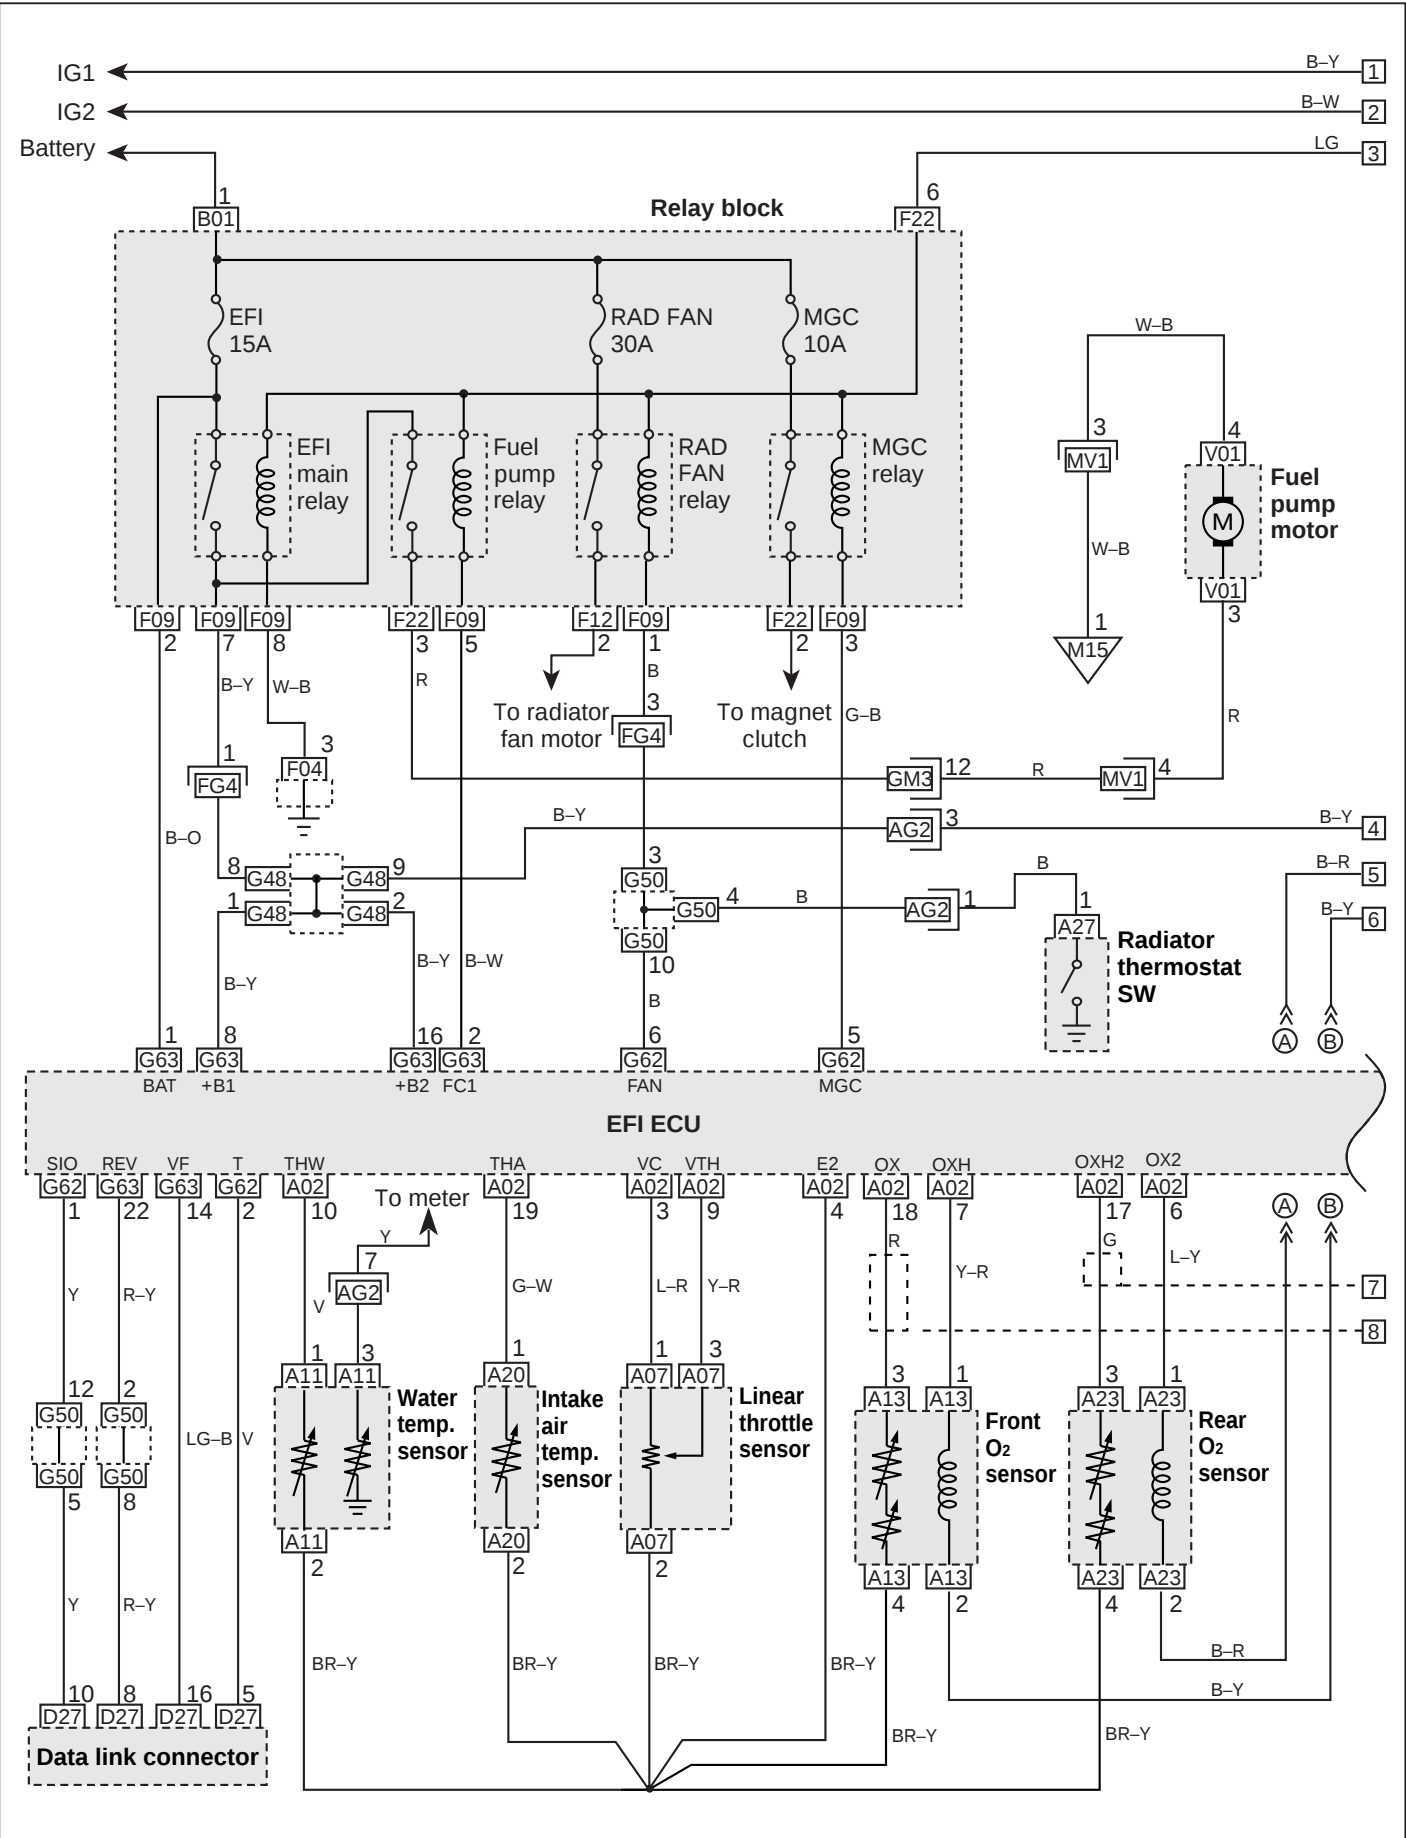
EFI SYSTEM (EJ-VE ENGINE / LHD) -1



EFI SYSTEM (EJ-VE ENGINE / LHD) -2

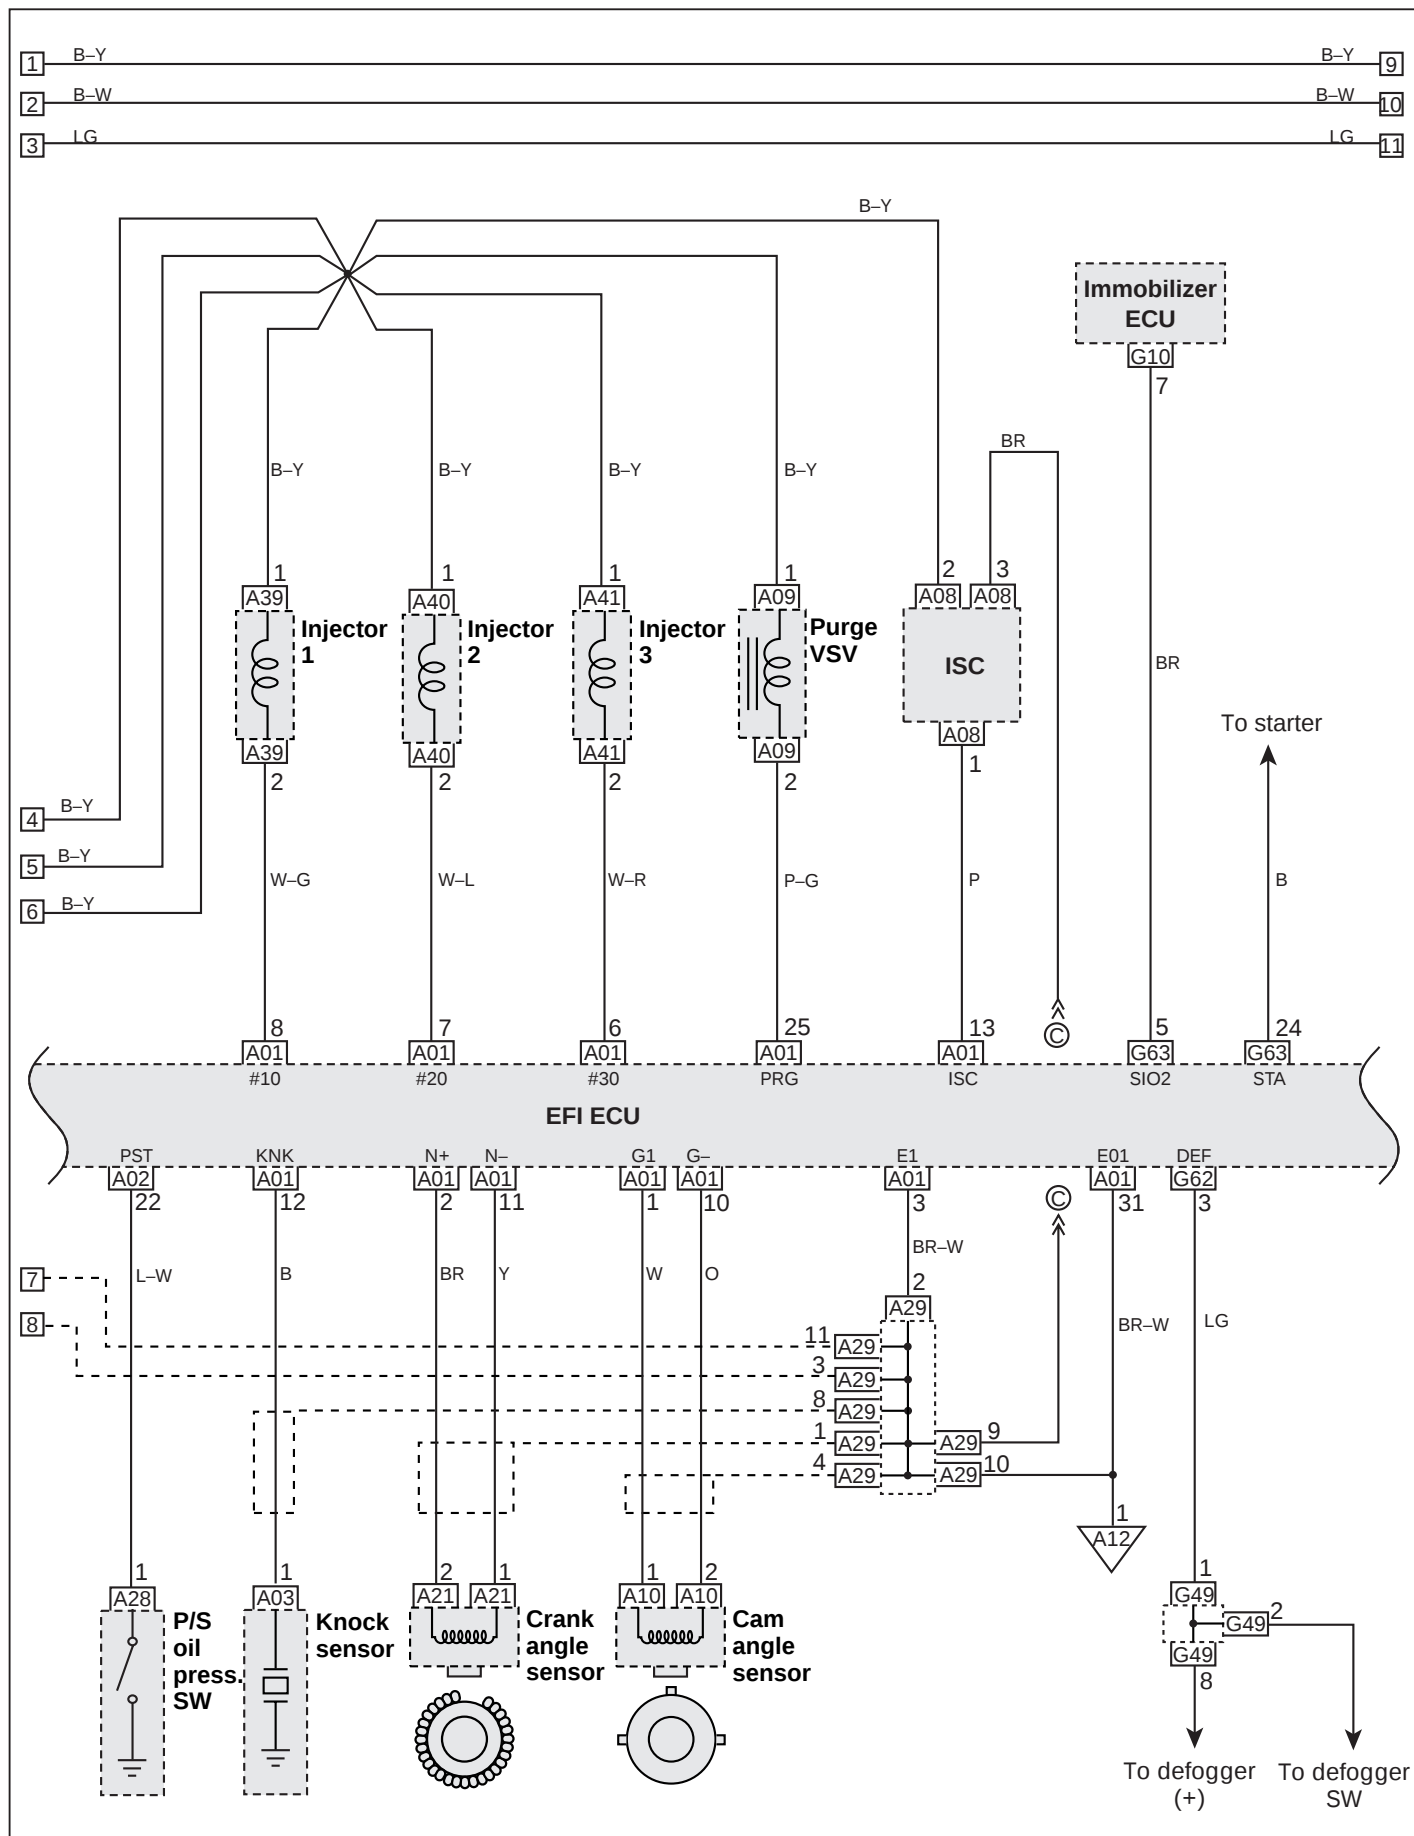


EFI SYSTEM (EJ-VE ENGINE / LHD) -3

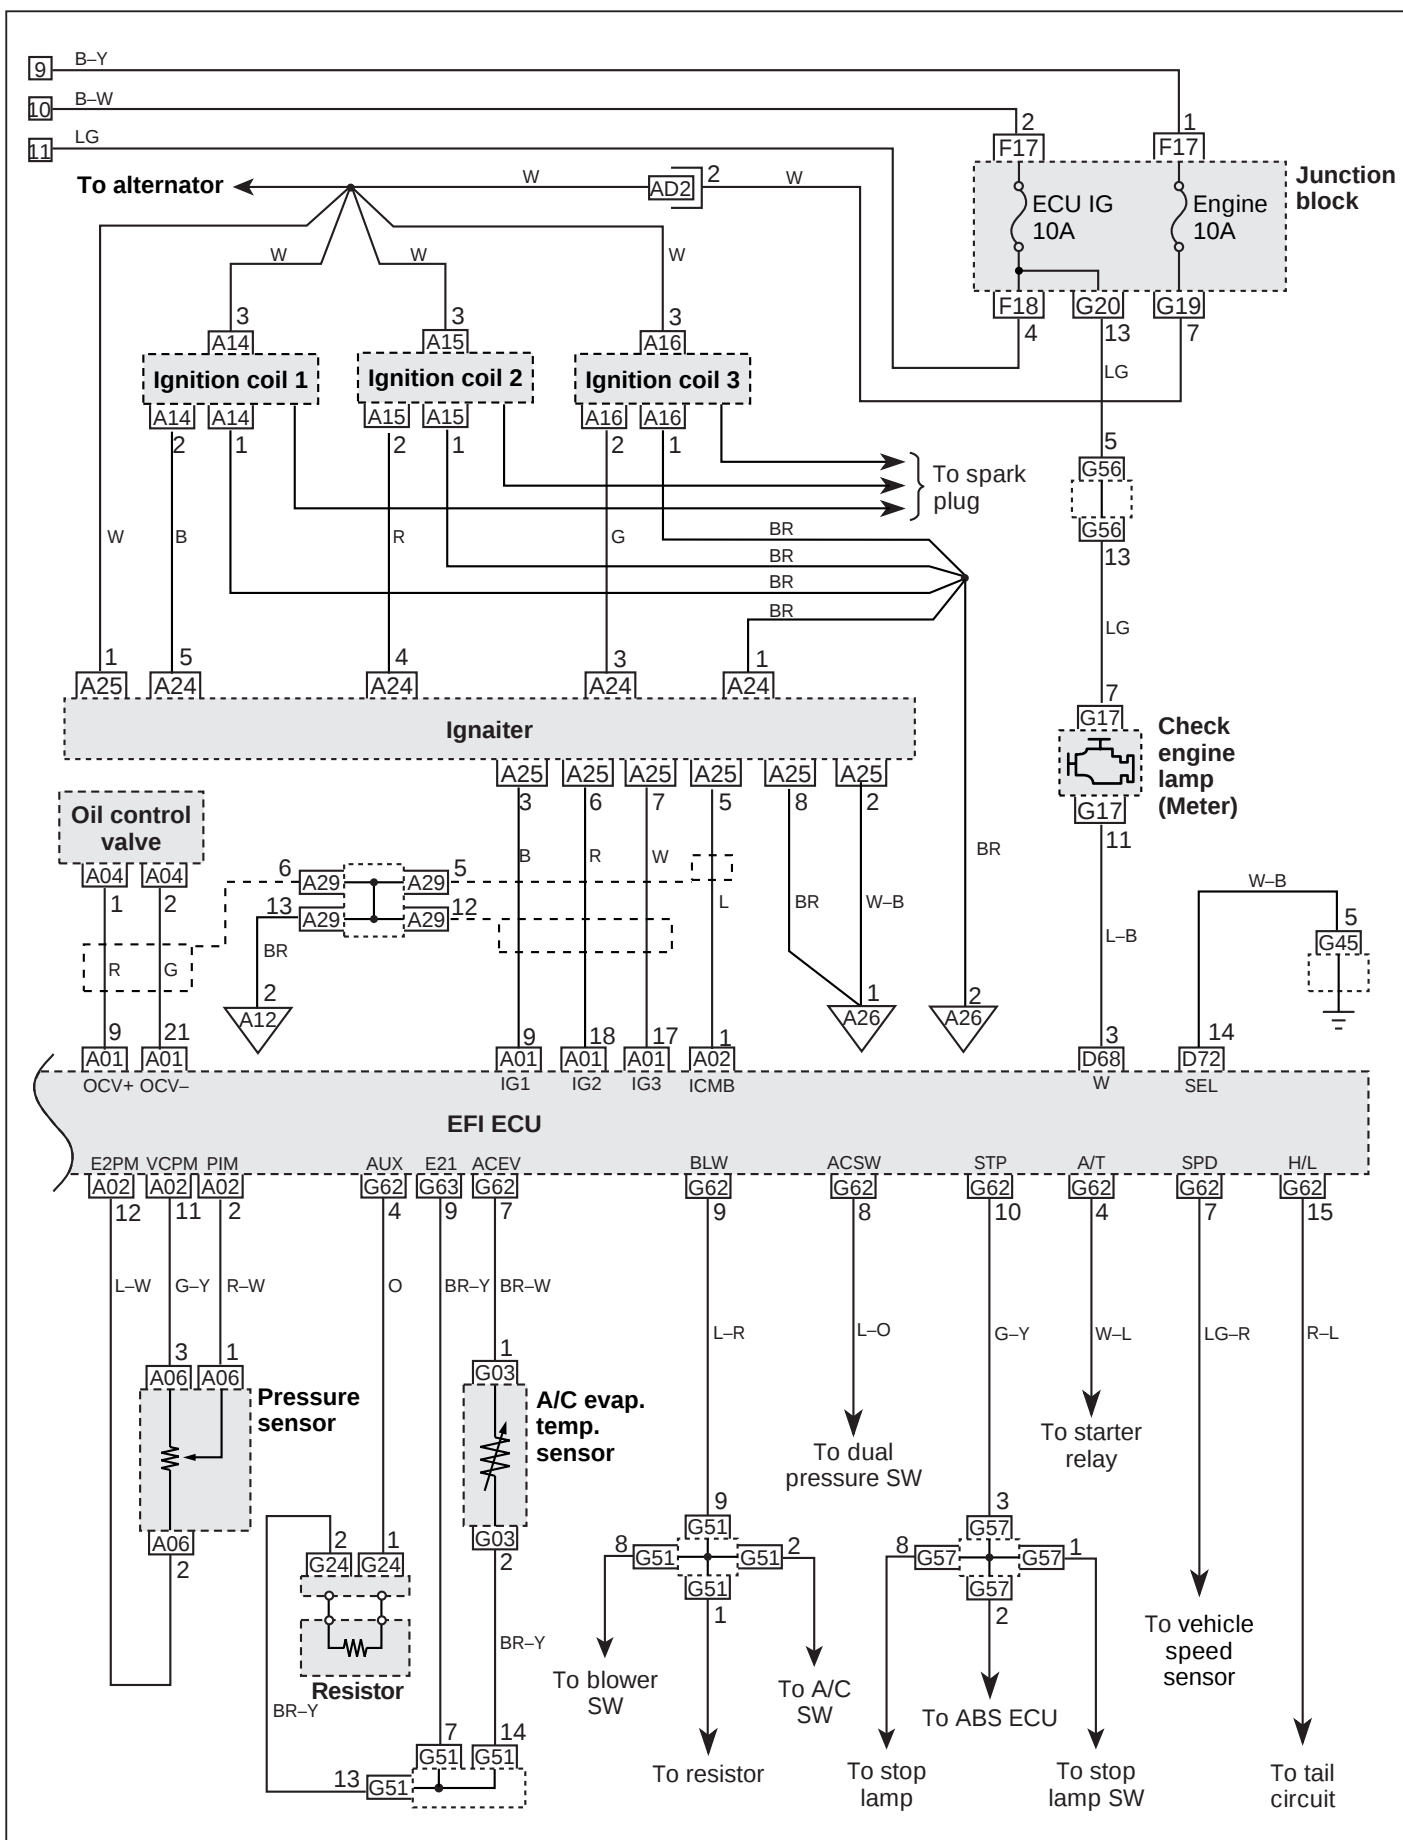


MEMO

Handwriting practice area with 25 horizontal dashed lines.

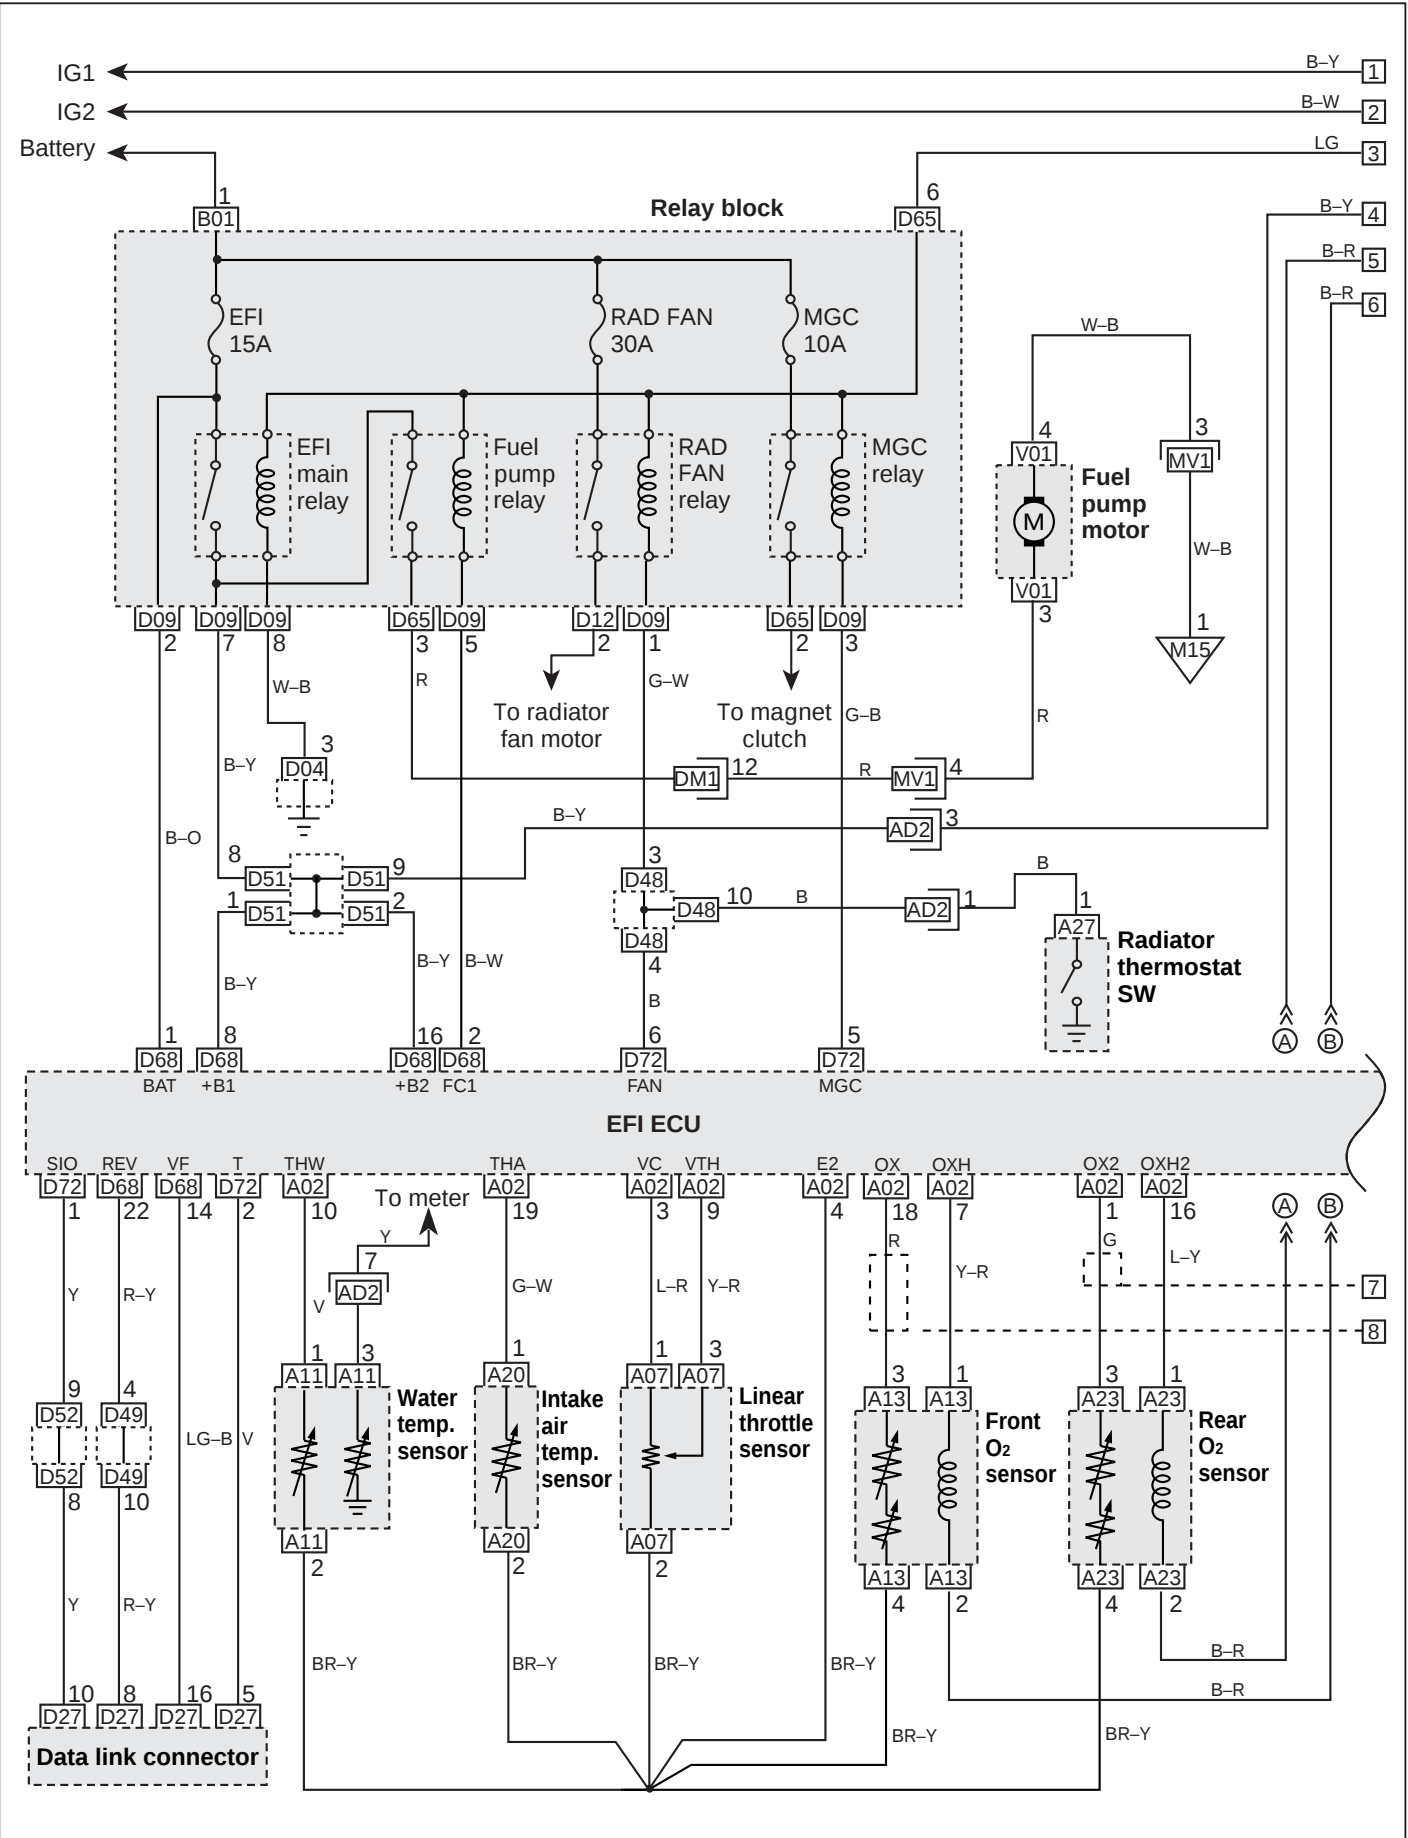
EFI SYSTEM (K3-VE2 ENGINE / EU SPEC / RHD) -1



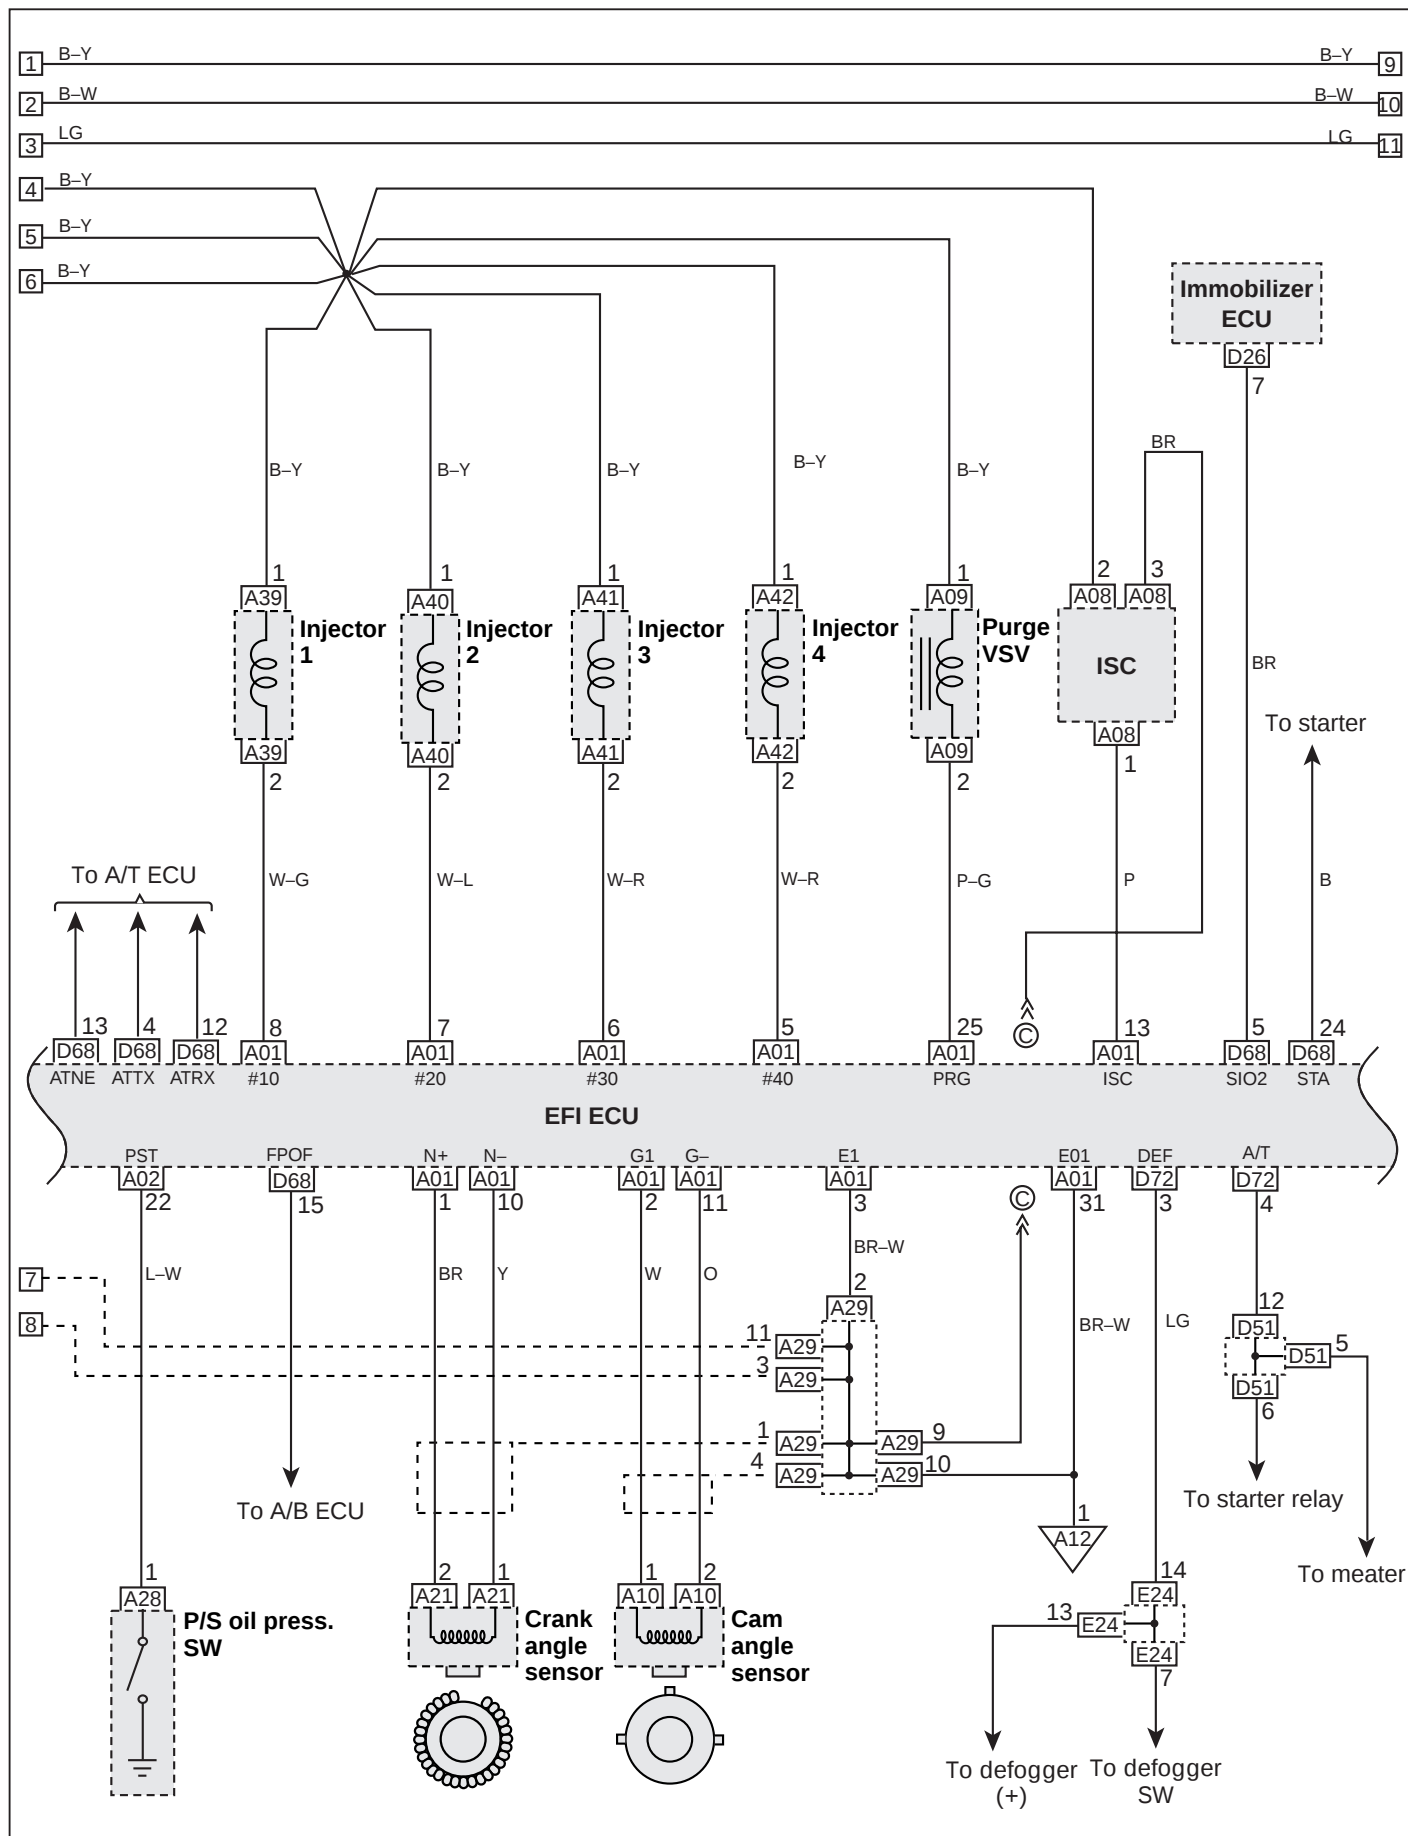EFI SYSTEM (K3-VE2 ENGINE / EU SPEC / RHD) -2



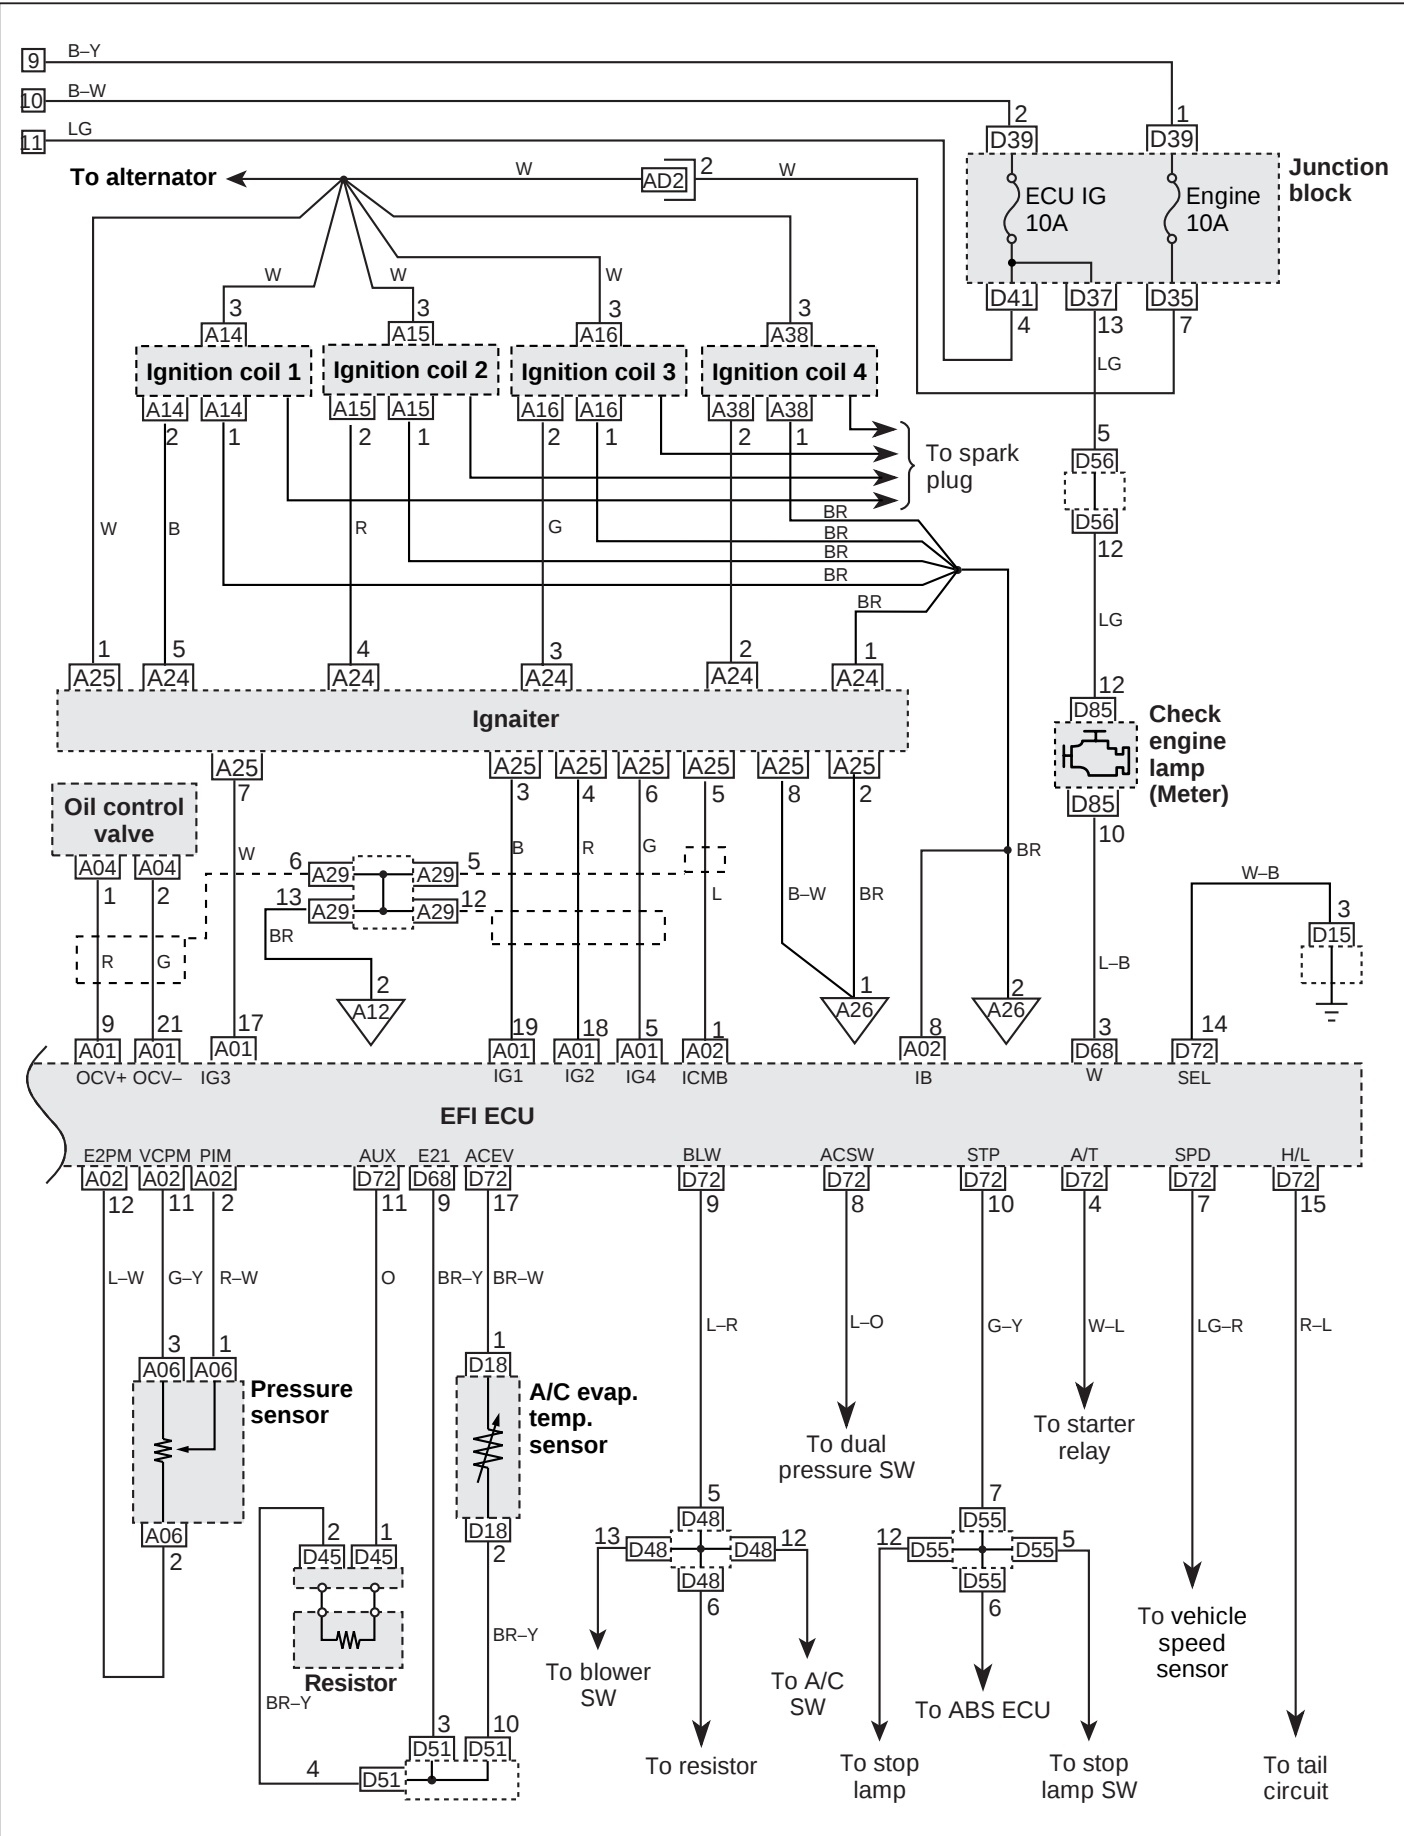
EFI SYSTEM (K3-VE2 ENGINE / EU SPEC / RHD) -3




MEMO

Handwriting practice area with 25 horizontal dashed lines.

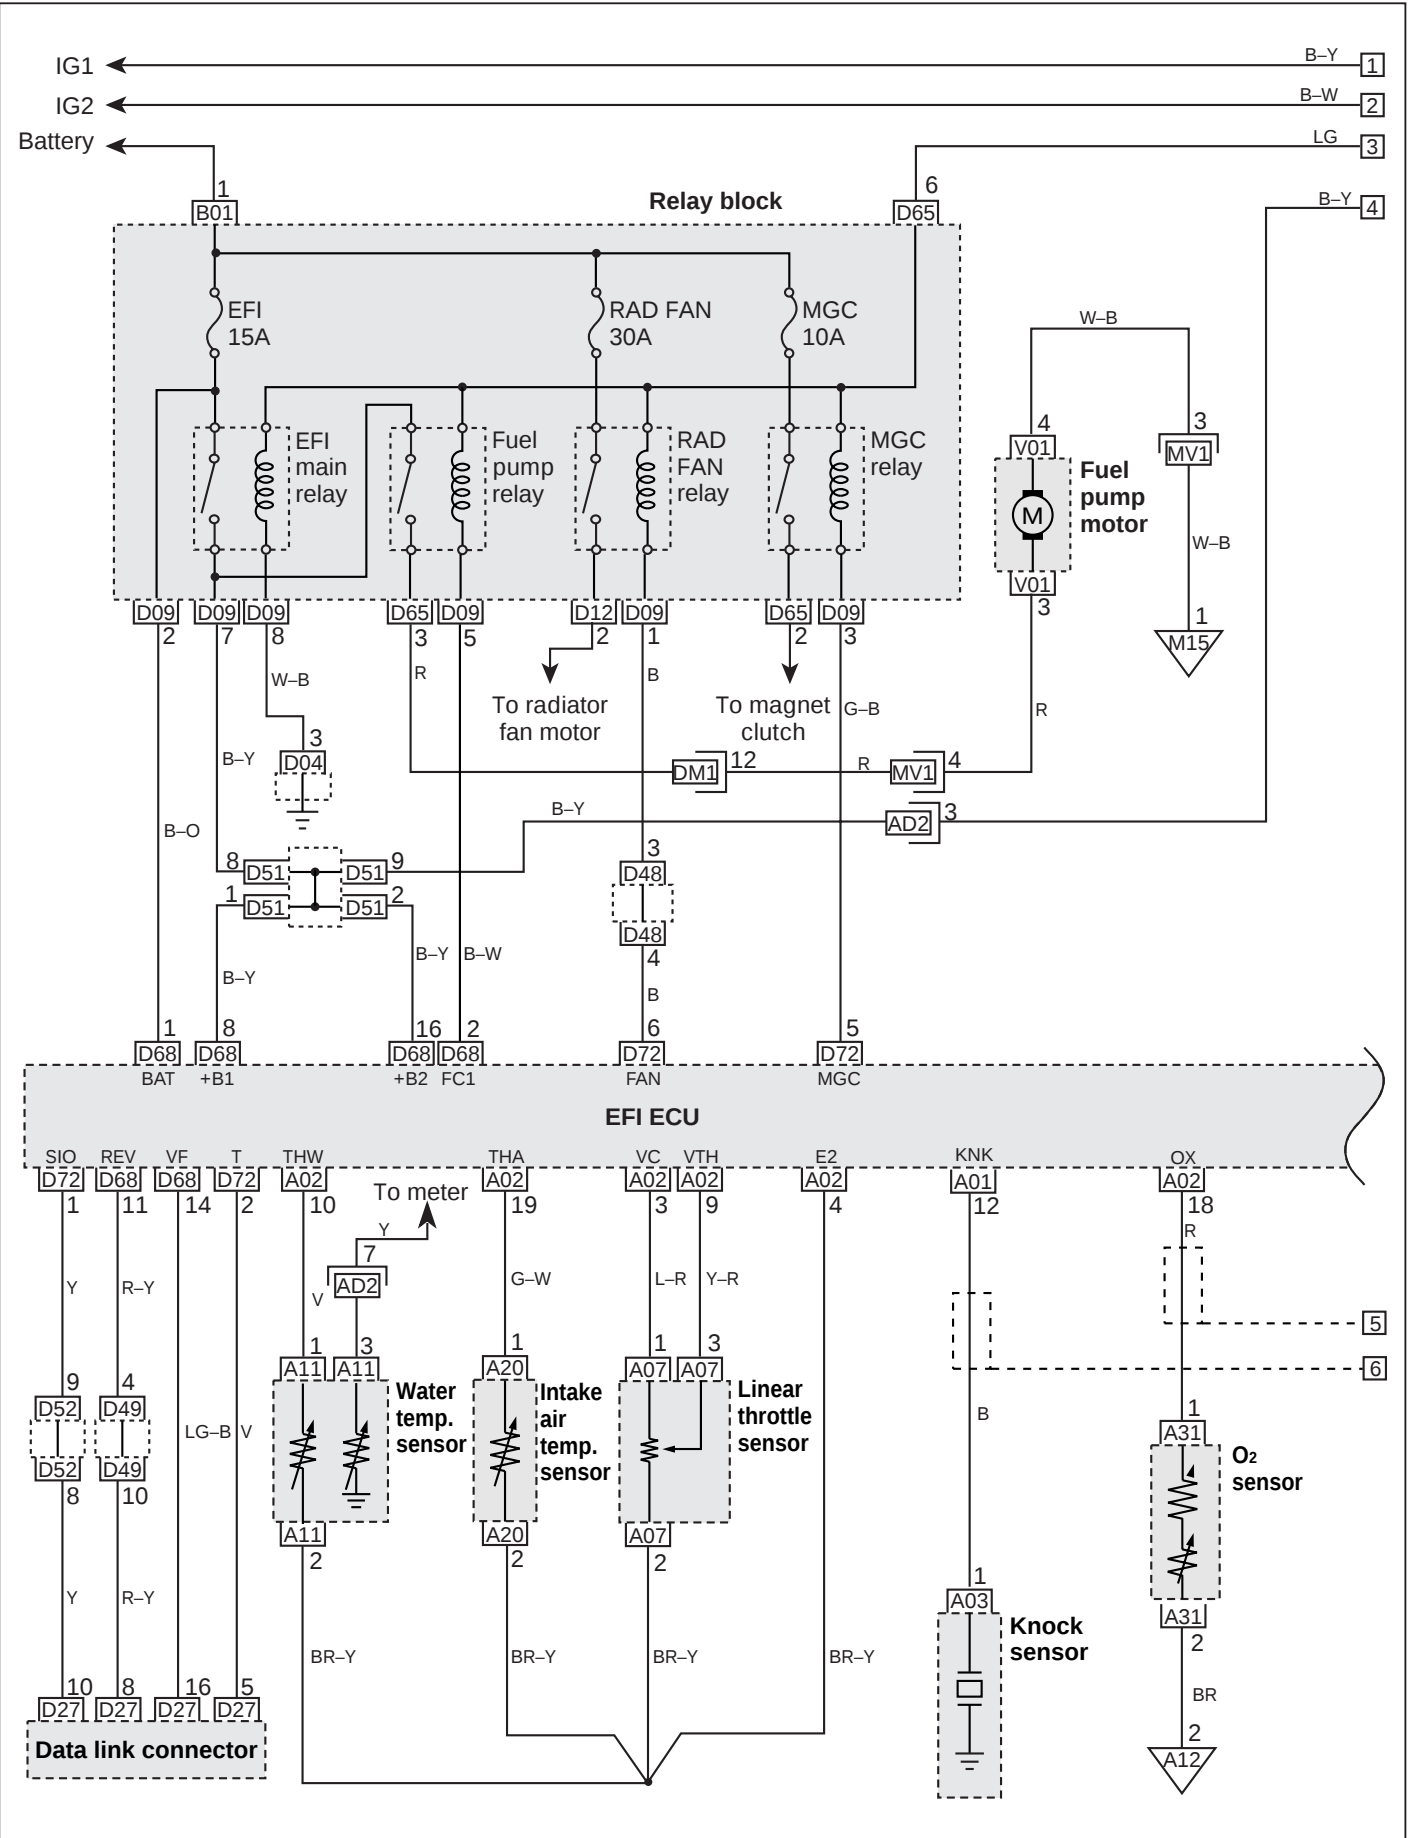EFI SYSTEM (K3-VE2 ENGINE / AUS & GENERAL SPEC / RHD) -1



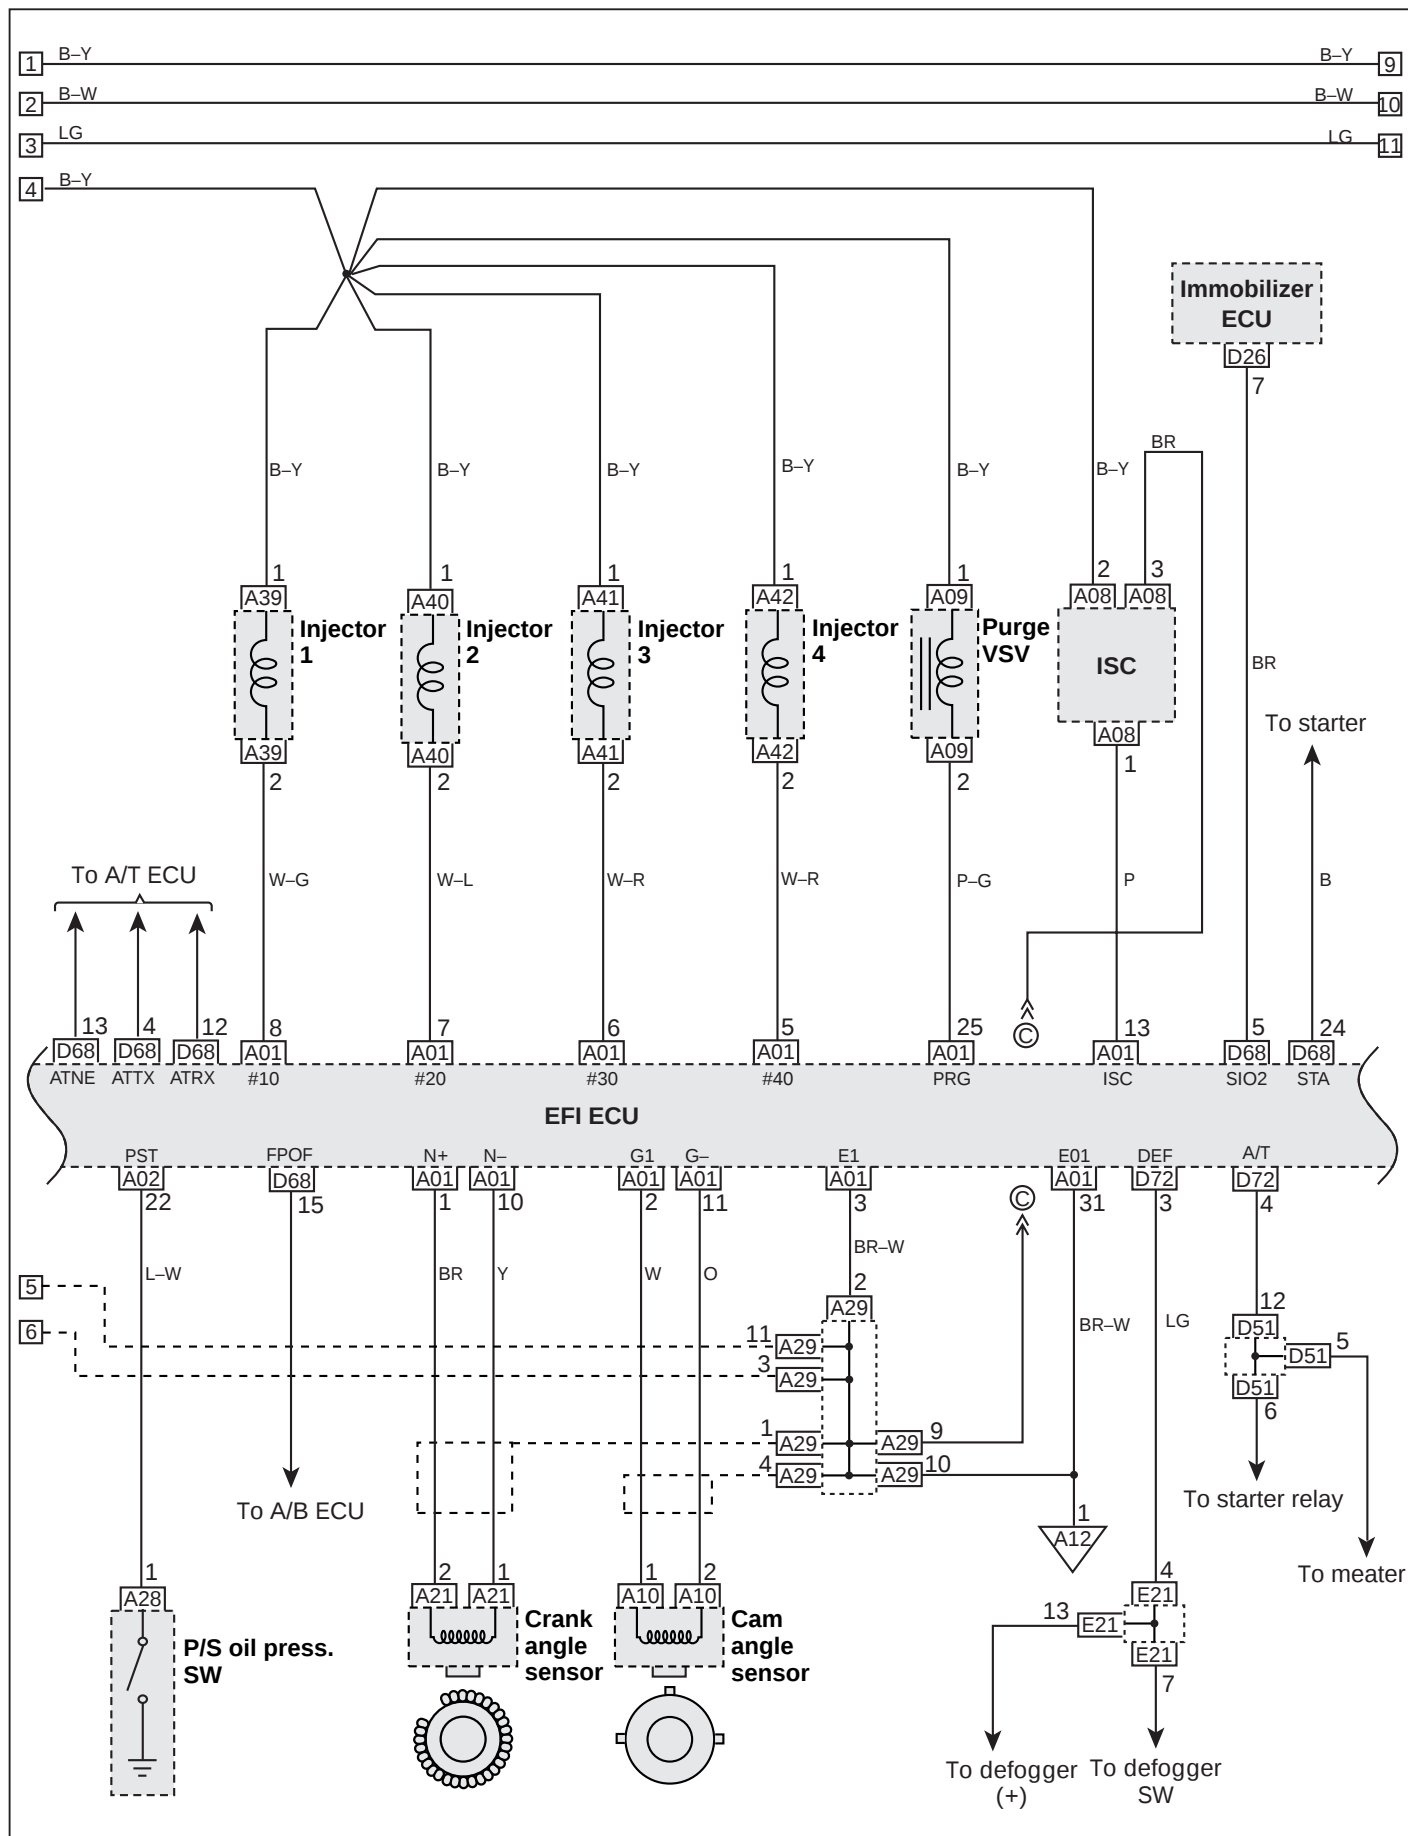EFI SYSTEM (K3-VE2 ENGINE / AUS & GENERAL SPEC / RHD) -2




EFI SYSTEM (K3-VE2 ENGINE / AUS & GENERAL SPEC / RHD) -3




MEMO

Handwriting practice area with 25 horizontal dashed lines.

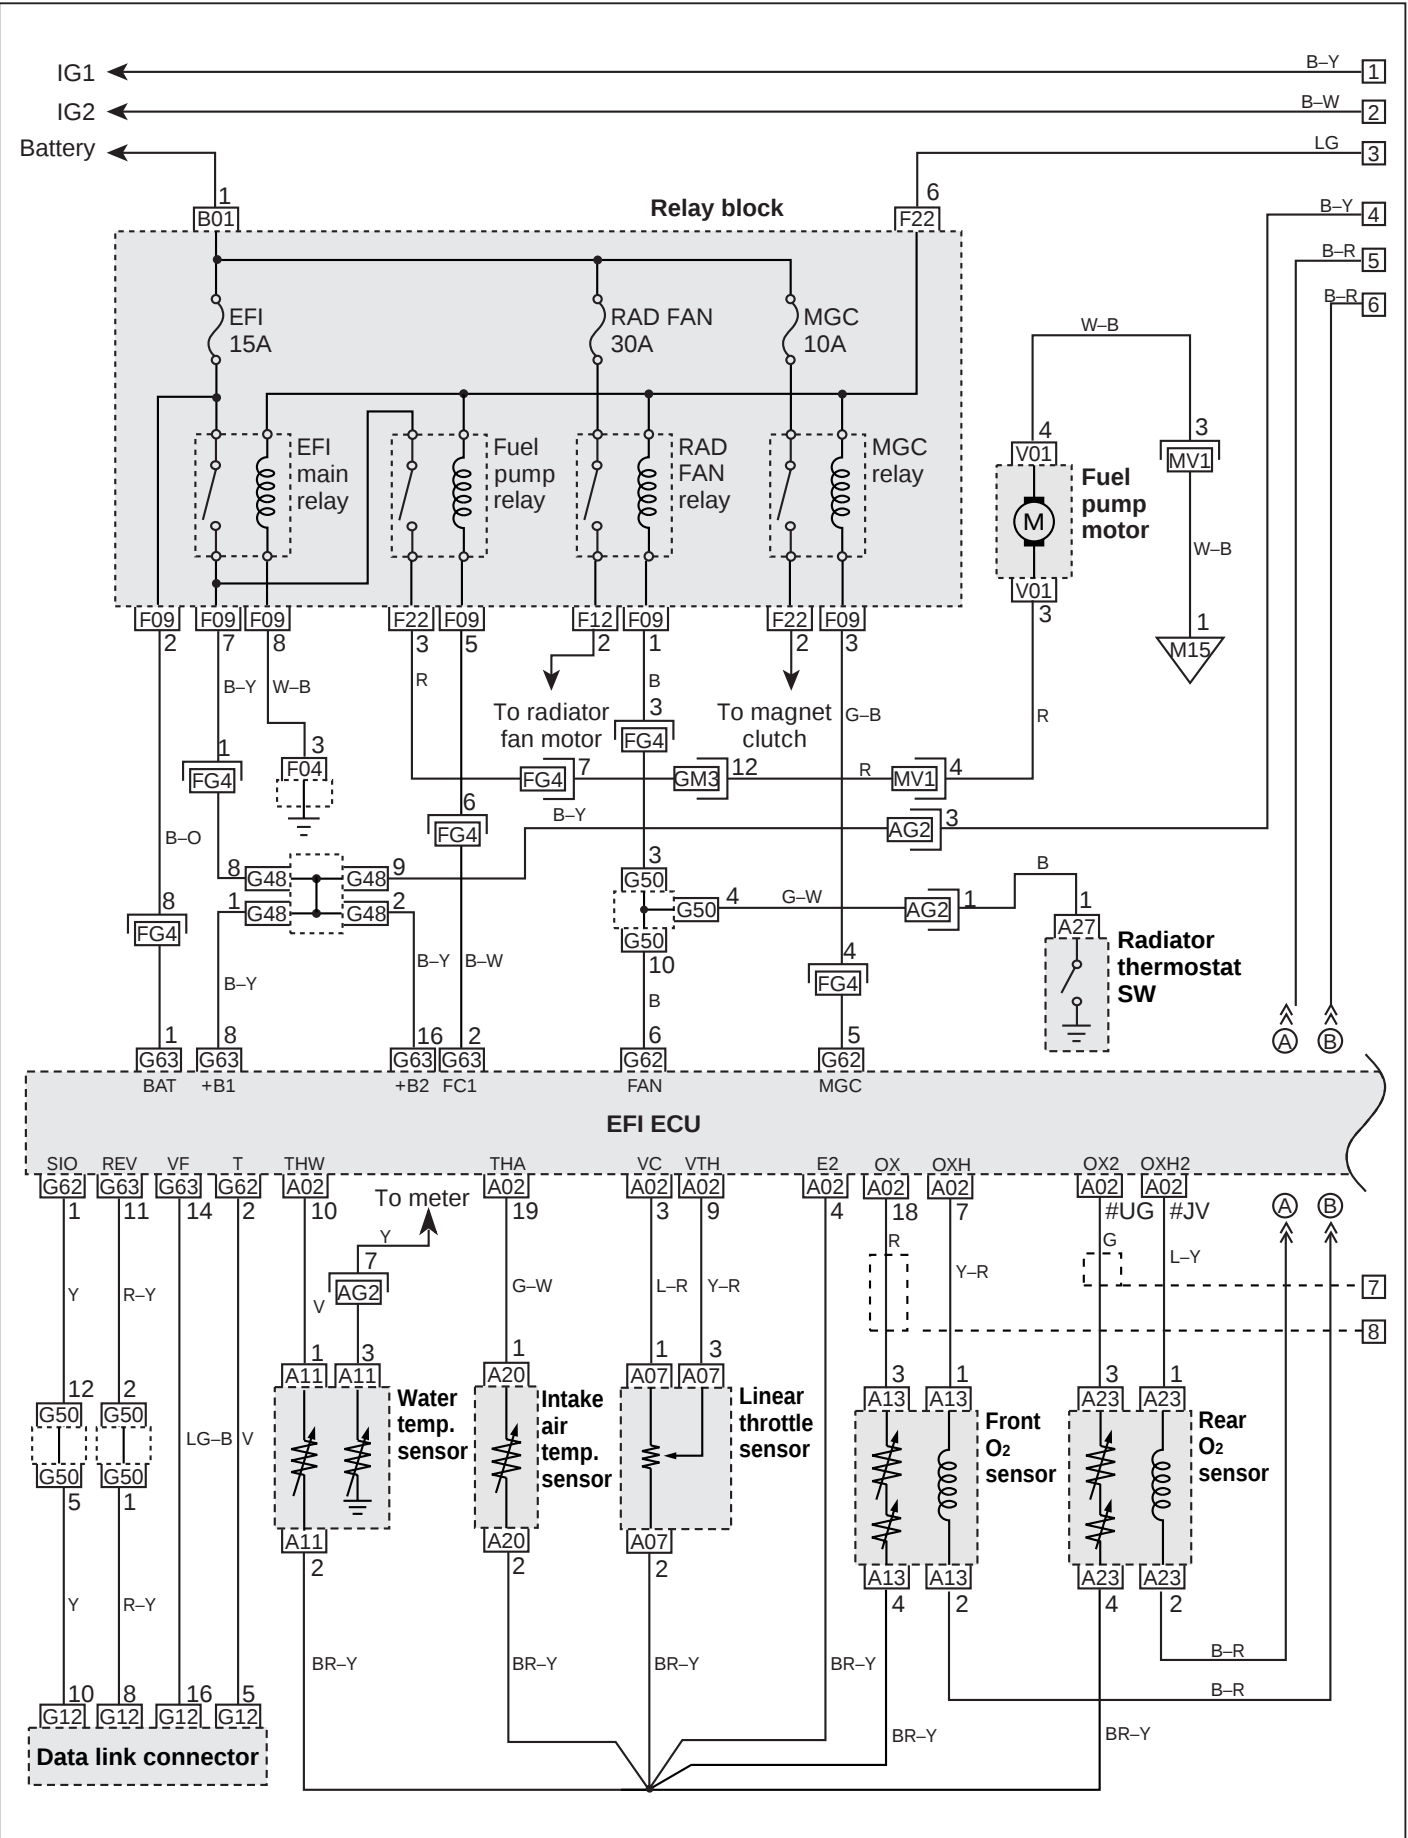
EFI SYSTEM (K3-VE2 ENGINE / EU SPEC / LHD) -1



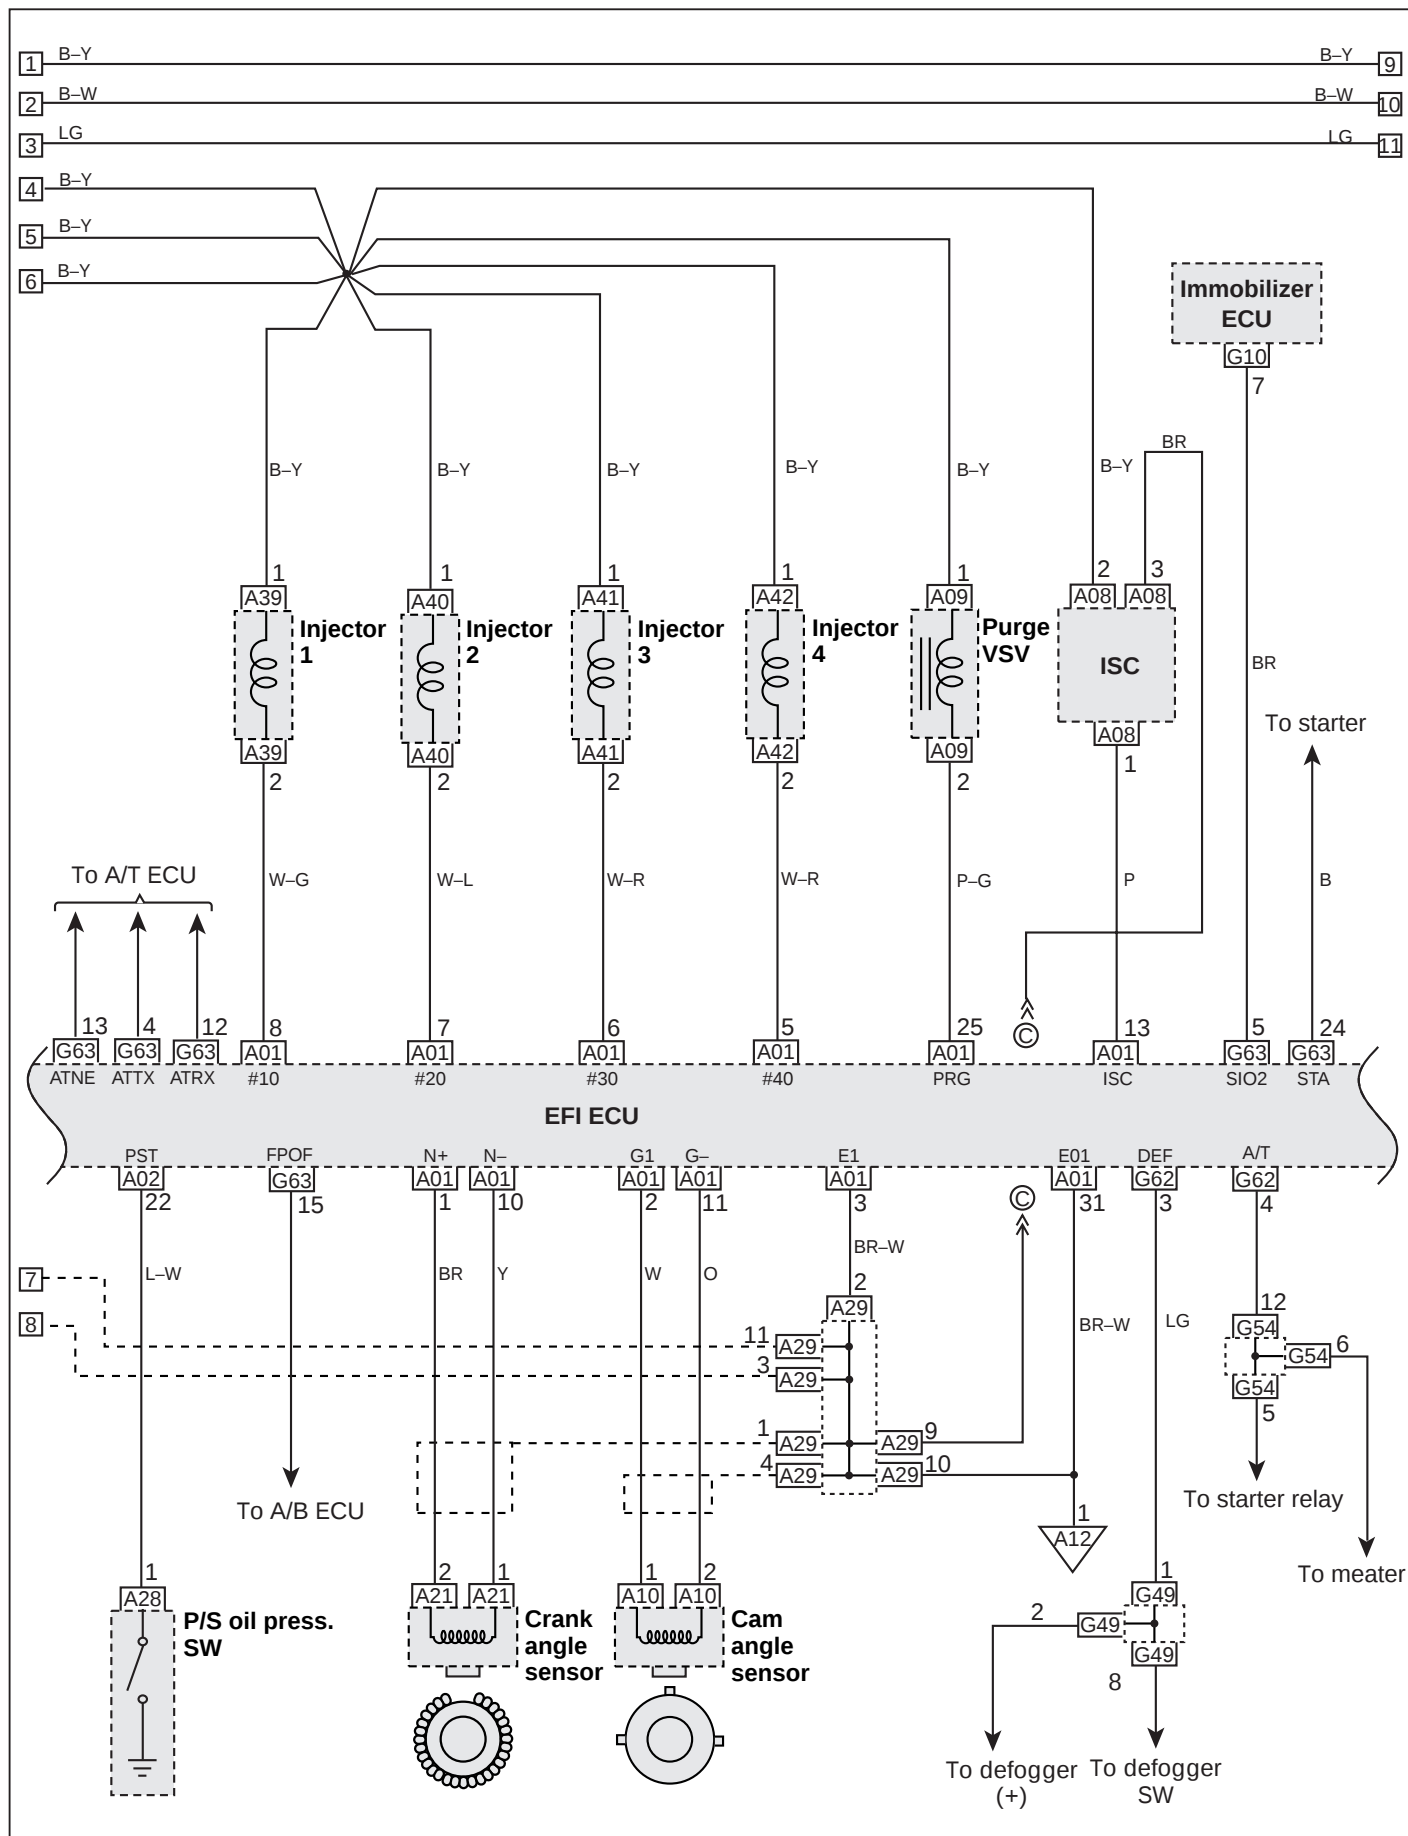EFI SYSTEM (K3-VE2 ENGINE / EU SPEC / LHD) -2



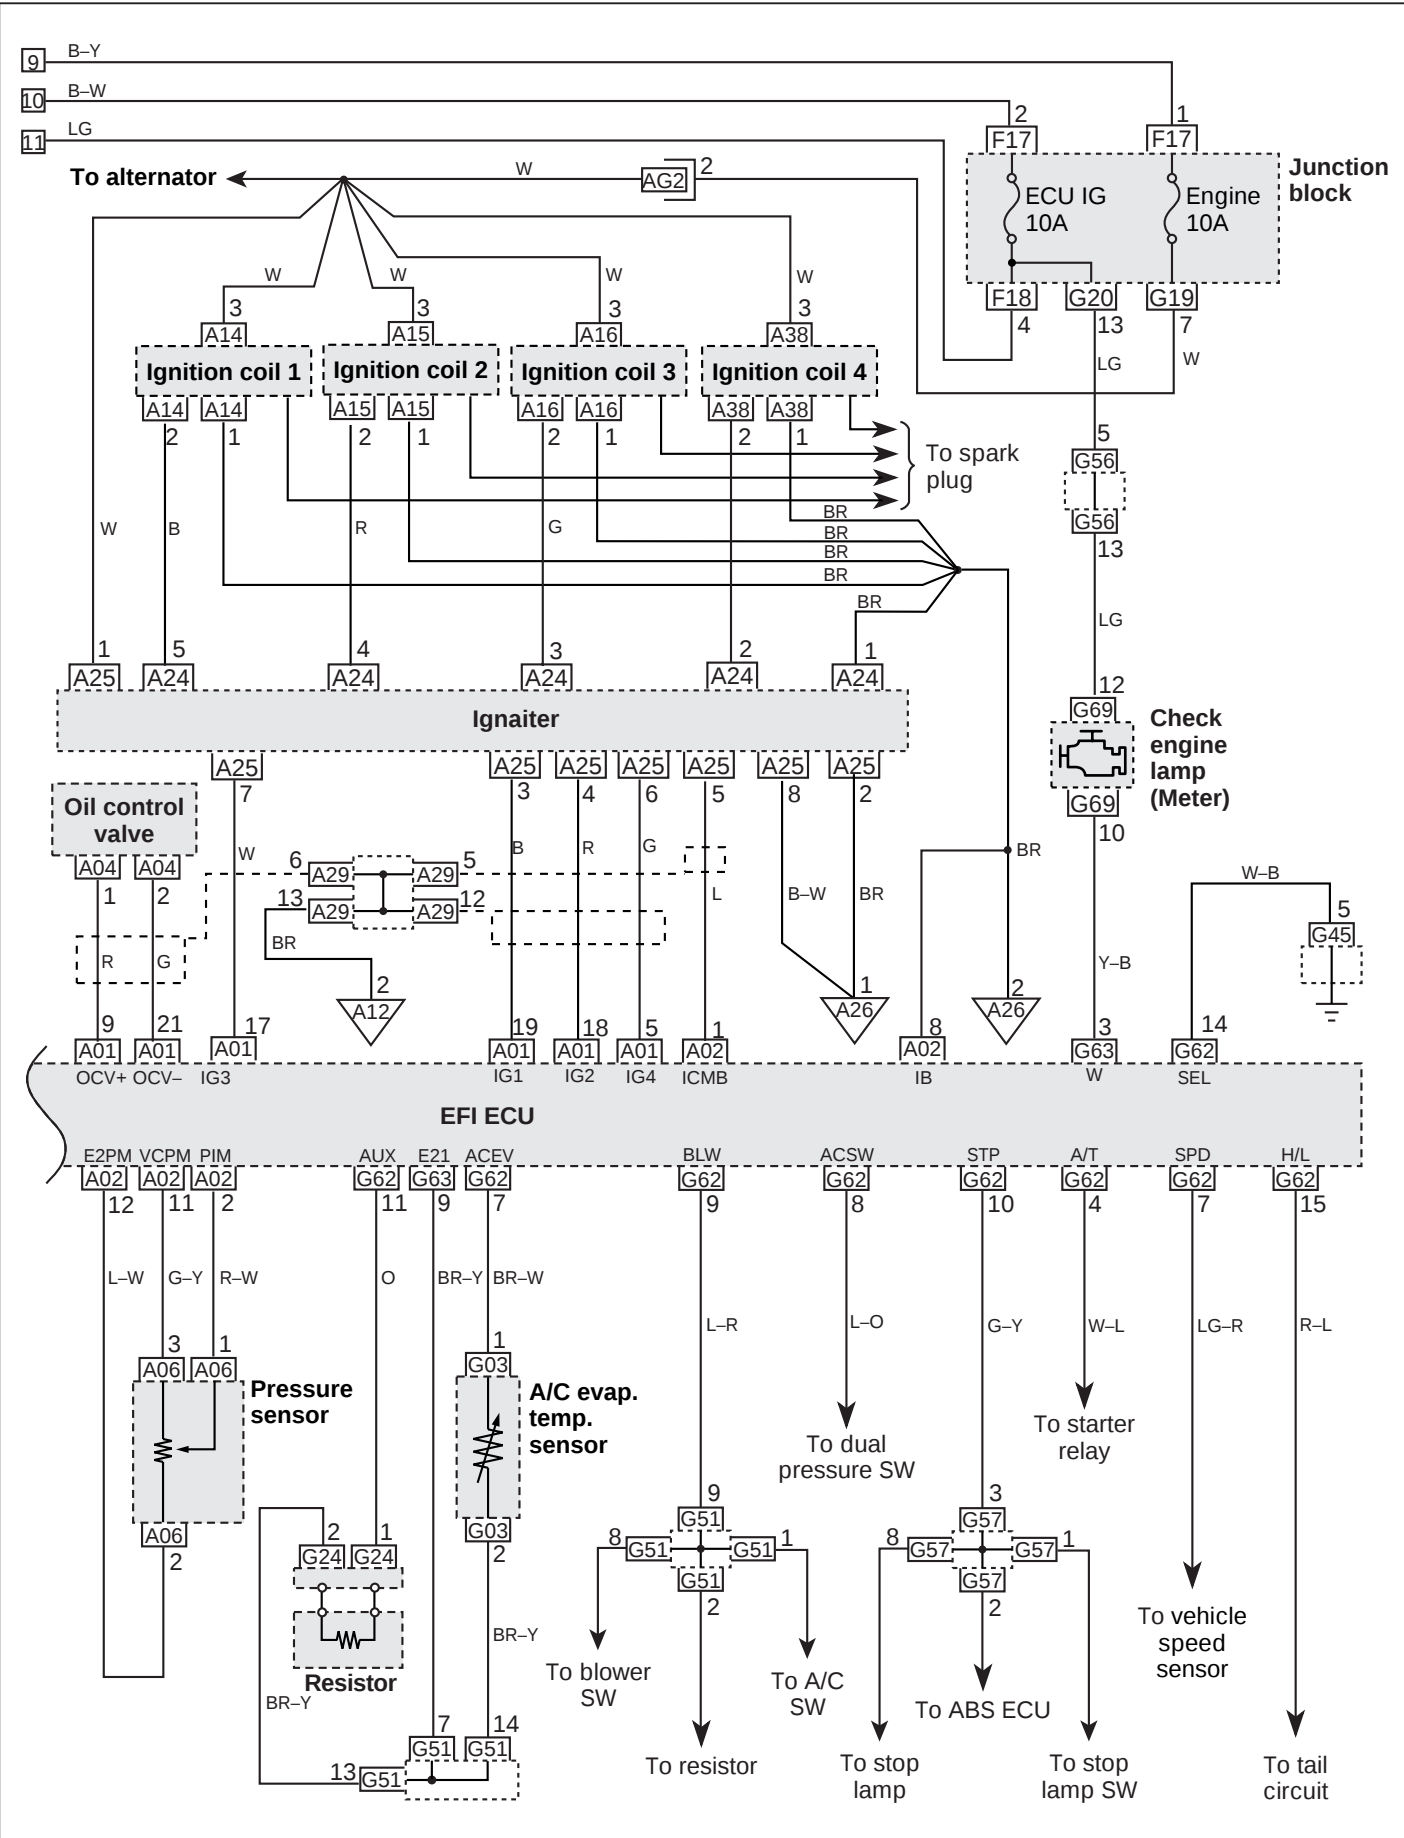
EFI SYSTEM (K3-VE2 ENGINE / EU SPEC / LHD) -3




MEMO


Handwriting practice area with 25 horizontal dashed lines.

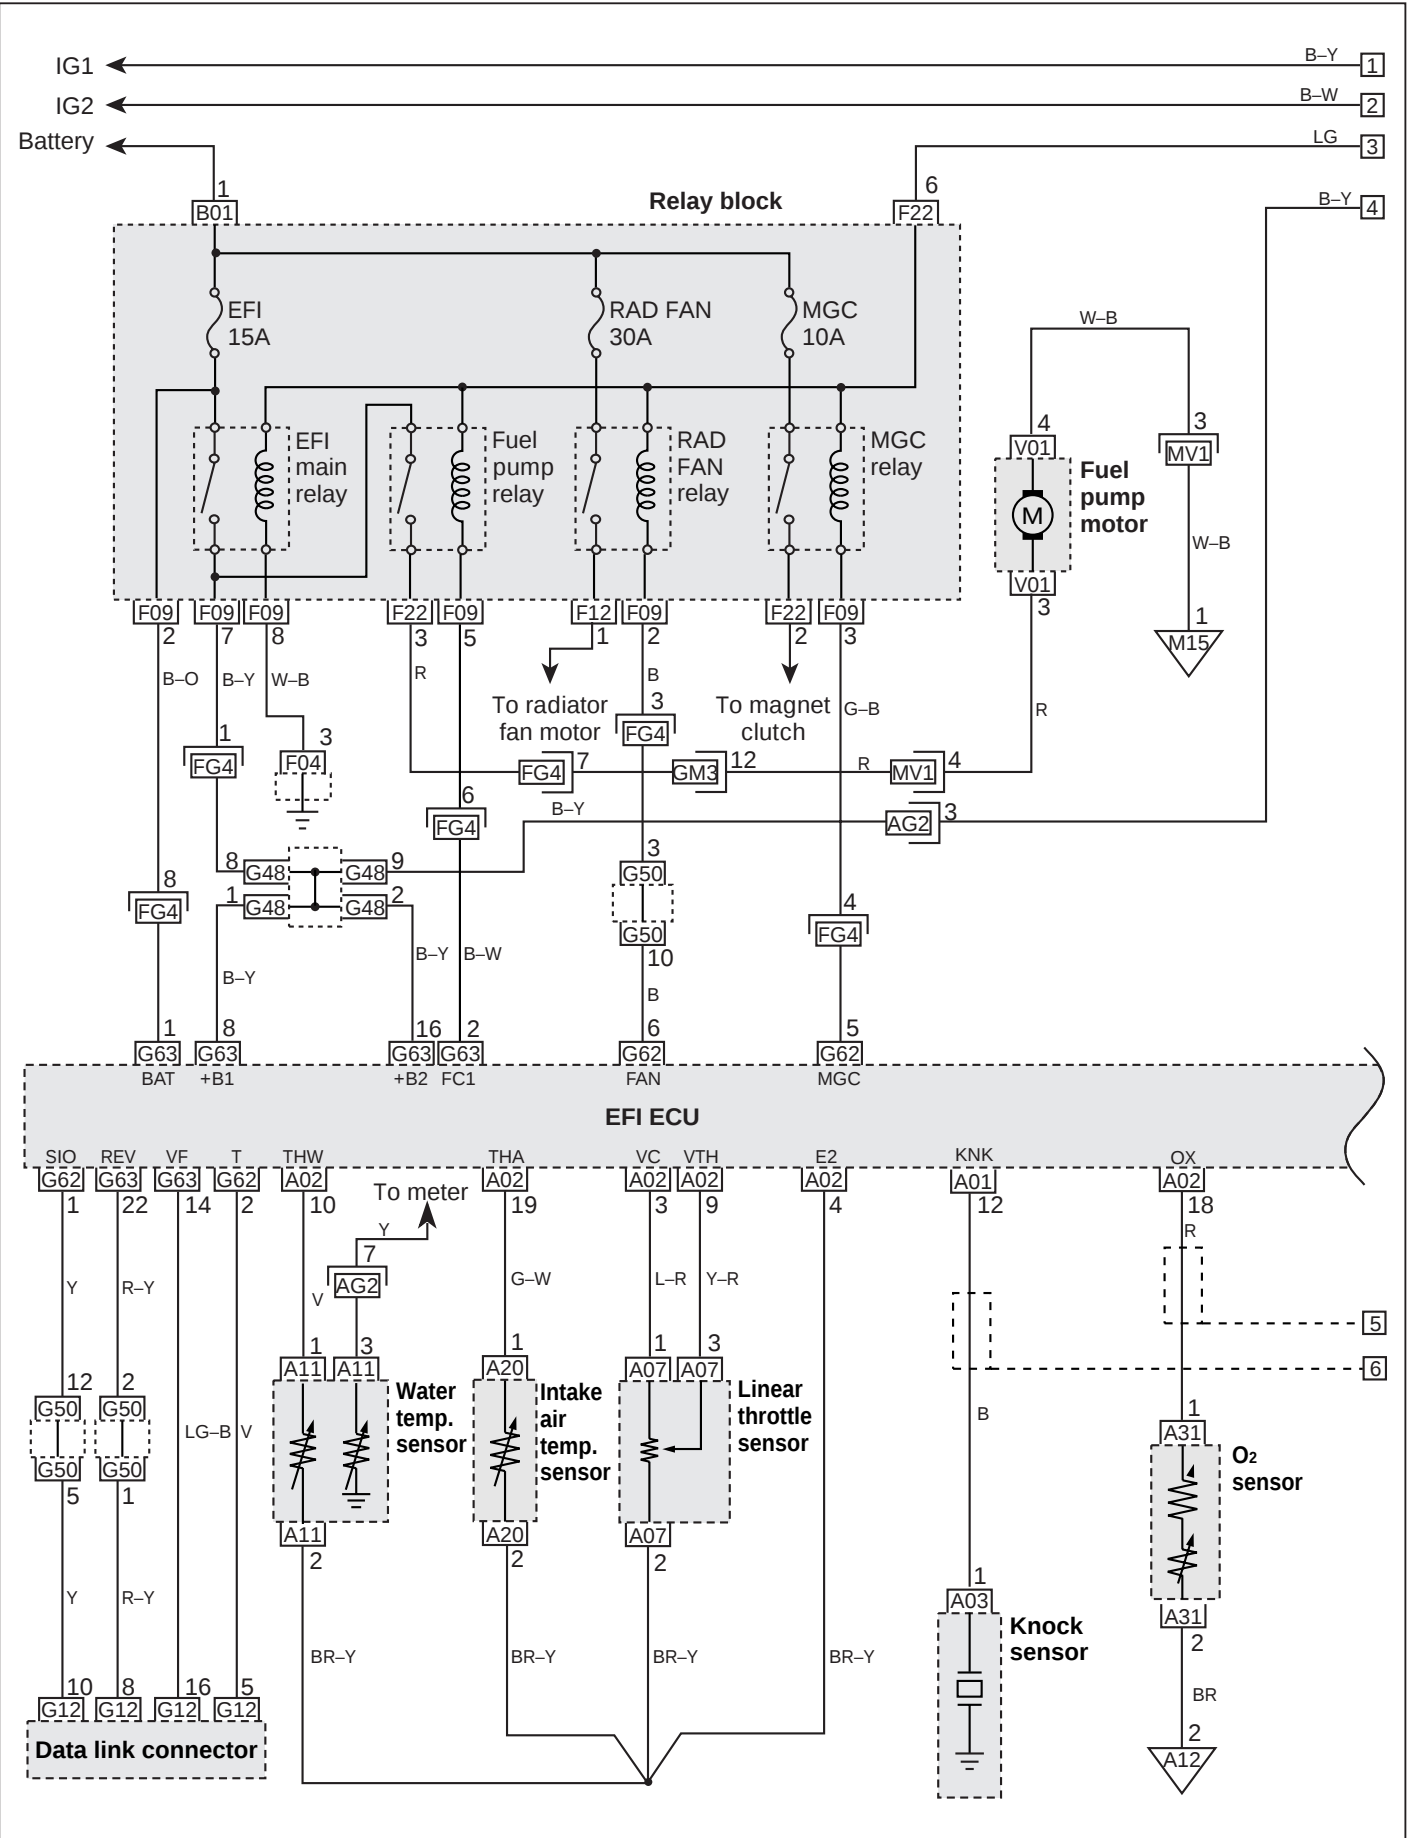EFI SYSTEM (K3-VE2 ENGINE / AUS & GENERAL SPEC / LHD) -1



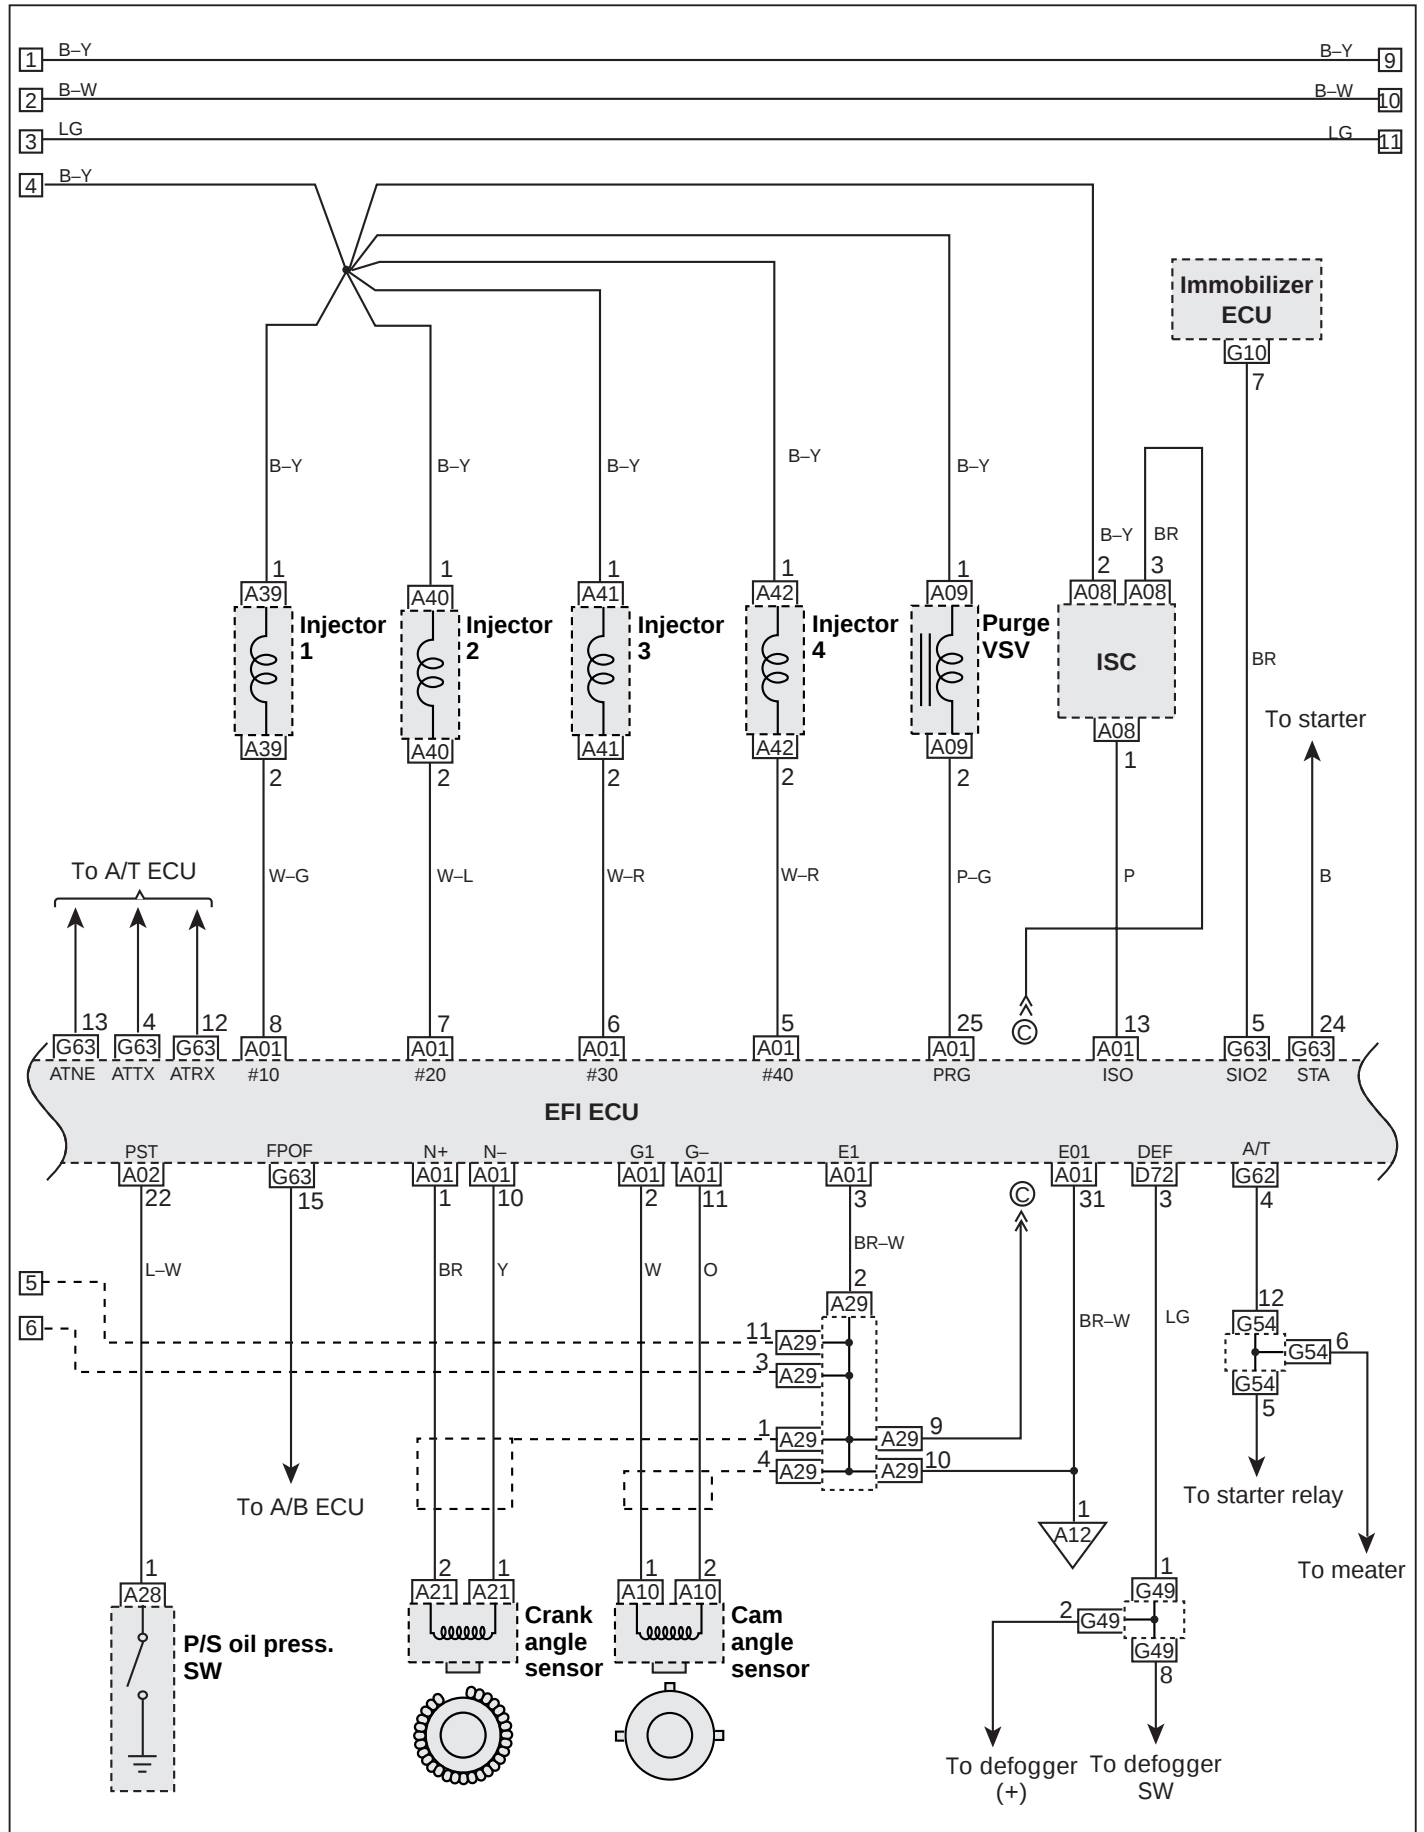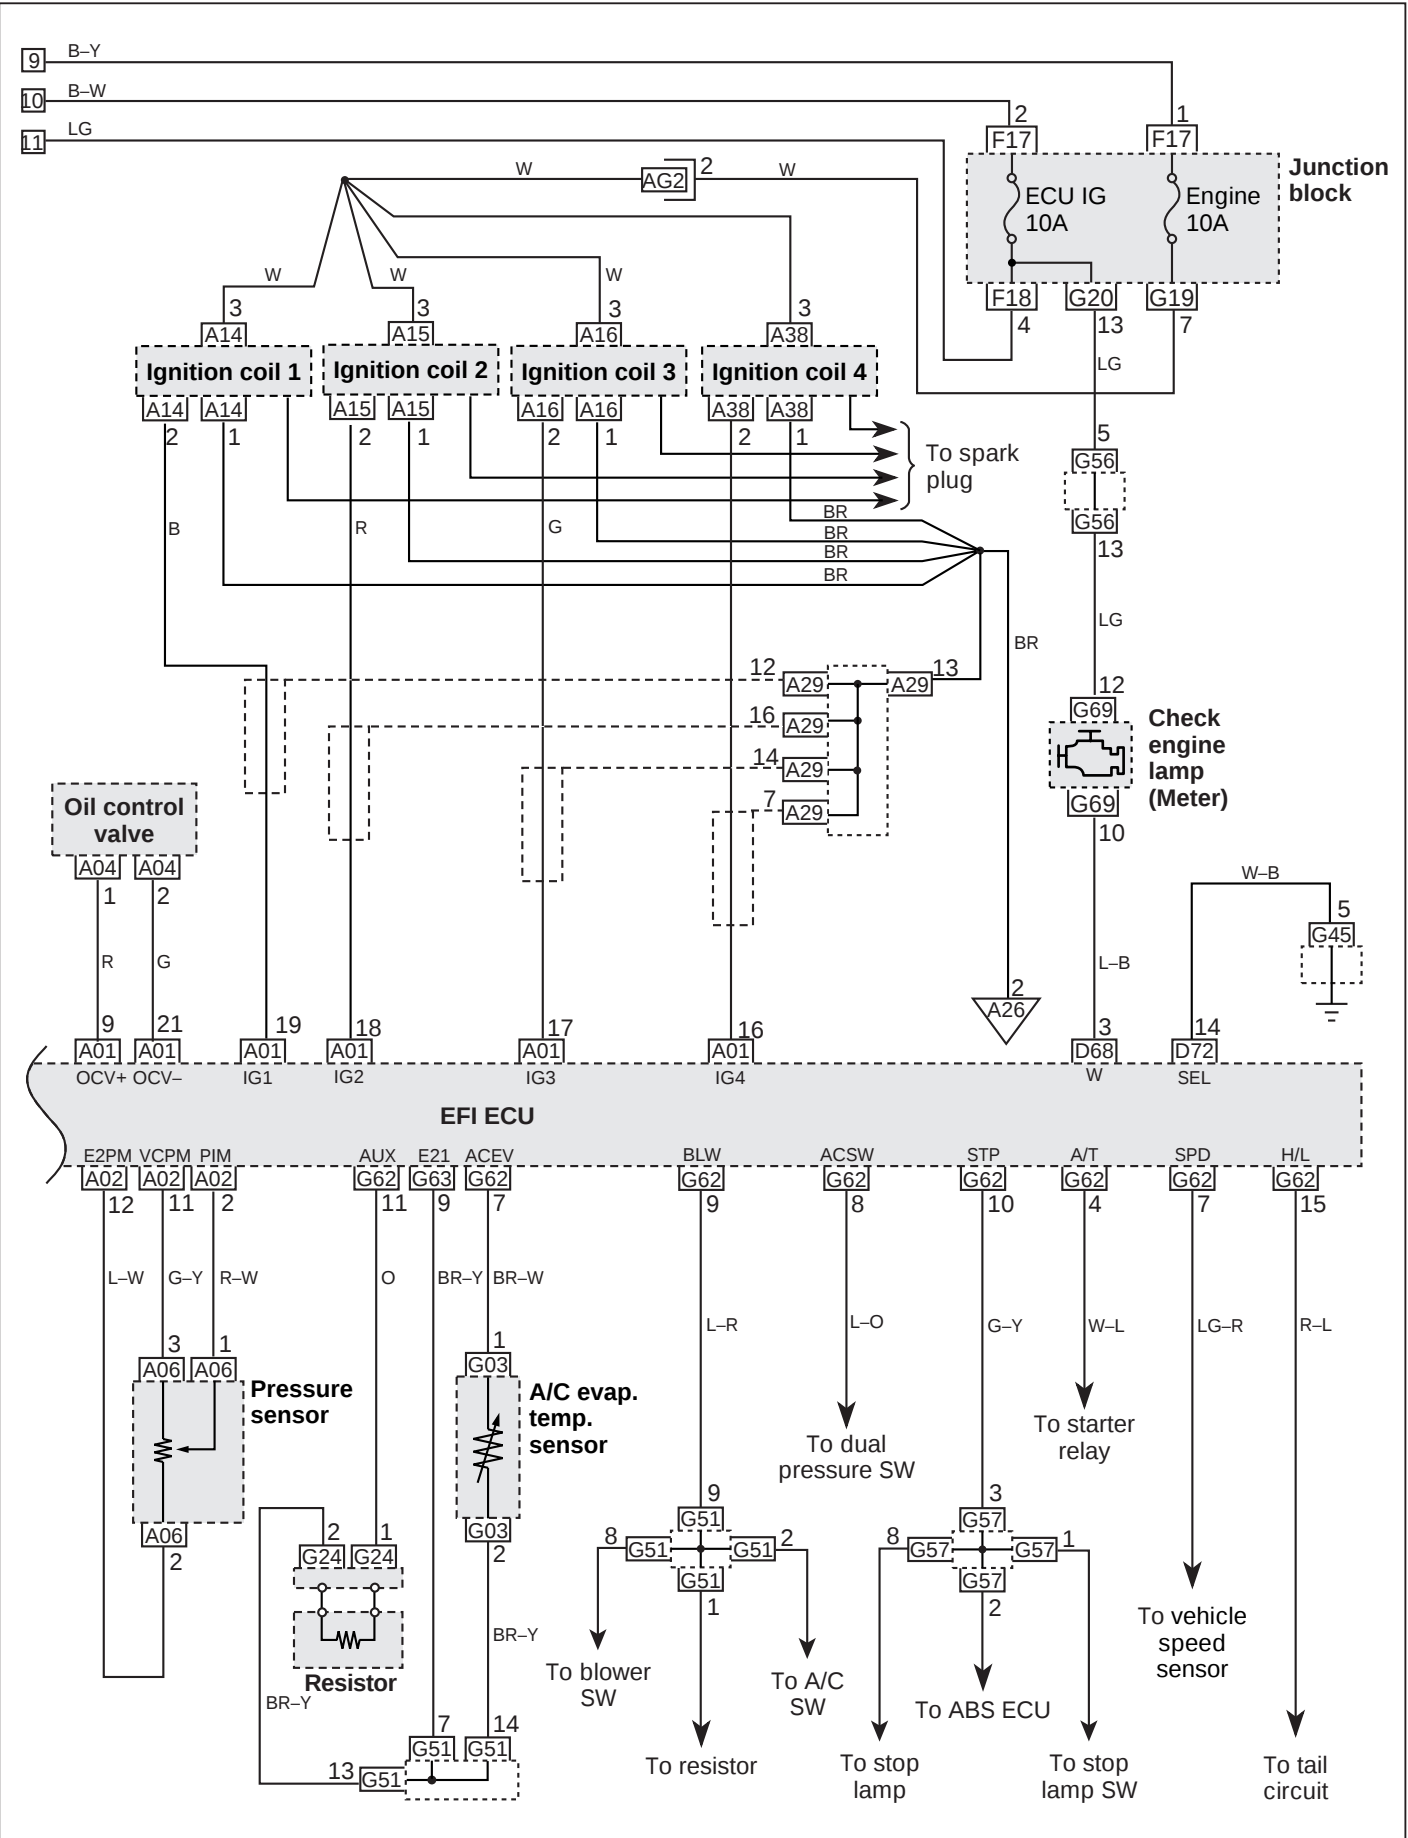EFI SYSTEM (K3-VE2 ENGINE / AUS & GENERAL SPEC / LHD) -2







MEMO

Handwriting practice area with 25 horizontal dashed lines.

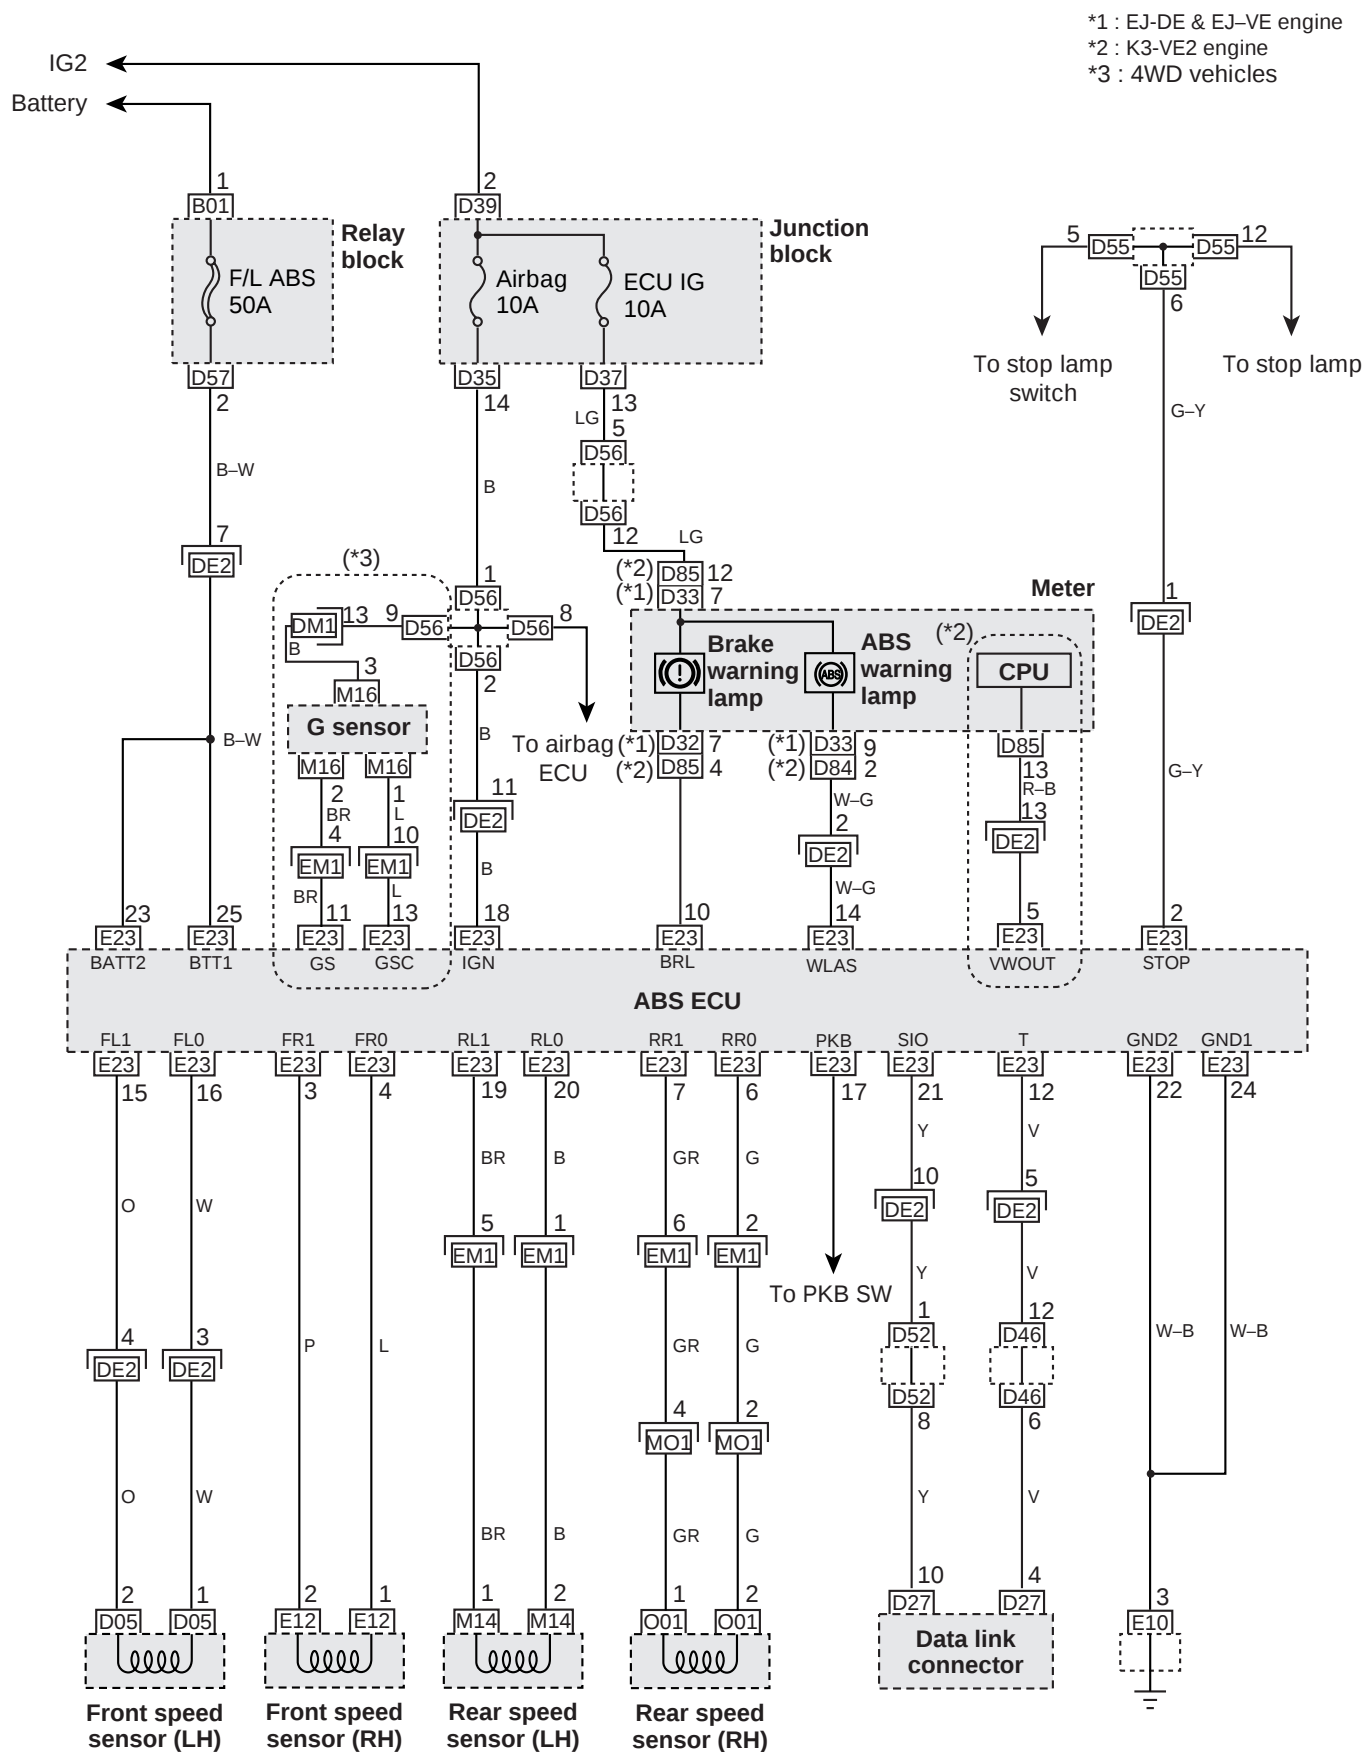ABS SYSTEM (RHD)




ABS SYSTEM (LHD)

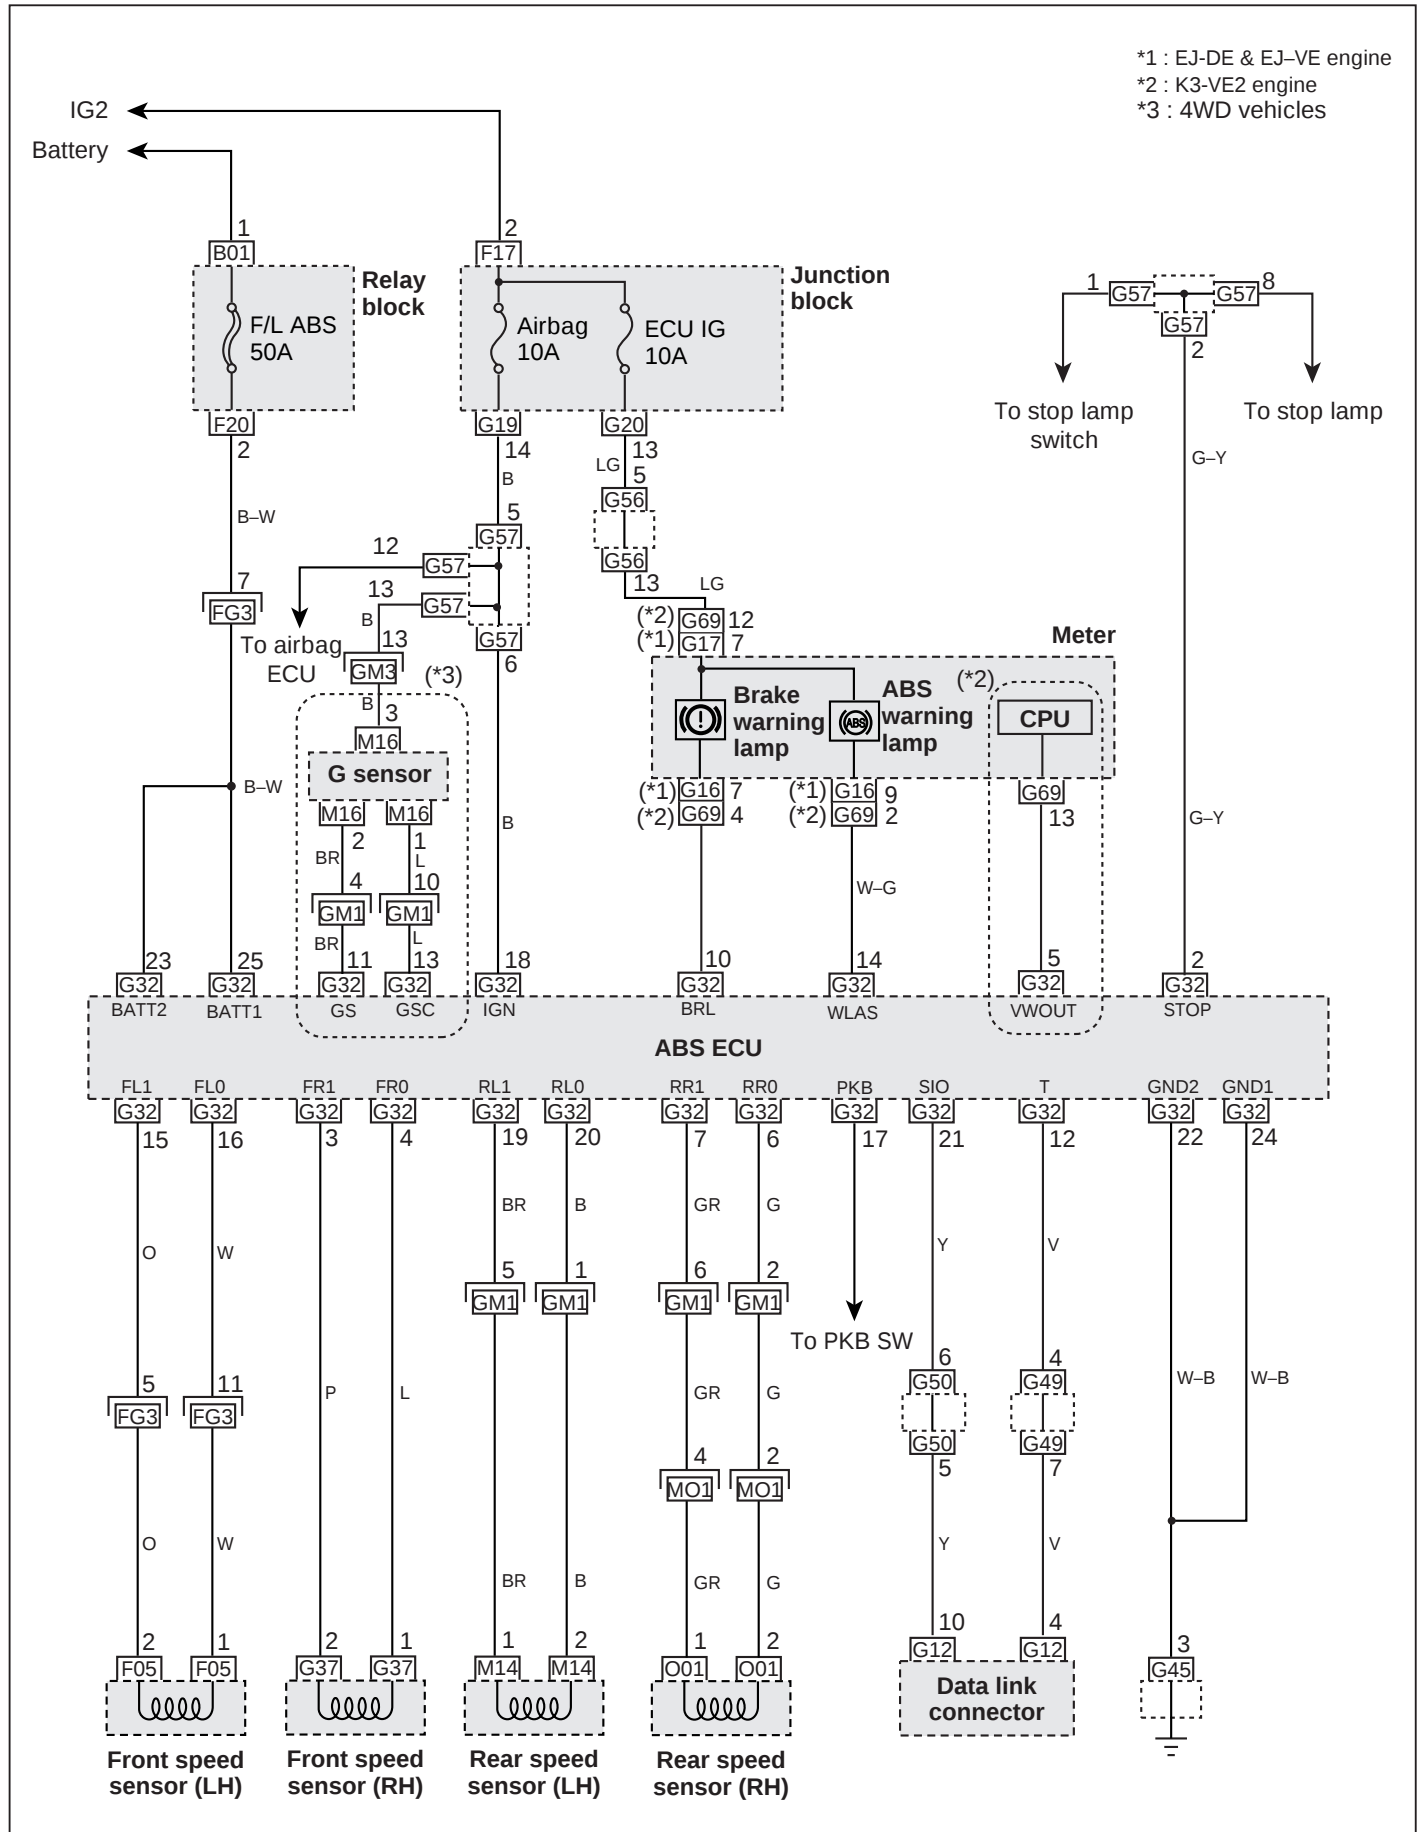


HW-60

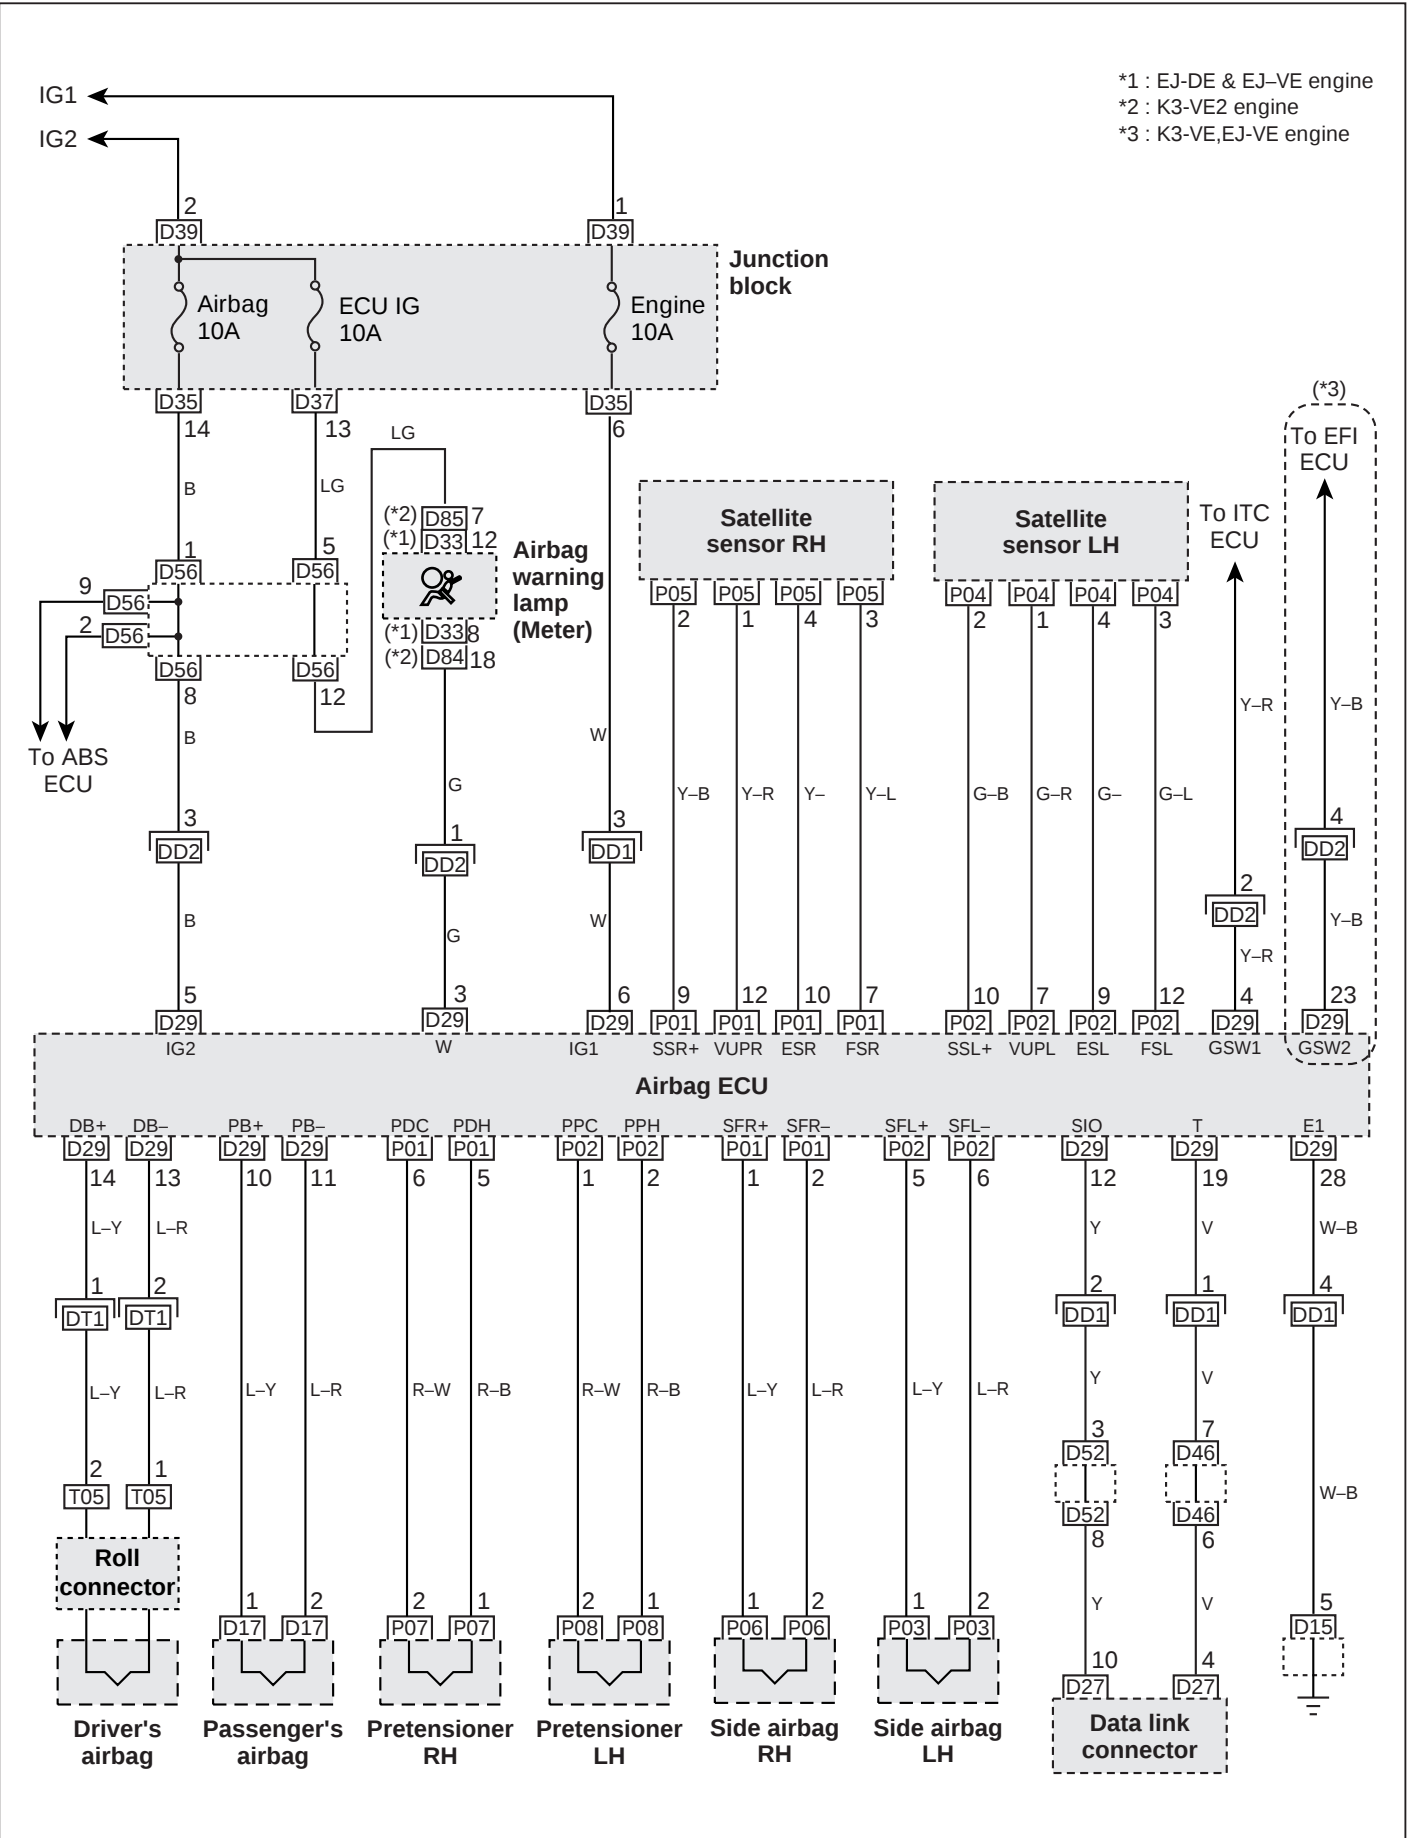
SRS AIRBAG SYSTEM (RHD)




SRS AIRBAG SYSTEM (LHD)

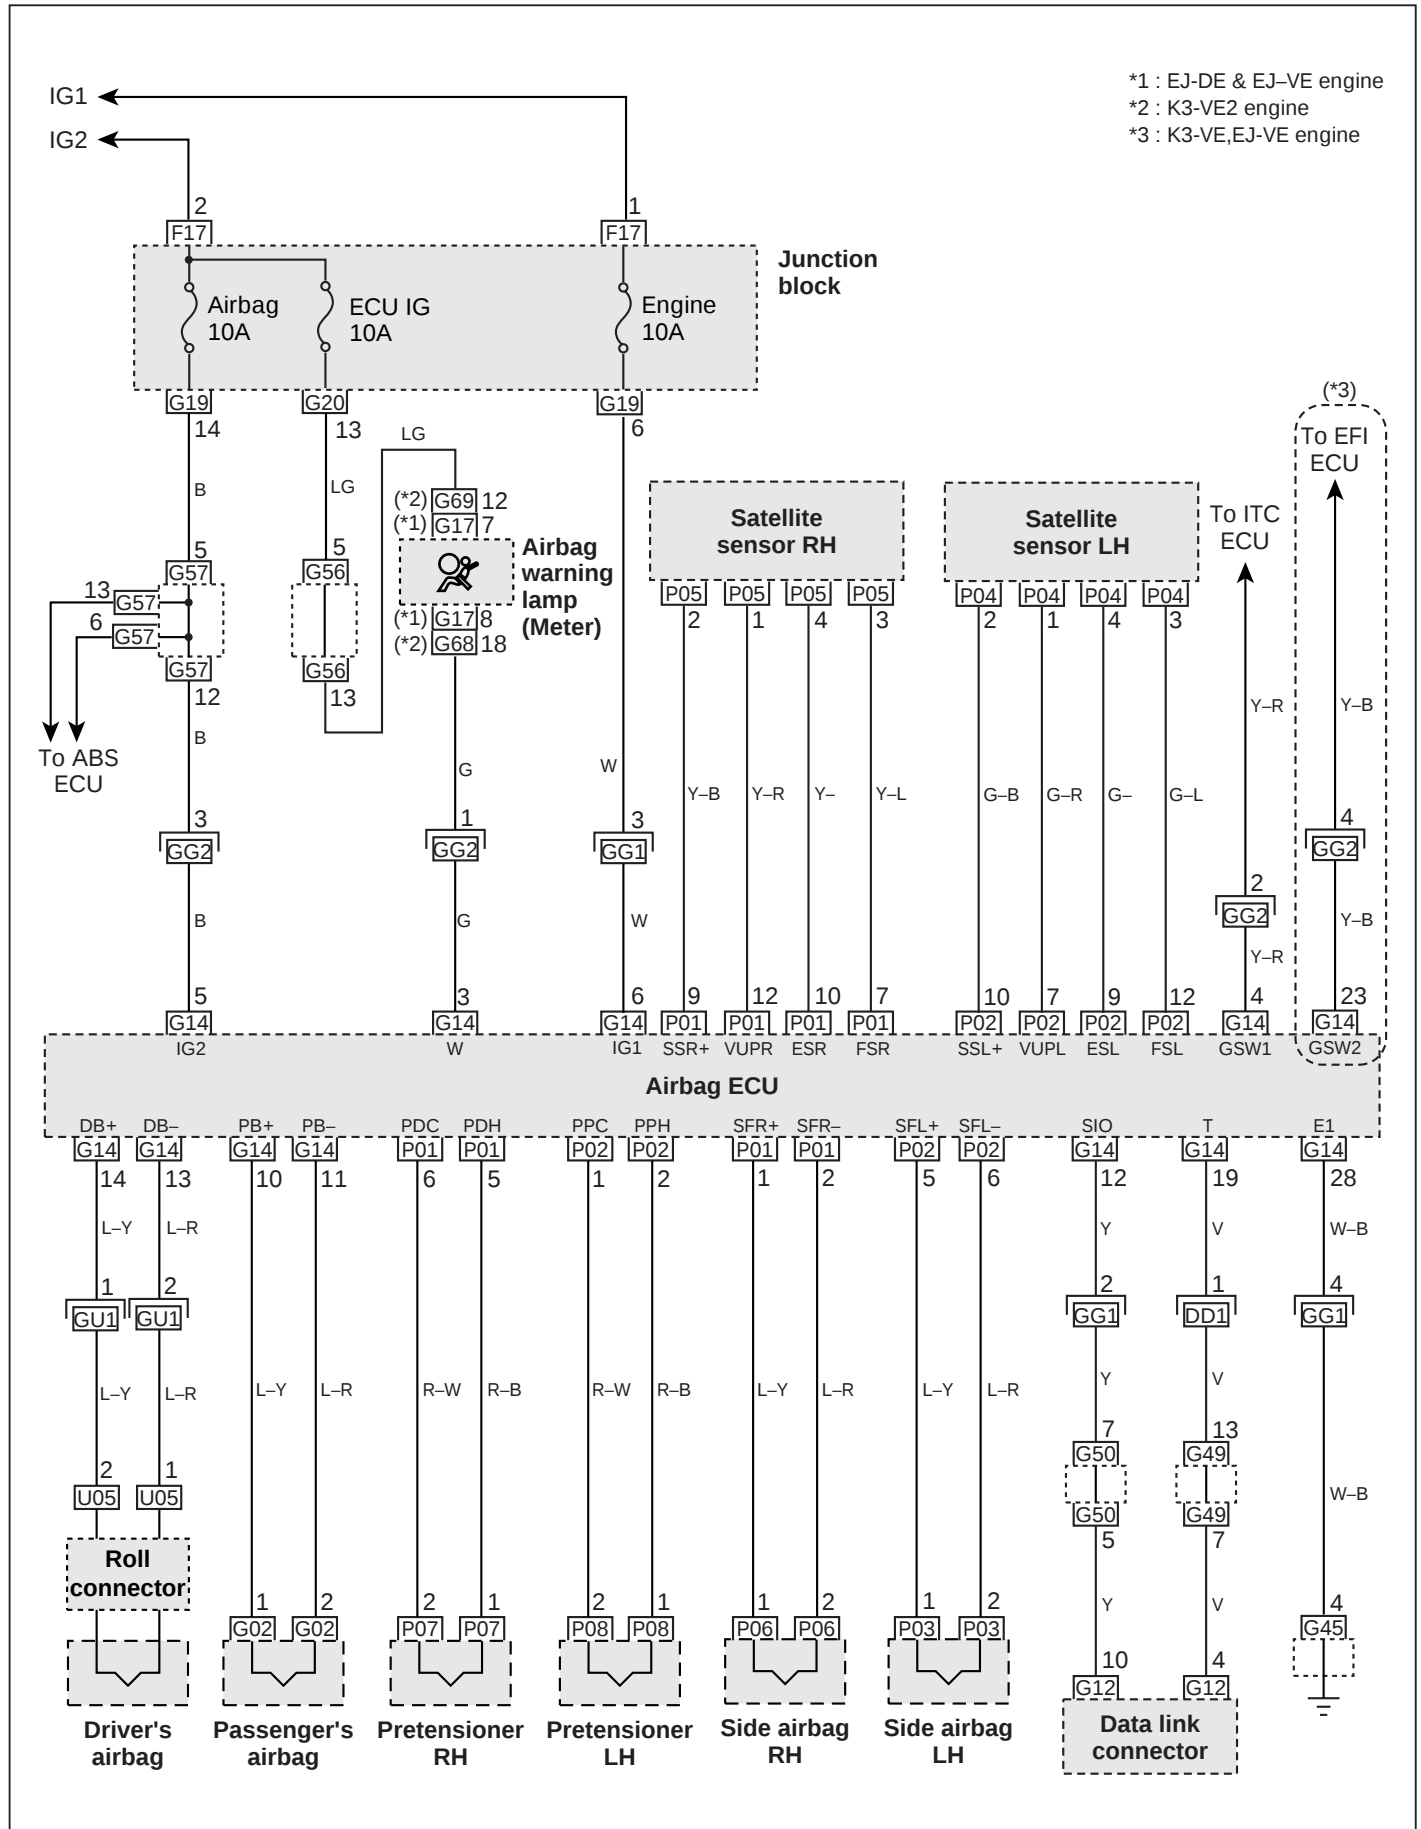


A/T CONTROL SYSTEM (RHD) -1

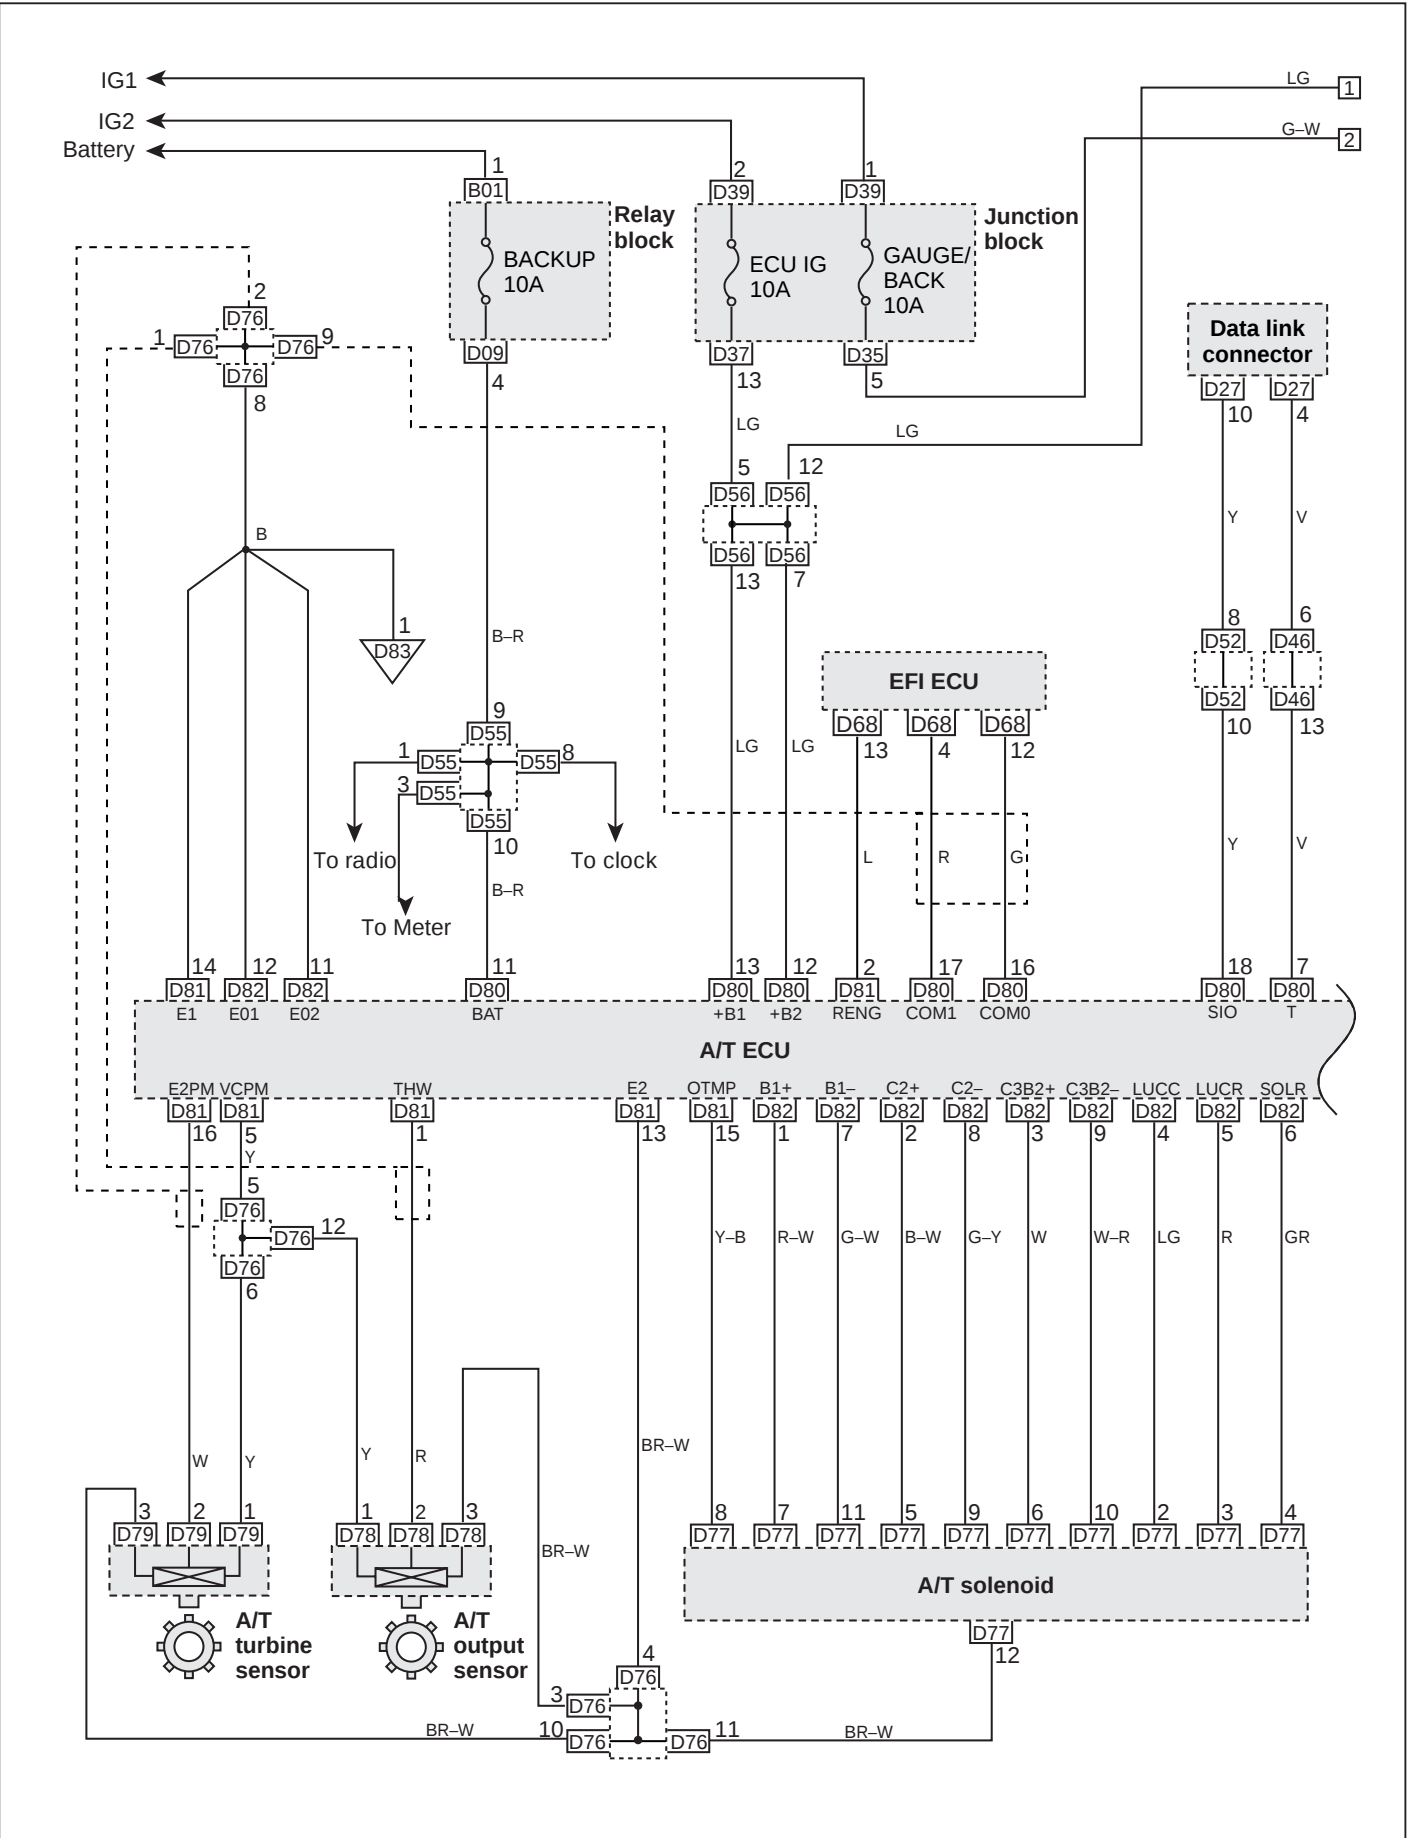

A/T CONTROL SYSTEM (RHD) -2

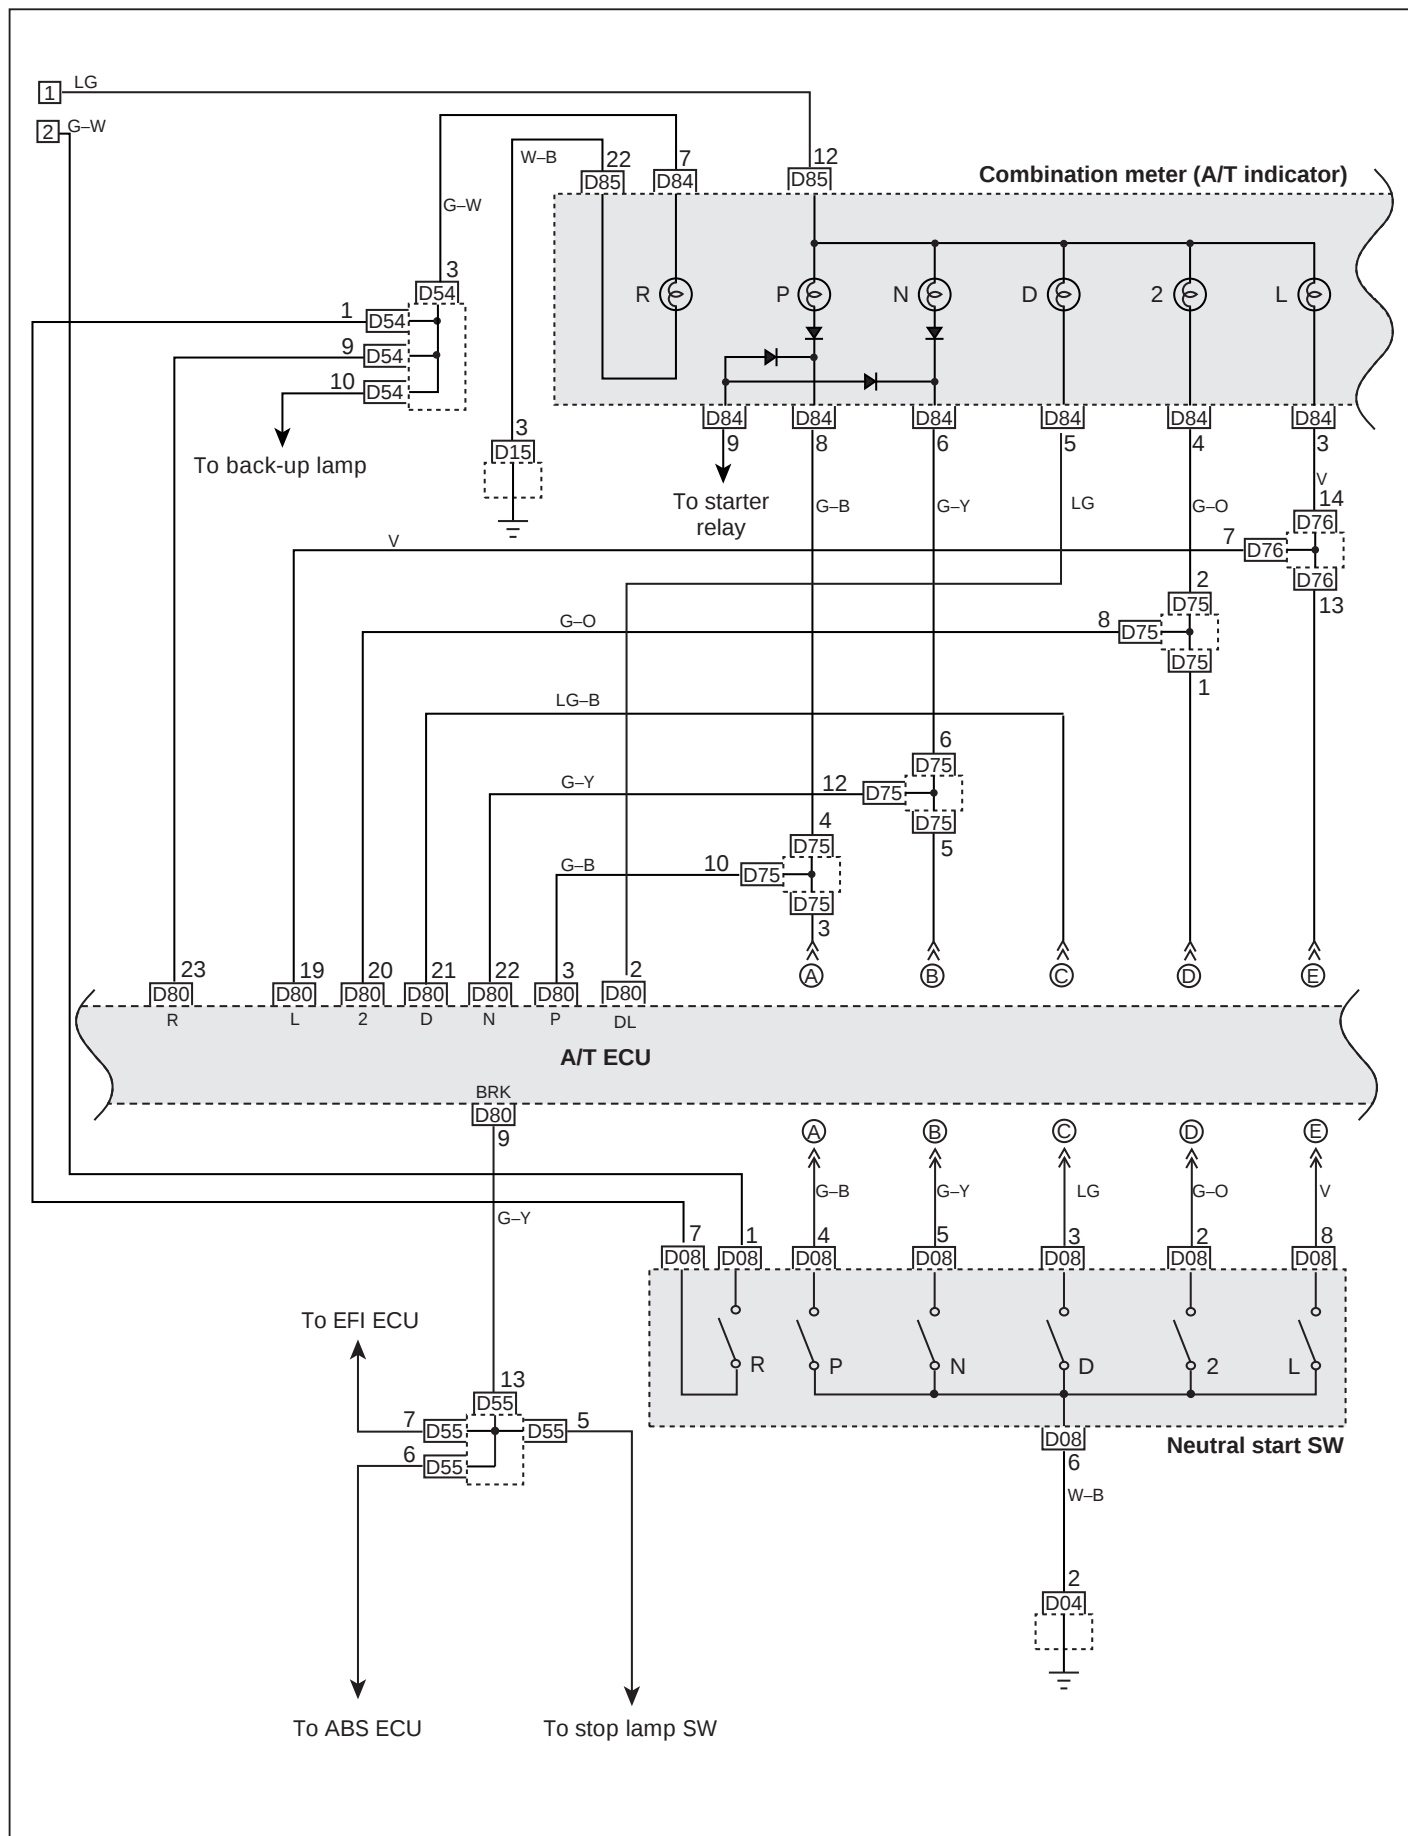


AA/T CONTROL SYSTEM (RHD) -3

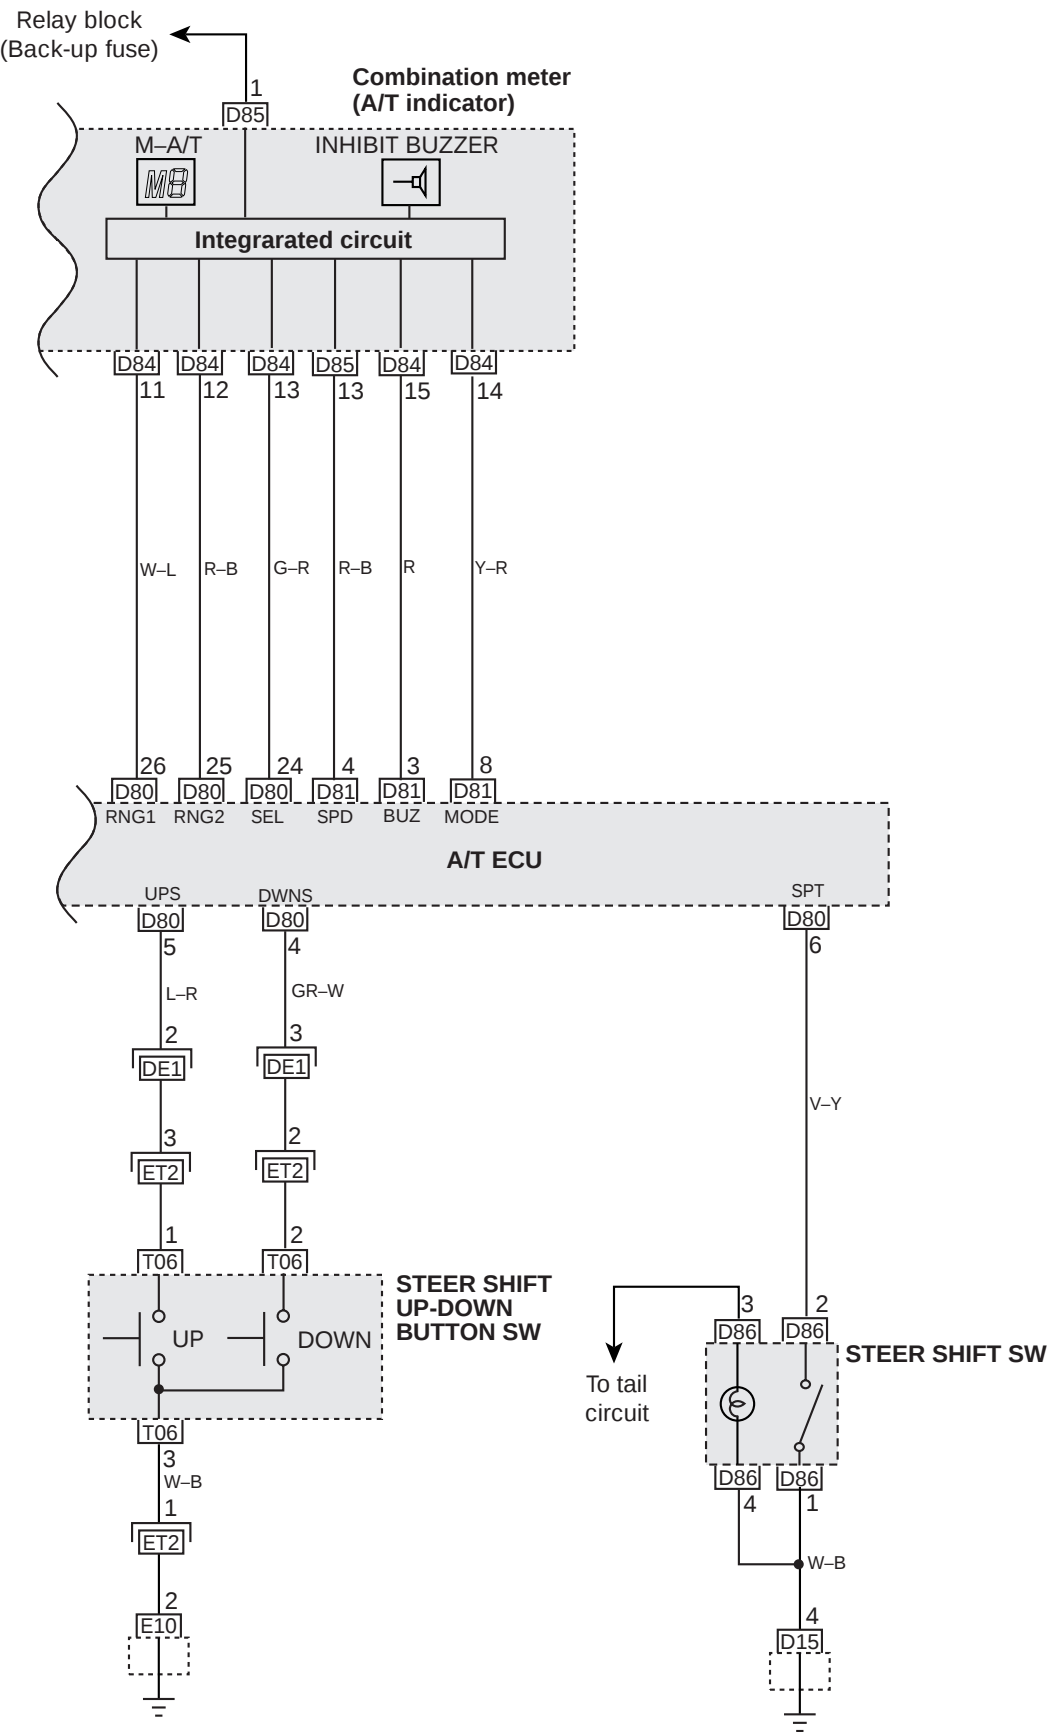


Handwriting practice lines consisting of 25 sets of three horizontal dashed lines.

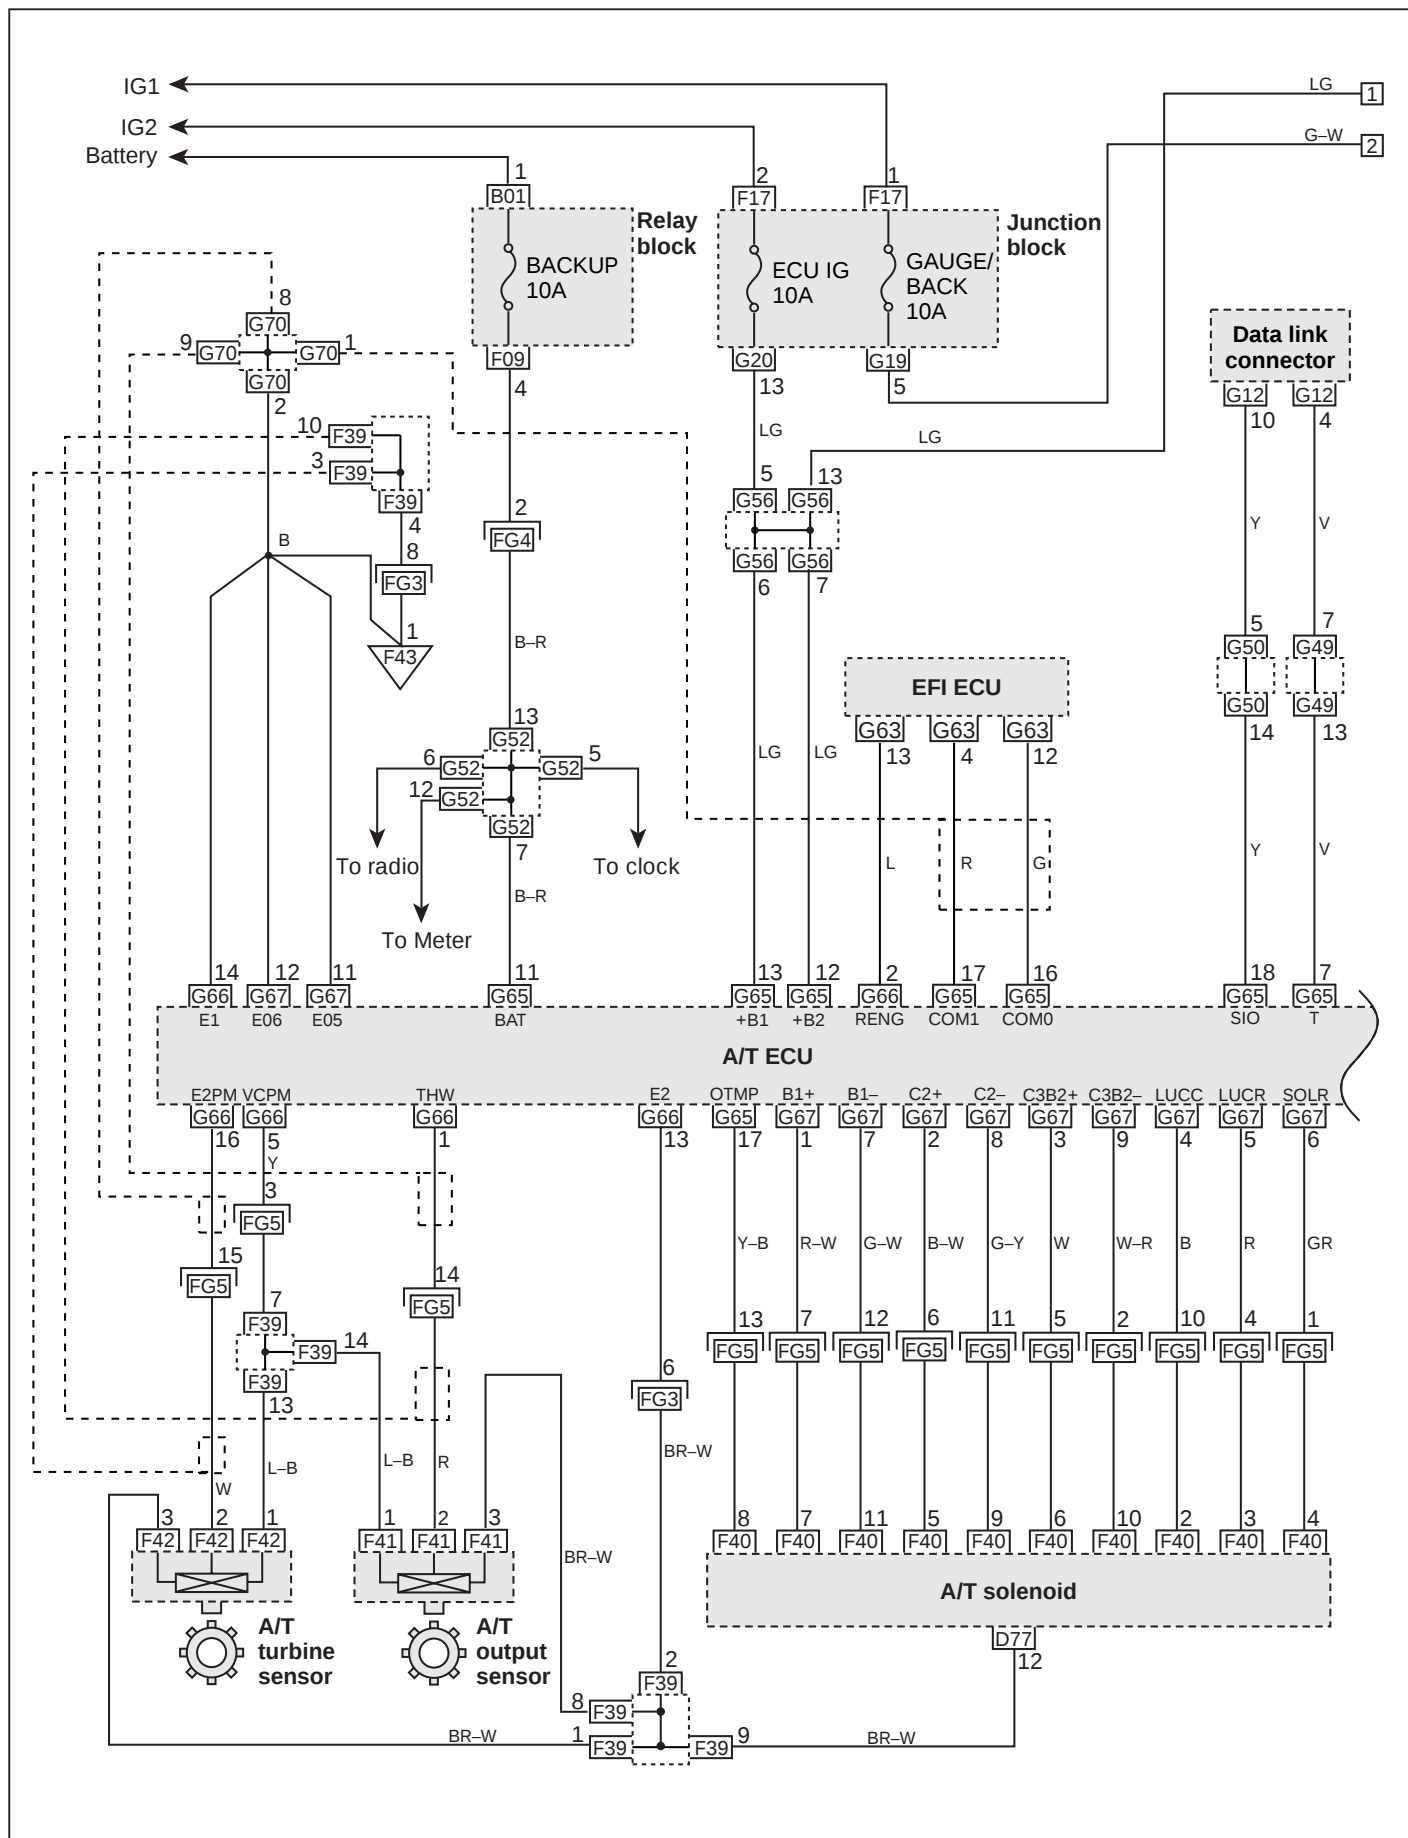A/T CONTROL SYSTEM (LHD) -1




A/T CONTROL SYSTEM (LHD) -2

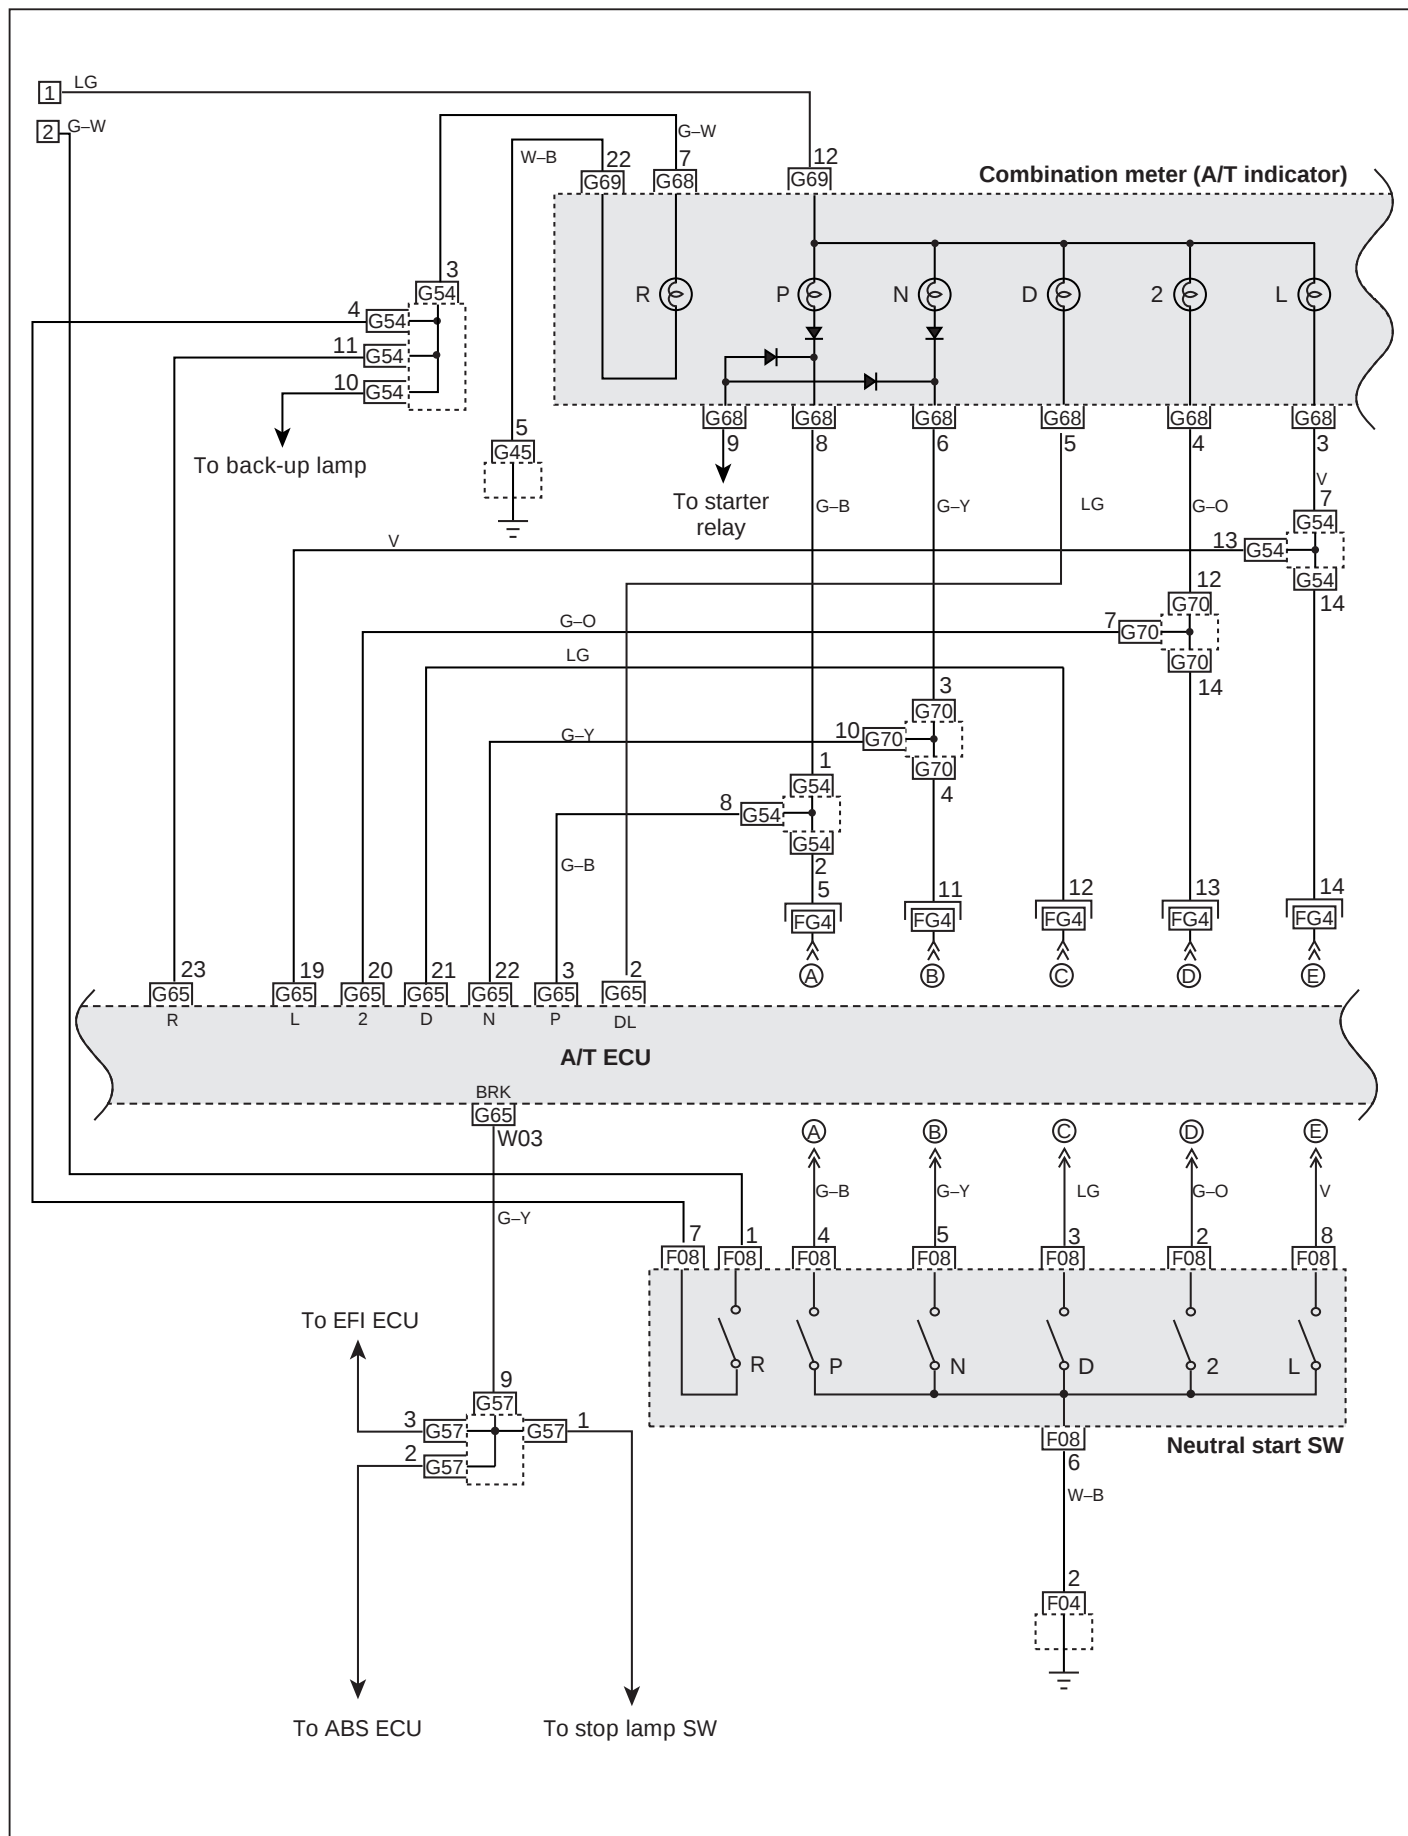




This image shows a full page of white paper with horizontal dashed lines. The lines are evenly spaced and run across the entire width of the page, providing a guide for handwriting practice. There are no margins, text, or other markings on the paper.

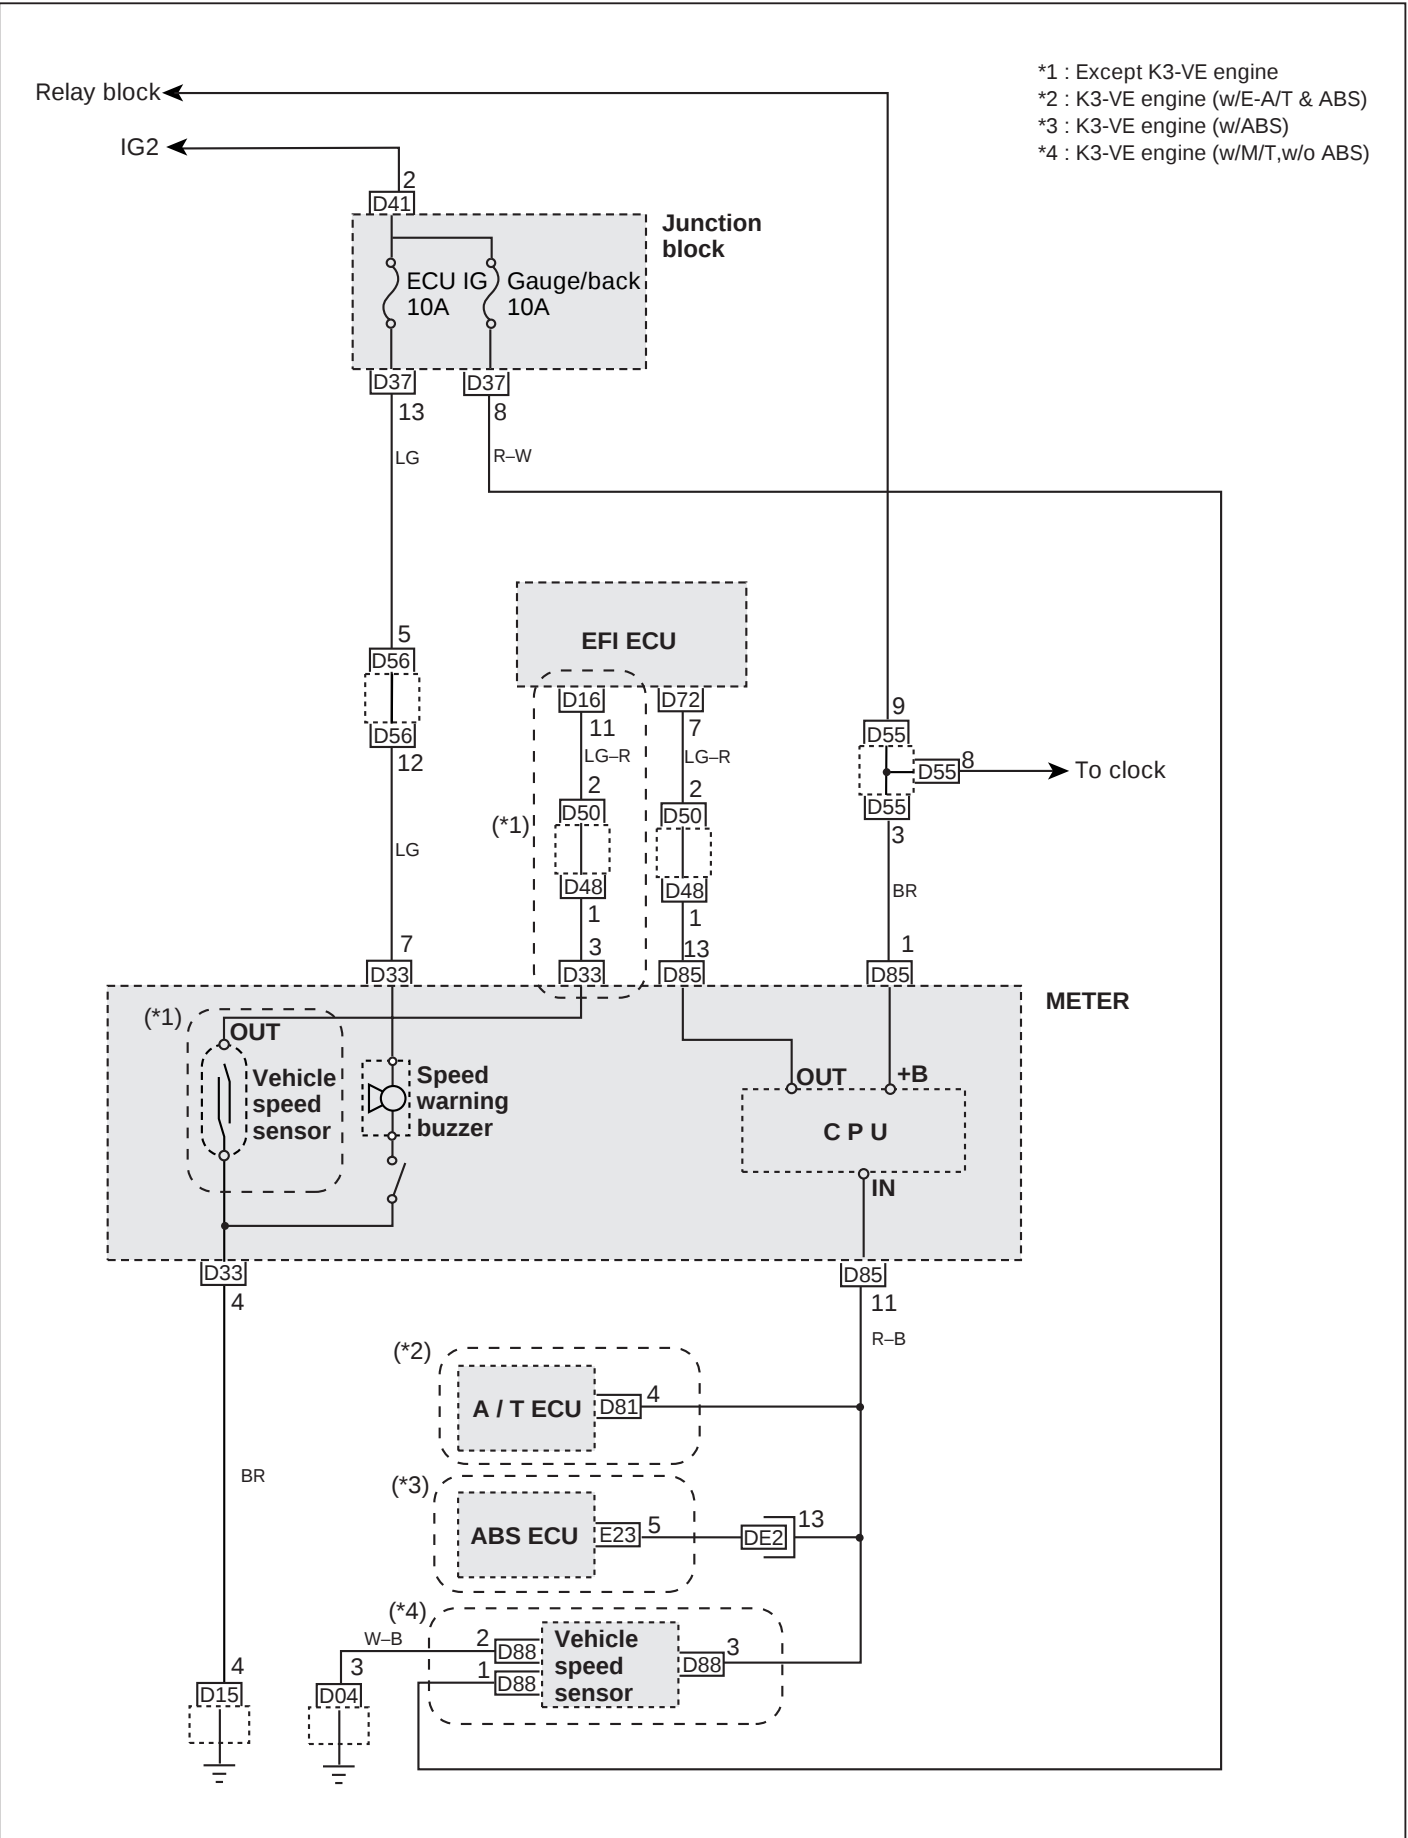
VEHICLE SPEED SENSOR (RHD)




VEHICLE SPEED SENSOR (LHD)

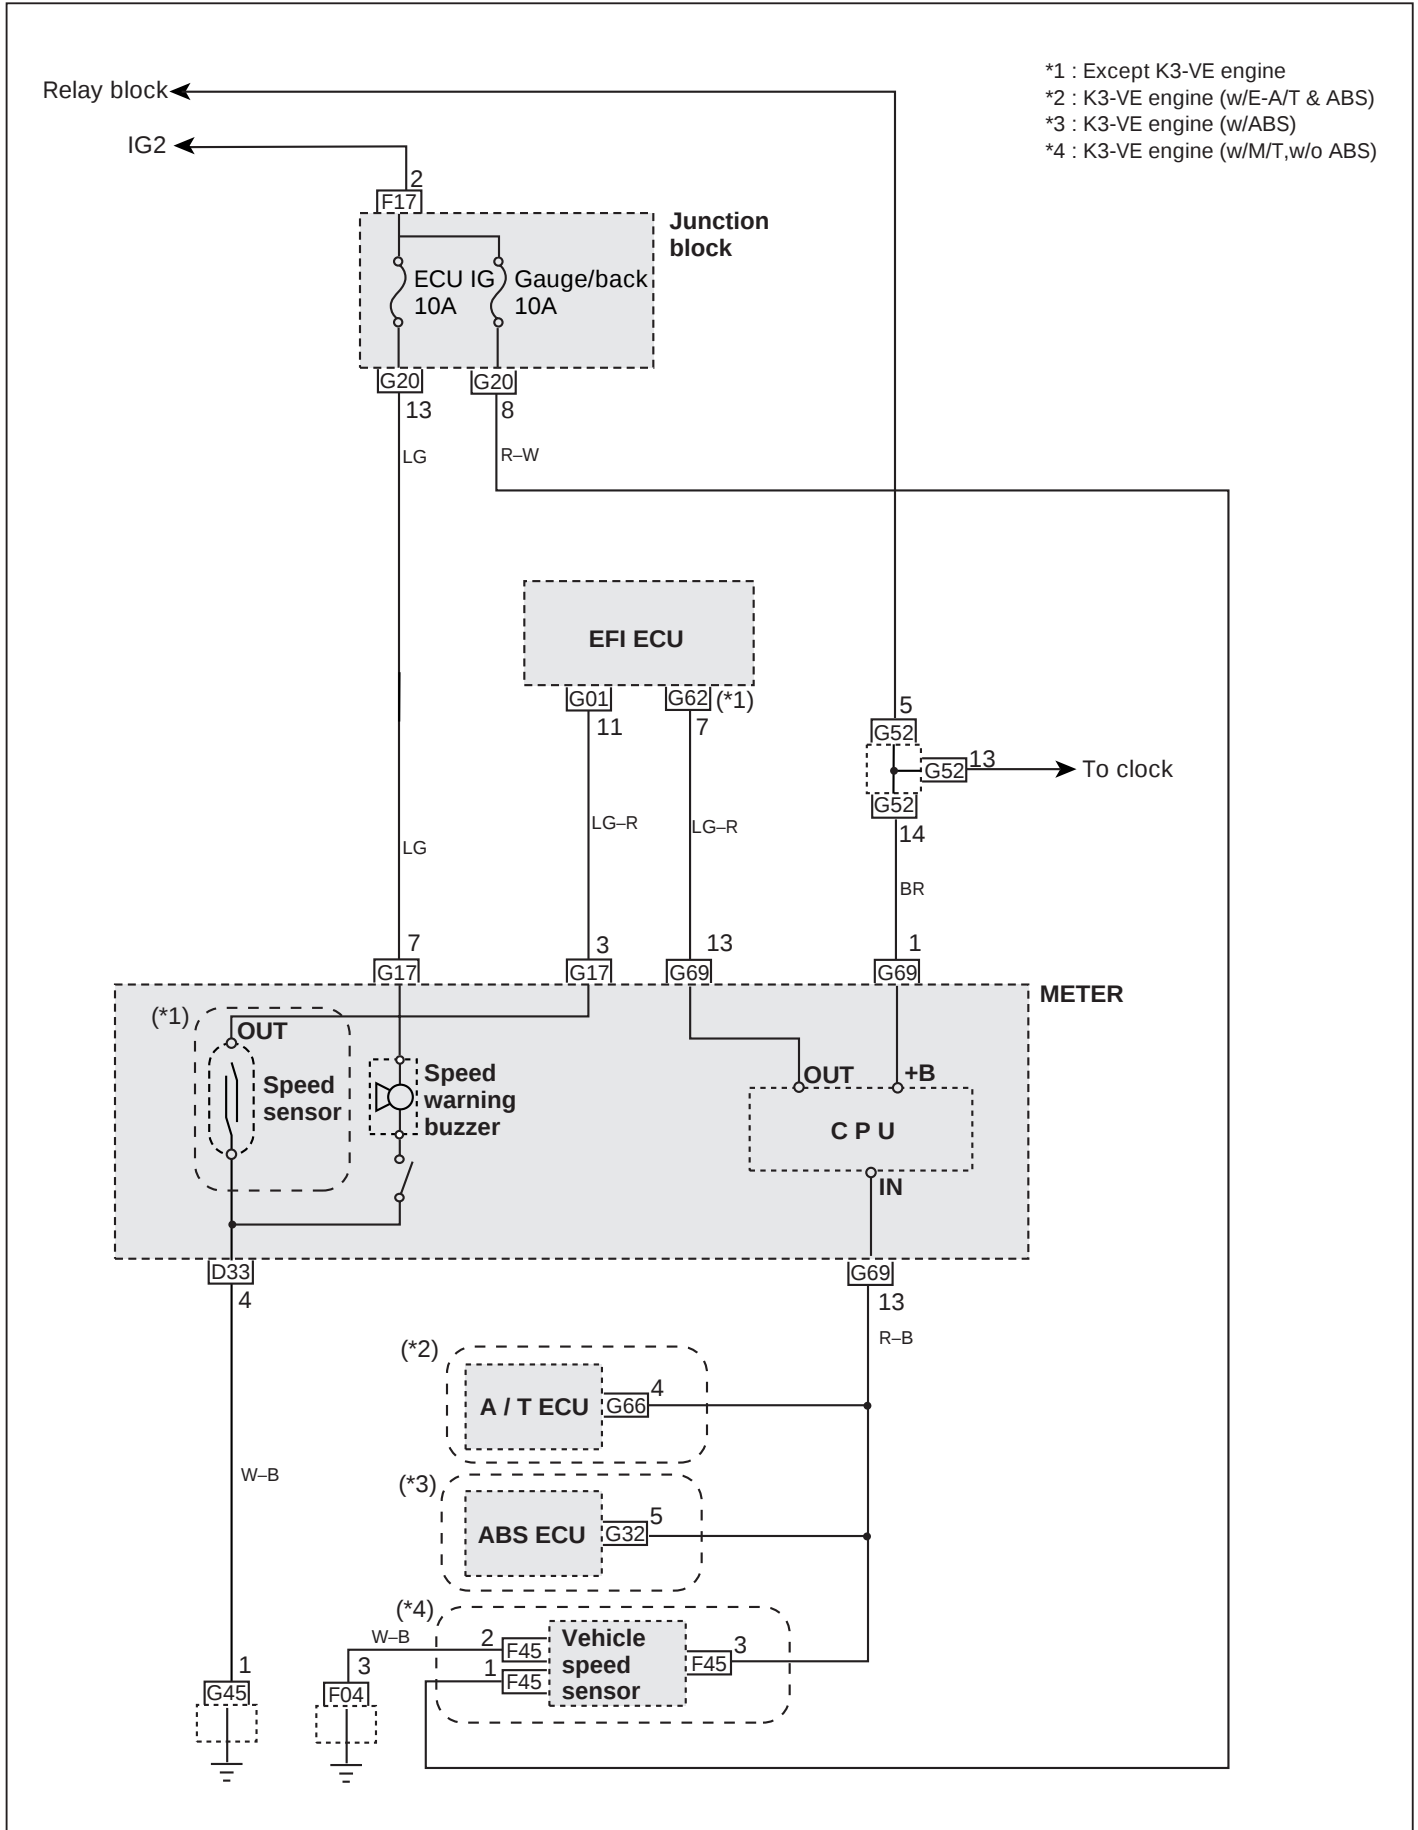

HEAD LAMP (RHD)

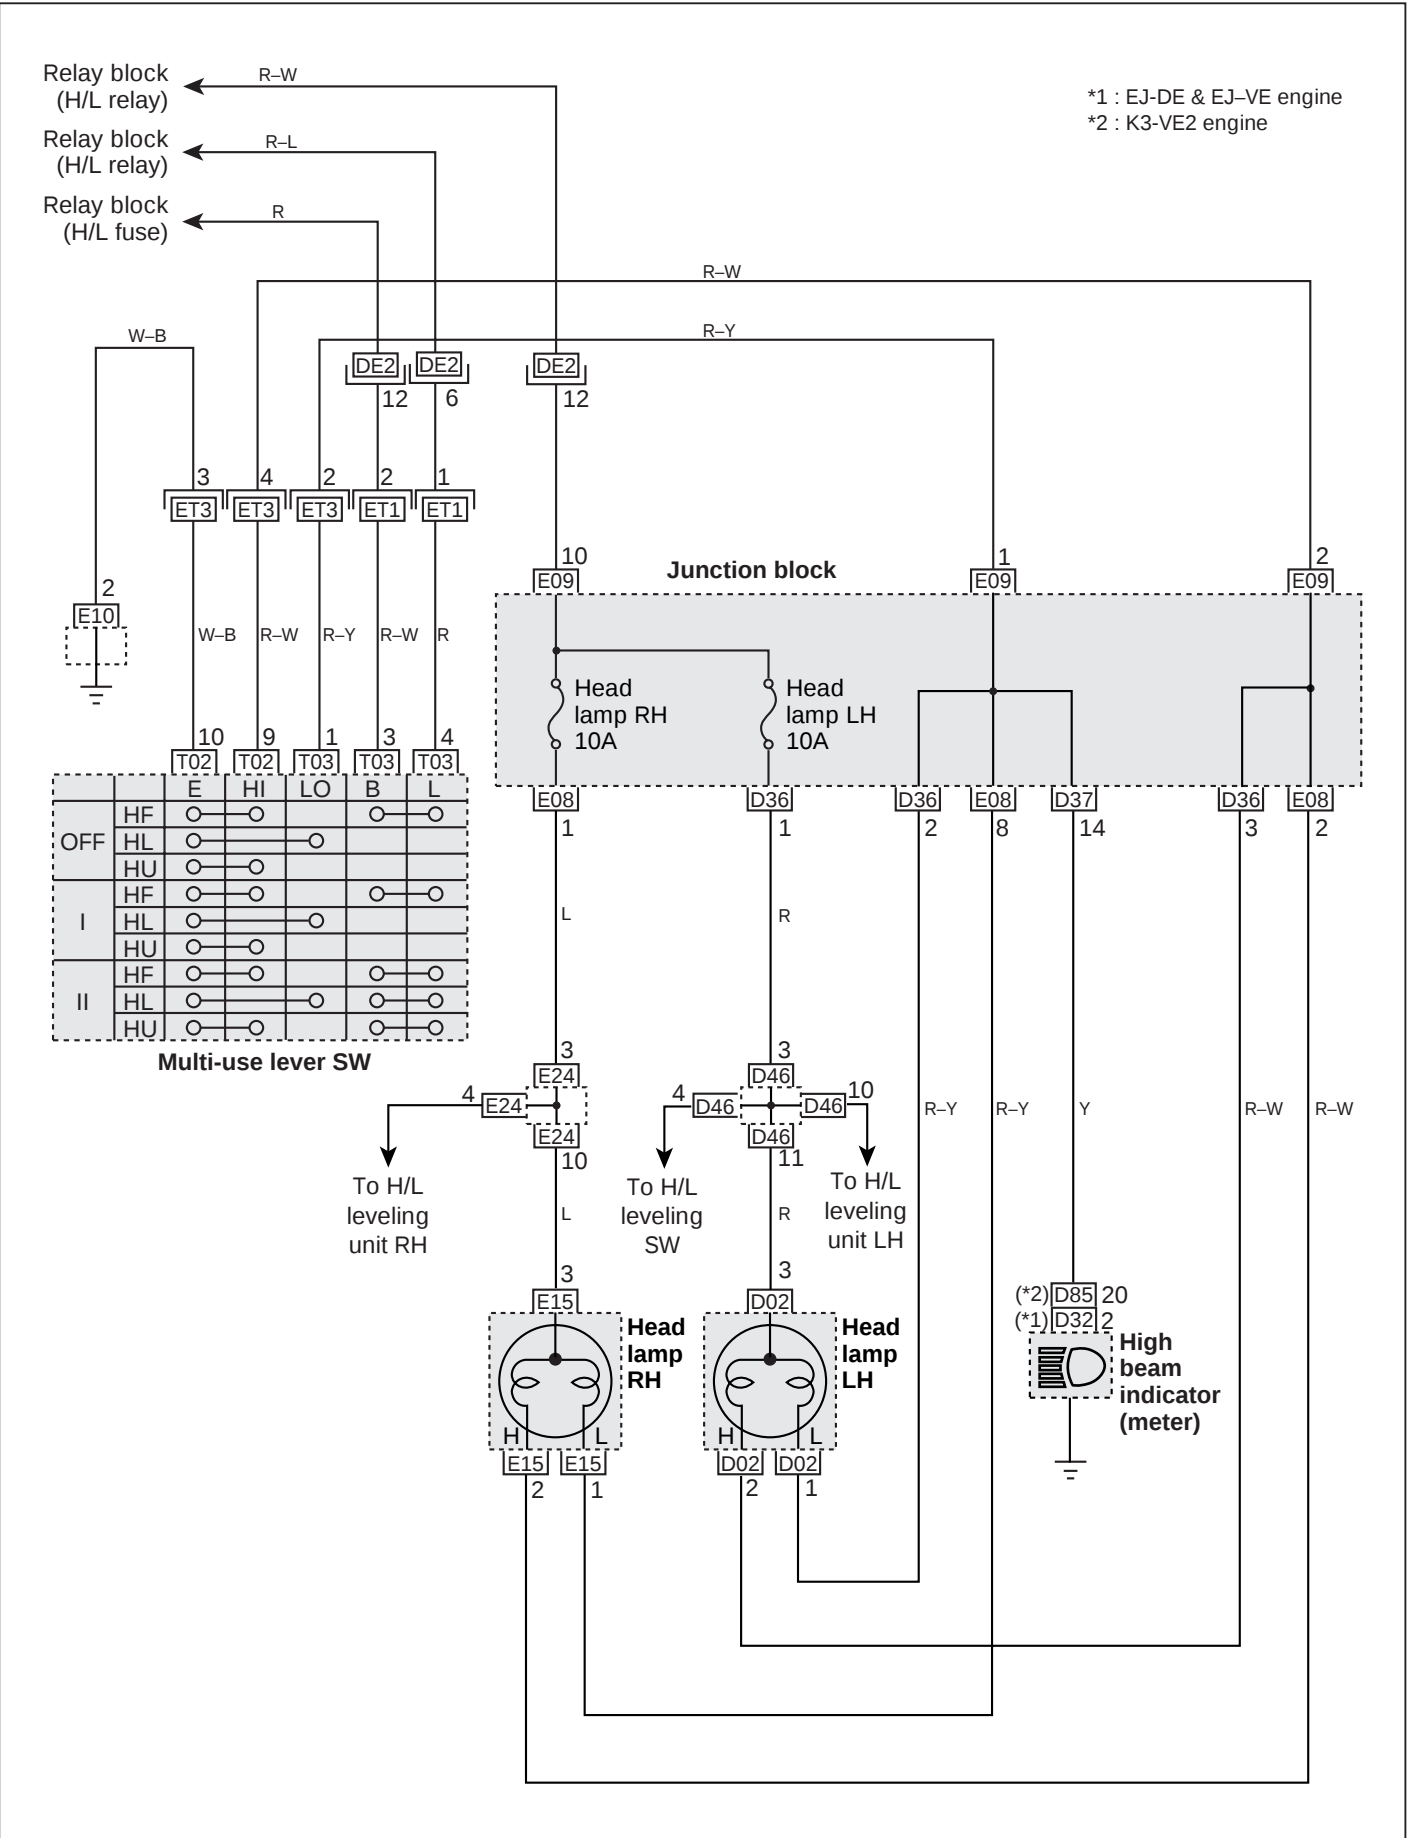


HEAD LAMP (LHD)

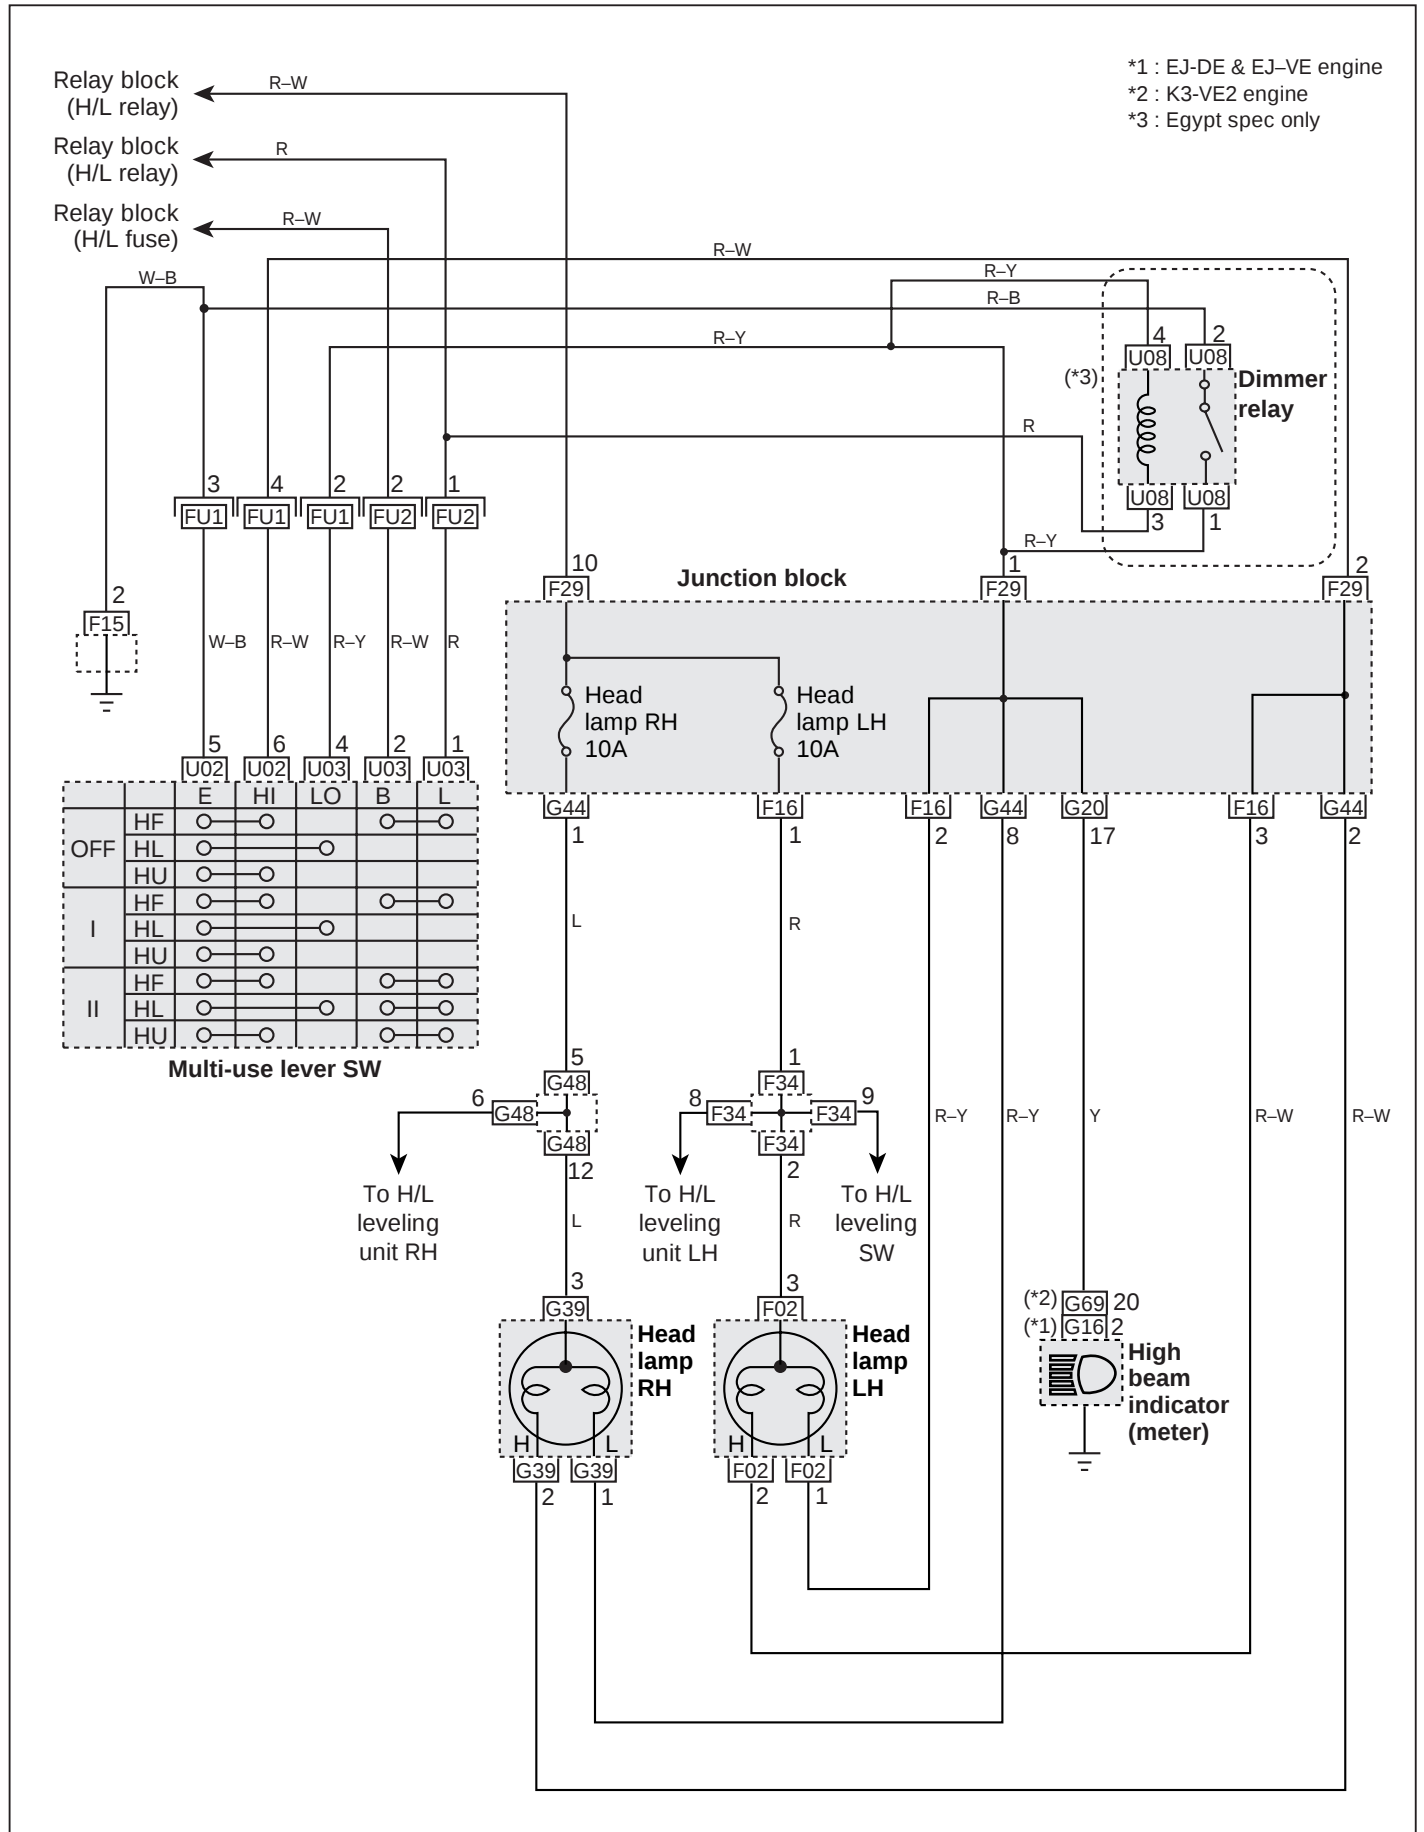


HW-74

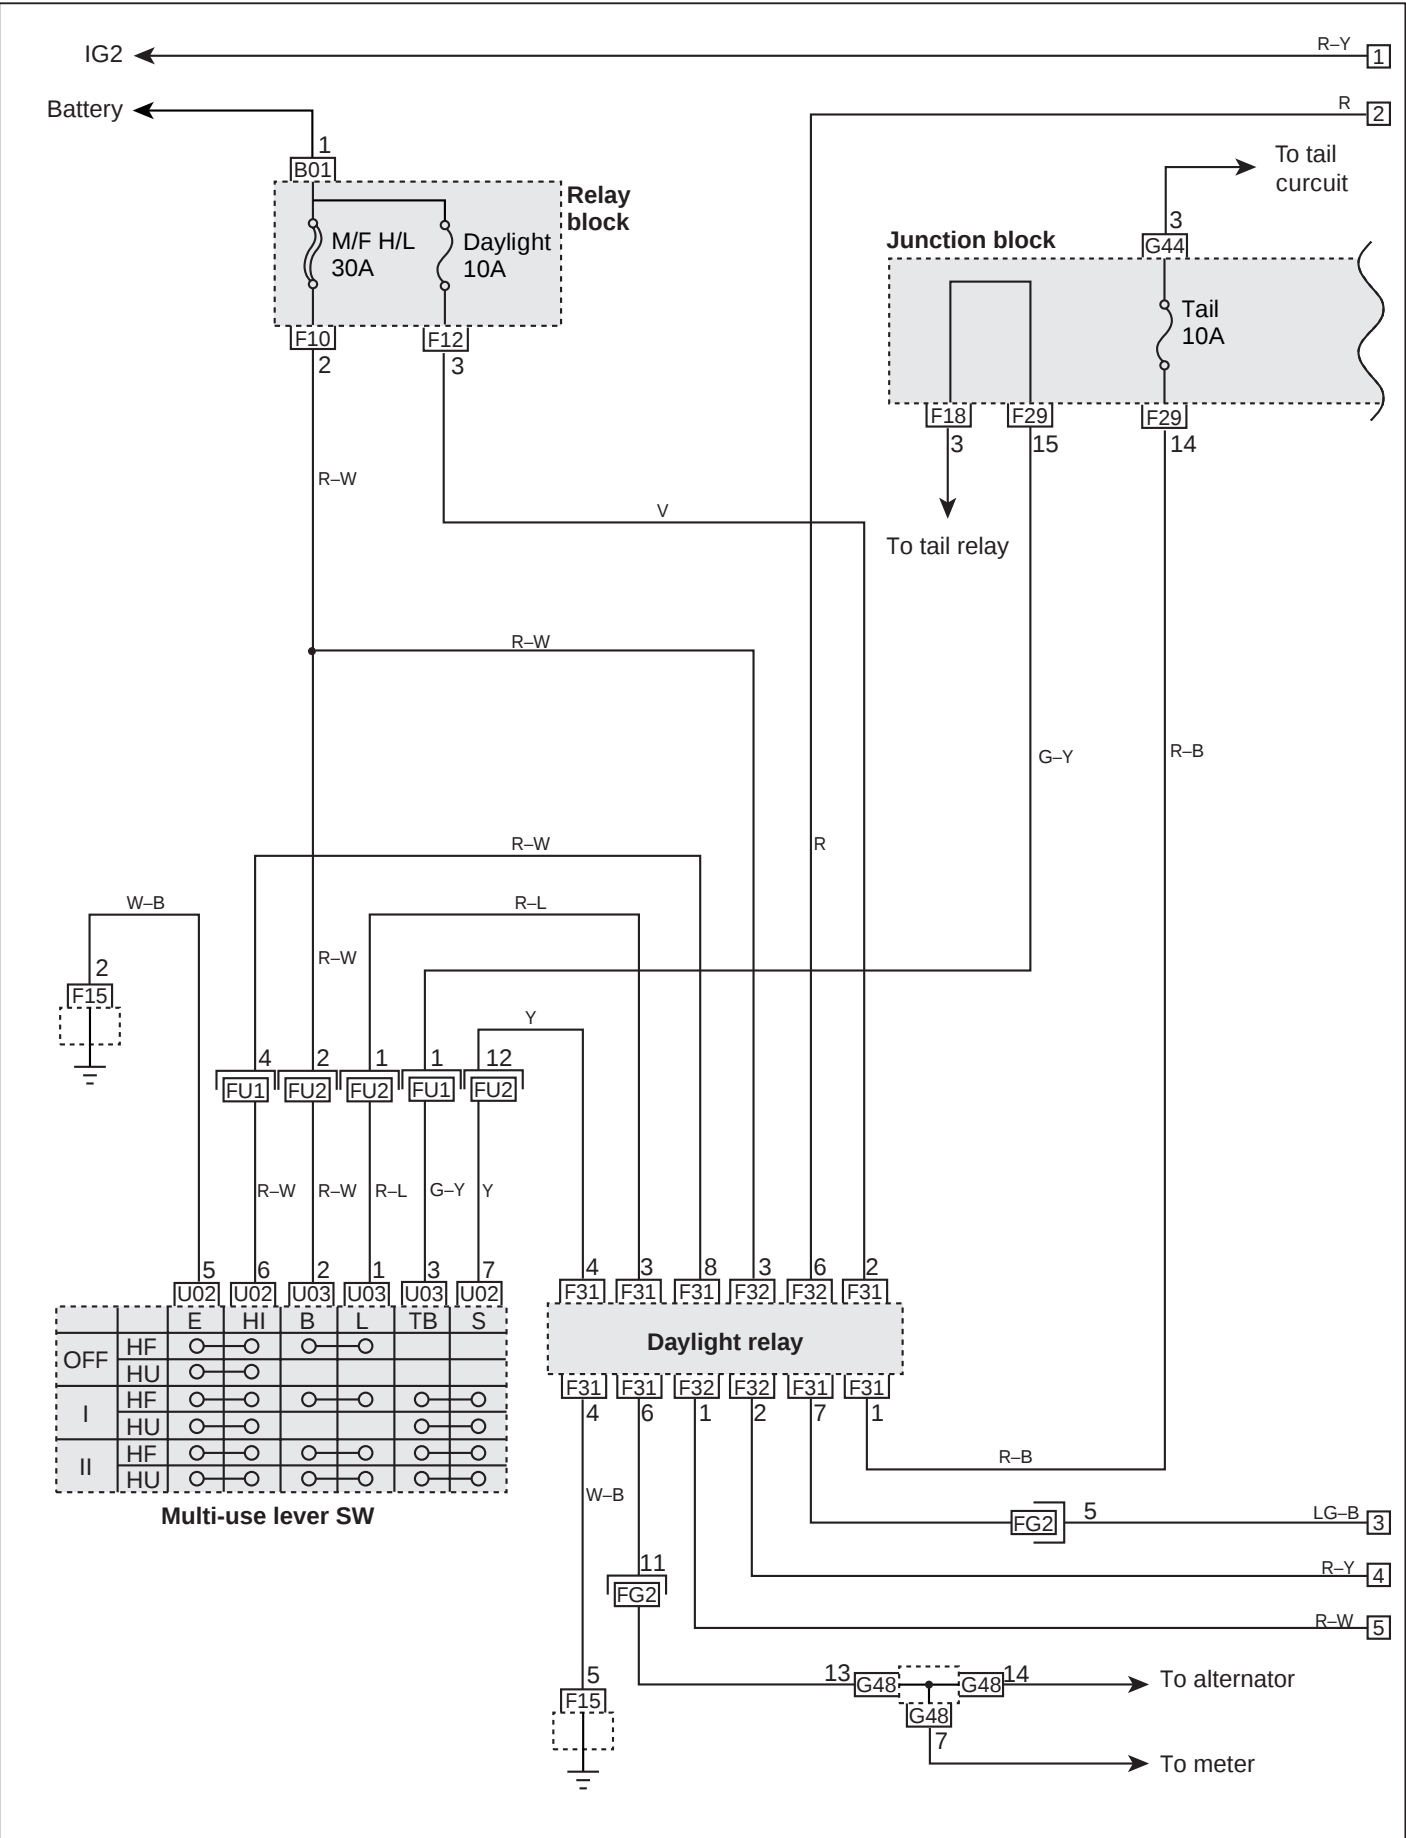DAY-LIGHT SYSTEM (LHD) -1




DAY-LIGHT SYSTEM (LHD) -2

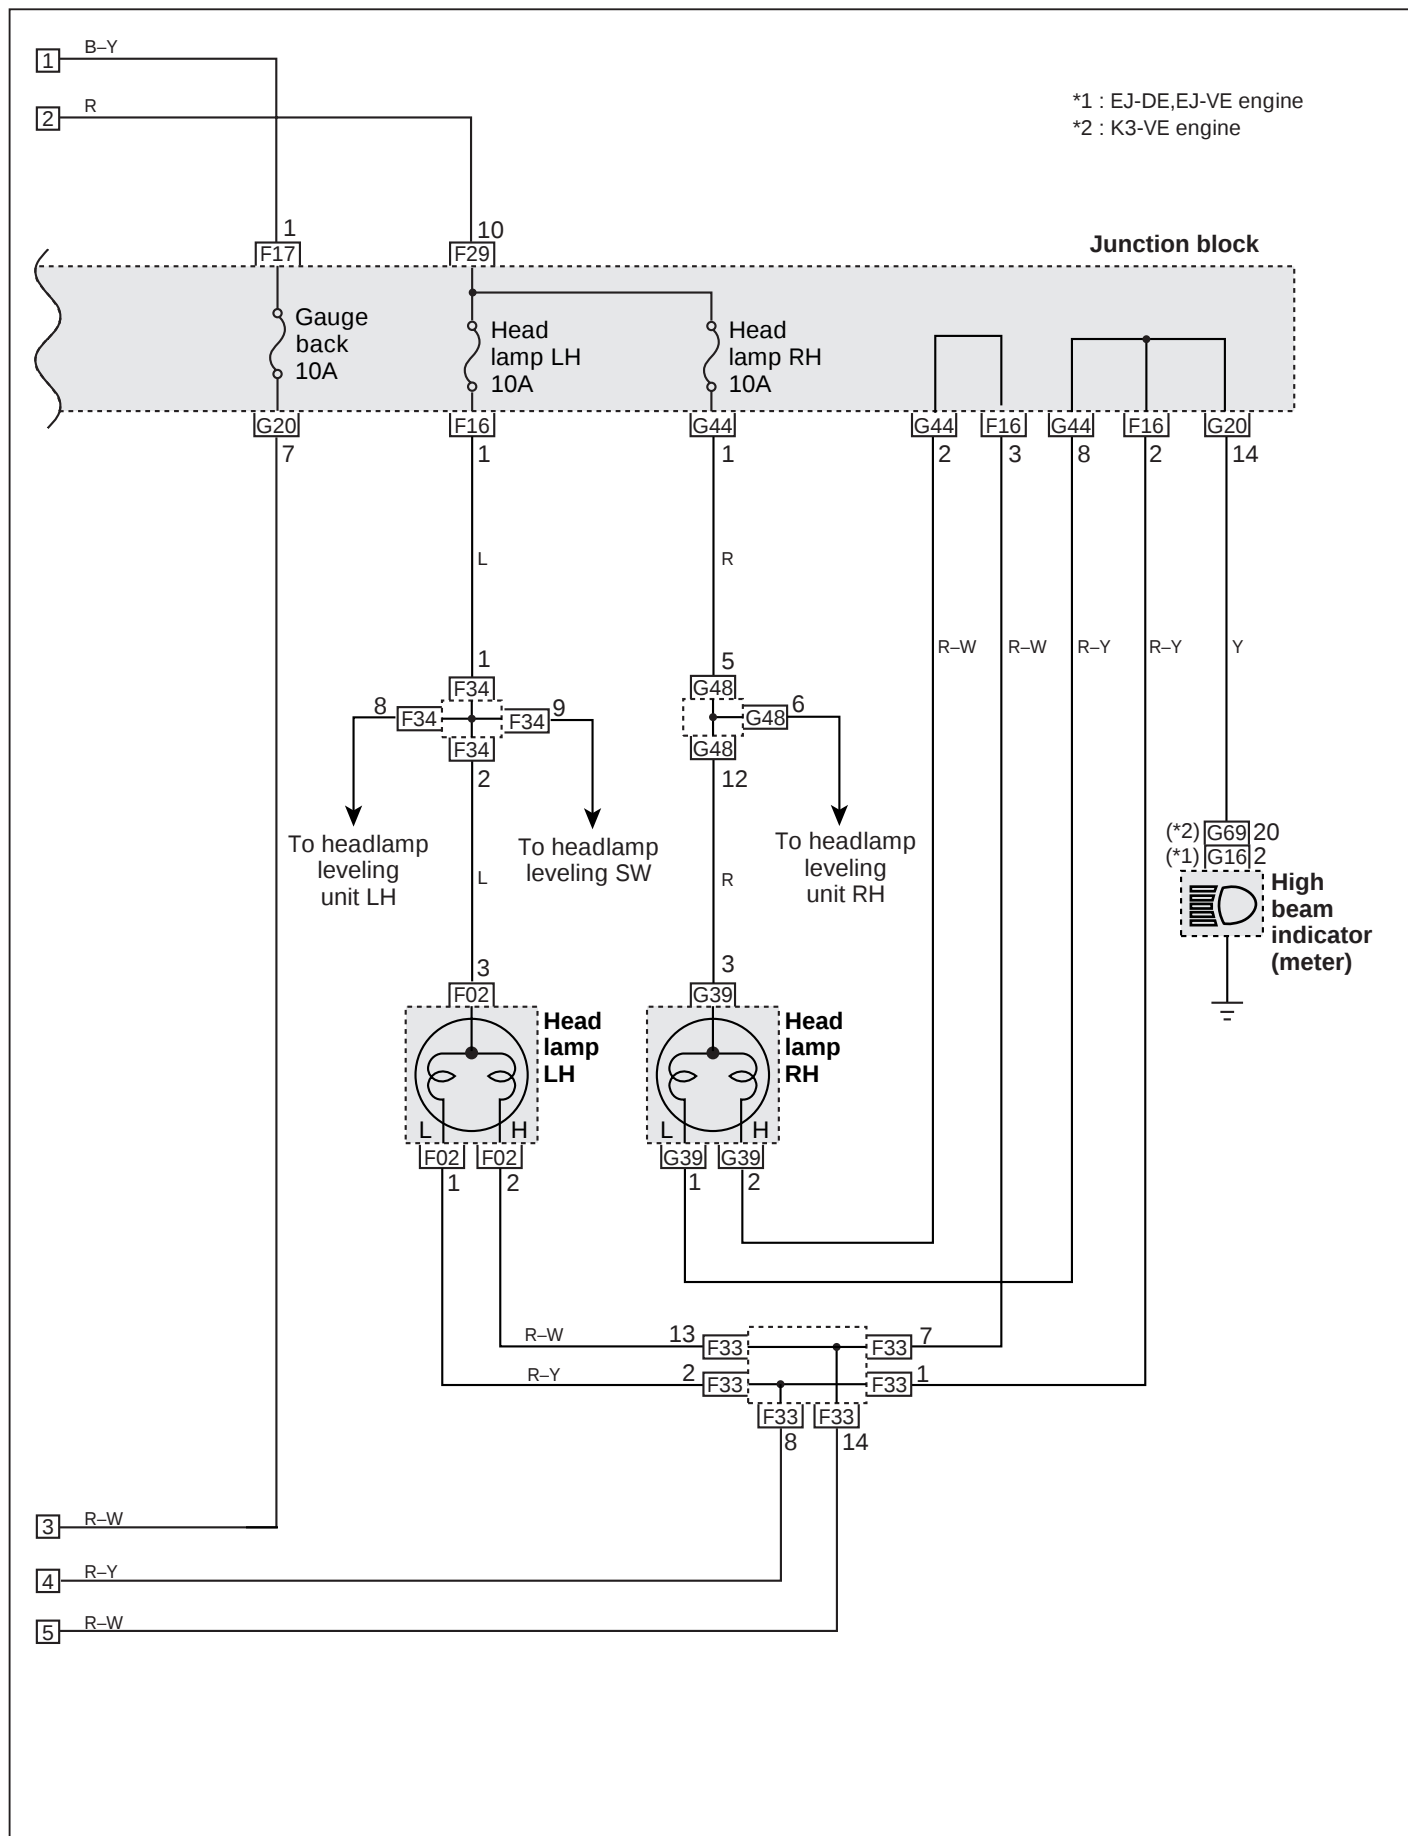


HW-76

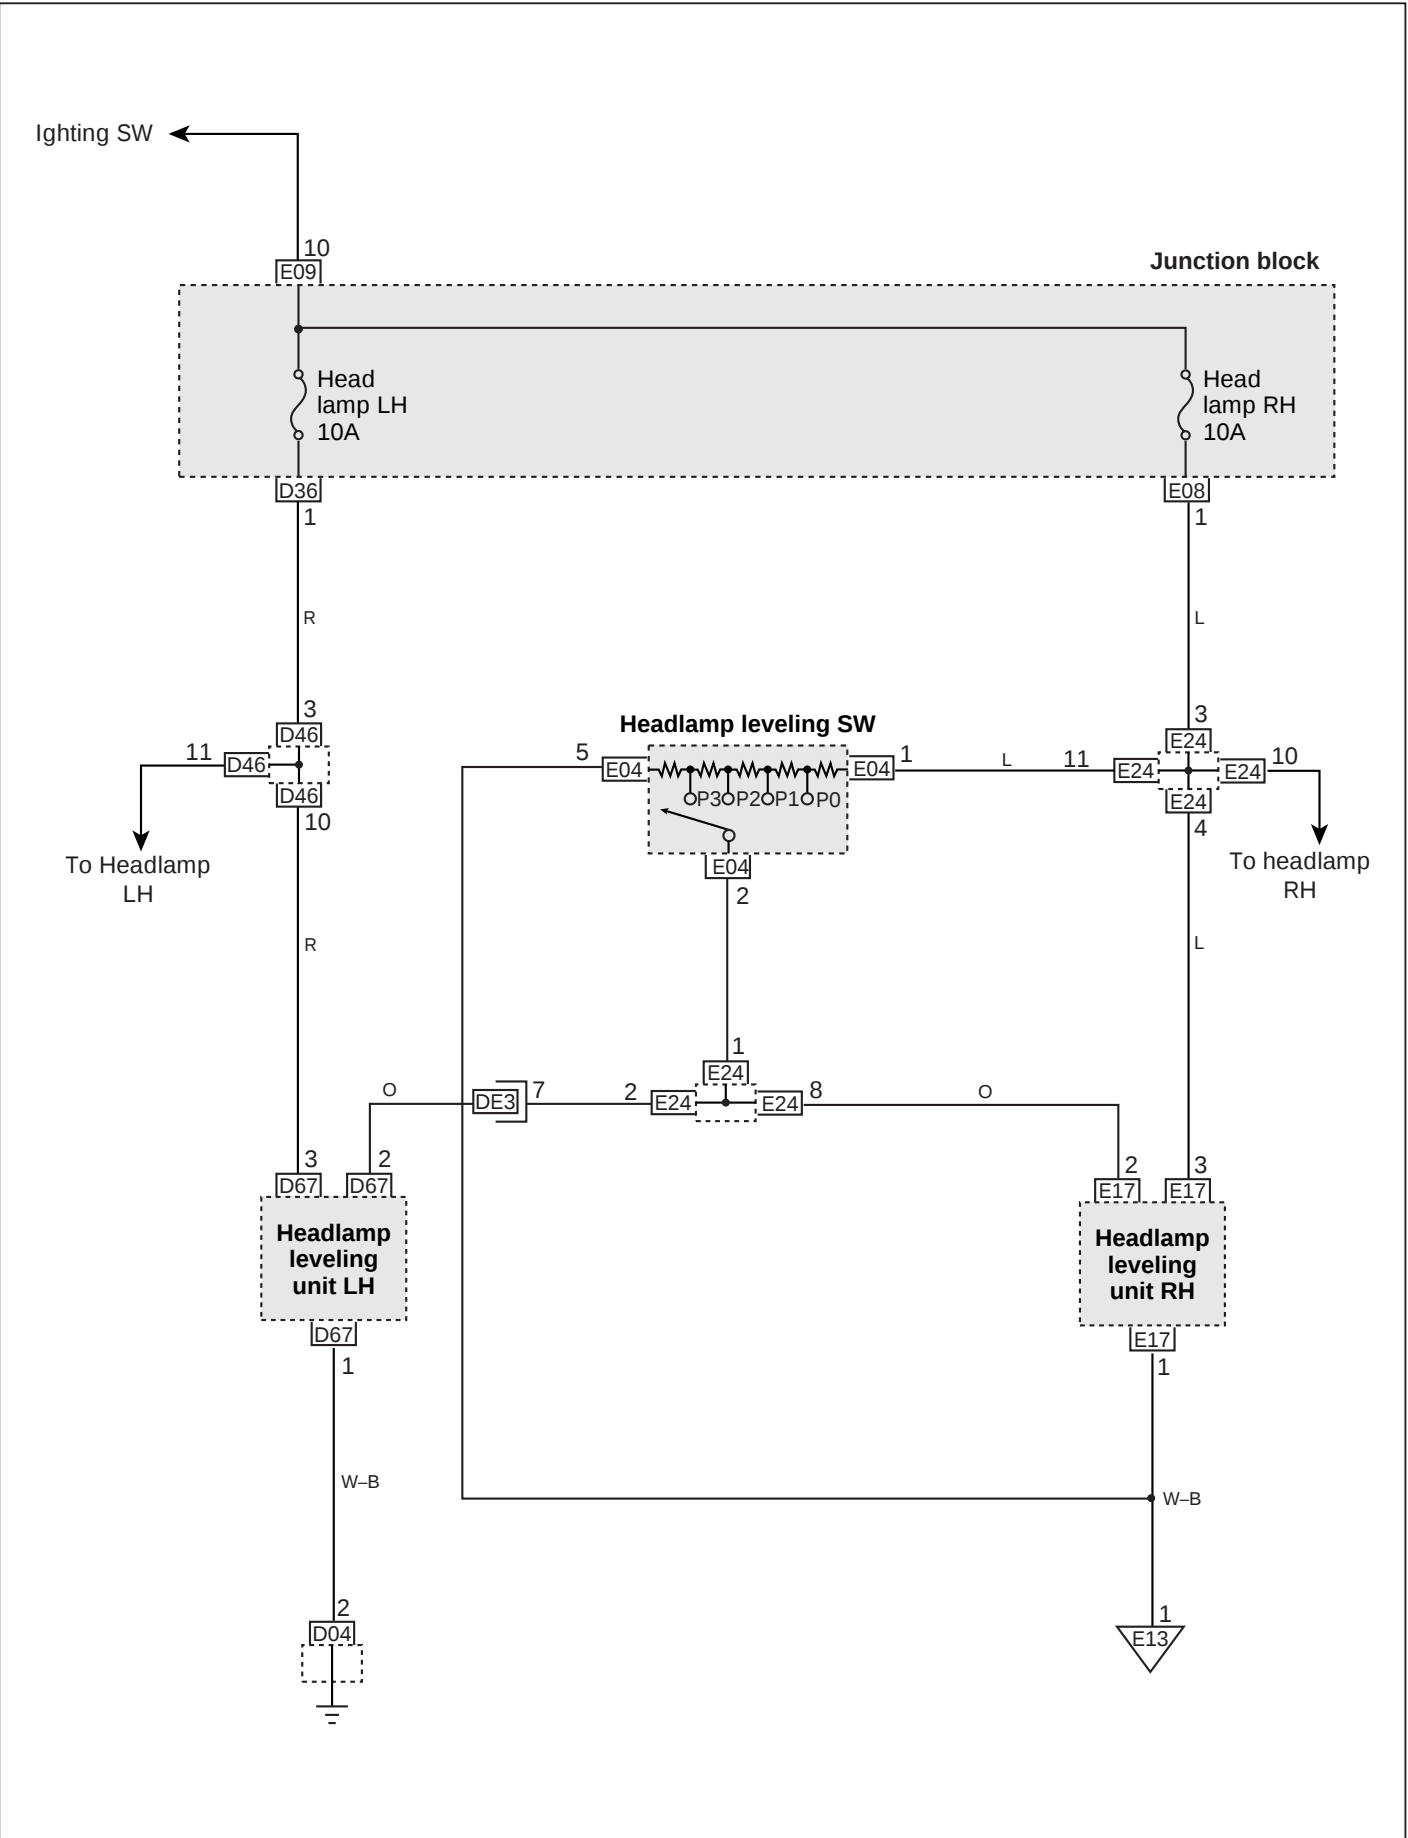HEAD LAMP LEVELING SYSTEM (RHD)




HEAD LAMP LEVELING SYSTEM (LHD)

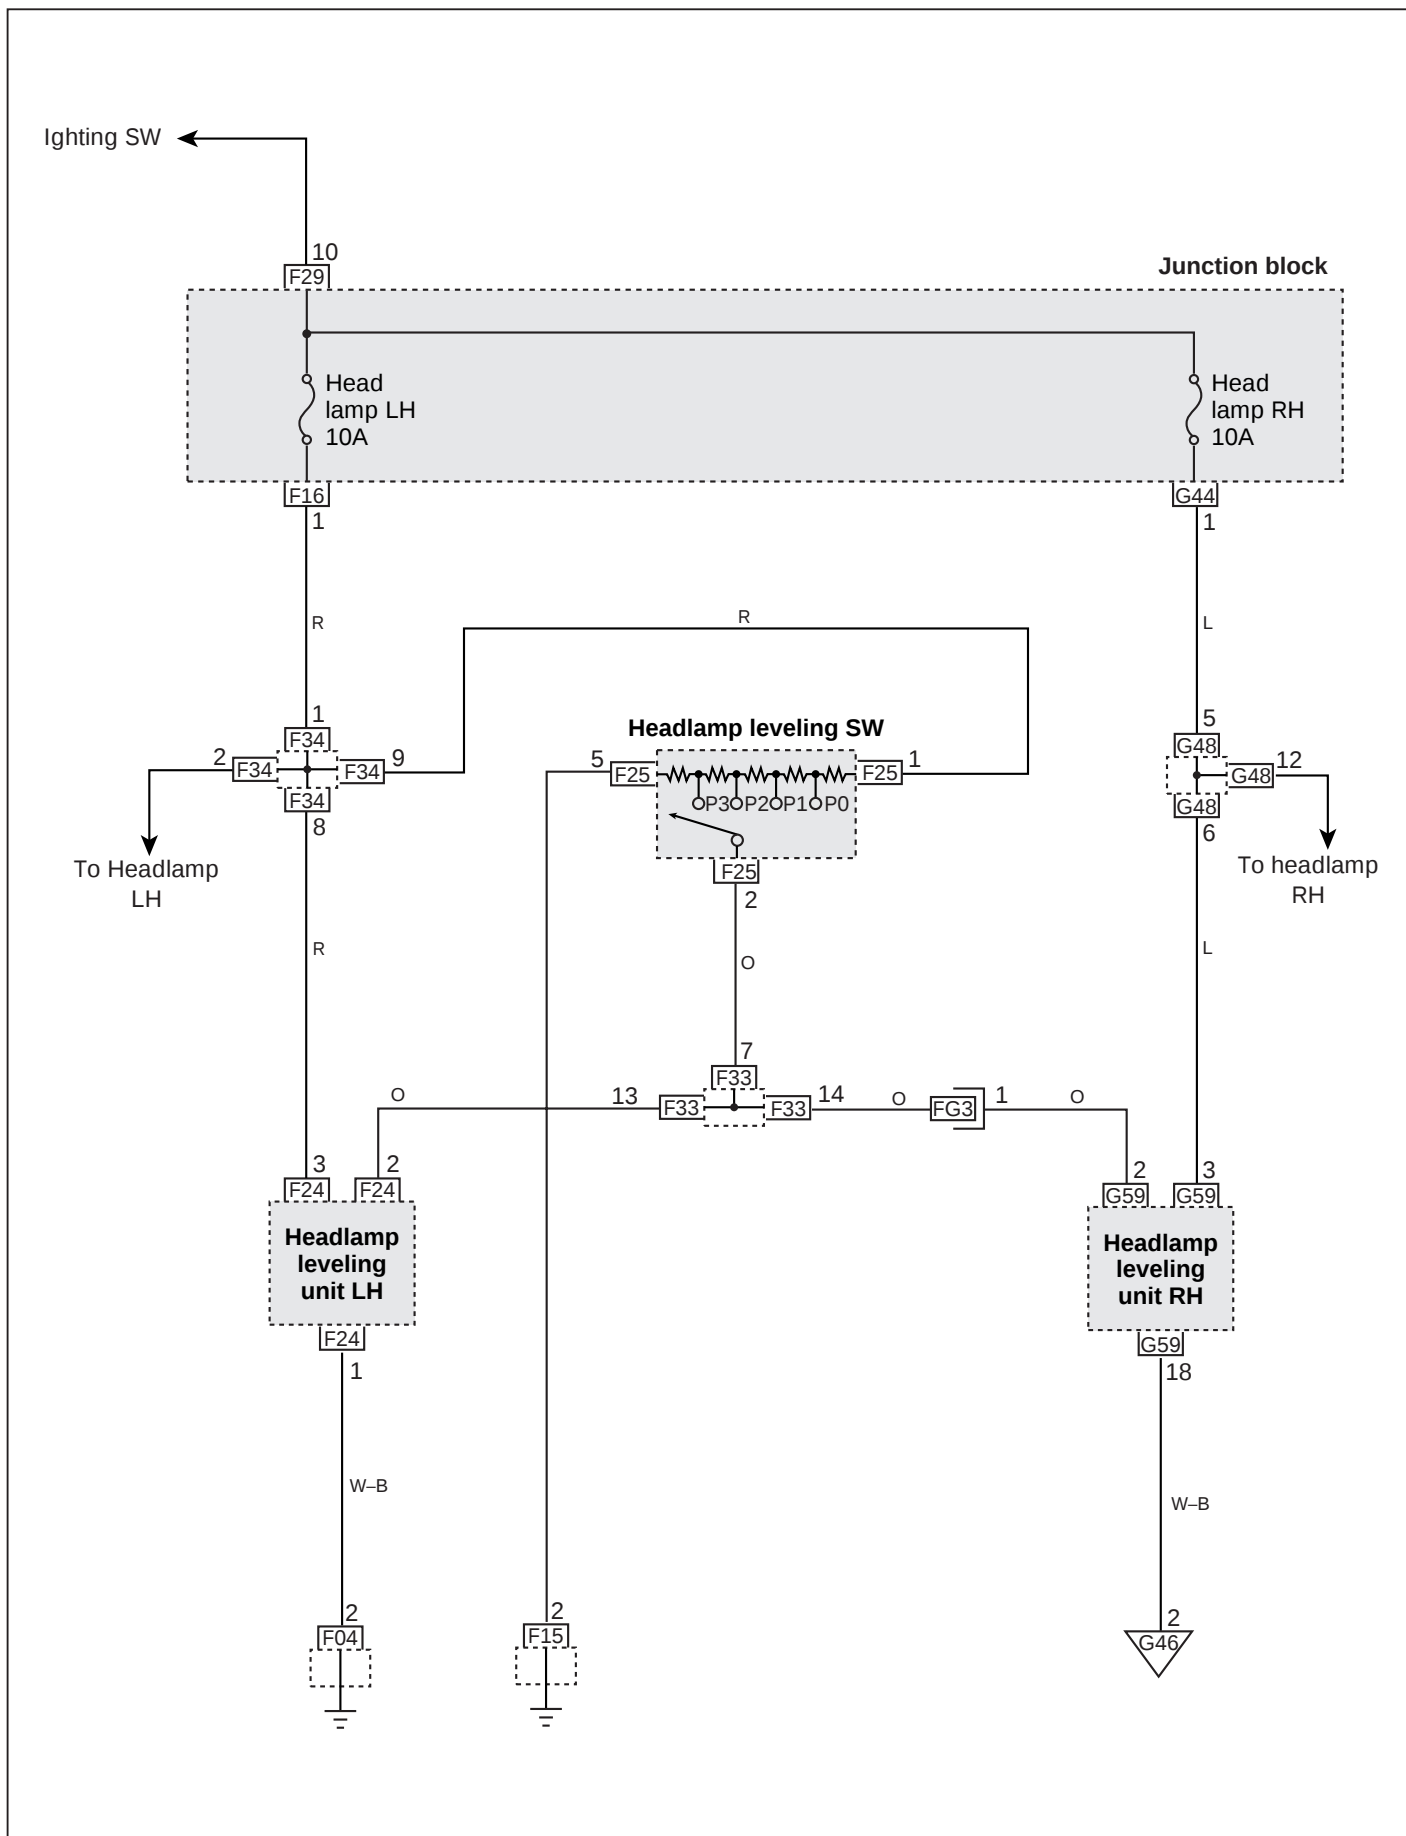


HW-78

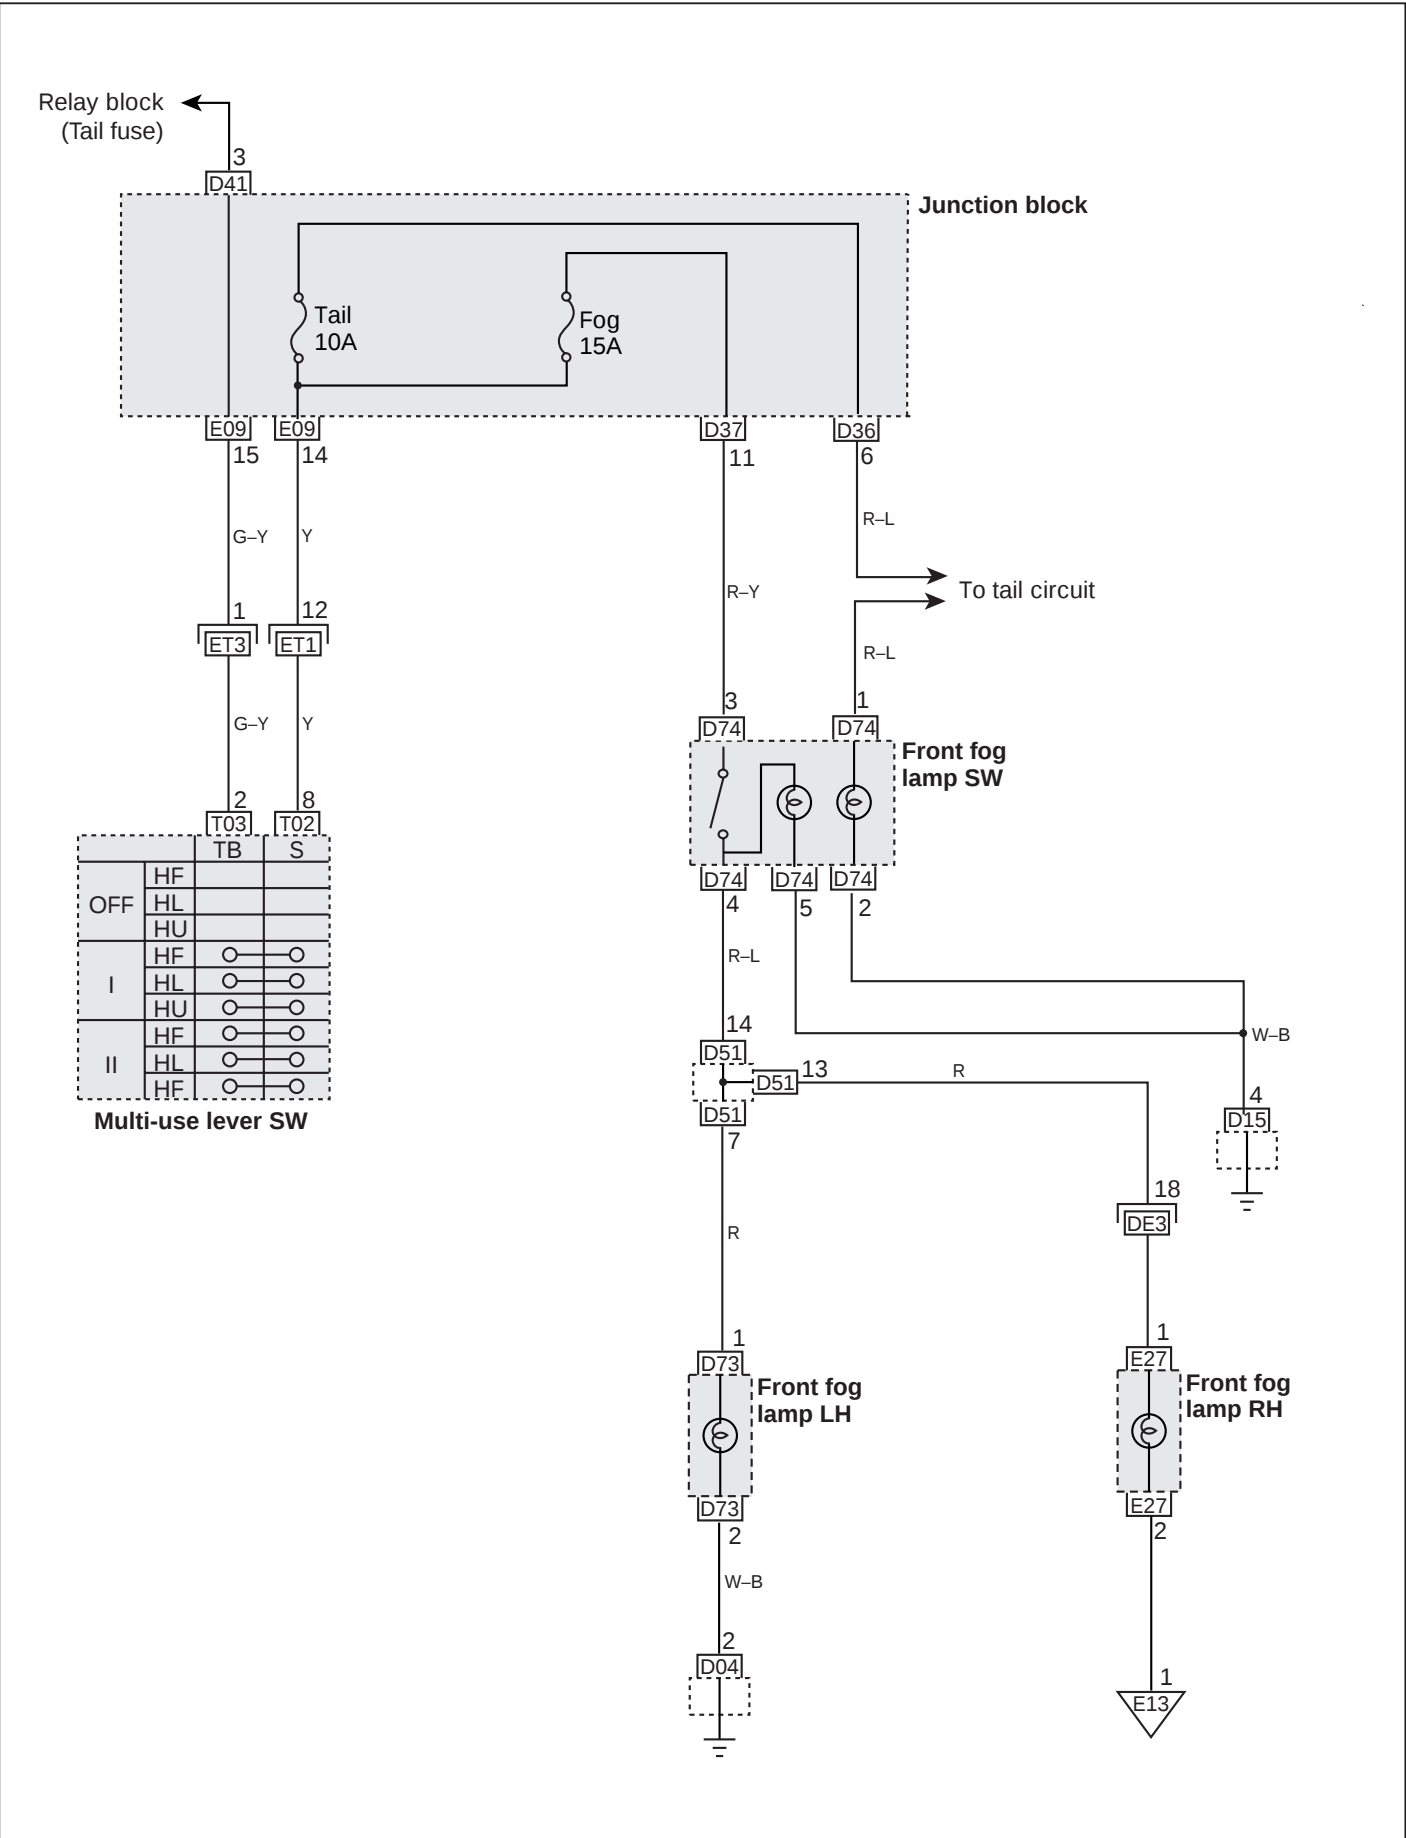FRONT FOG LAMP (RHD)




FRONT FOG LAMP (LHD)

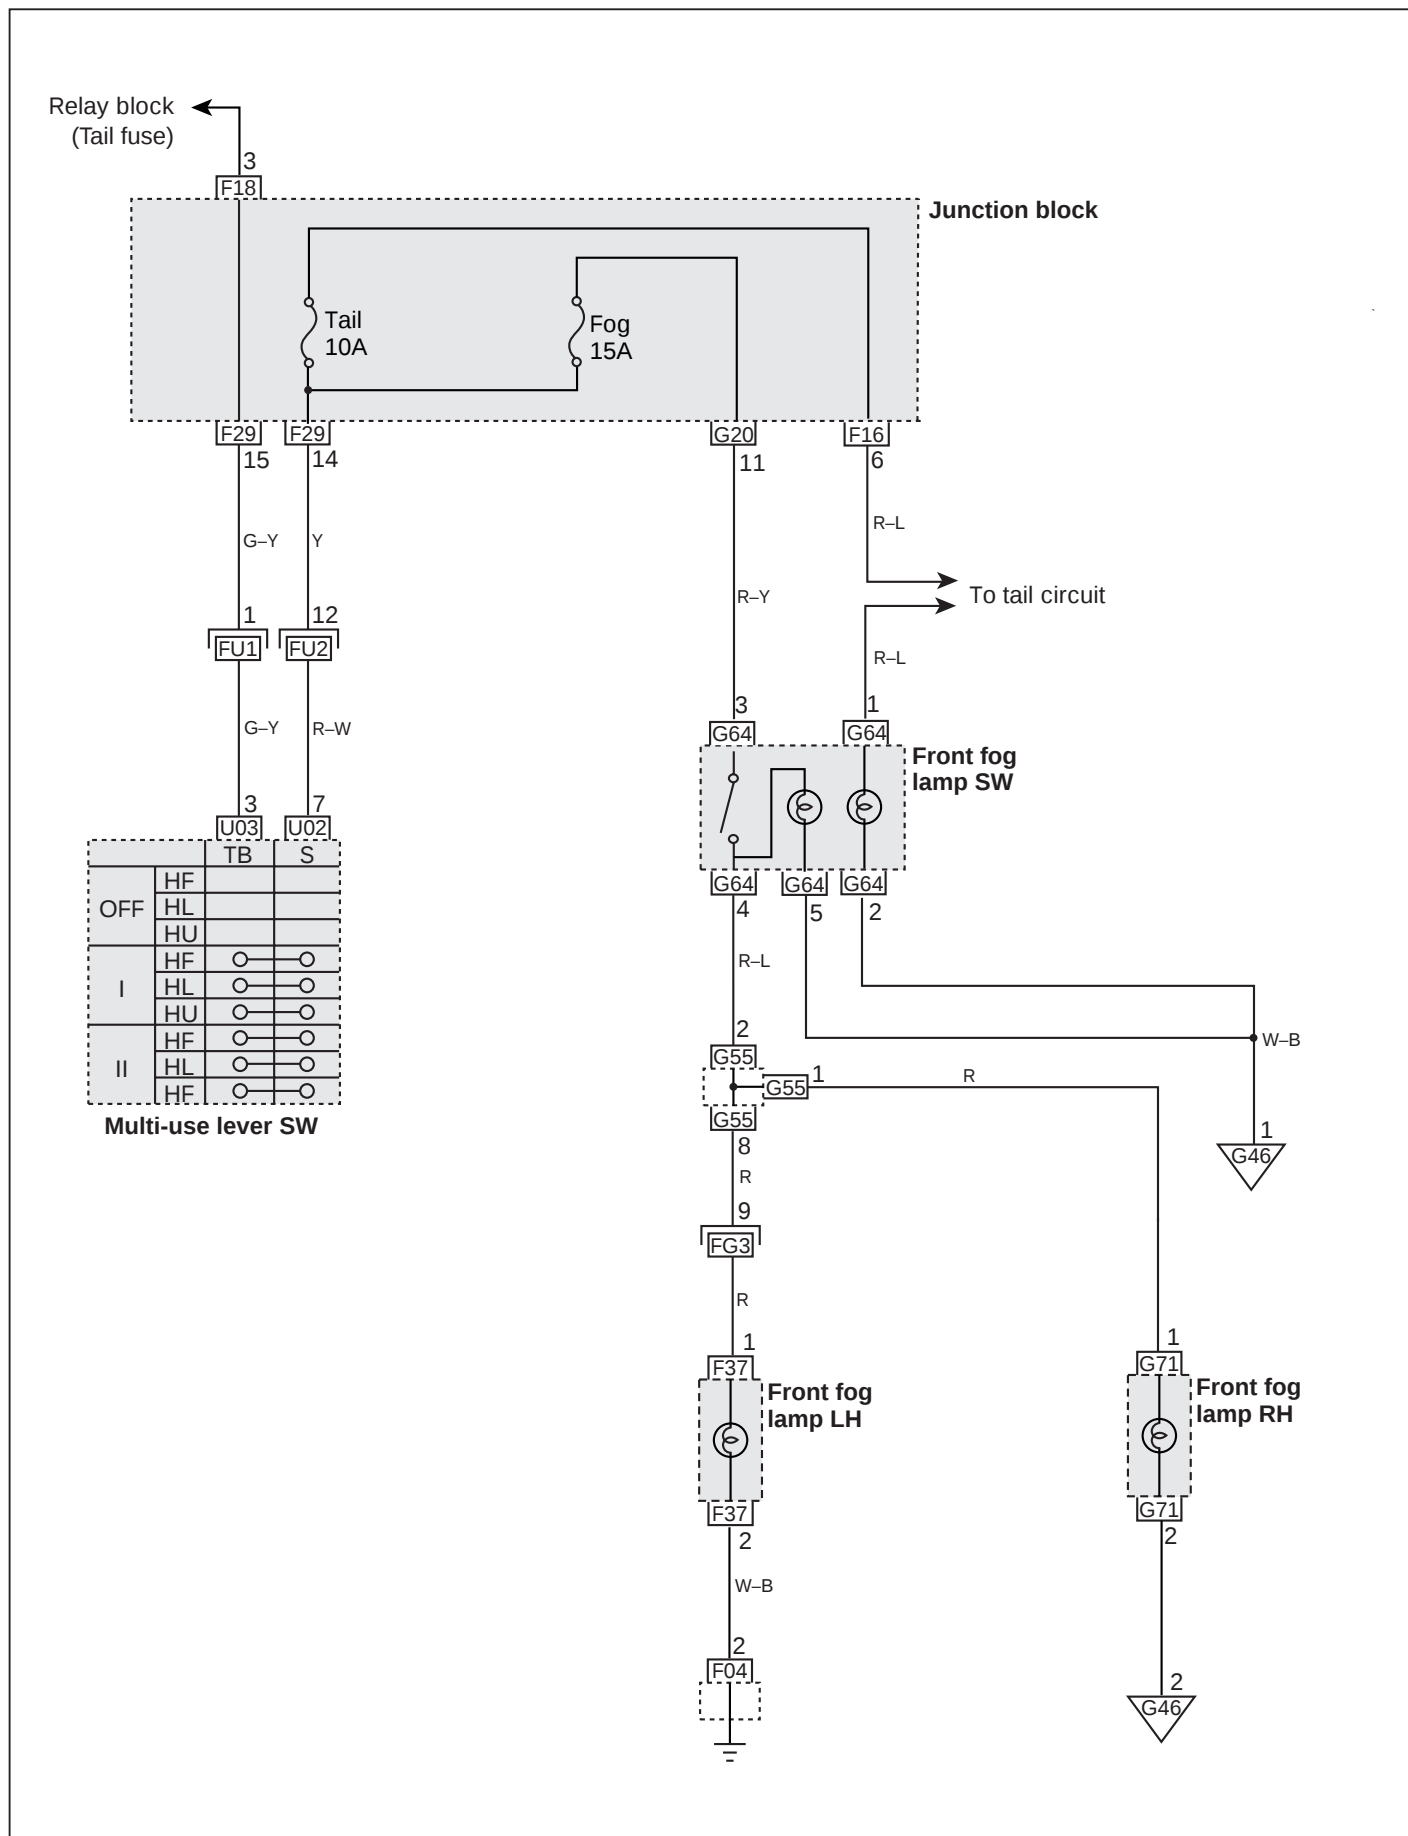


[illegible]

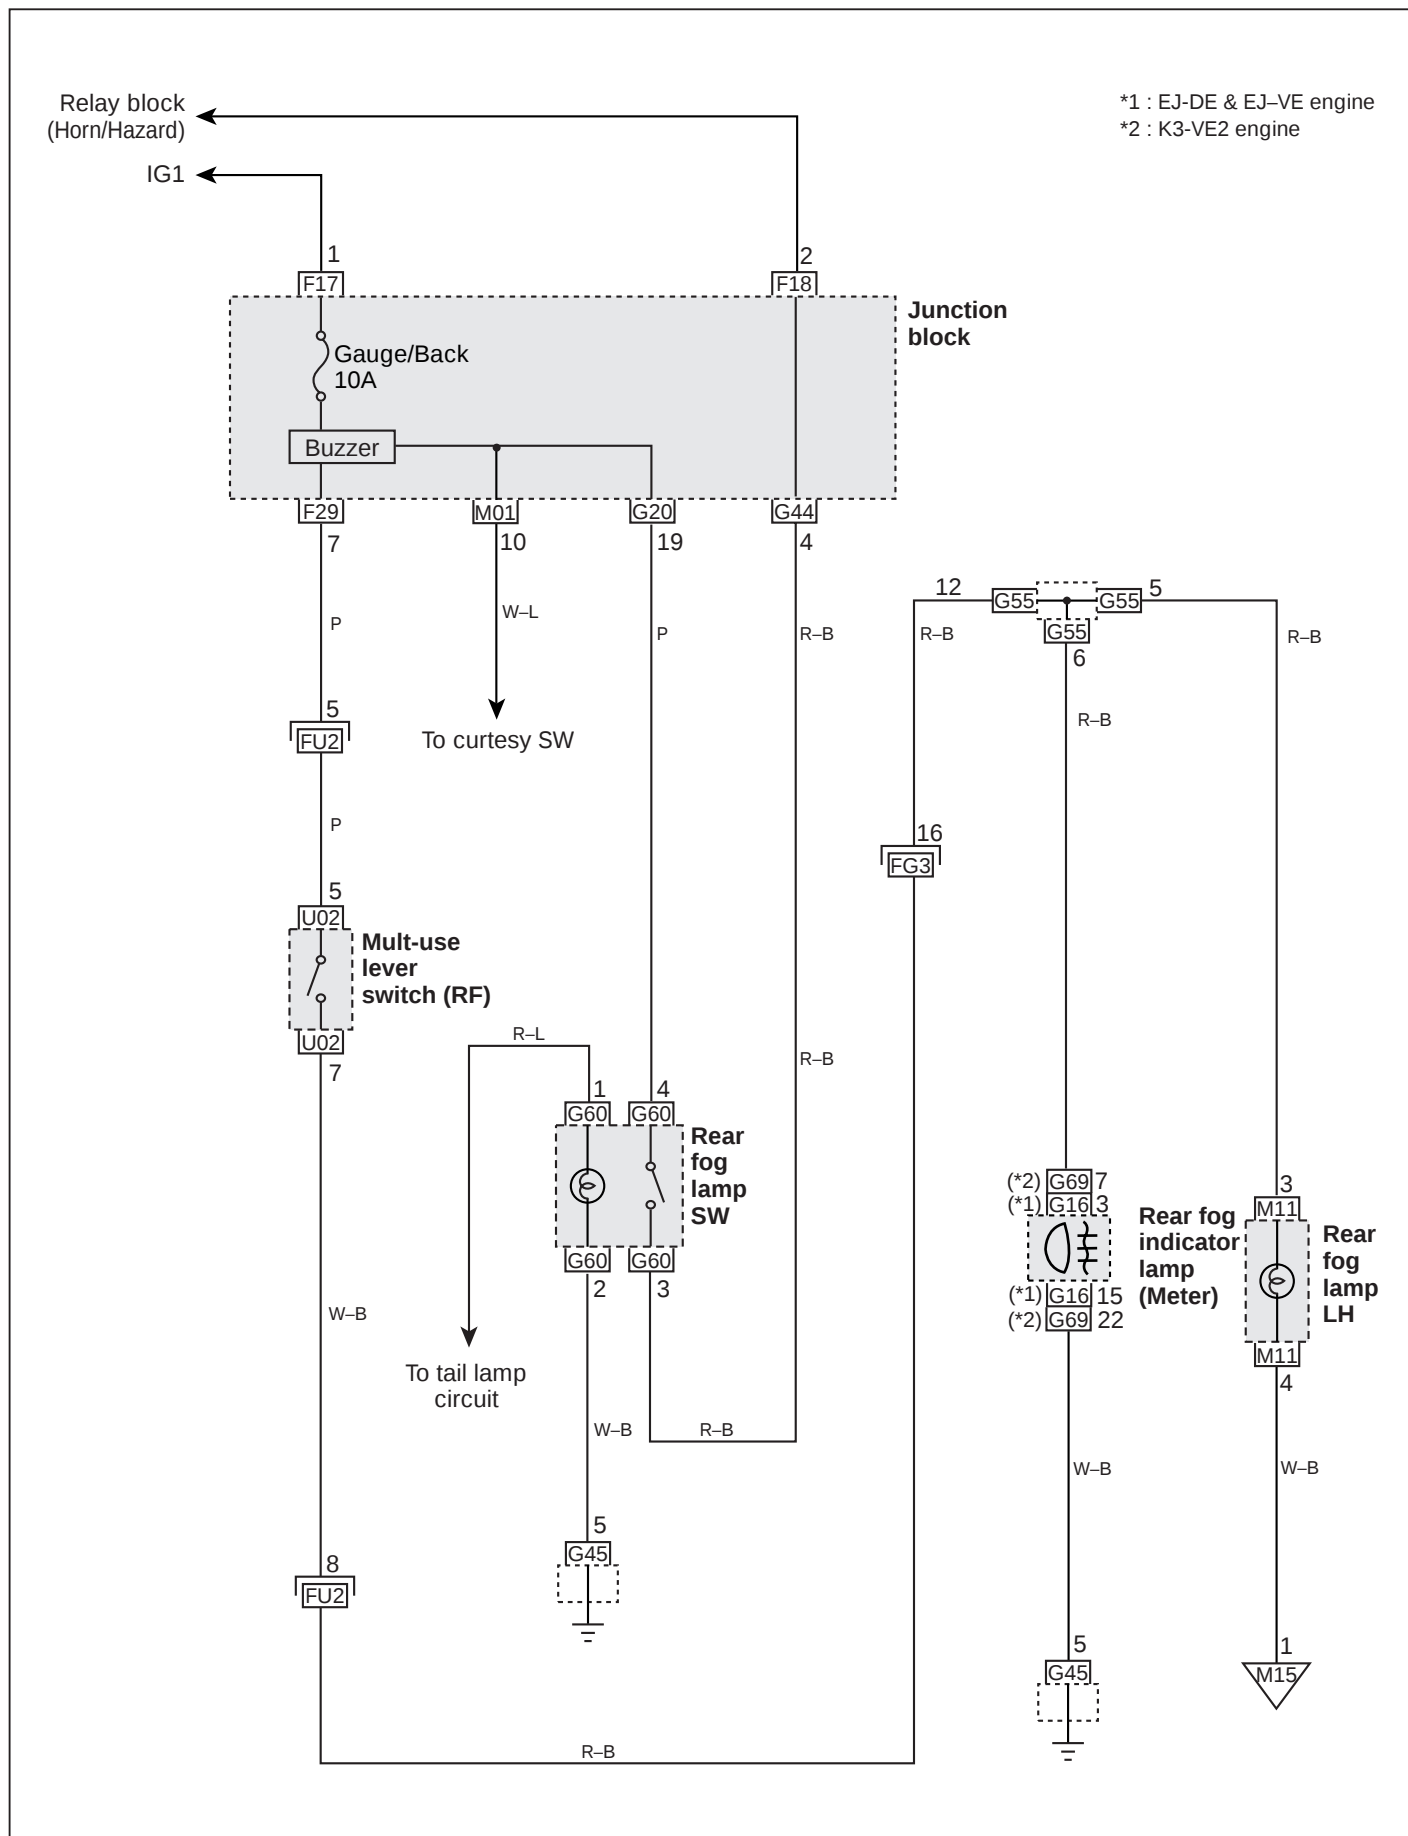REAR FOG LAMP (LHD)




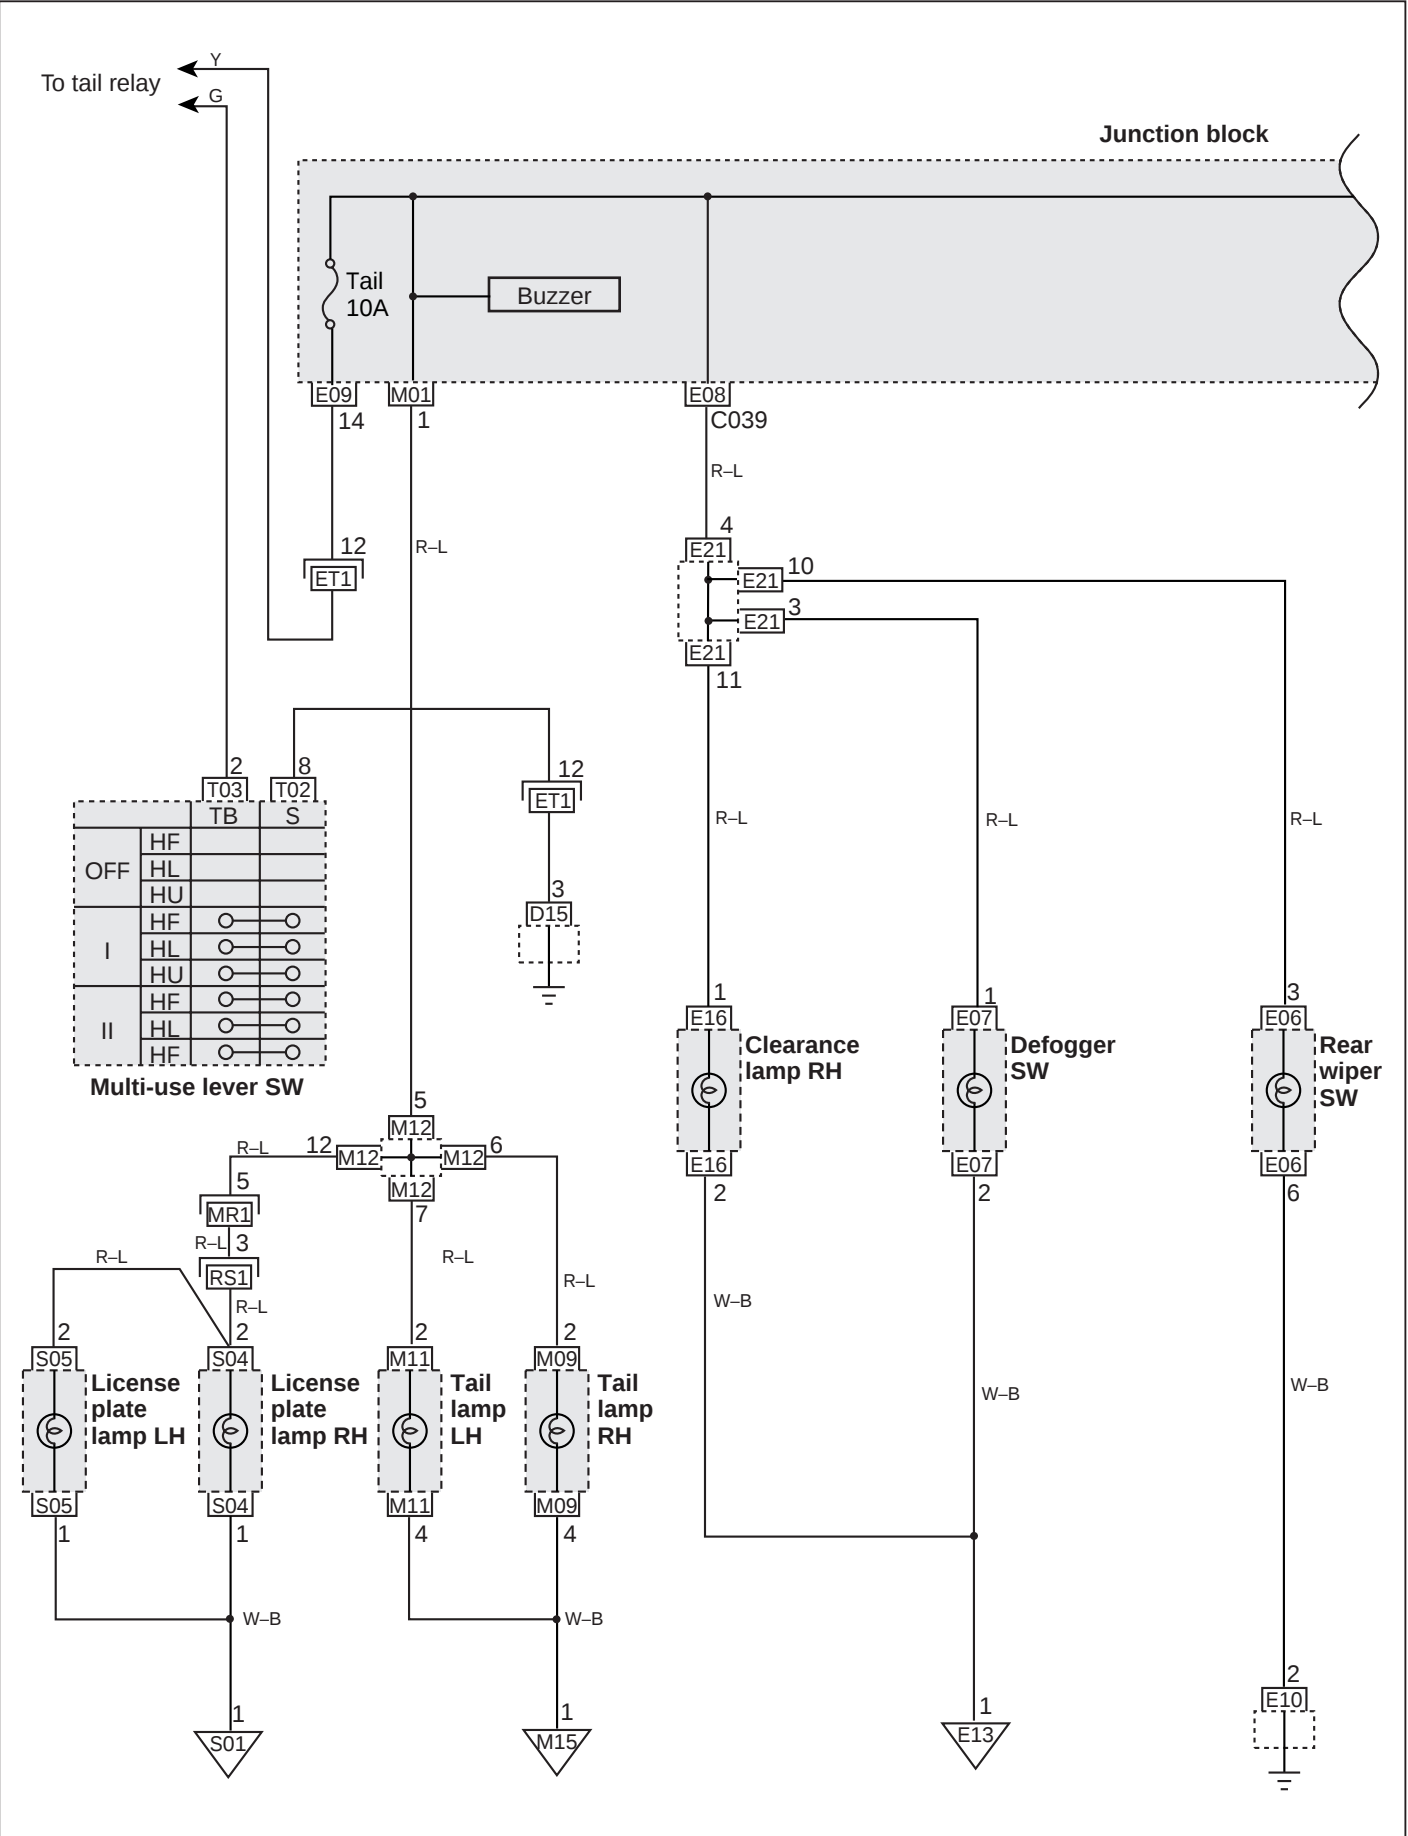TAIL LAMP & ILLMINATION (w/o REOSTAT CONTOROL / RHD) -1




TAIL LAMP & ILLMINATION (w/o REOSTAT CONTOROL / RHD) -2

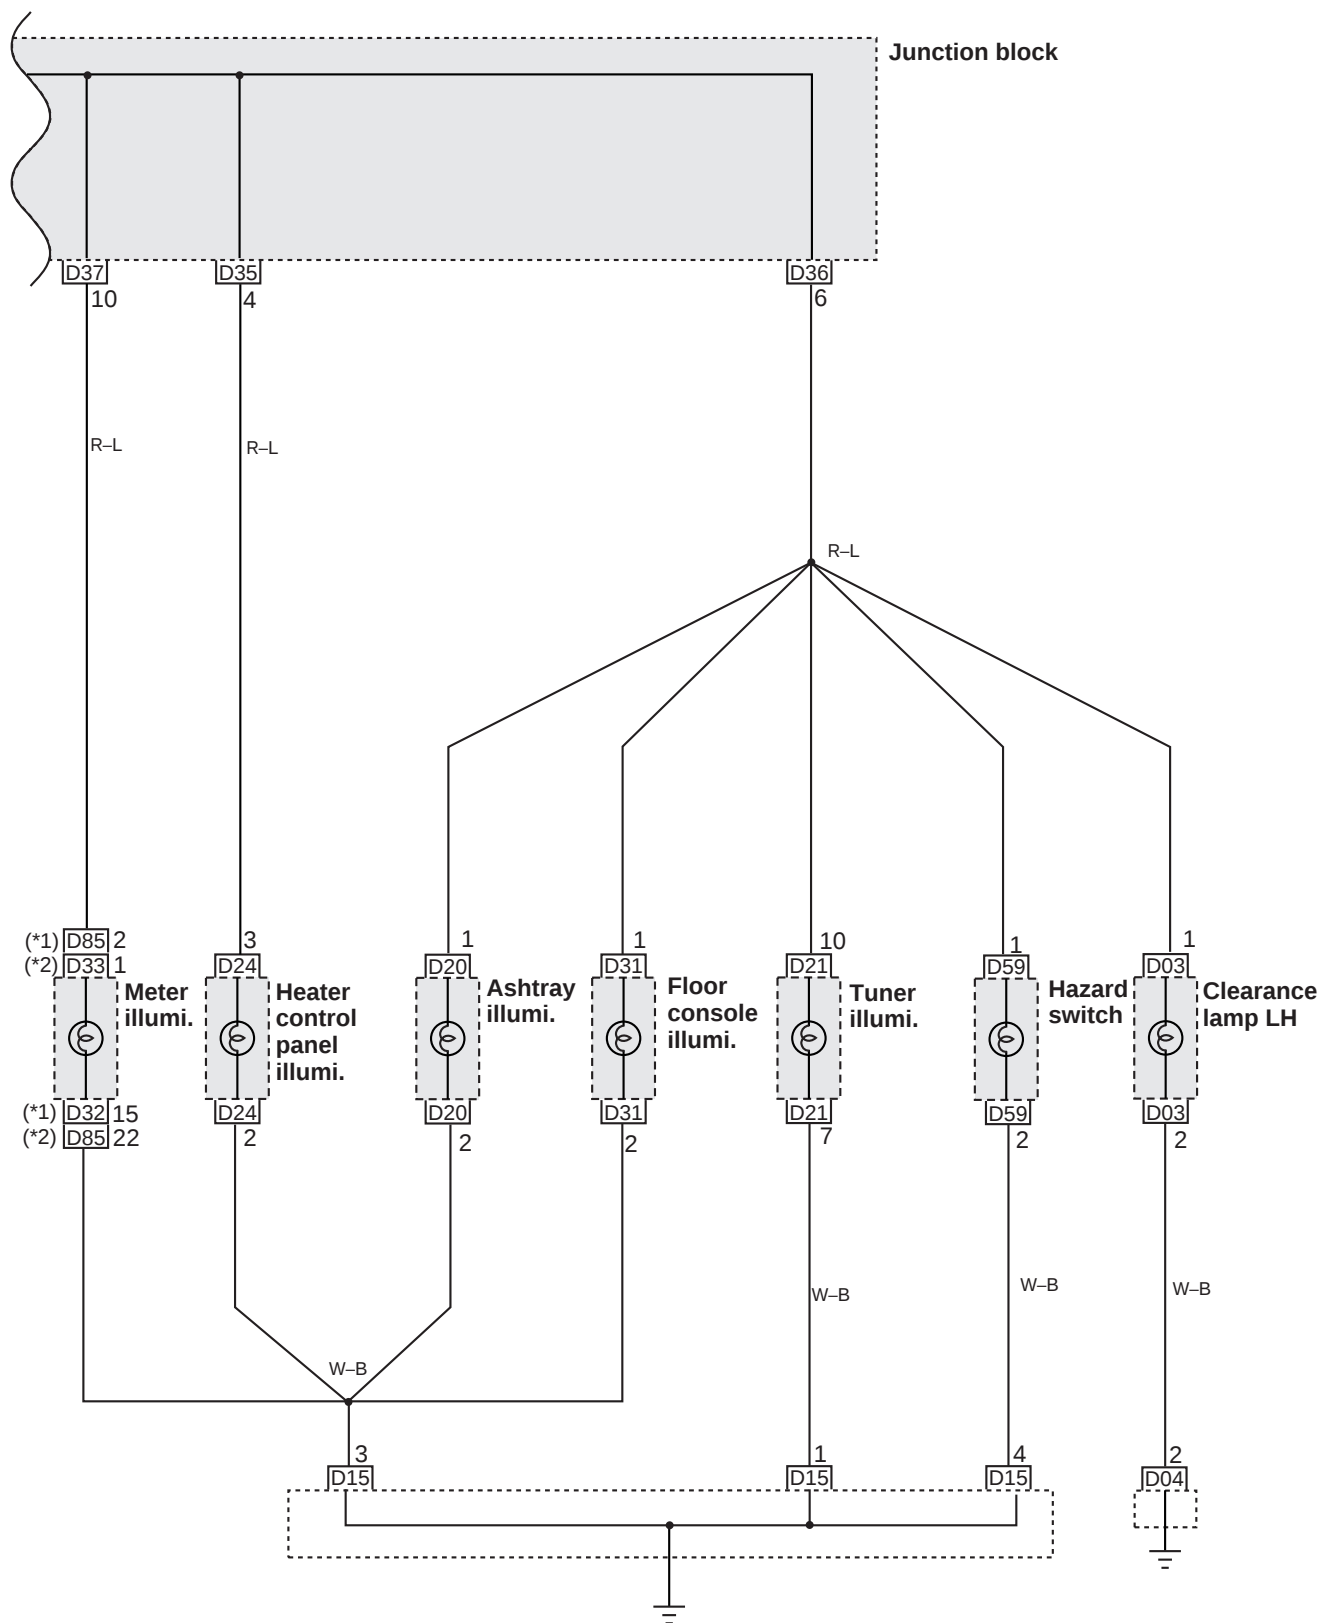
*1 : EJ-DE & EJ-VE engine
*2 : K3-VE2 engine



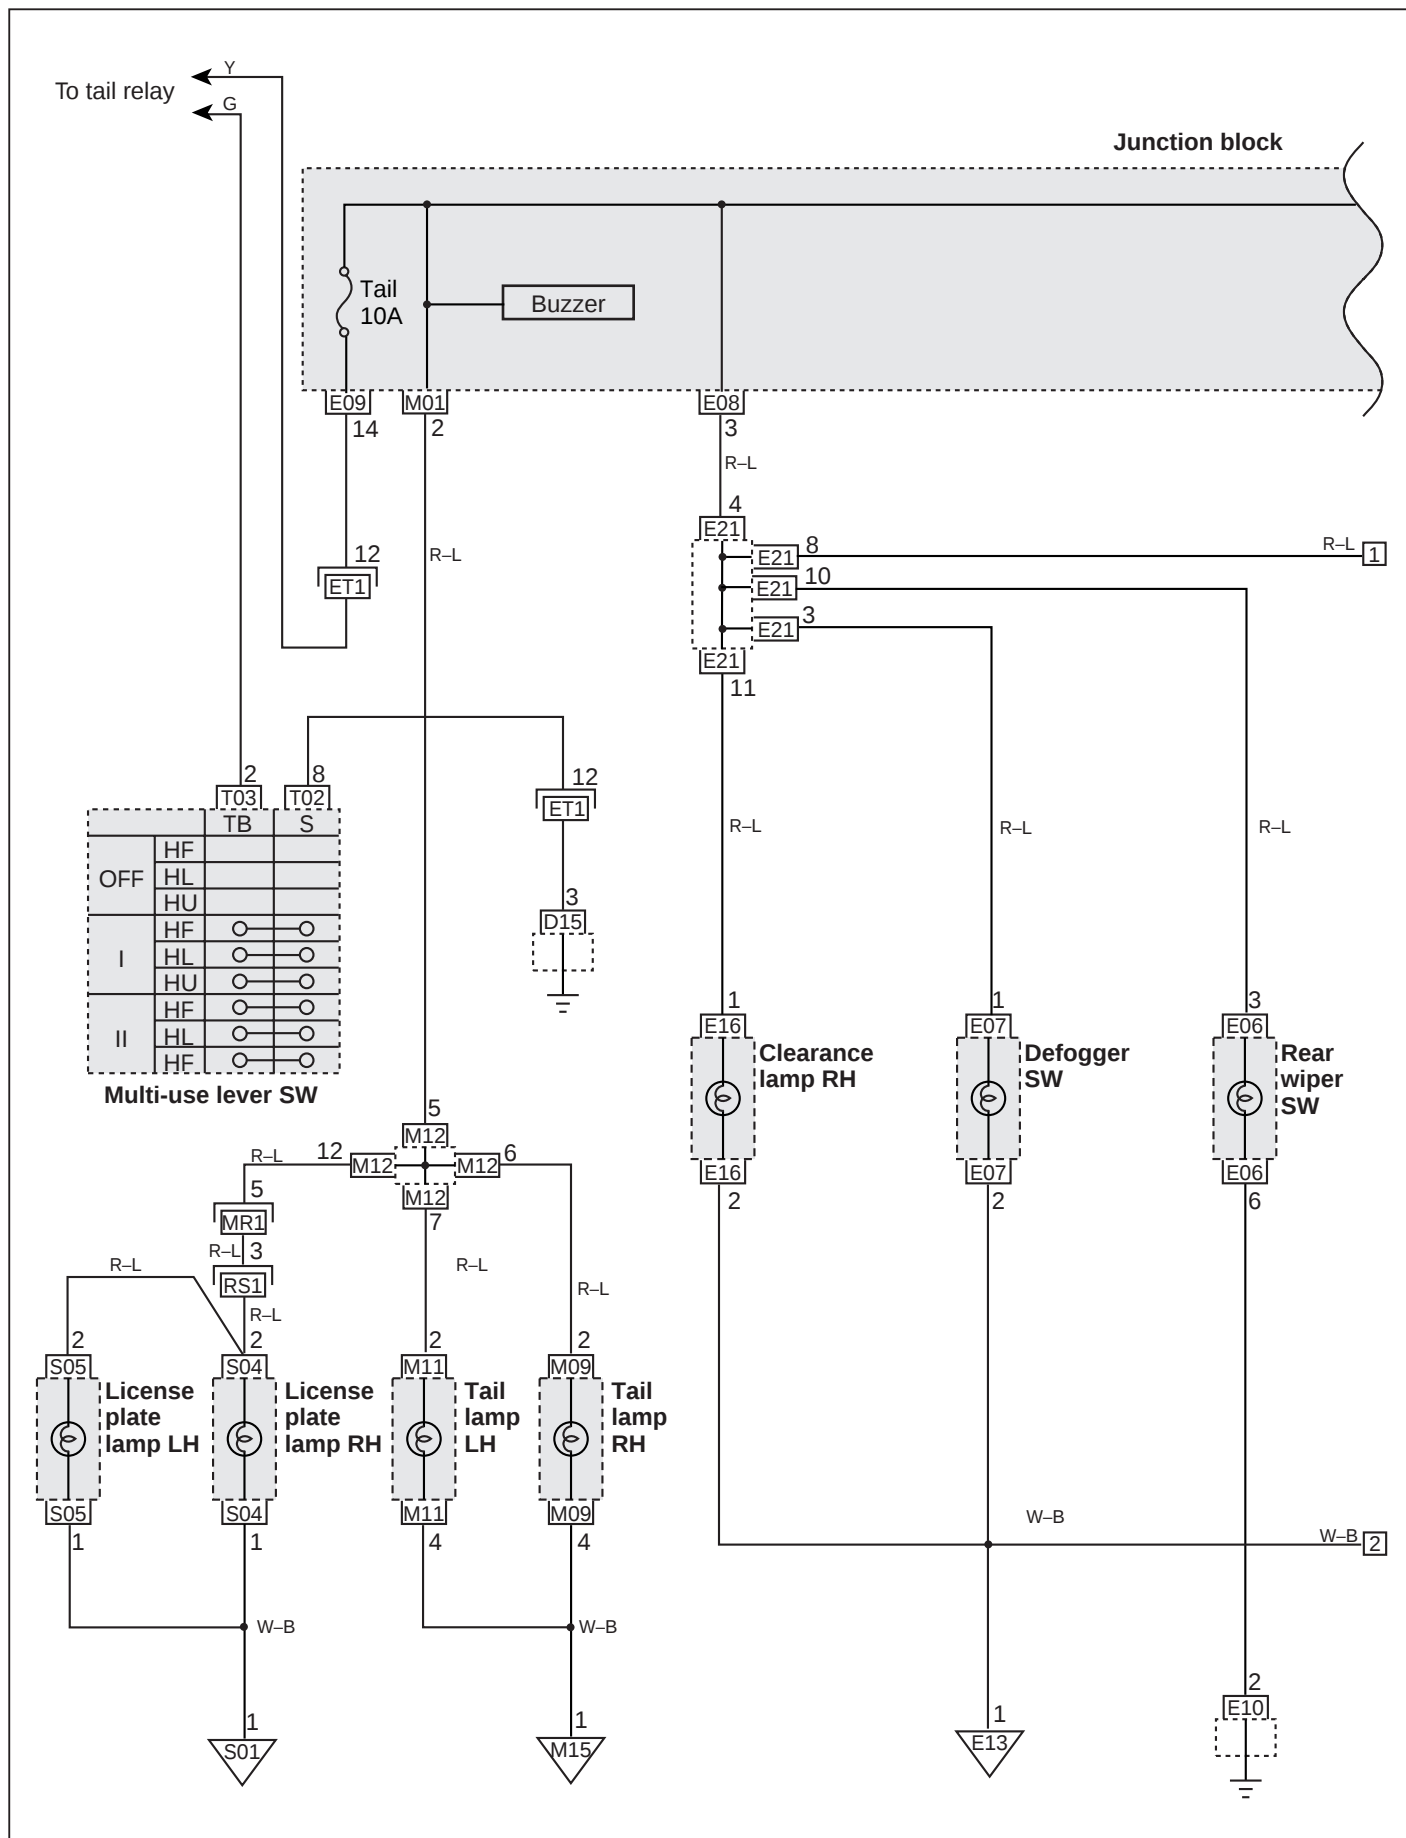
TAIL LAMP & ILLMINATION (w/ REOSTAT CONTOROL / RHD) -1



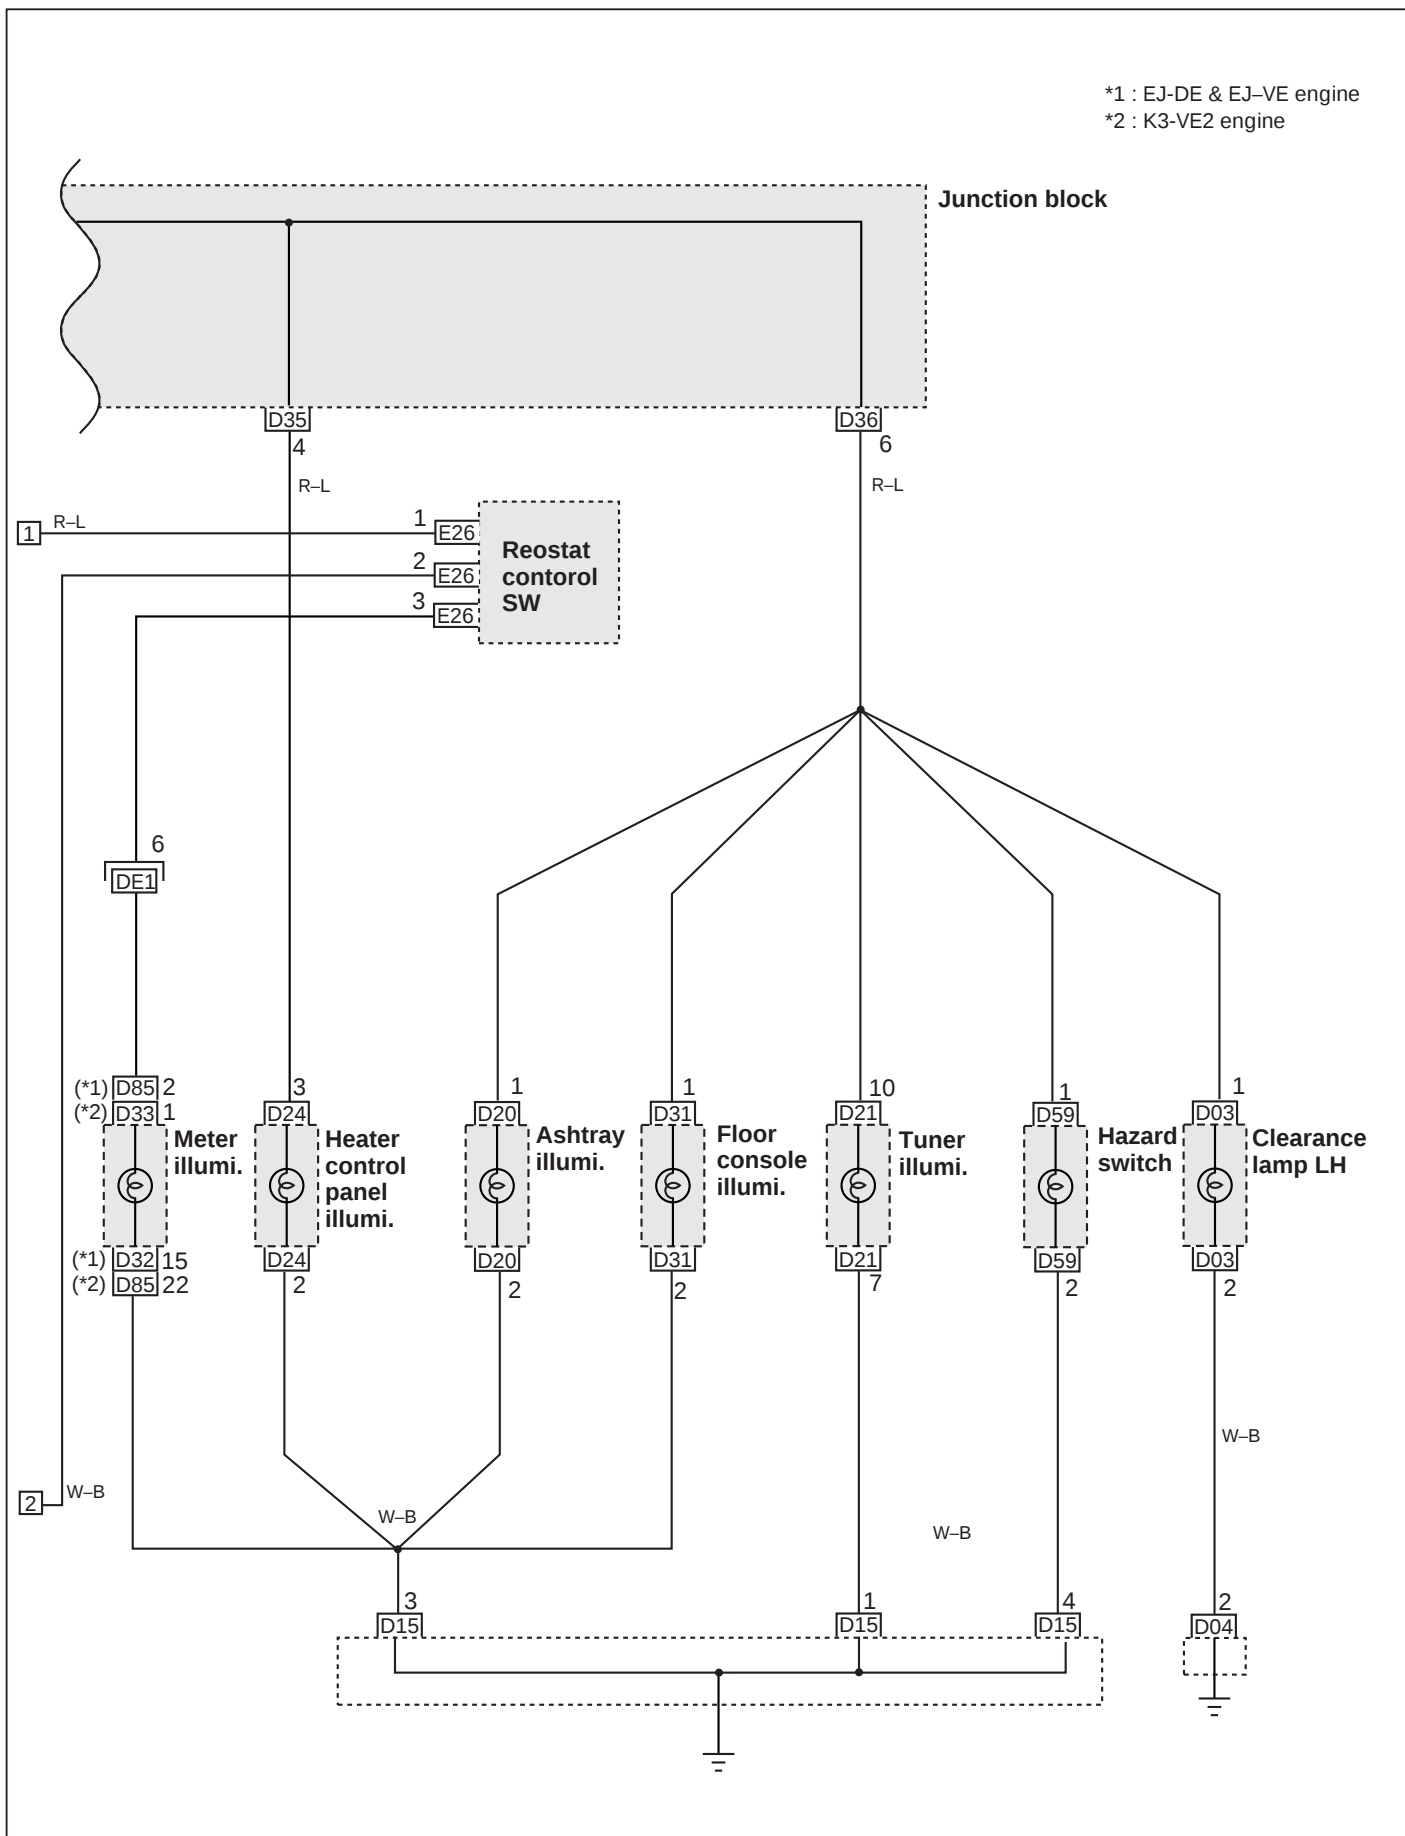
TAIL LAMP & ILLMINATION (w/o REOSTAT CONTOROL / RHD) -2




TAIL LAMP & ILLMINATION (LHD) -1

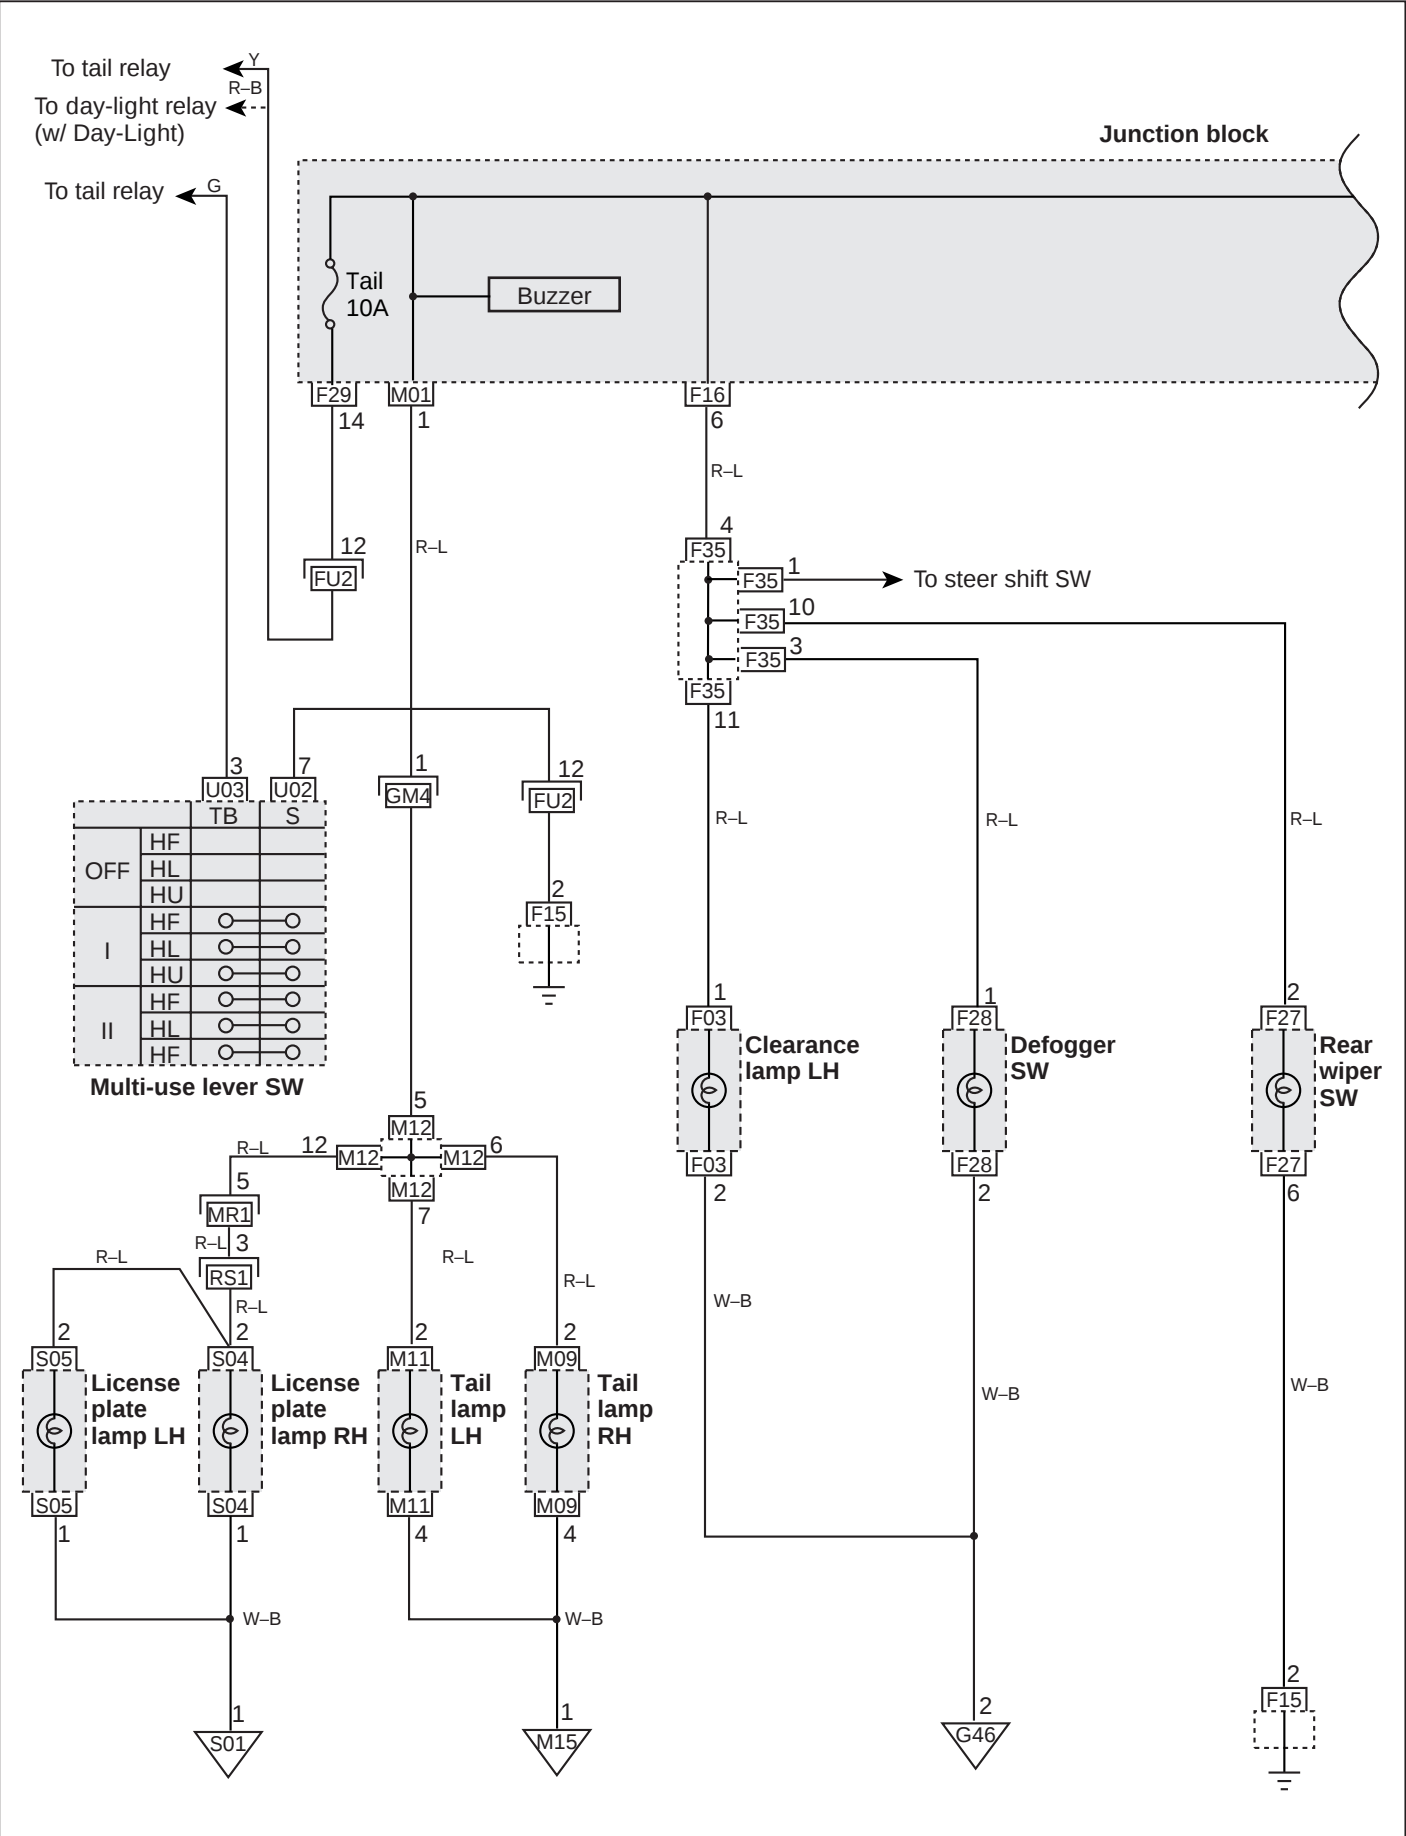


TAIL LAMP & ILLMINATION (LHD) -2

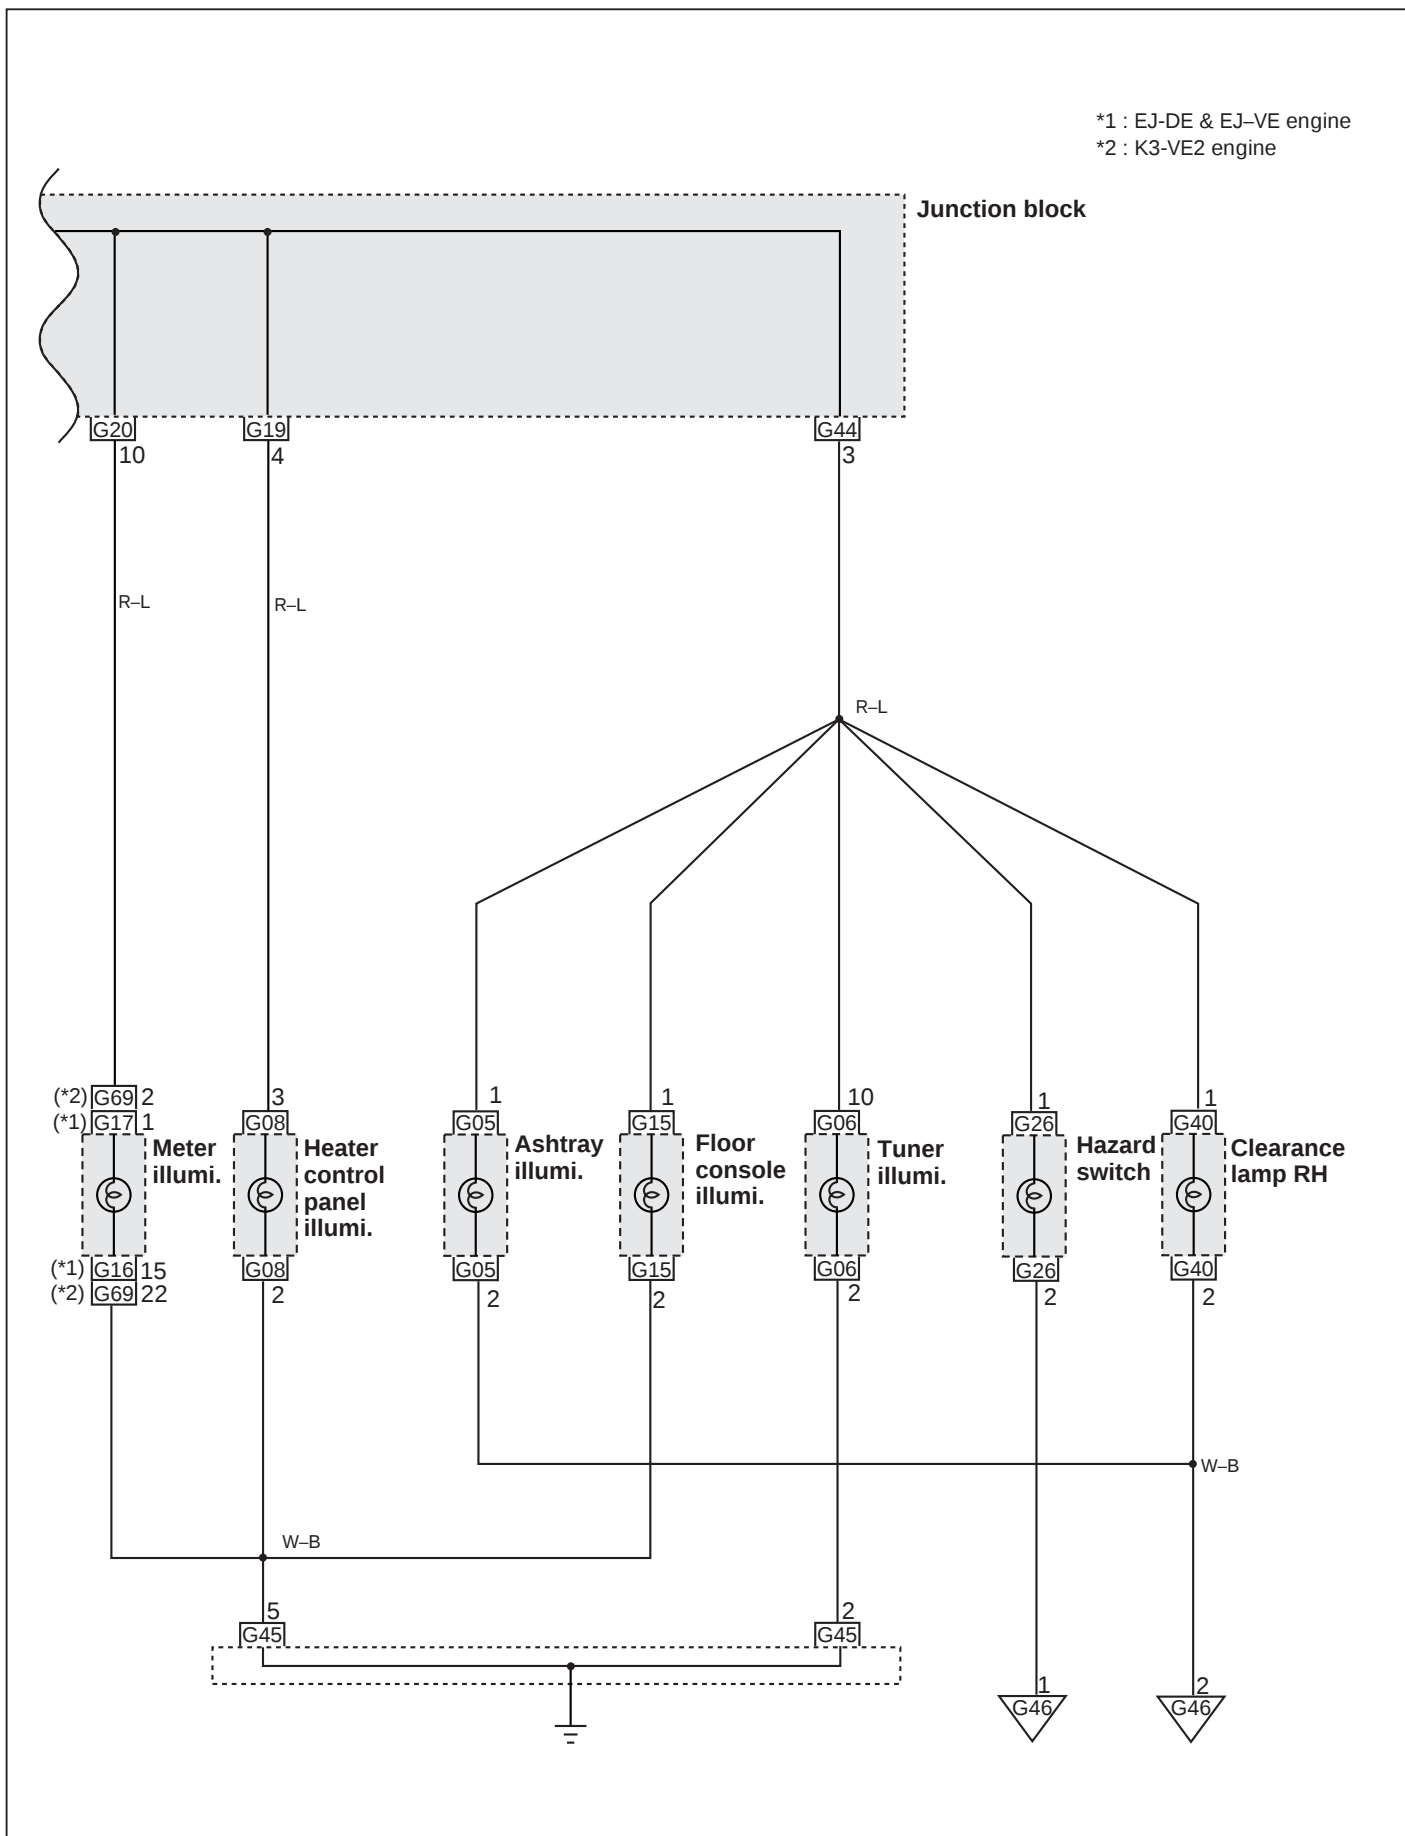


TURN & HAZARD LAMP (RHD)

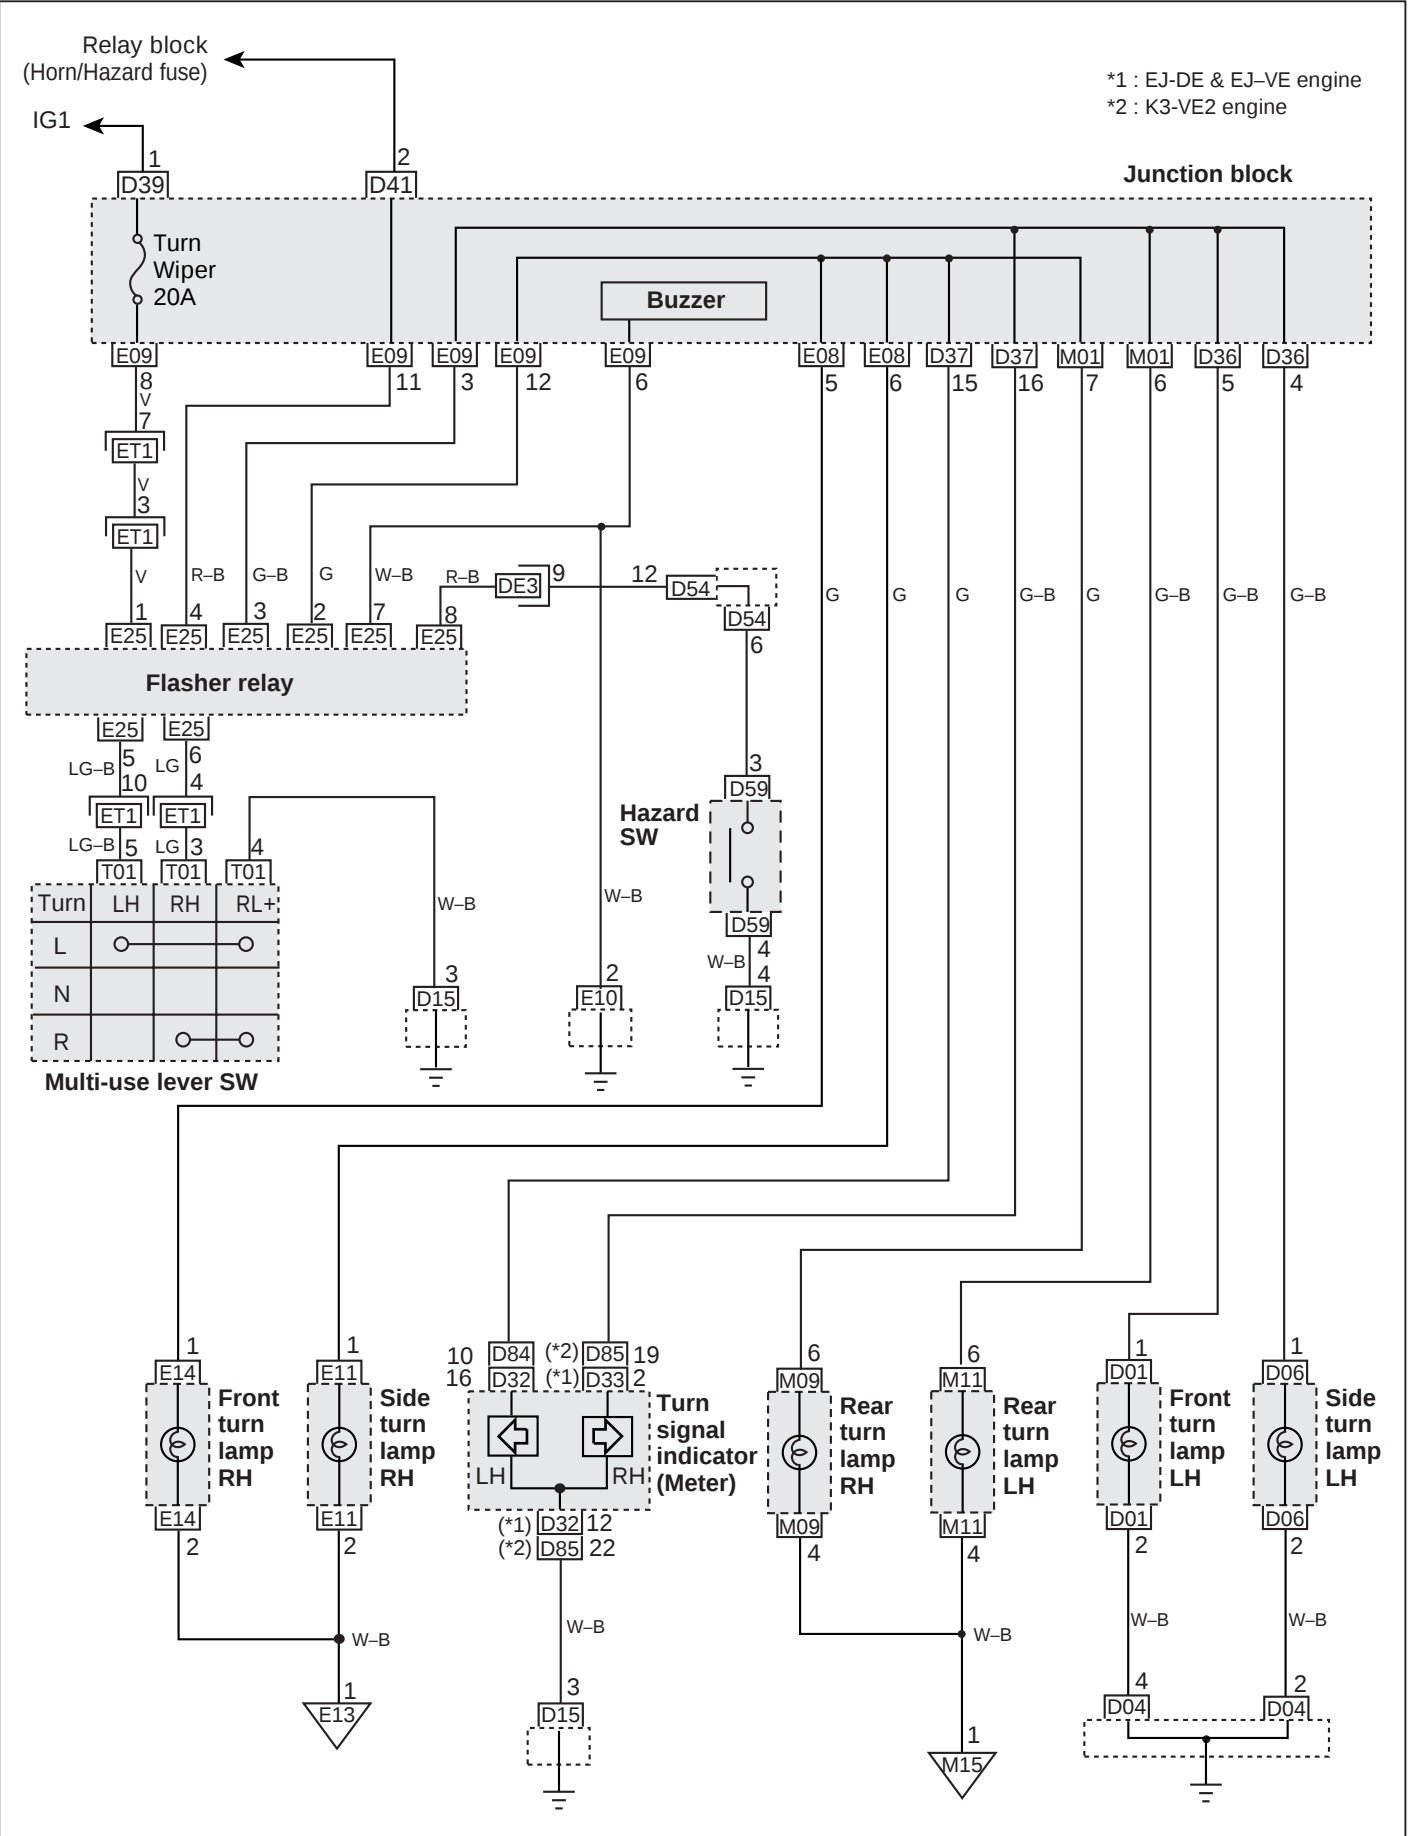


TURN & HAZARD LAMP (LHD)

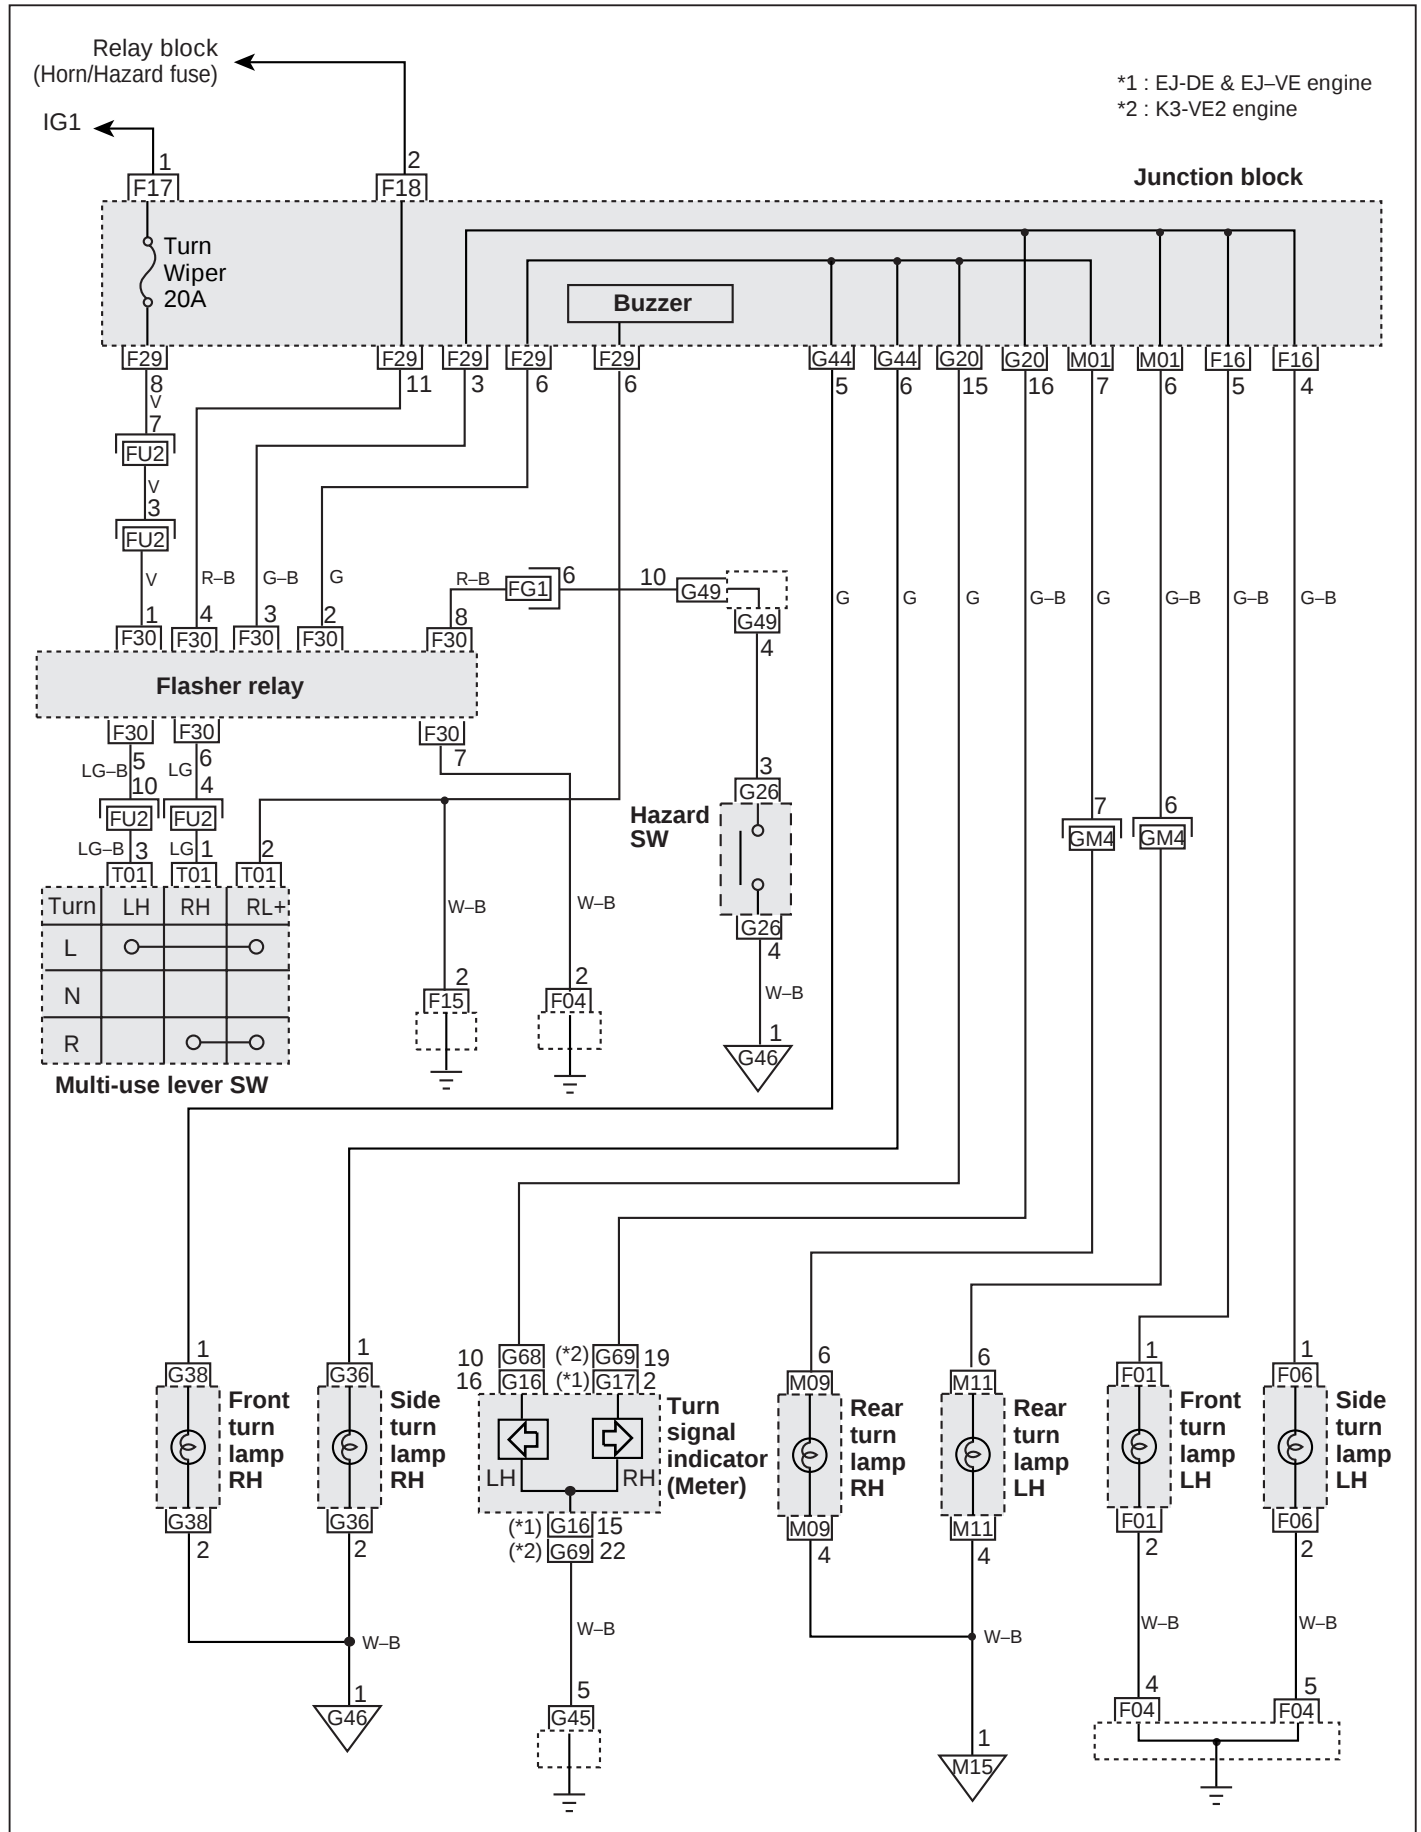


STOP LAMP (RHD)

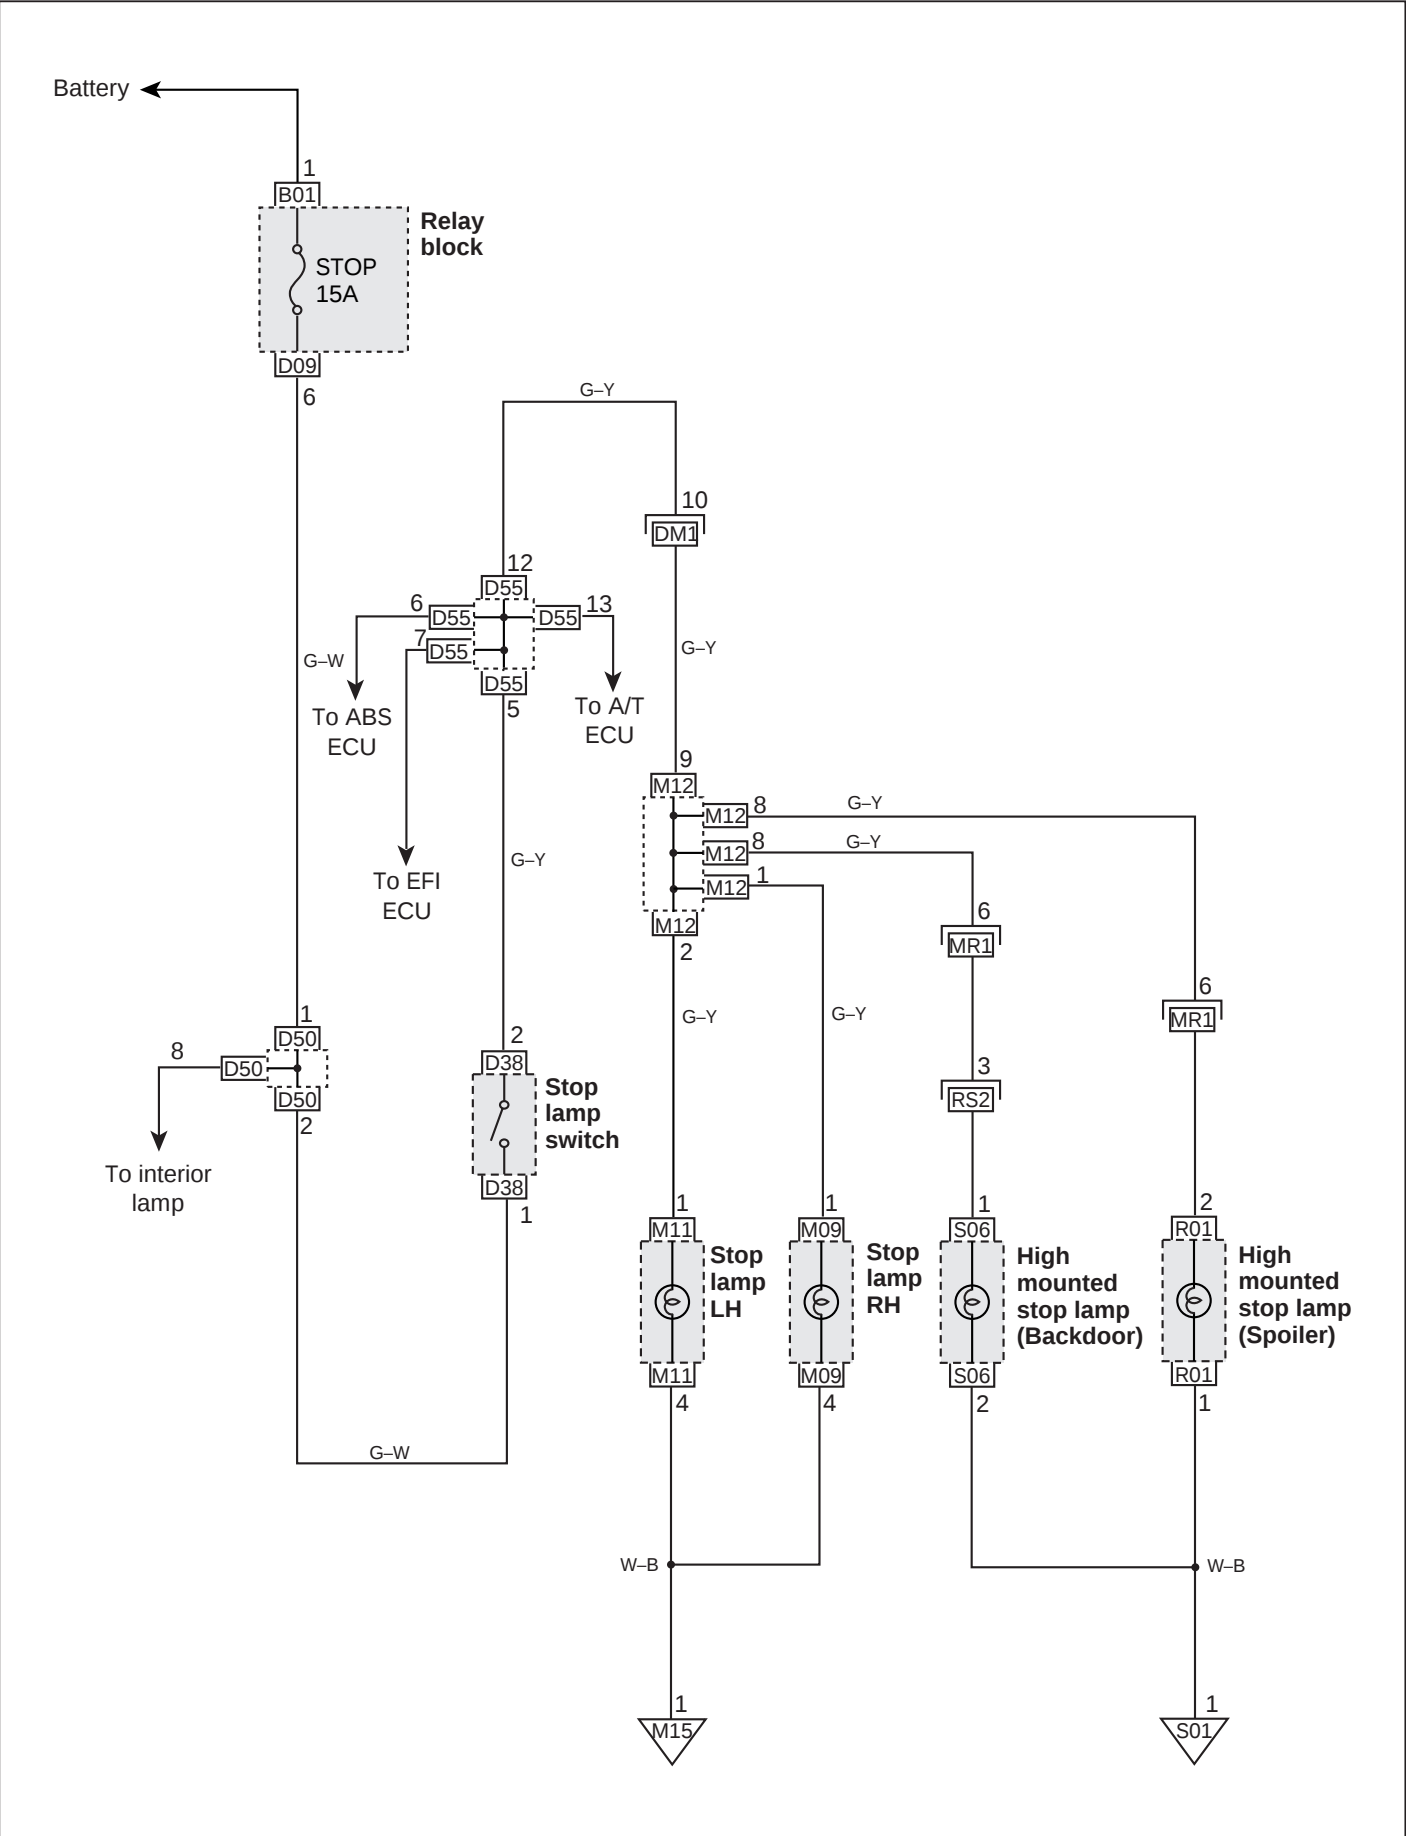


STOP LAMP (LHD)

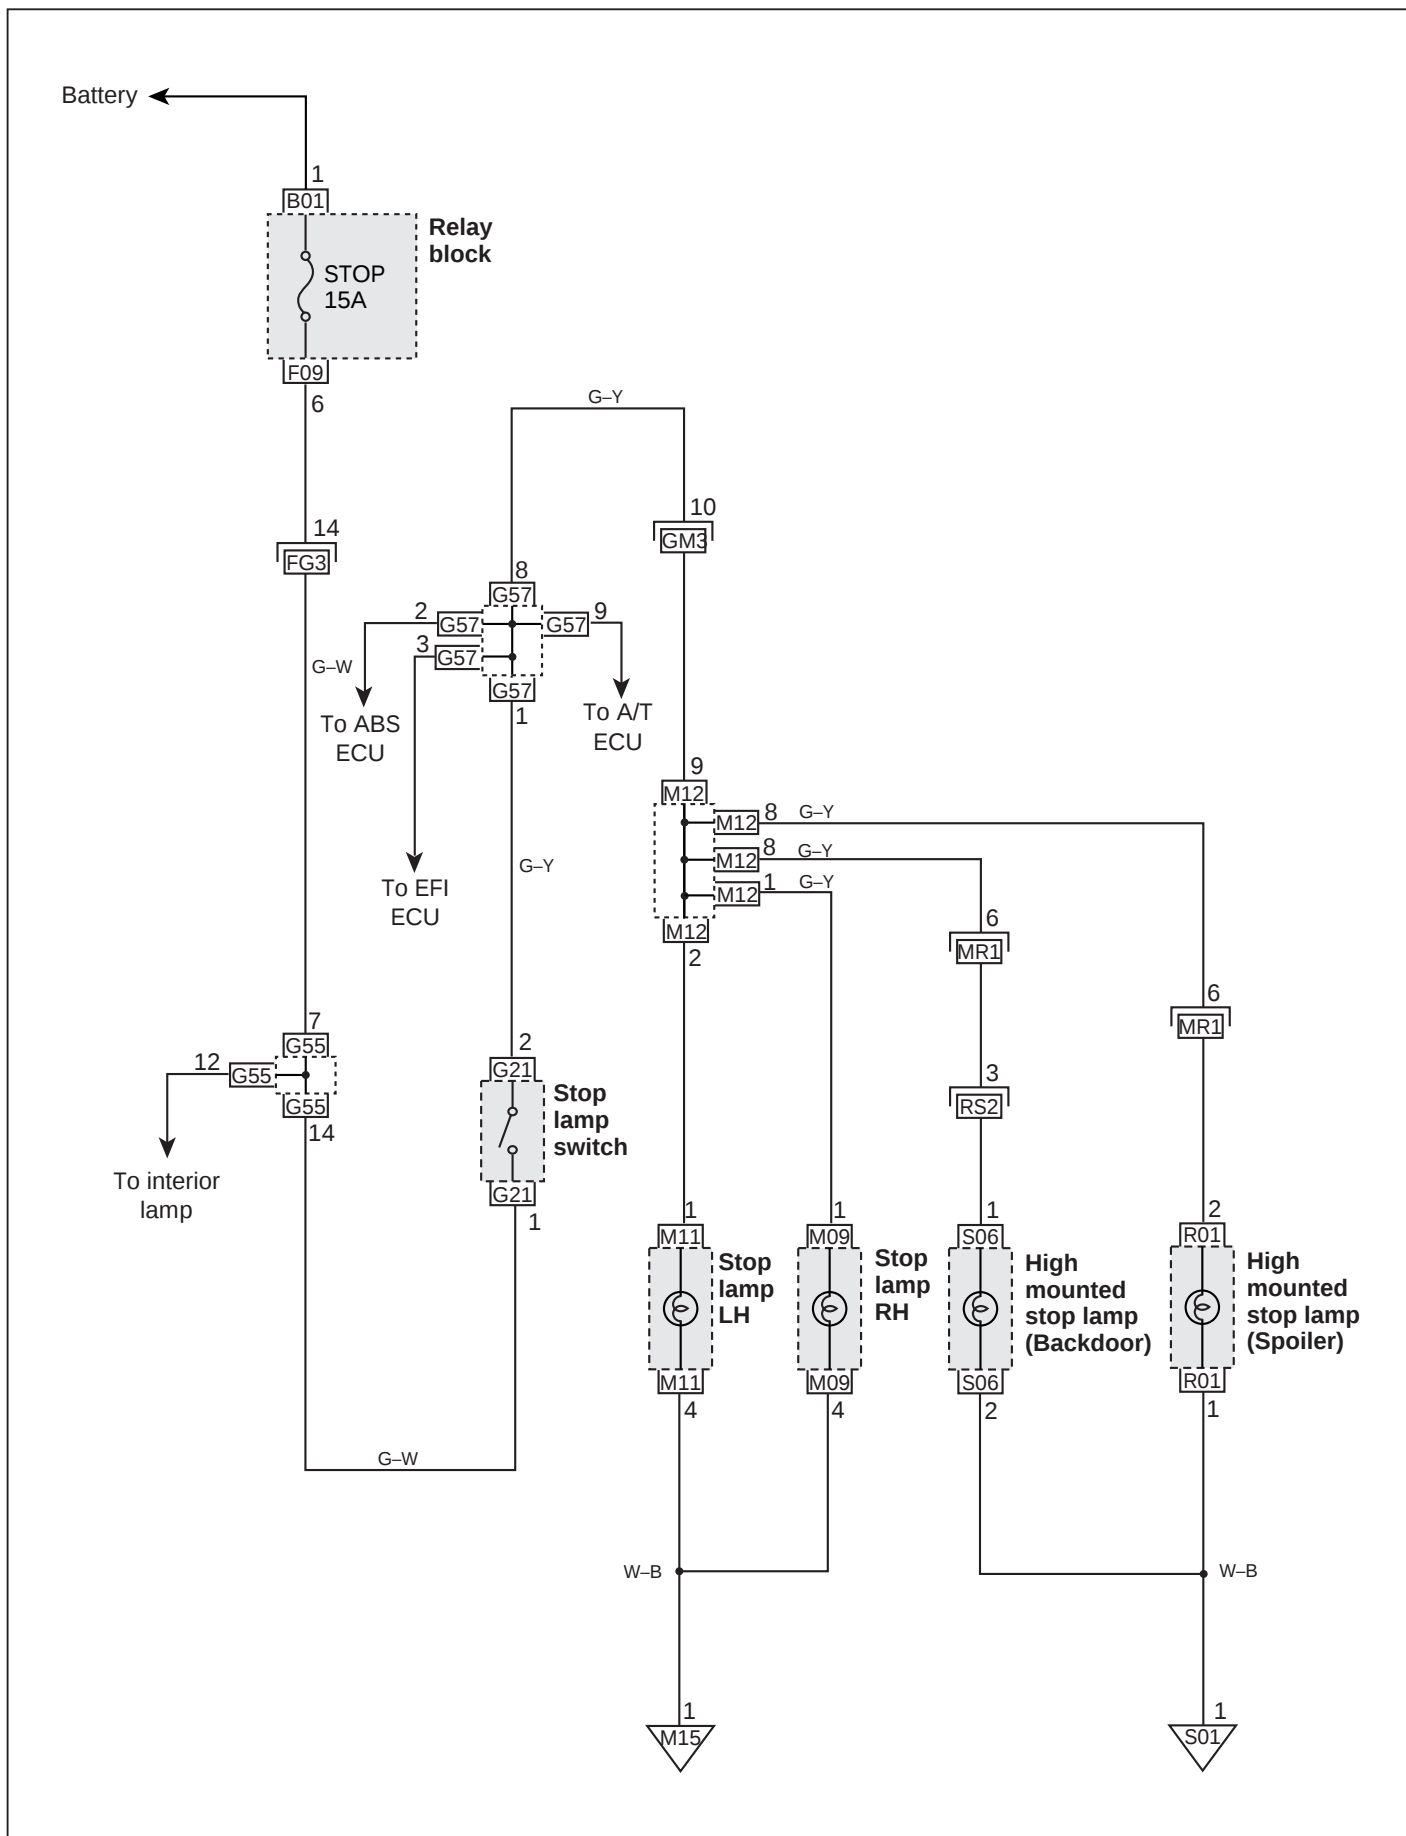


BACK-UP LAMP (RHD)

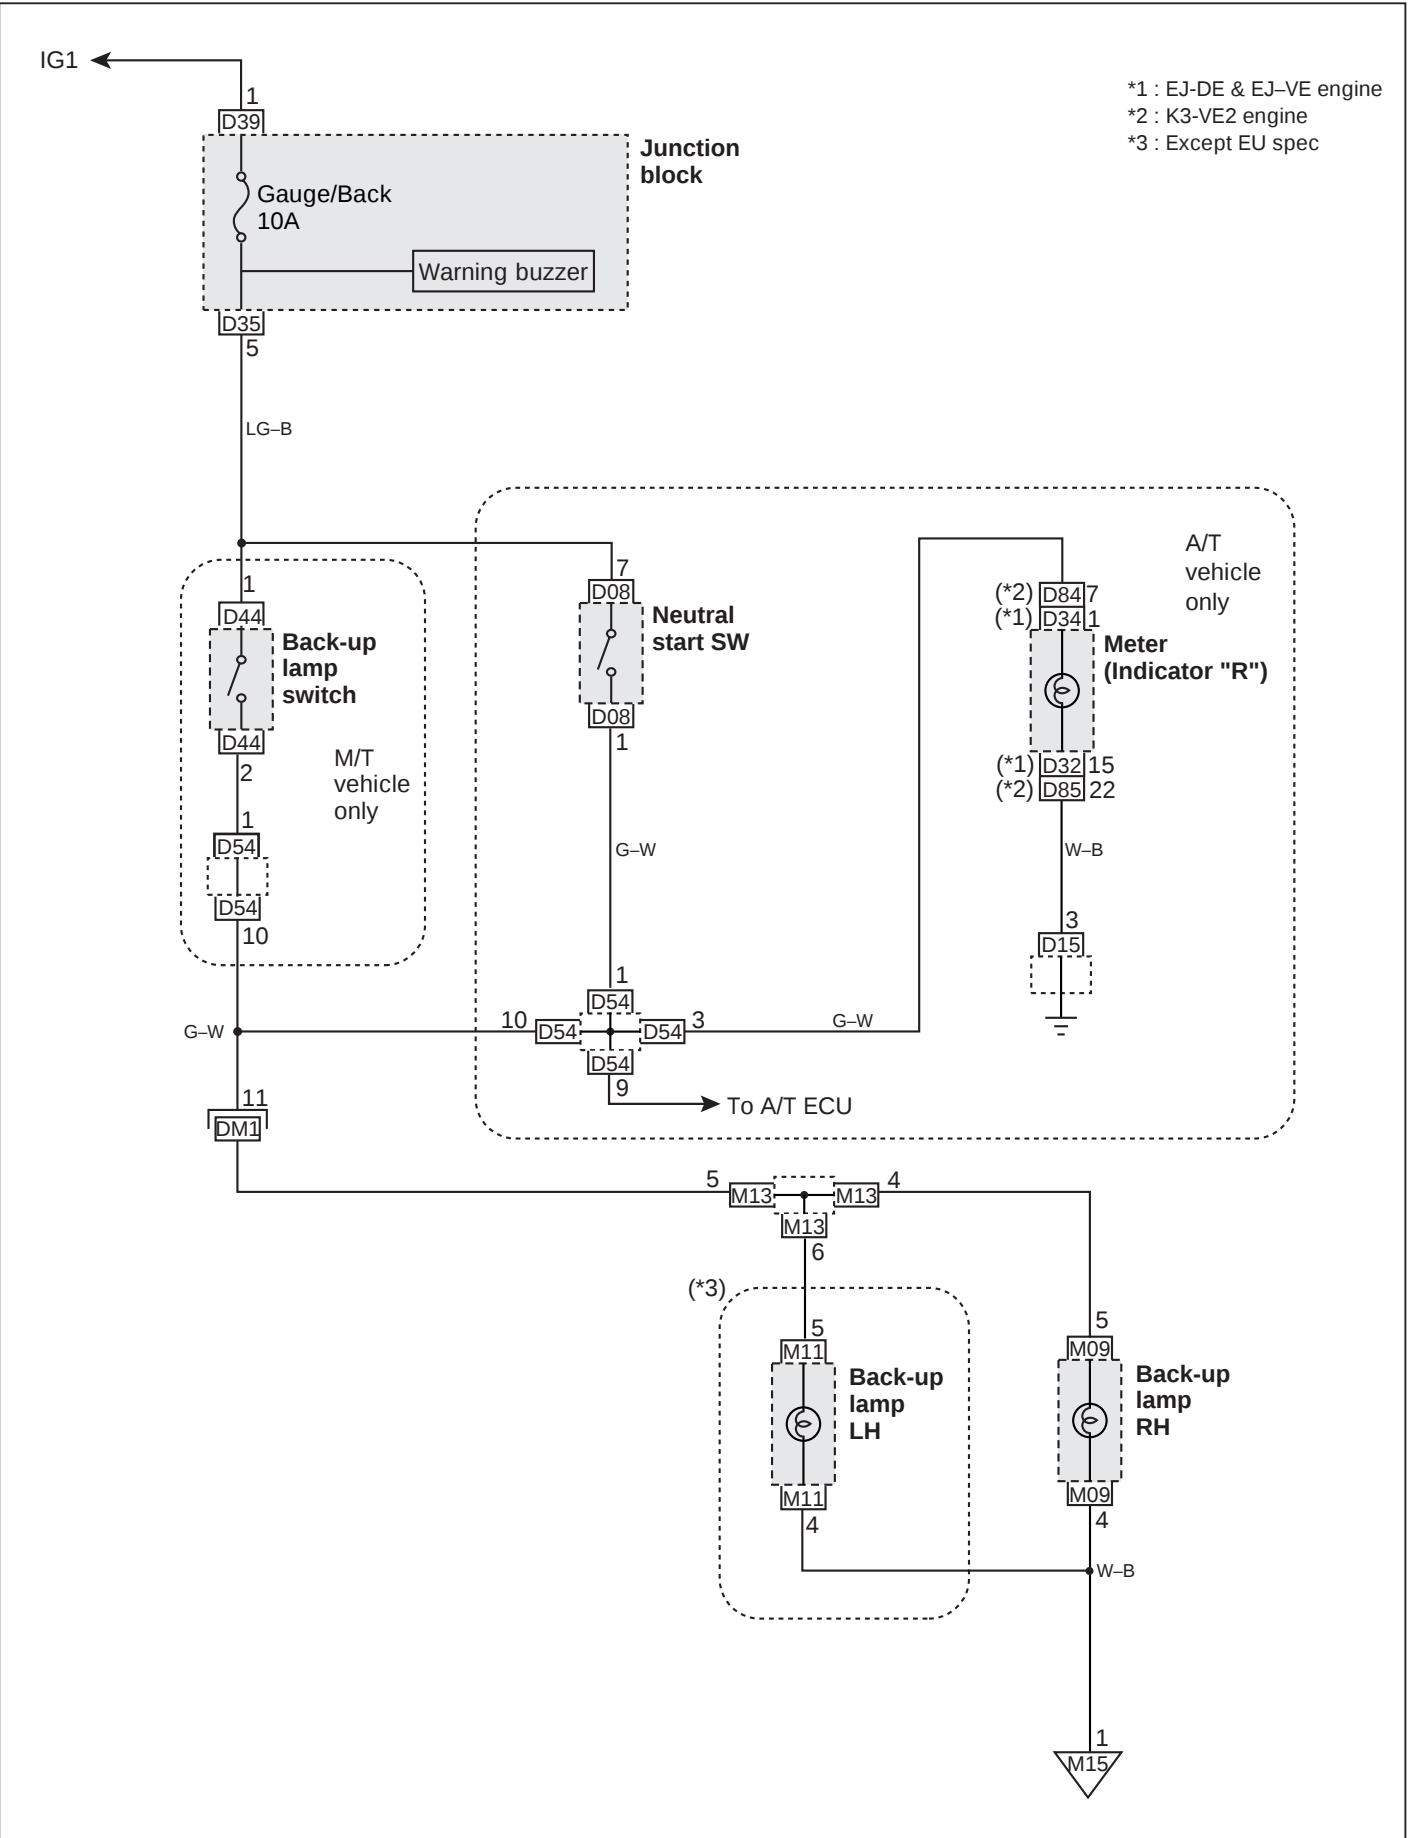


BACK-UP LAMP (LHD)

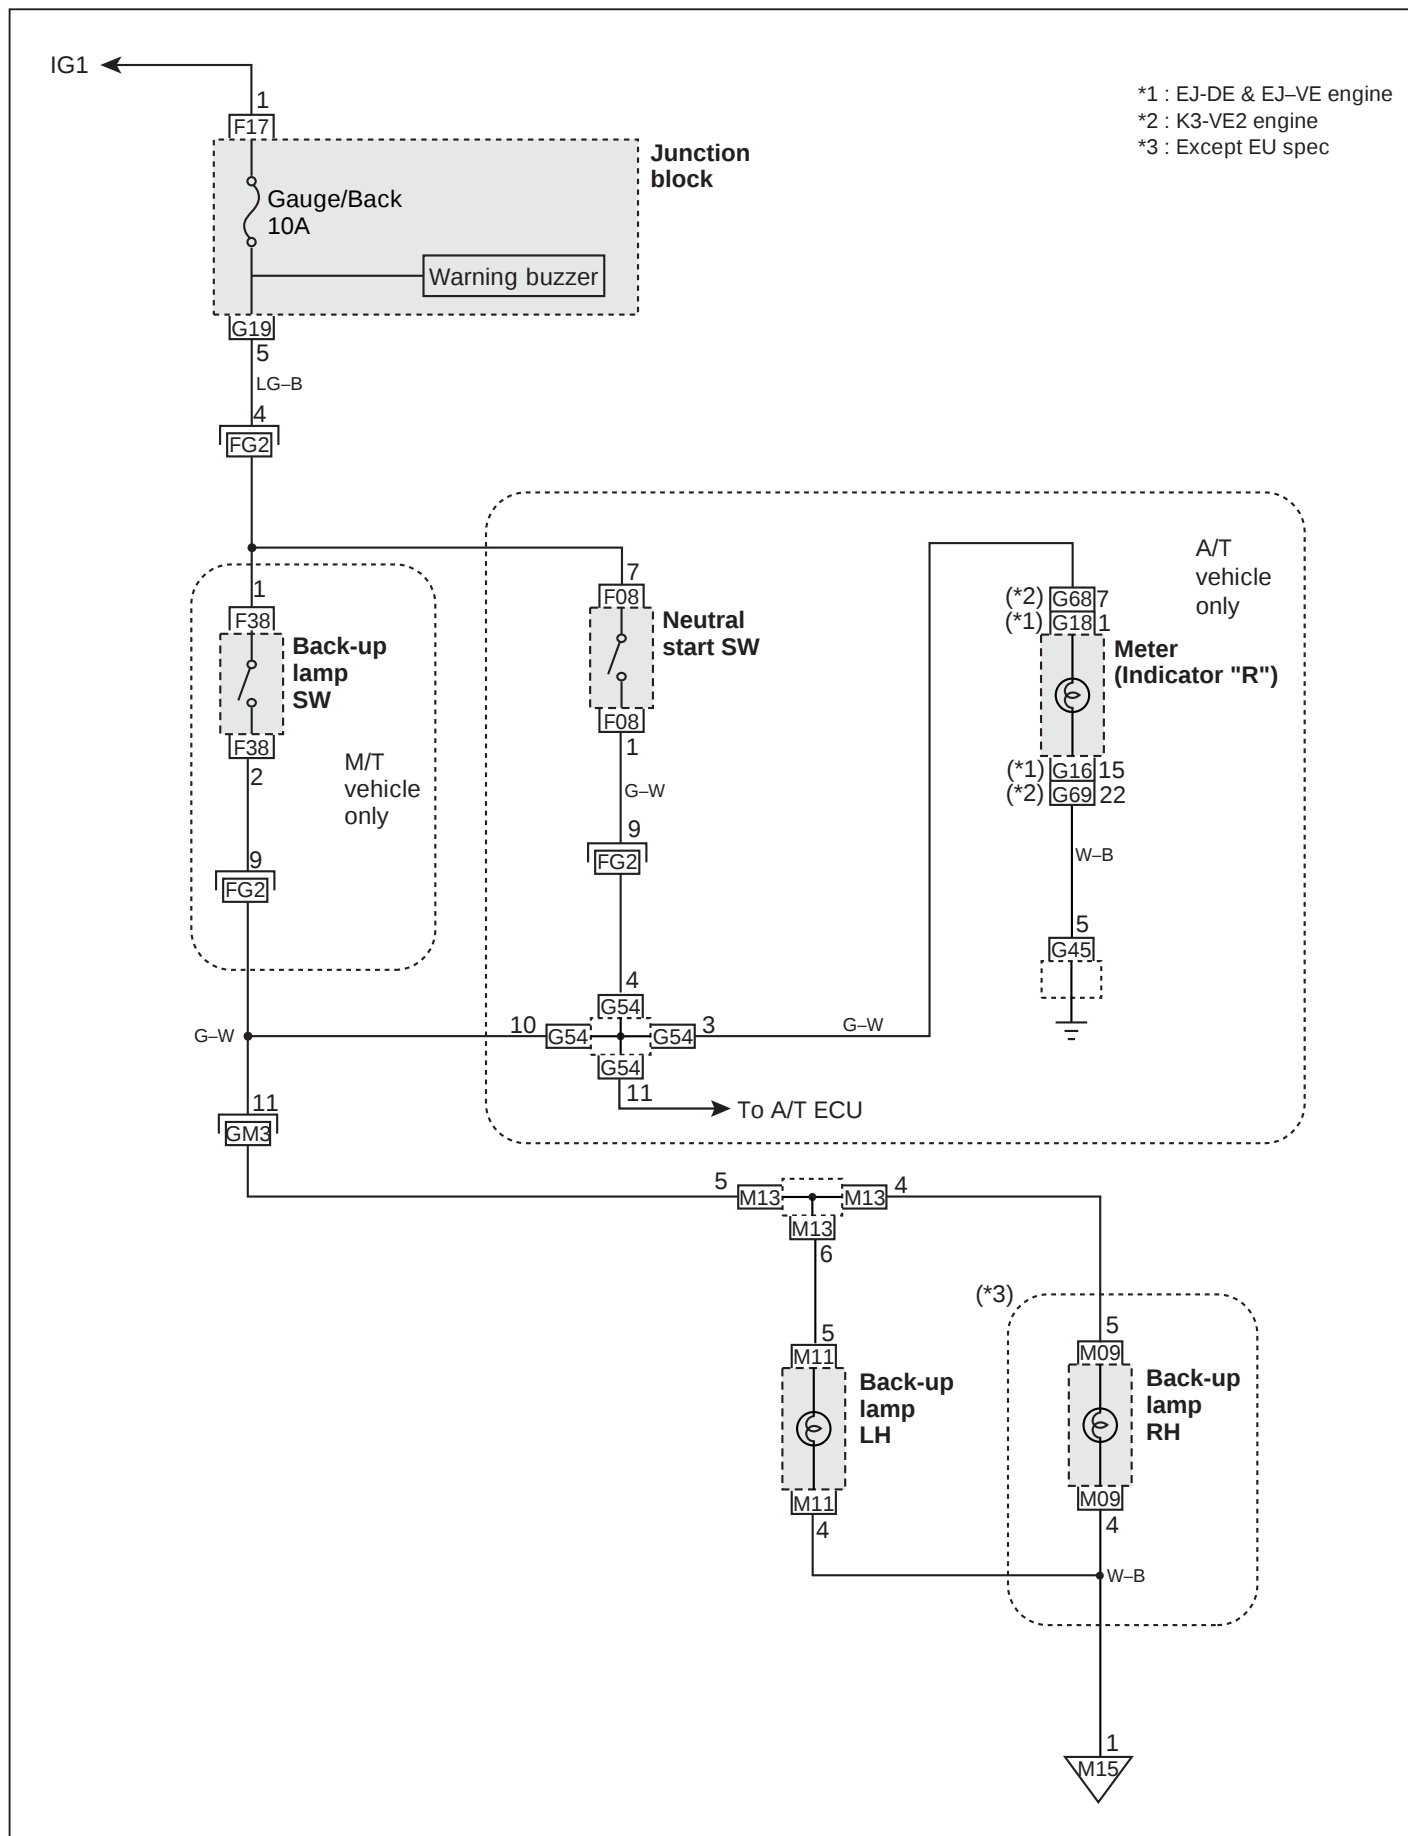


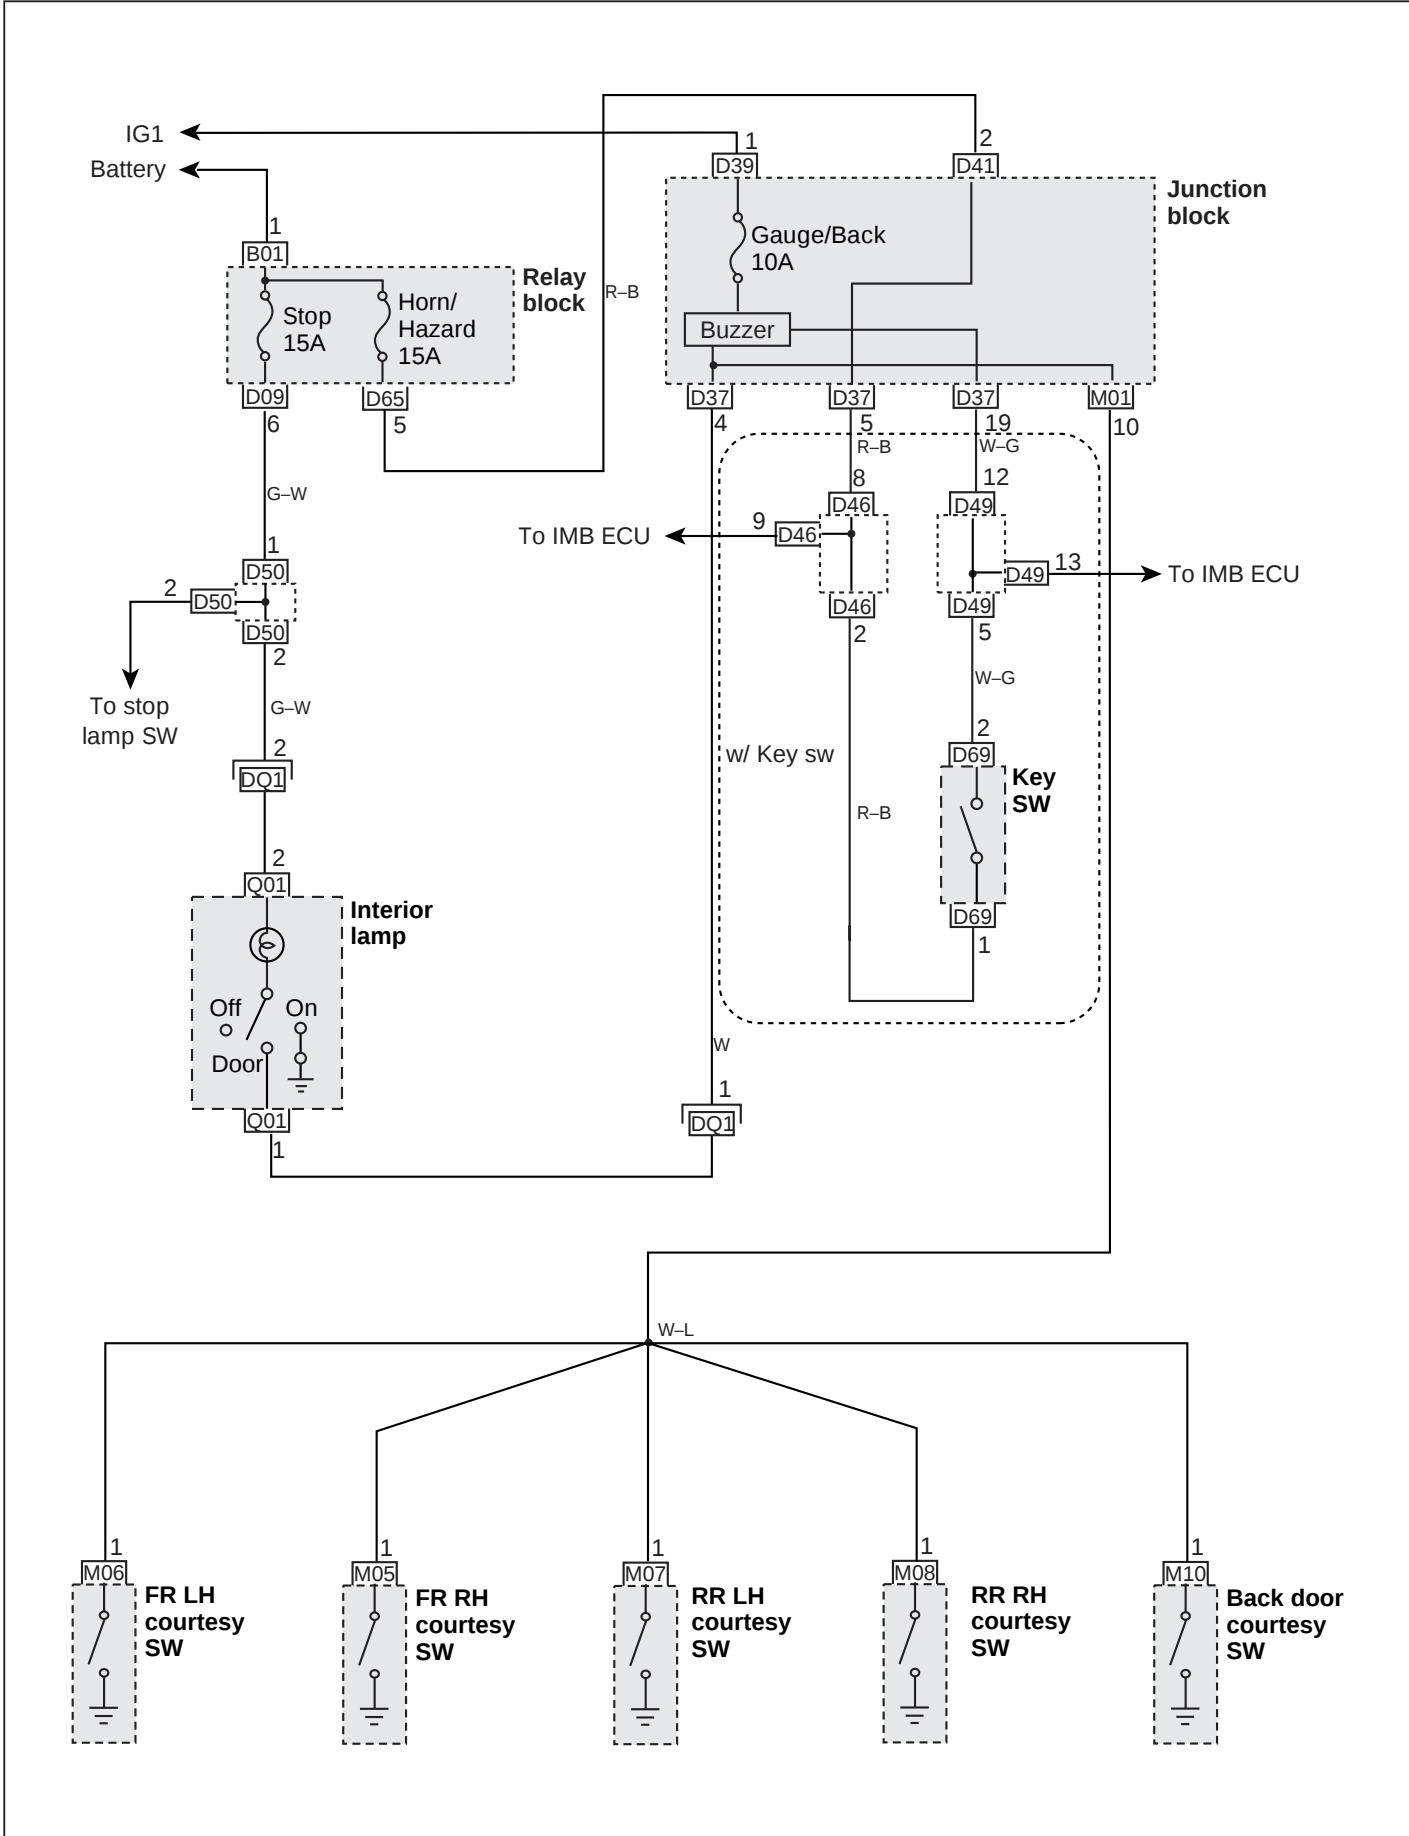


INTERIOR LAMP (LHD)

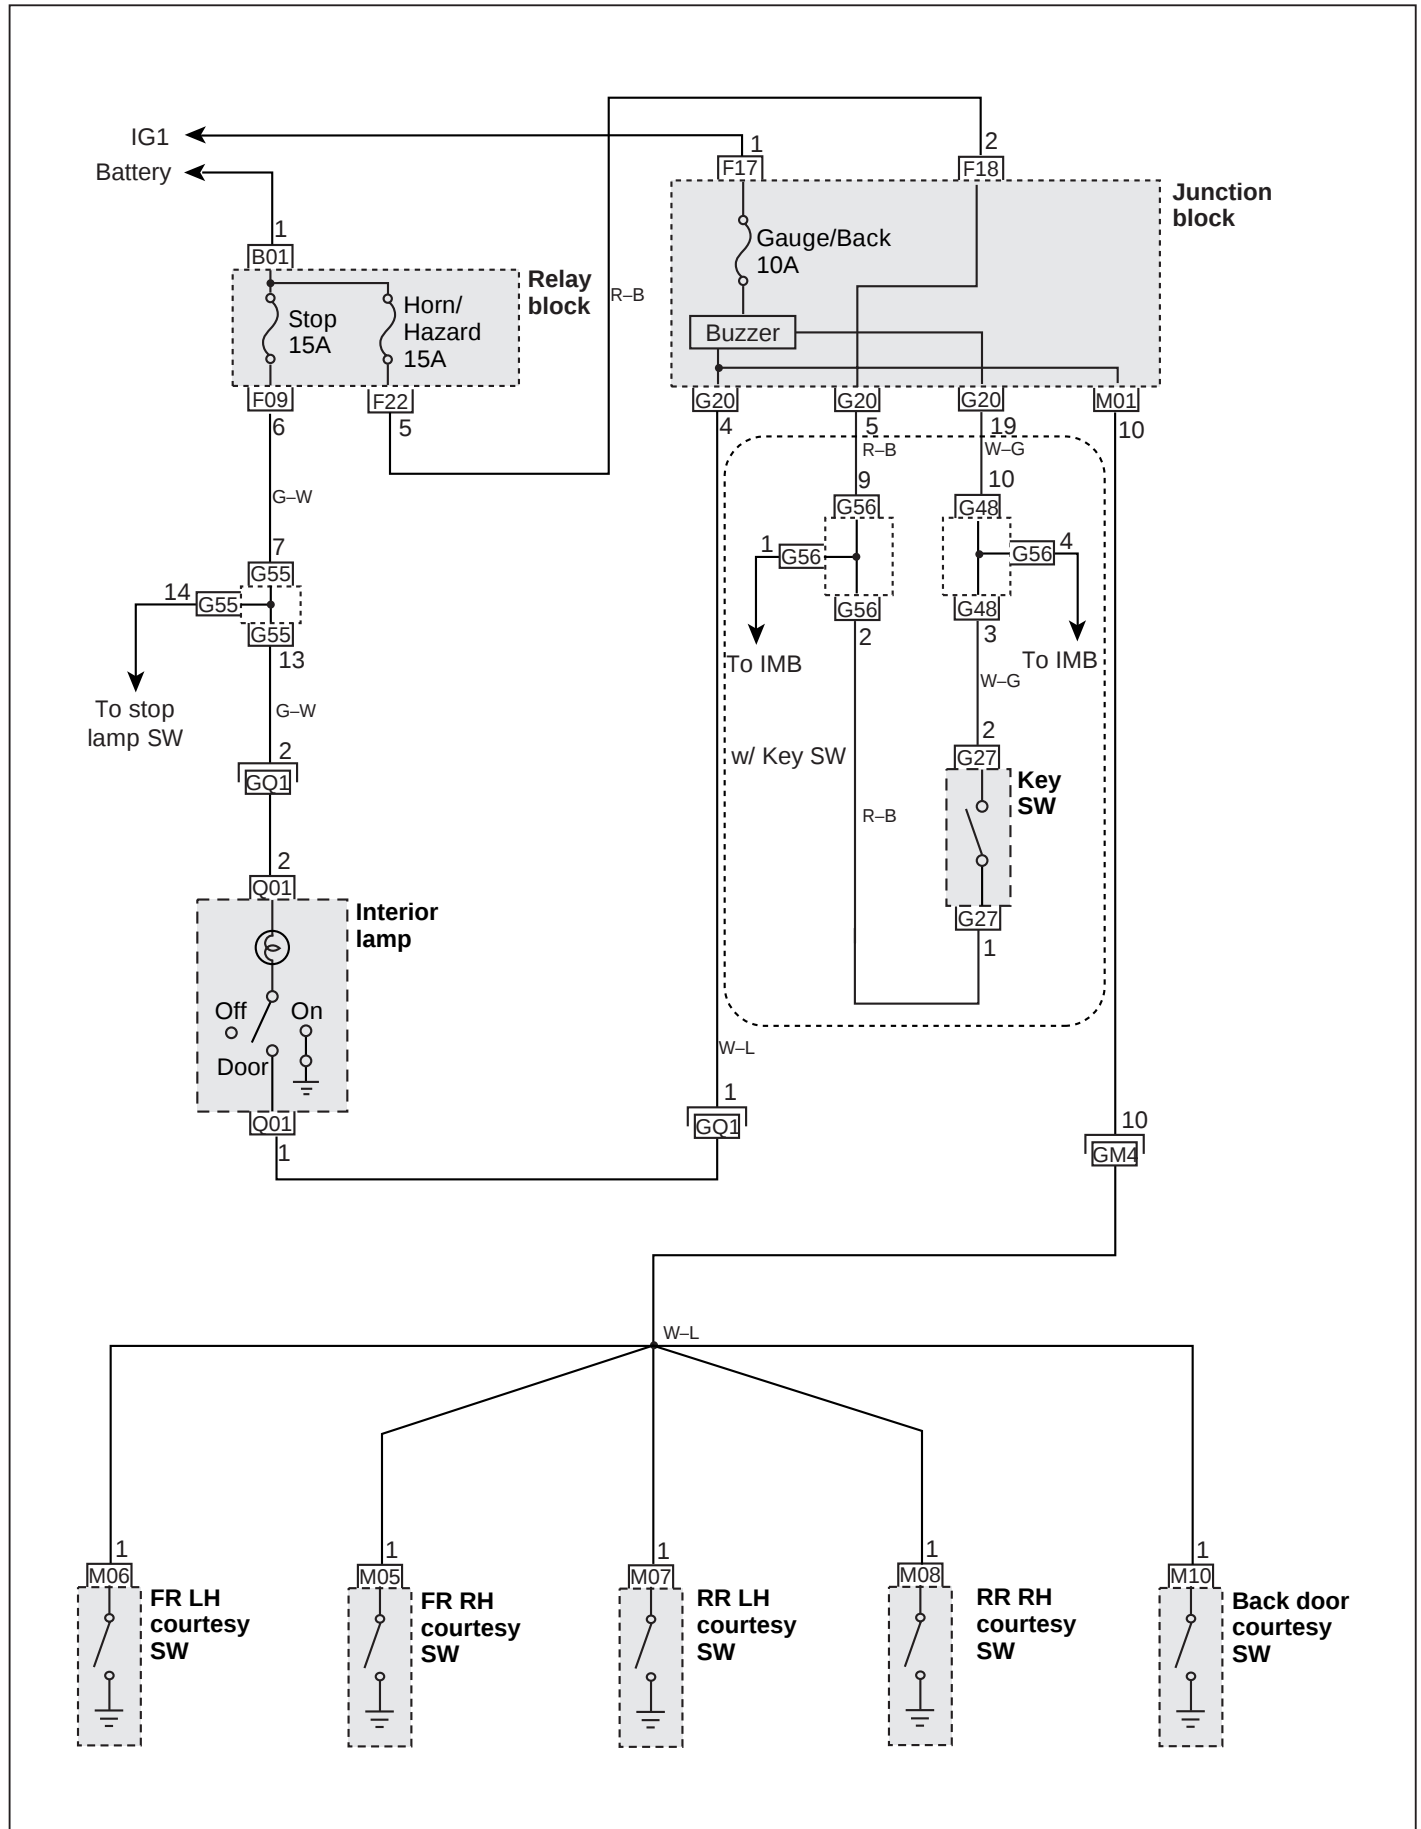

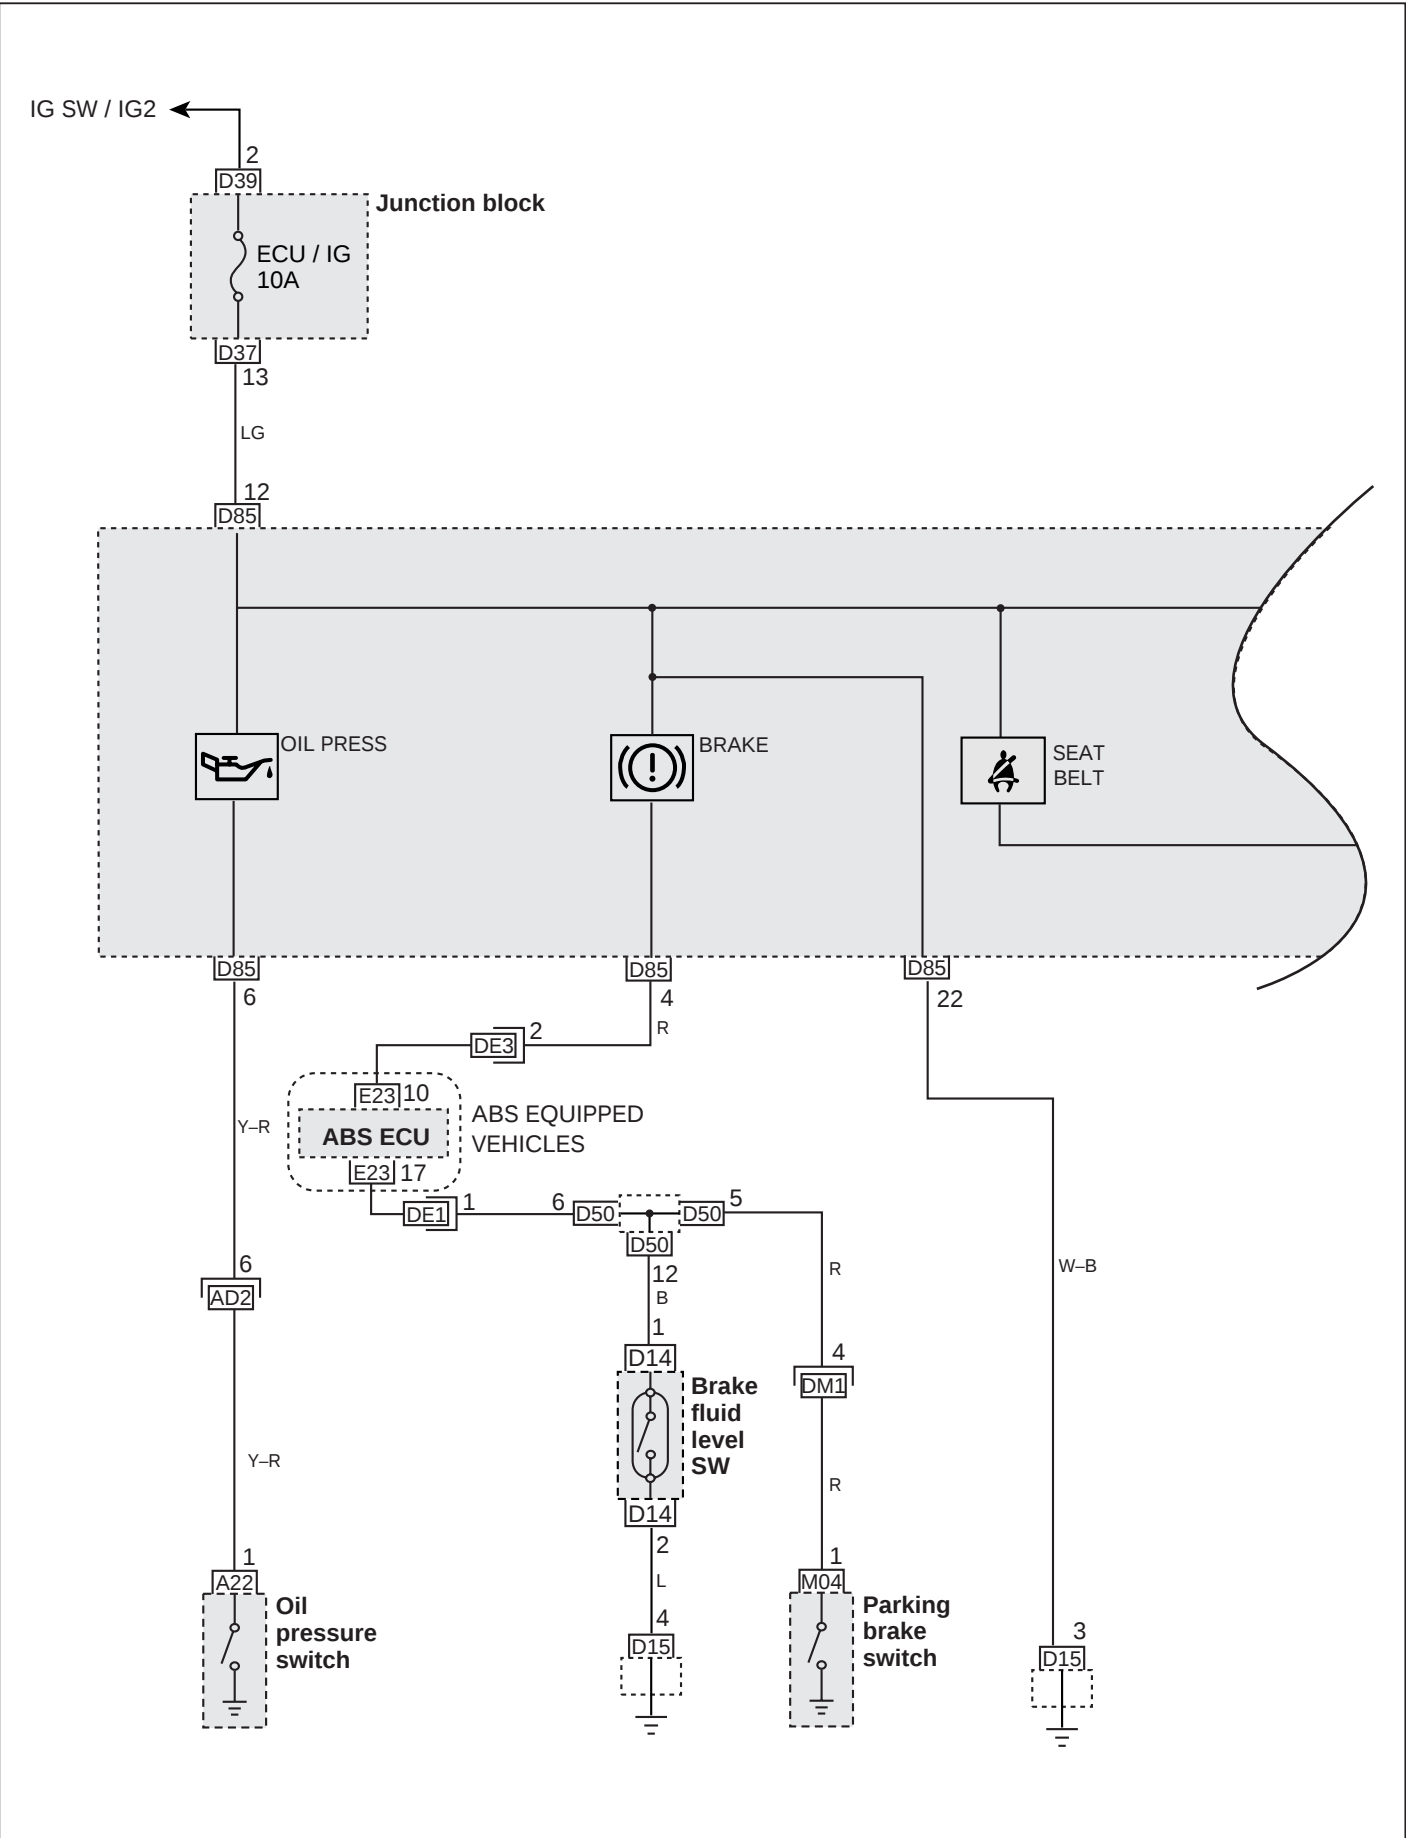
COMBINATION METER (K3-VE2 ENGINE / RHD) -1



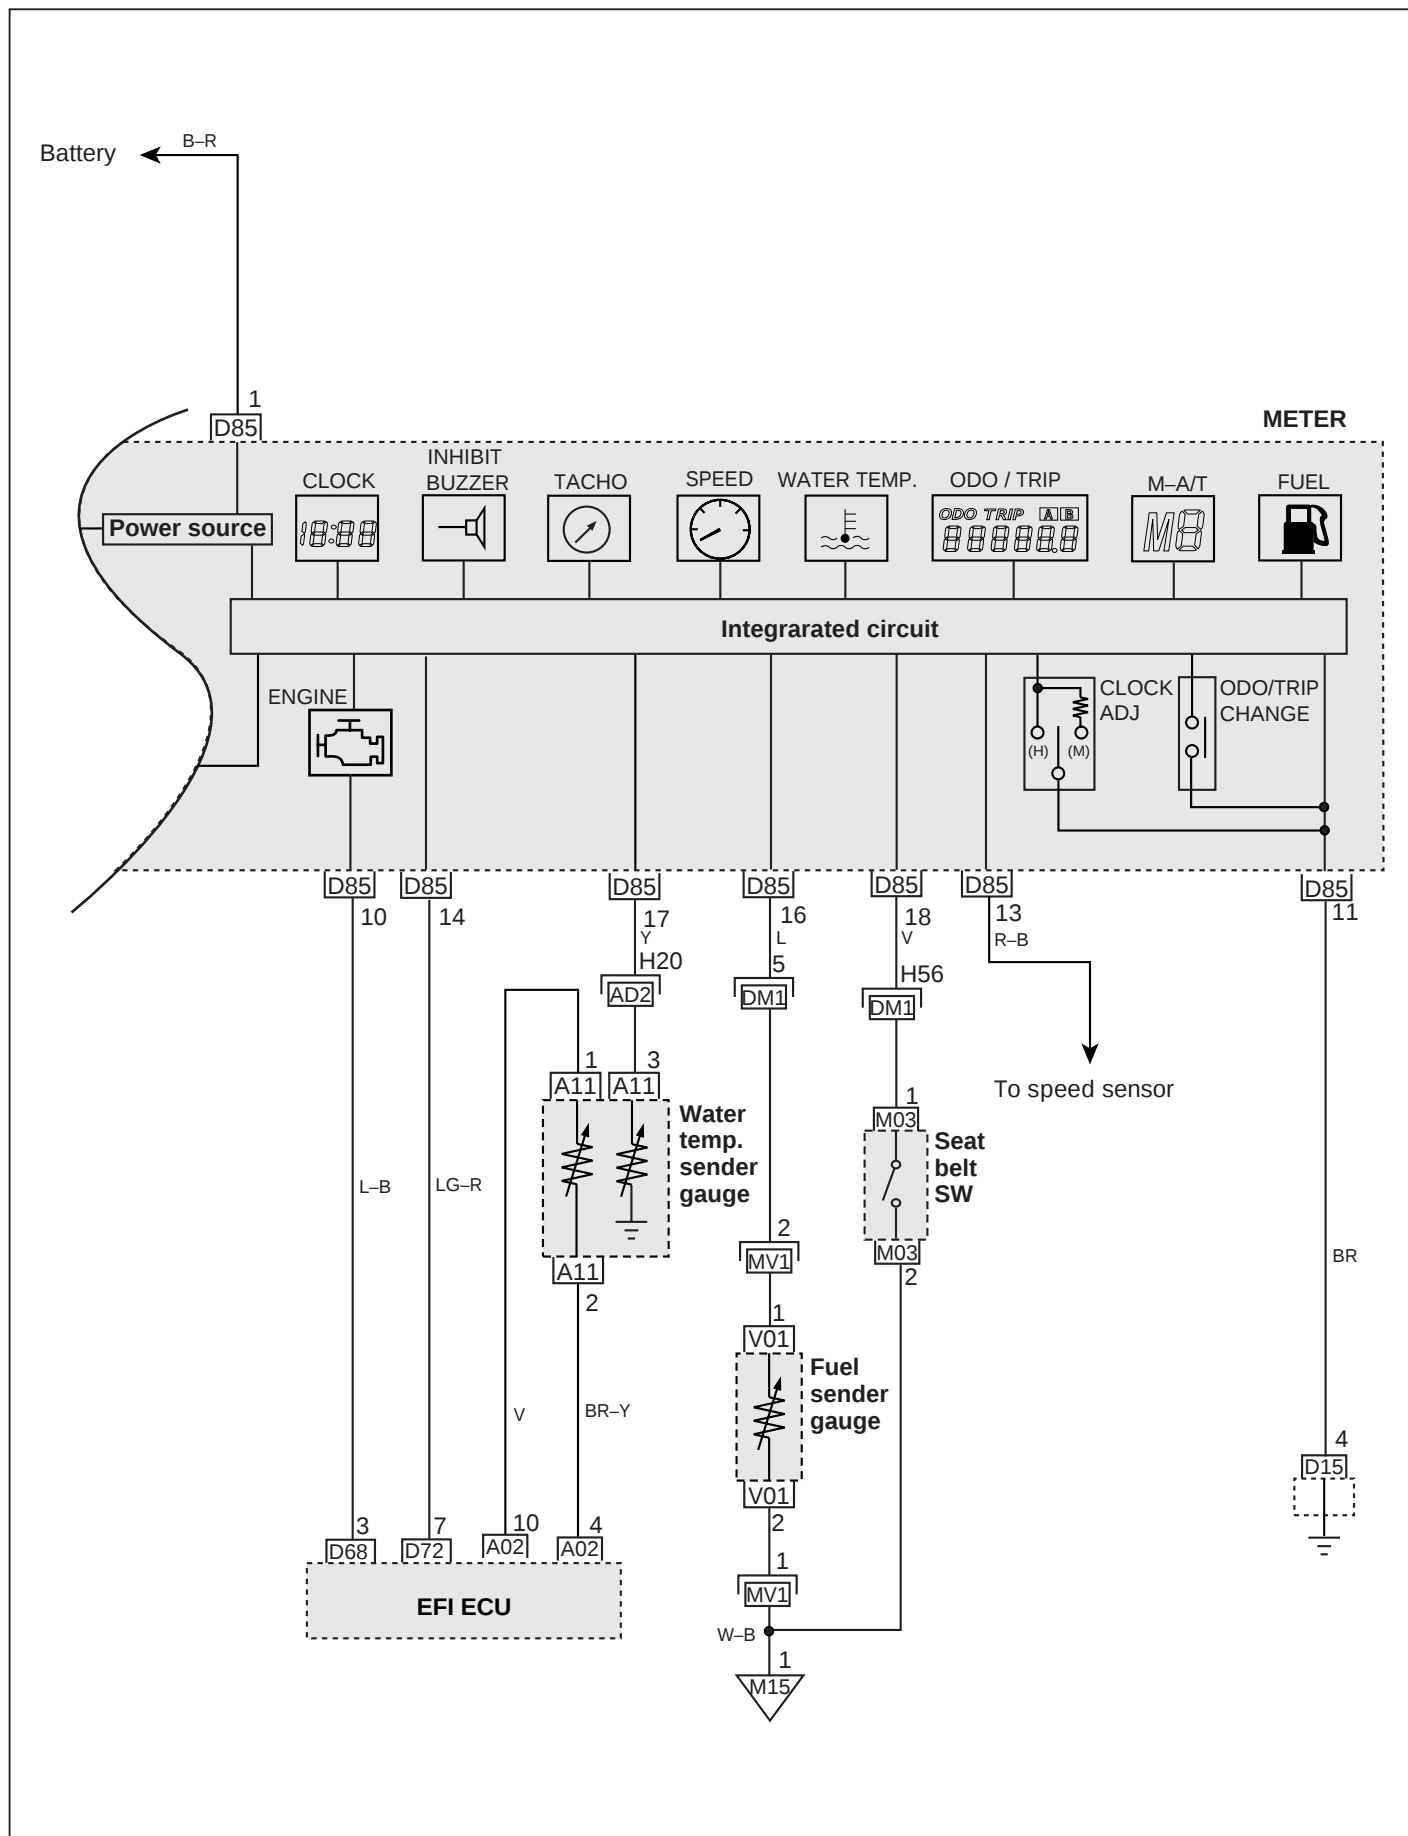
COMBINATION METER (K3-VE2 ENGINE / RHD) -2



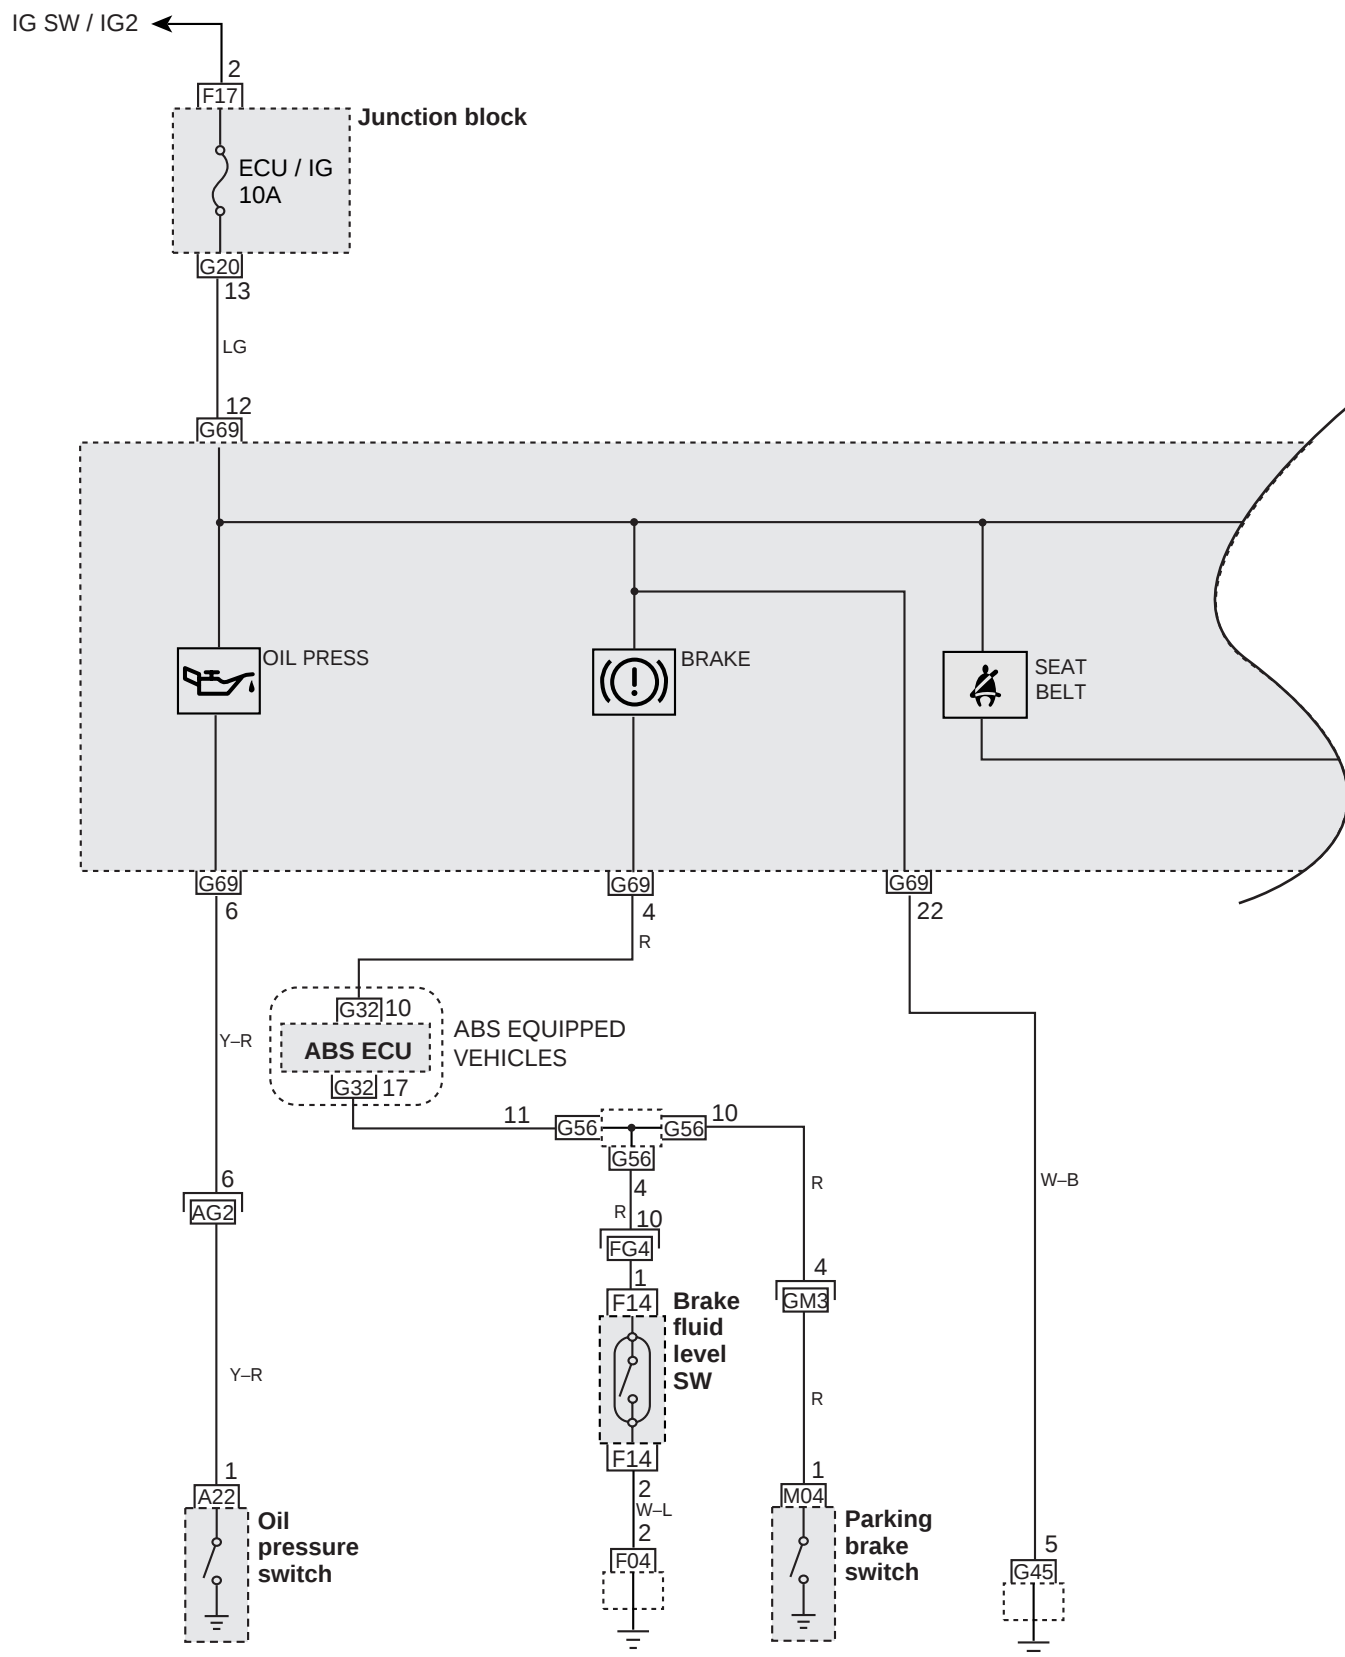
COMBINATION METER (K3-VE2 ENGINE / LHD) -1



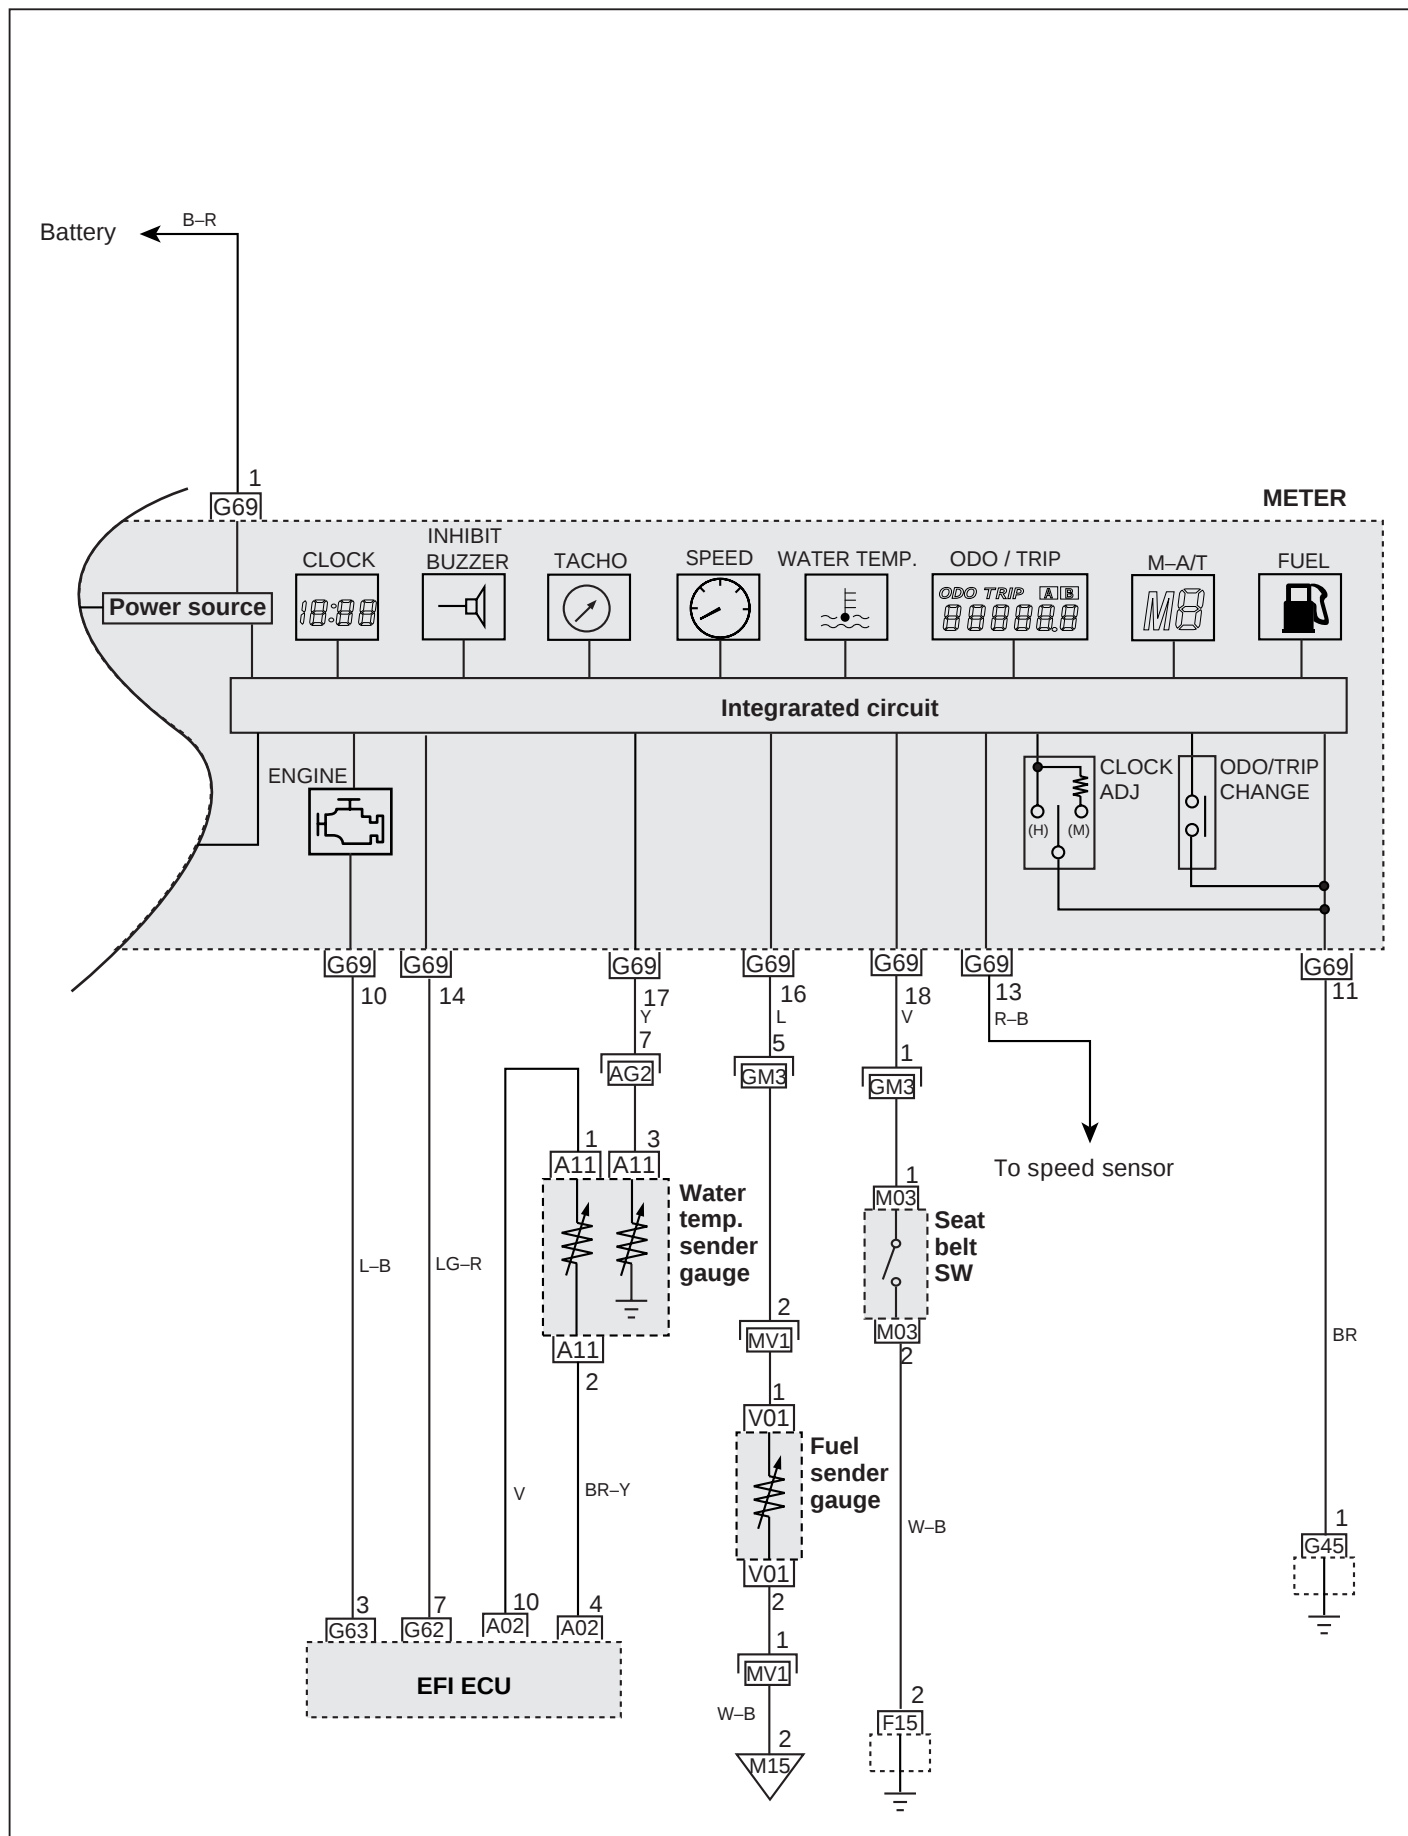COMBINATION METER (K3-VE2 ENGINE / LHD) -2




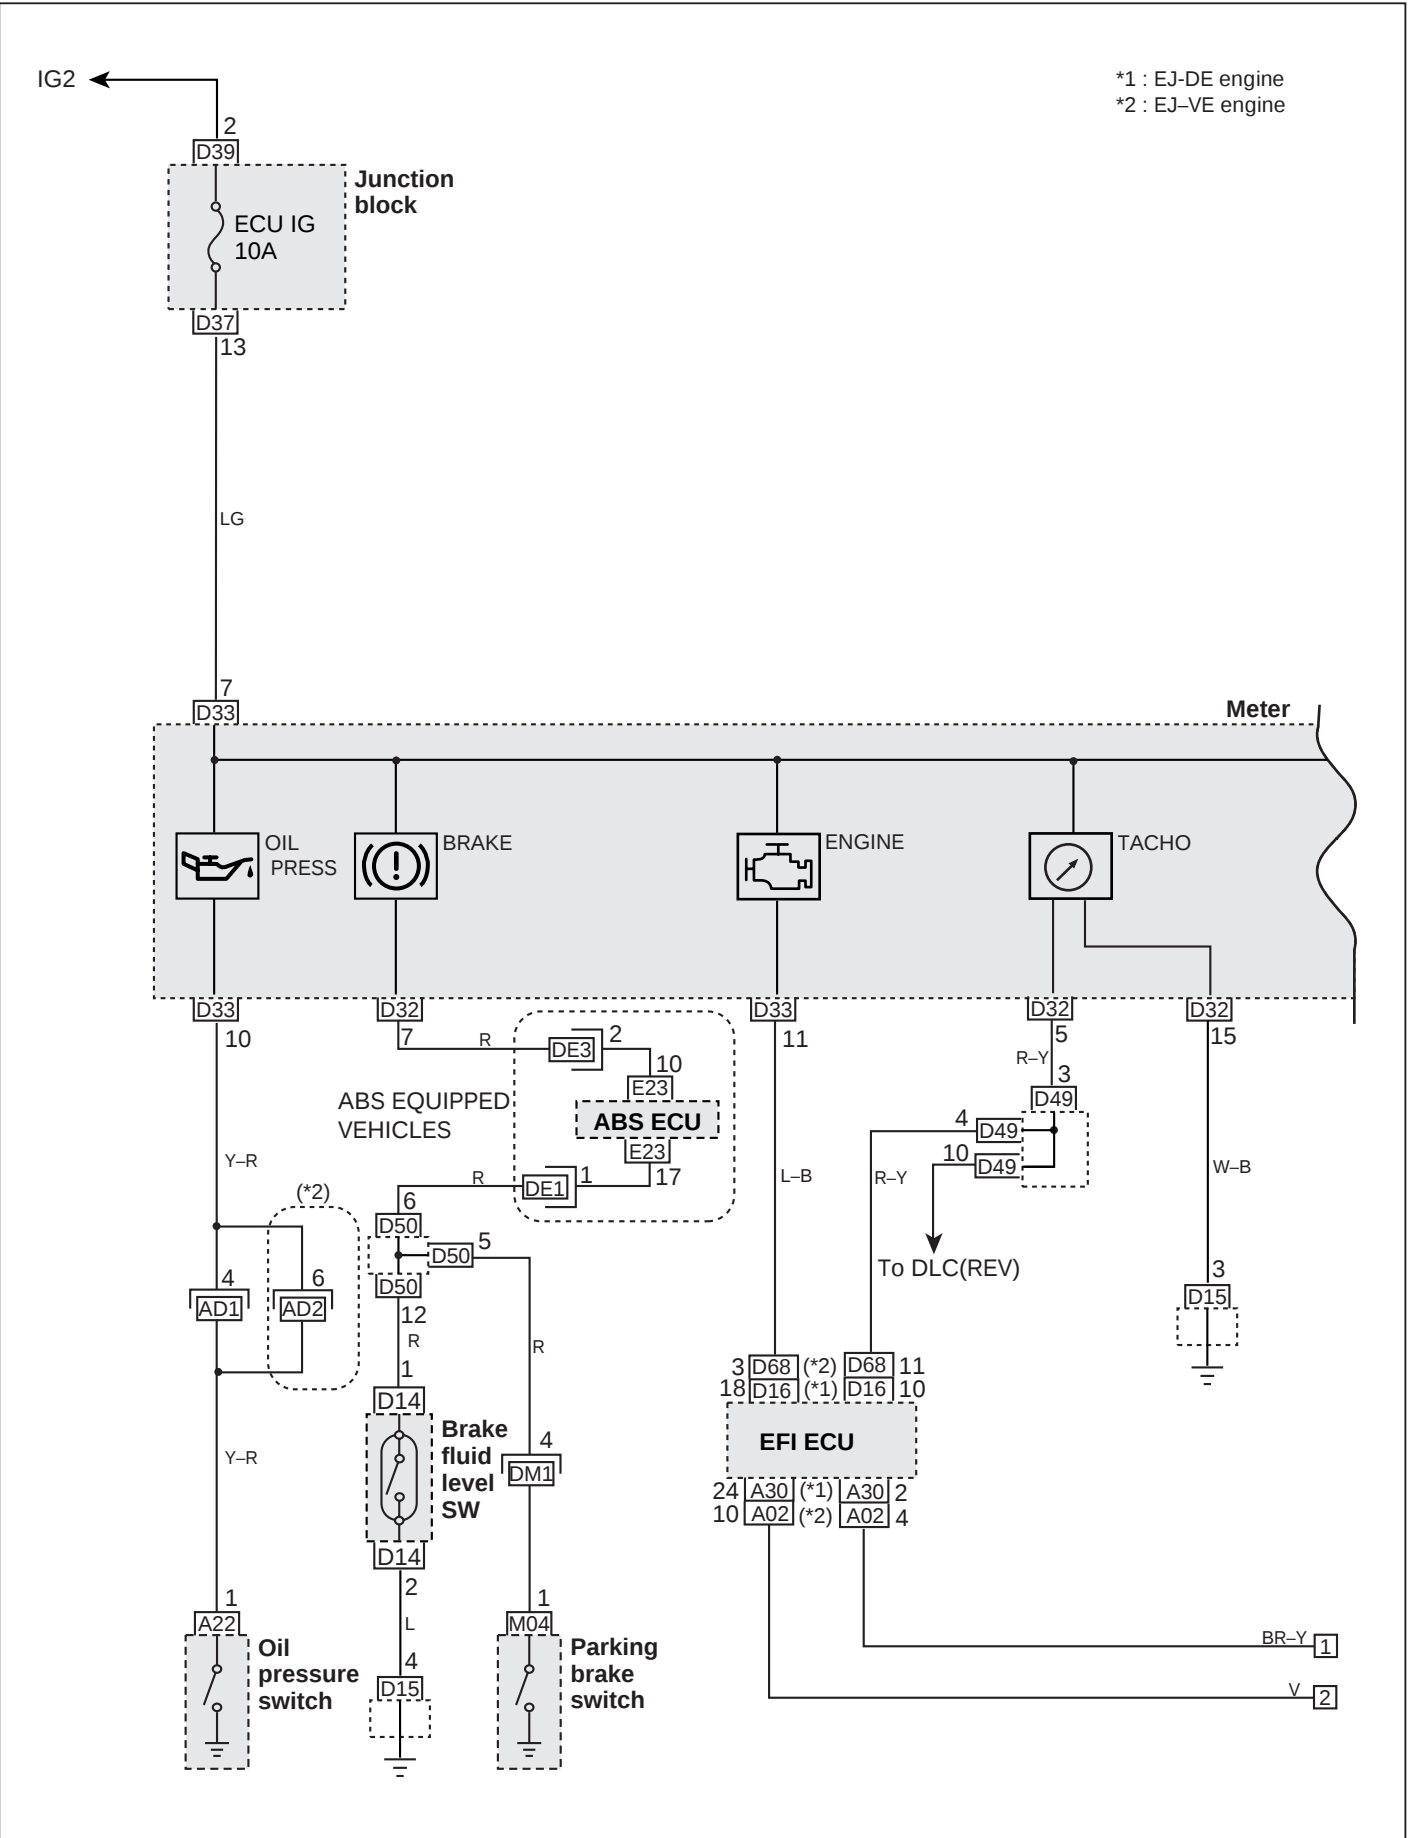COMBINATION METER (EJ-DE & EJ-VE ENGINE / RHD) -1




COMBINATION METER (EJ-DE & EJ-VE ENGINE / RHD) -2

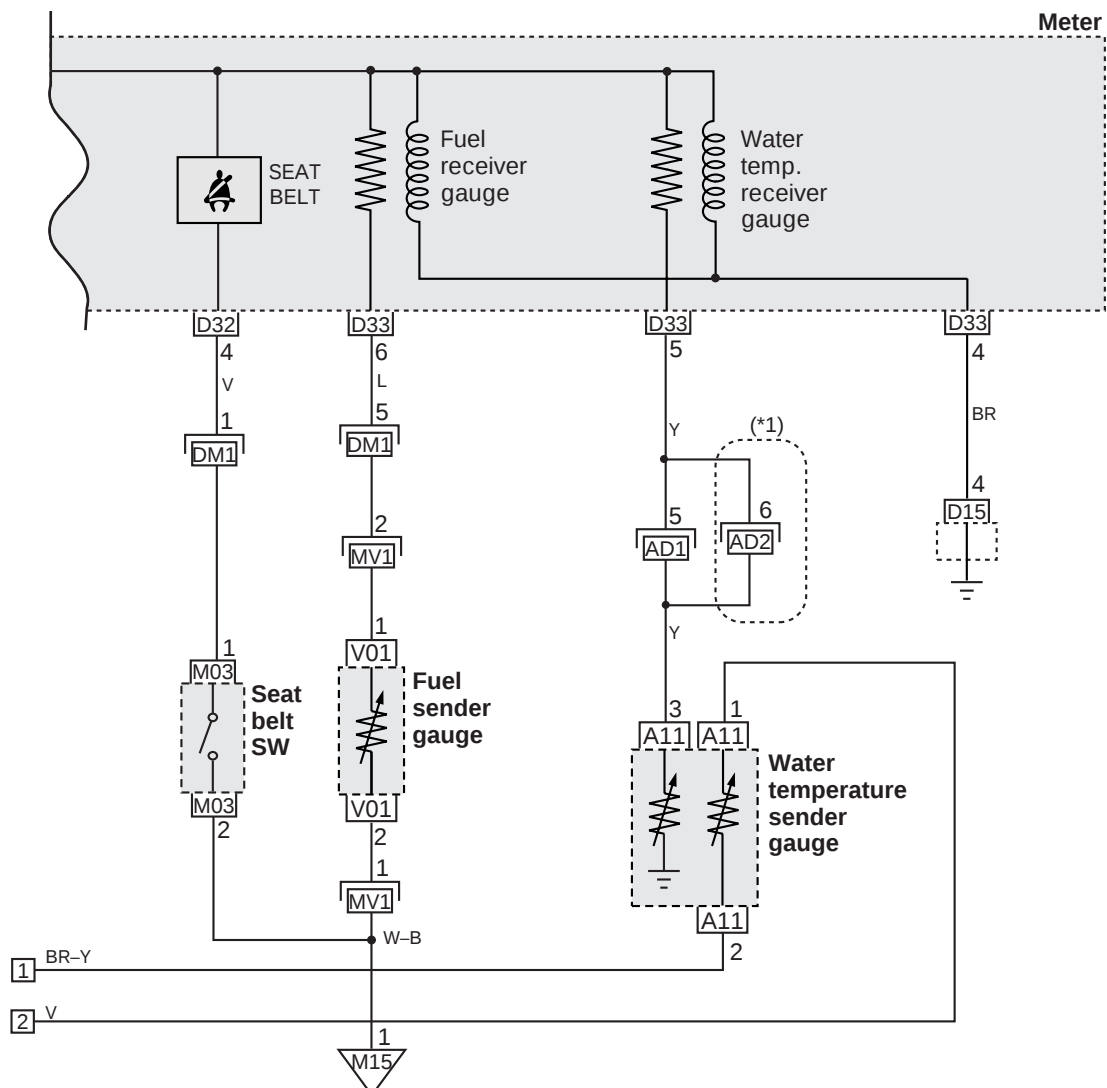*1 : EJ-VE engine




HW-102

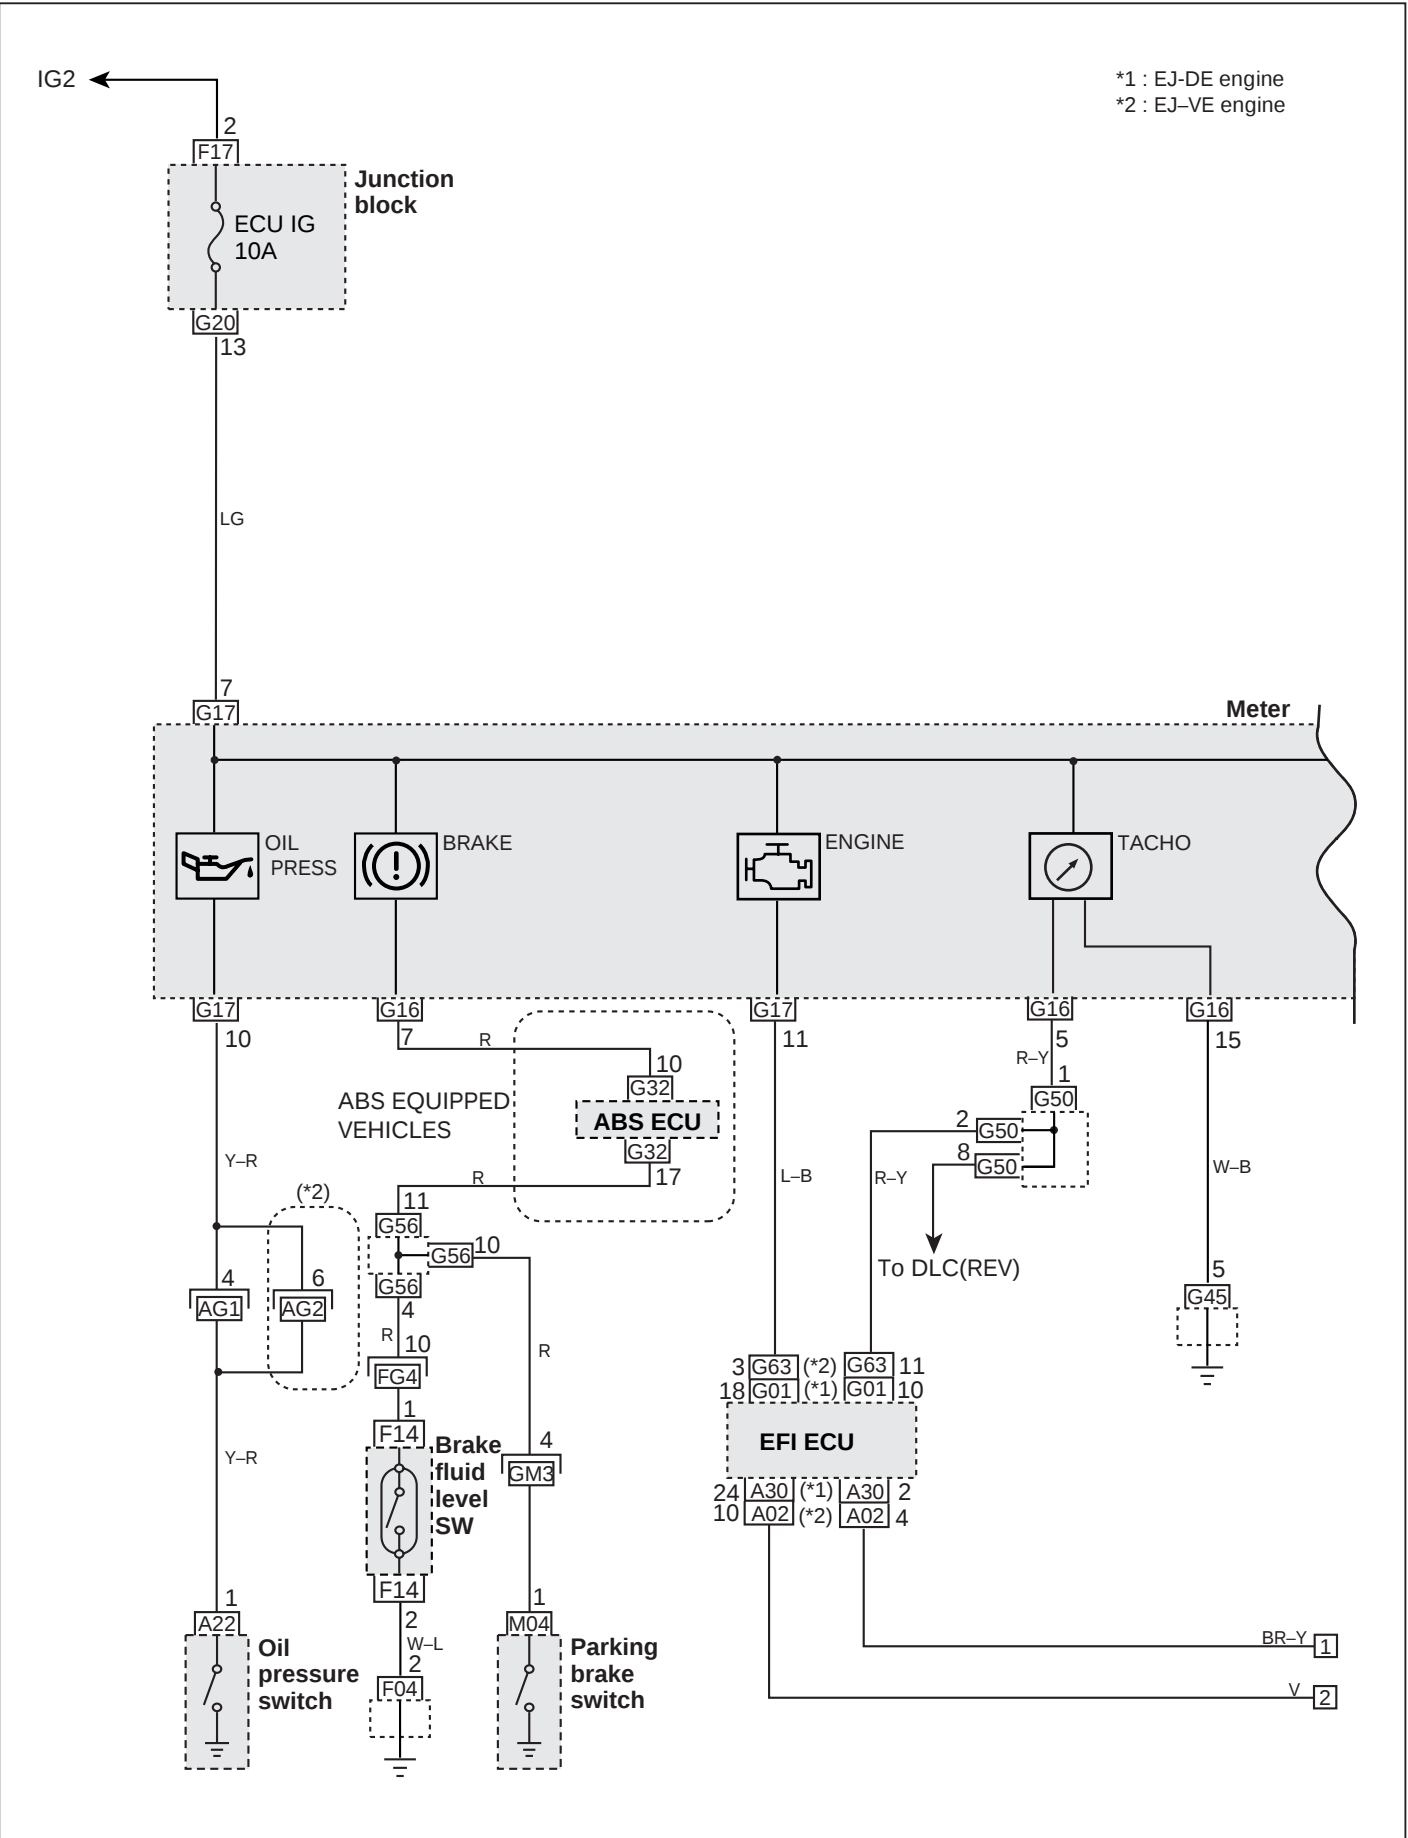COMBINATION METER (EJ-DE & EJ-VE ENGINE / LHD) -1



COMBINATION METER (EJ-DE & EJ-VE ENGINE / LHD) -2

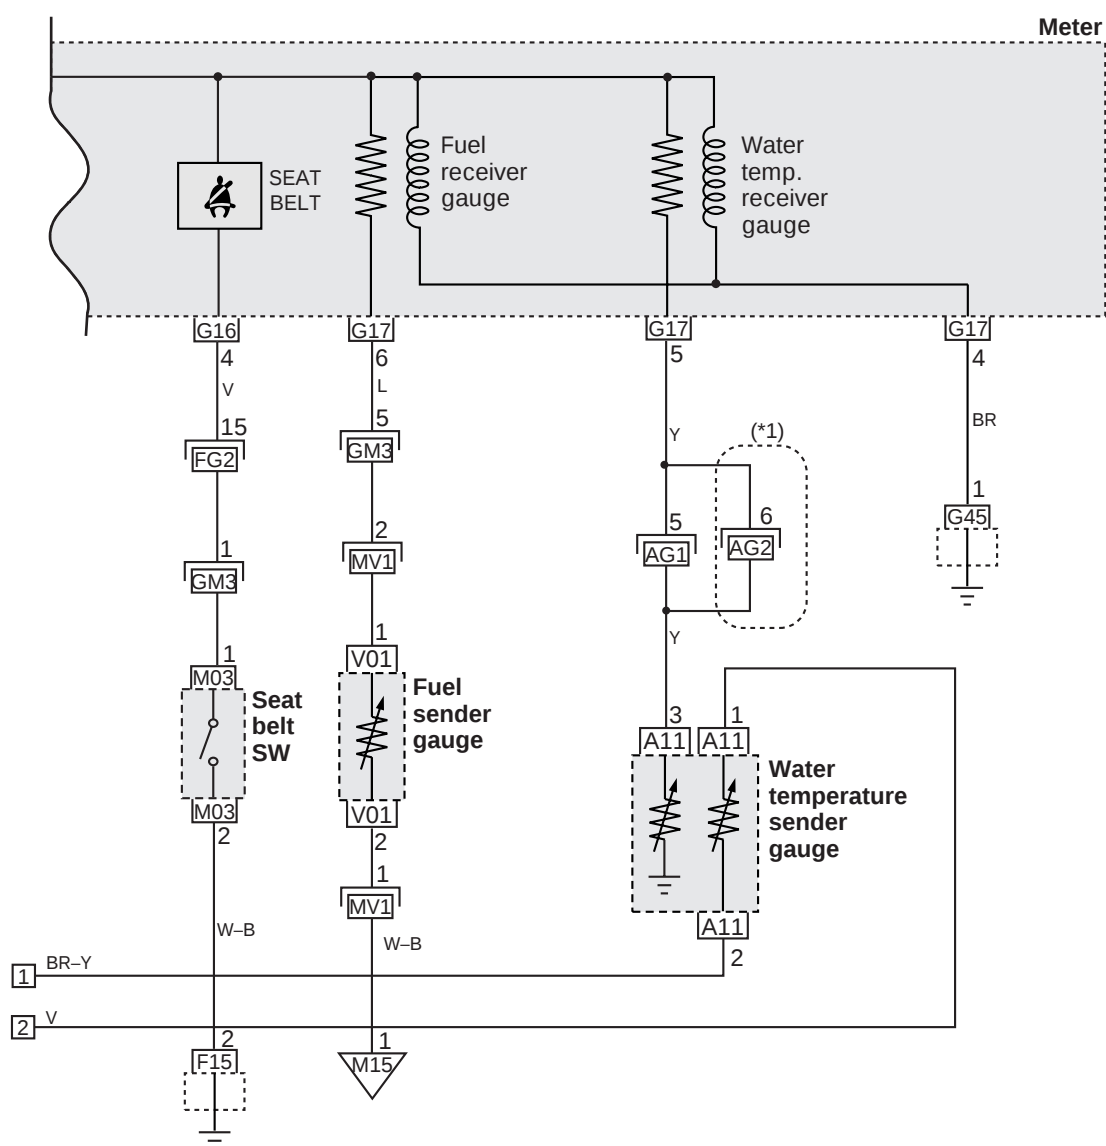
*1 : EJ-VE engine



FRONT WIPER & WASHER (RHD)




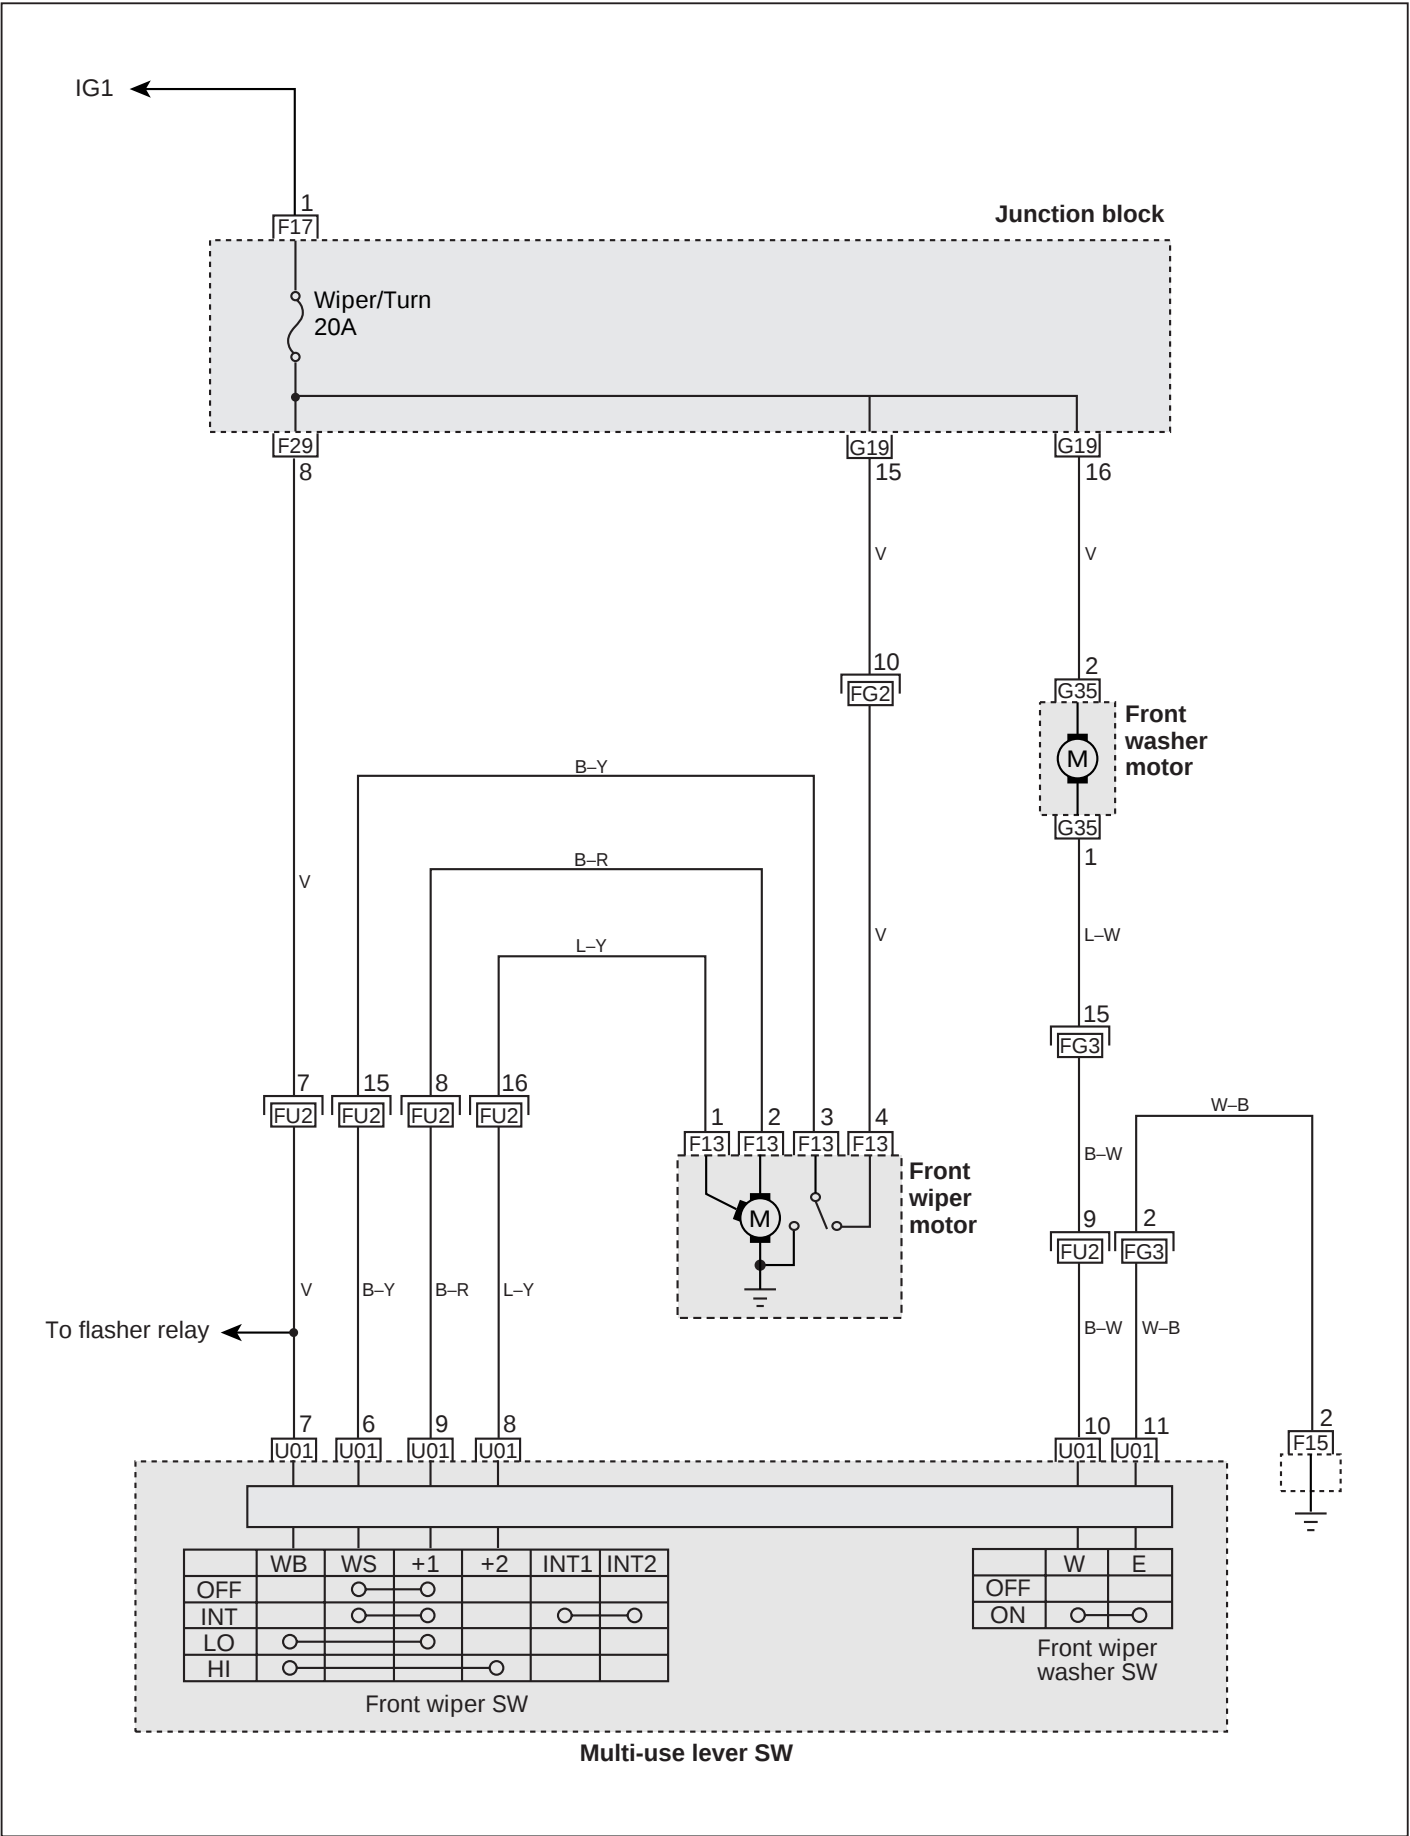FRONT WIPER & WASHER (LHD)






REAR WIPER & WASHER (LHD)

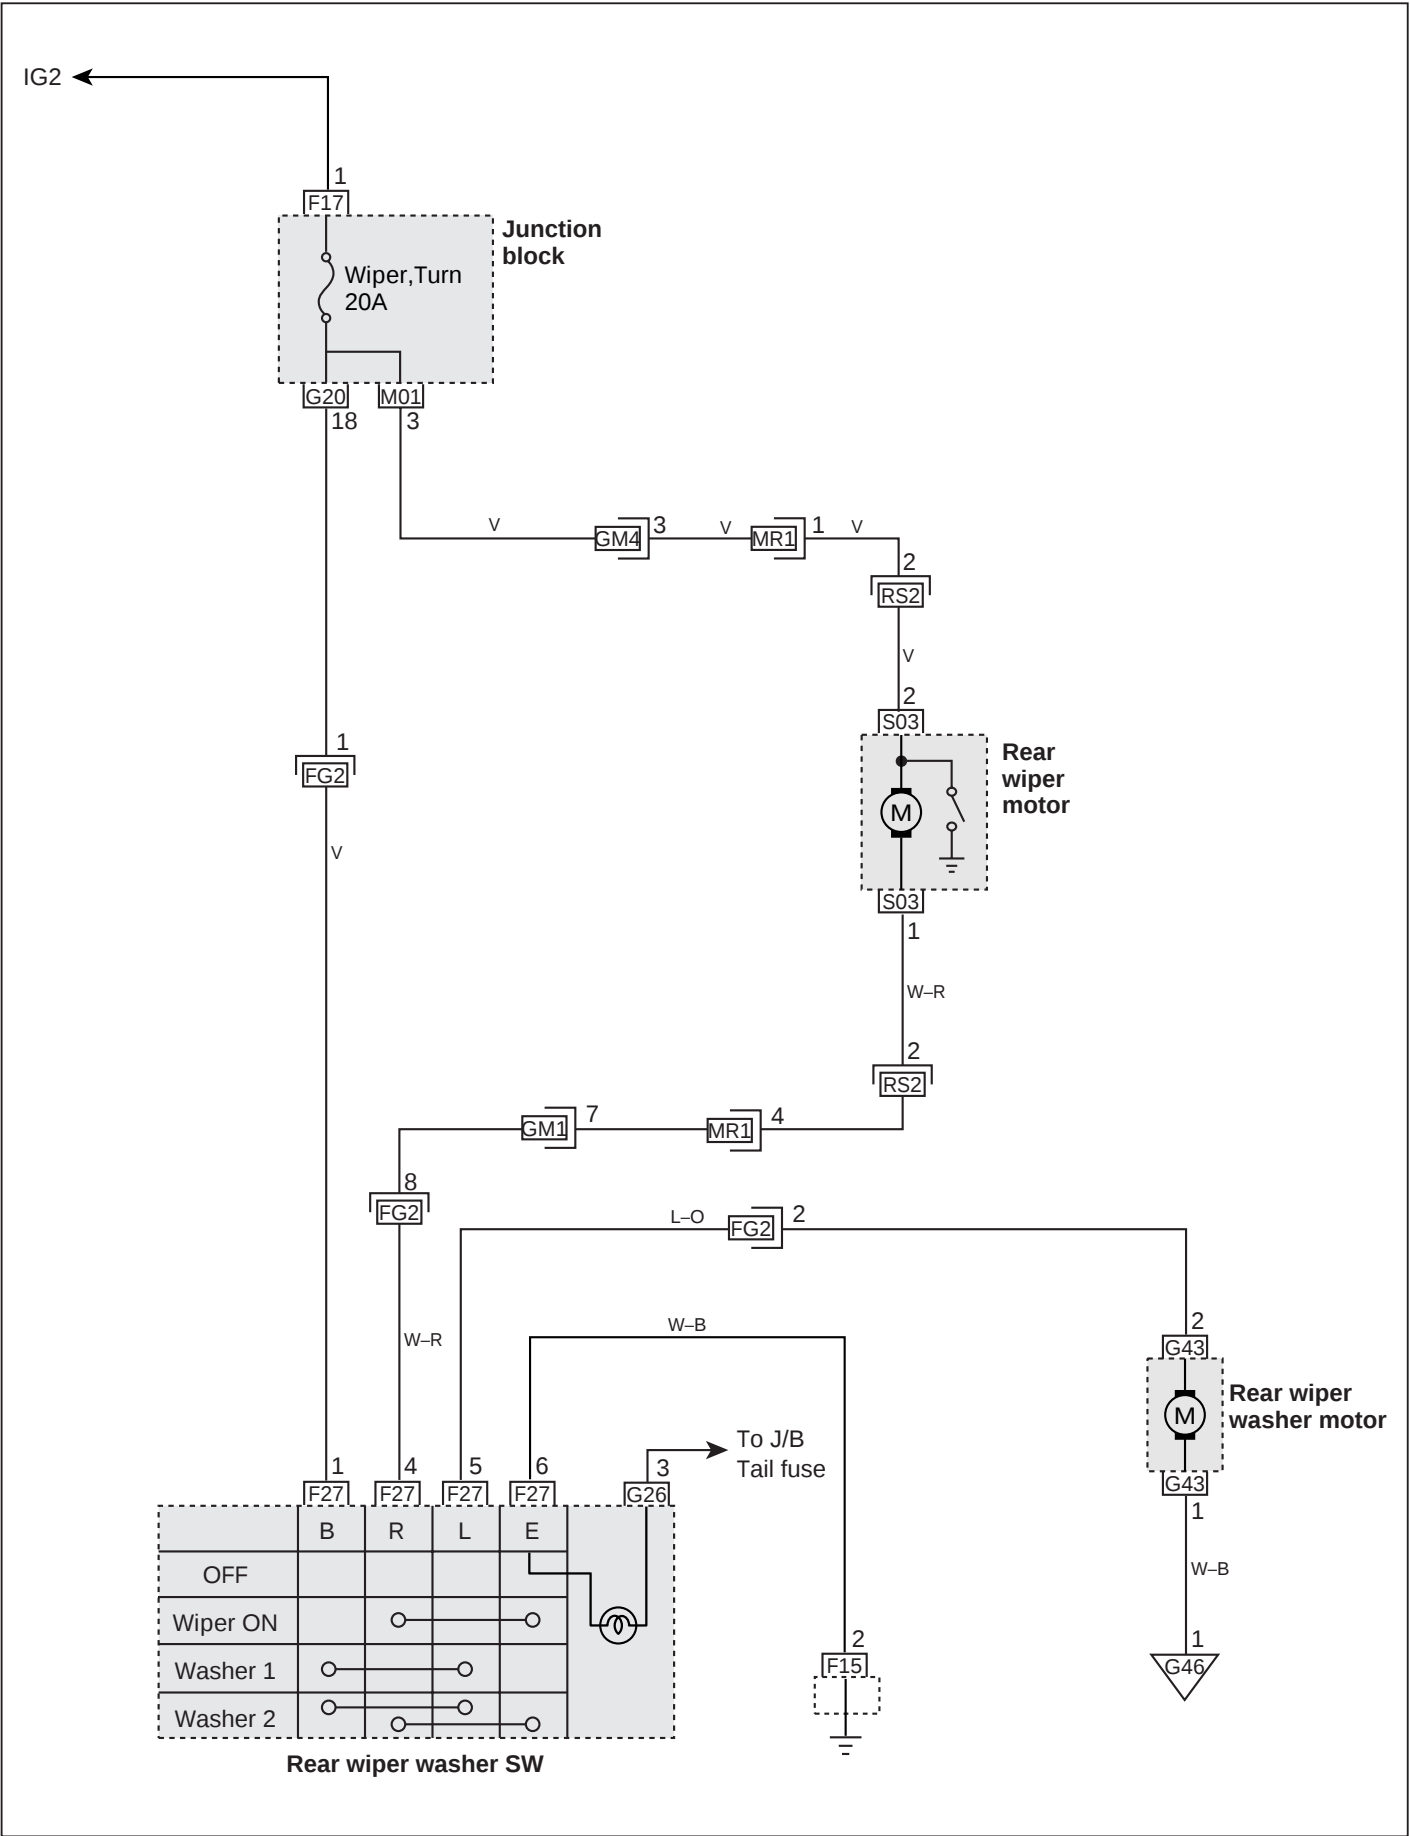


HW-108

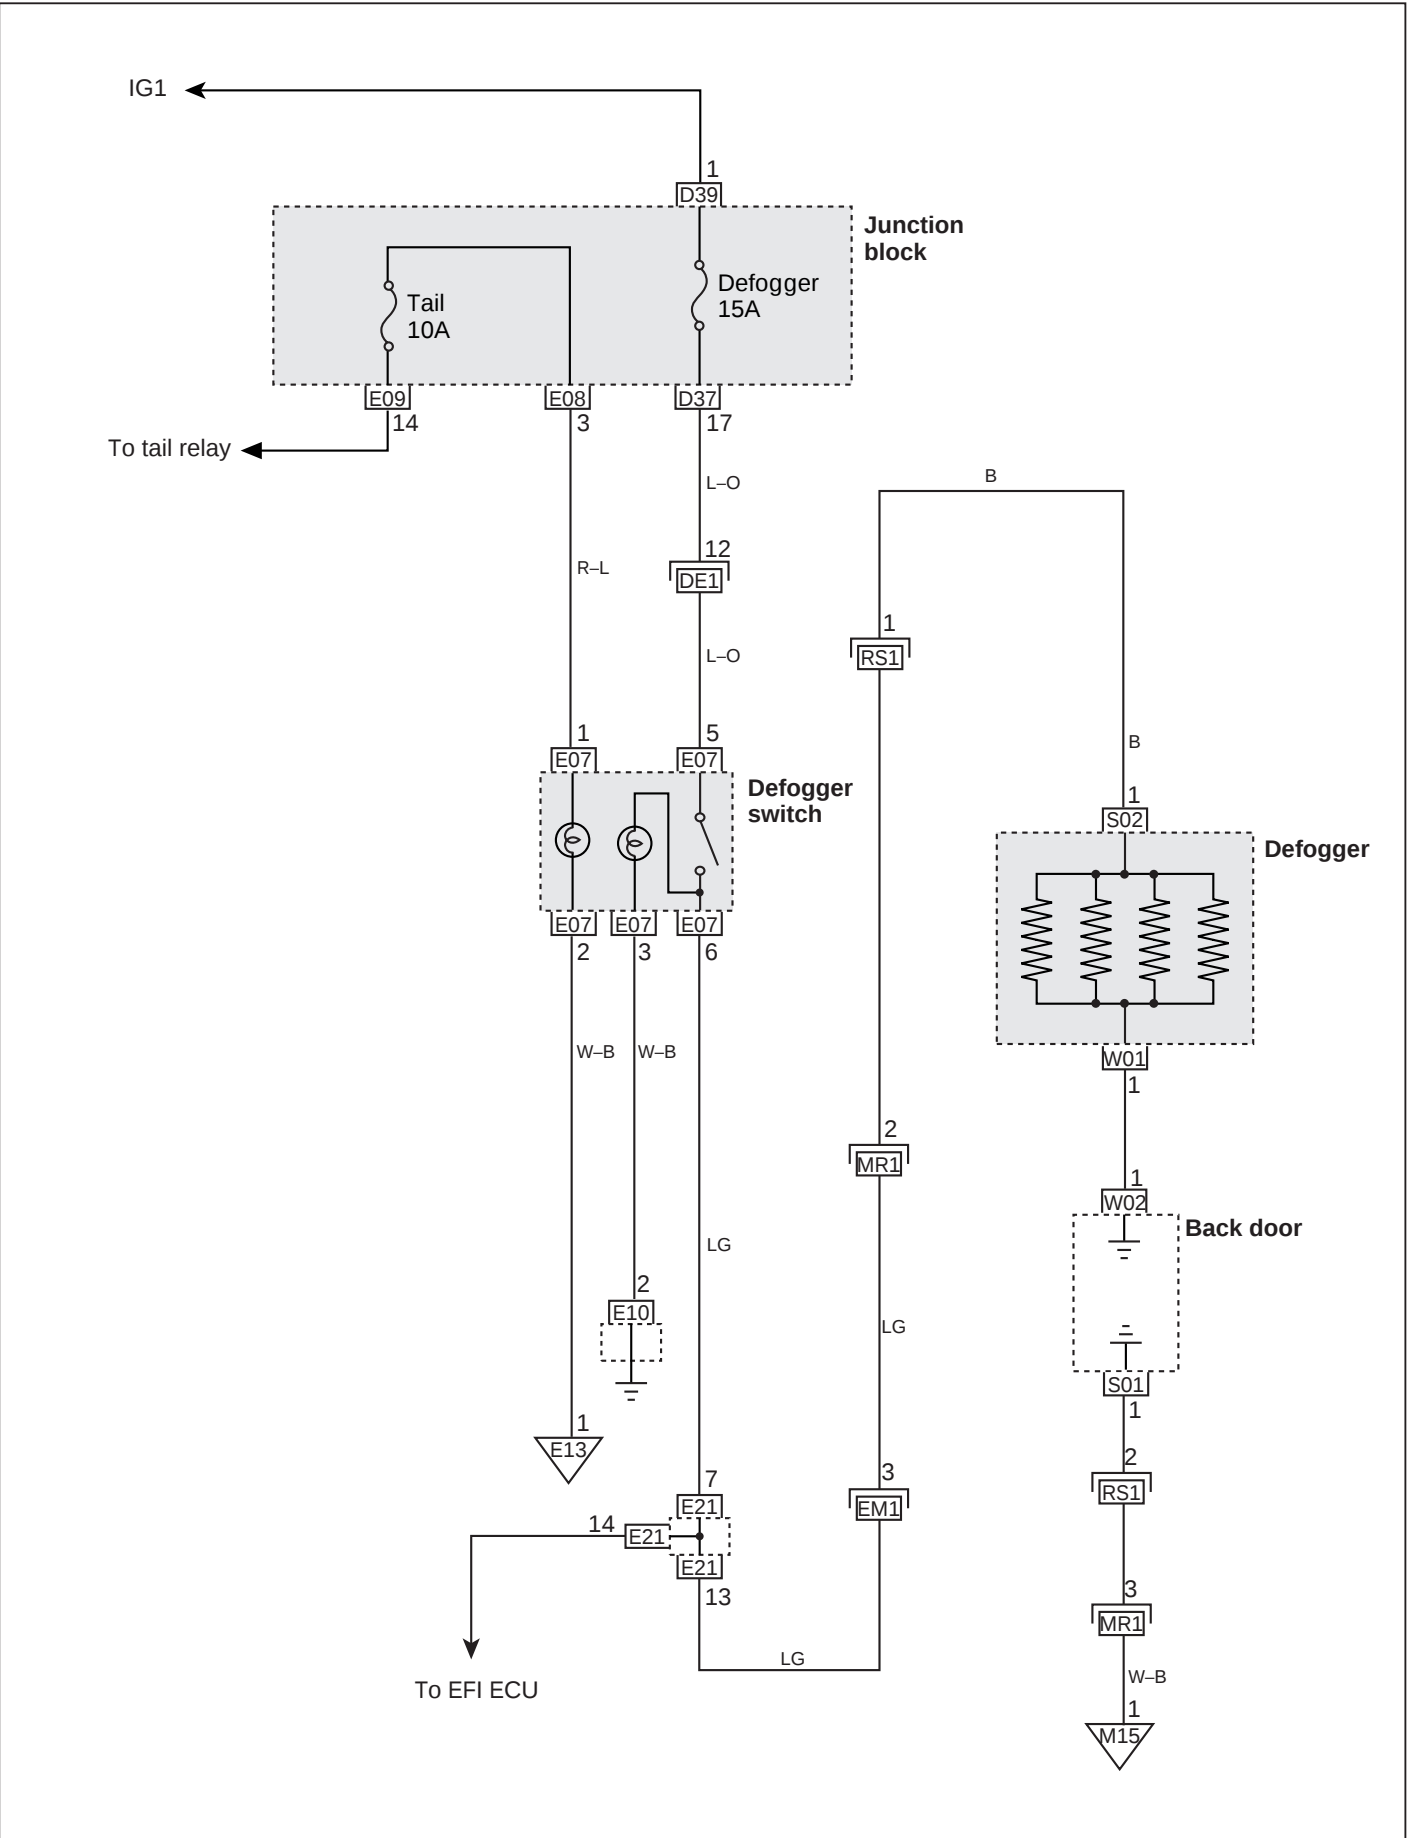REAR WINDOW DEFOGGER (RHD)




REAR WINDOW DEFOGGER (LHD)

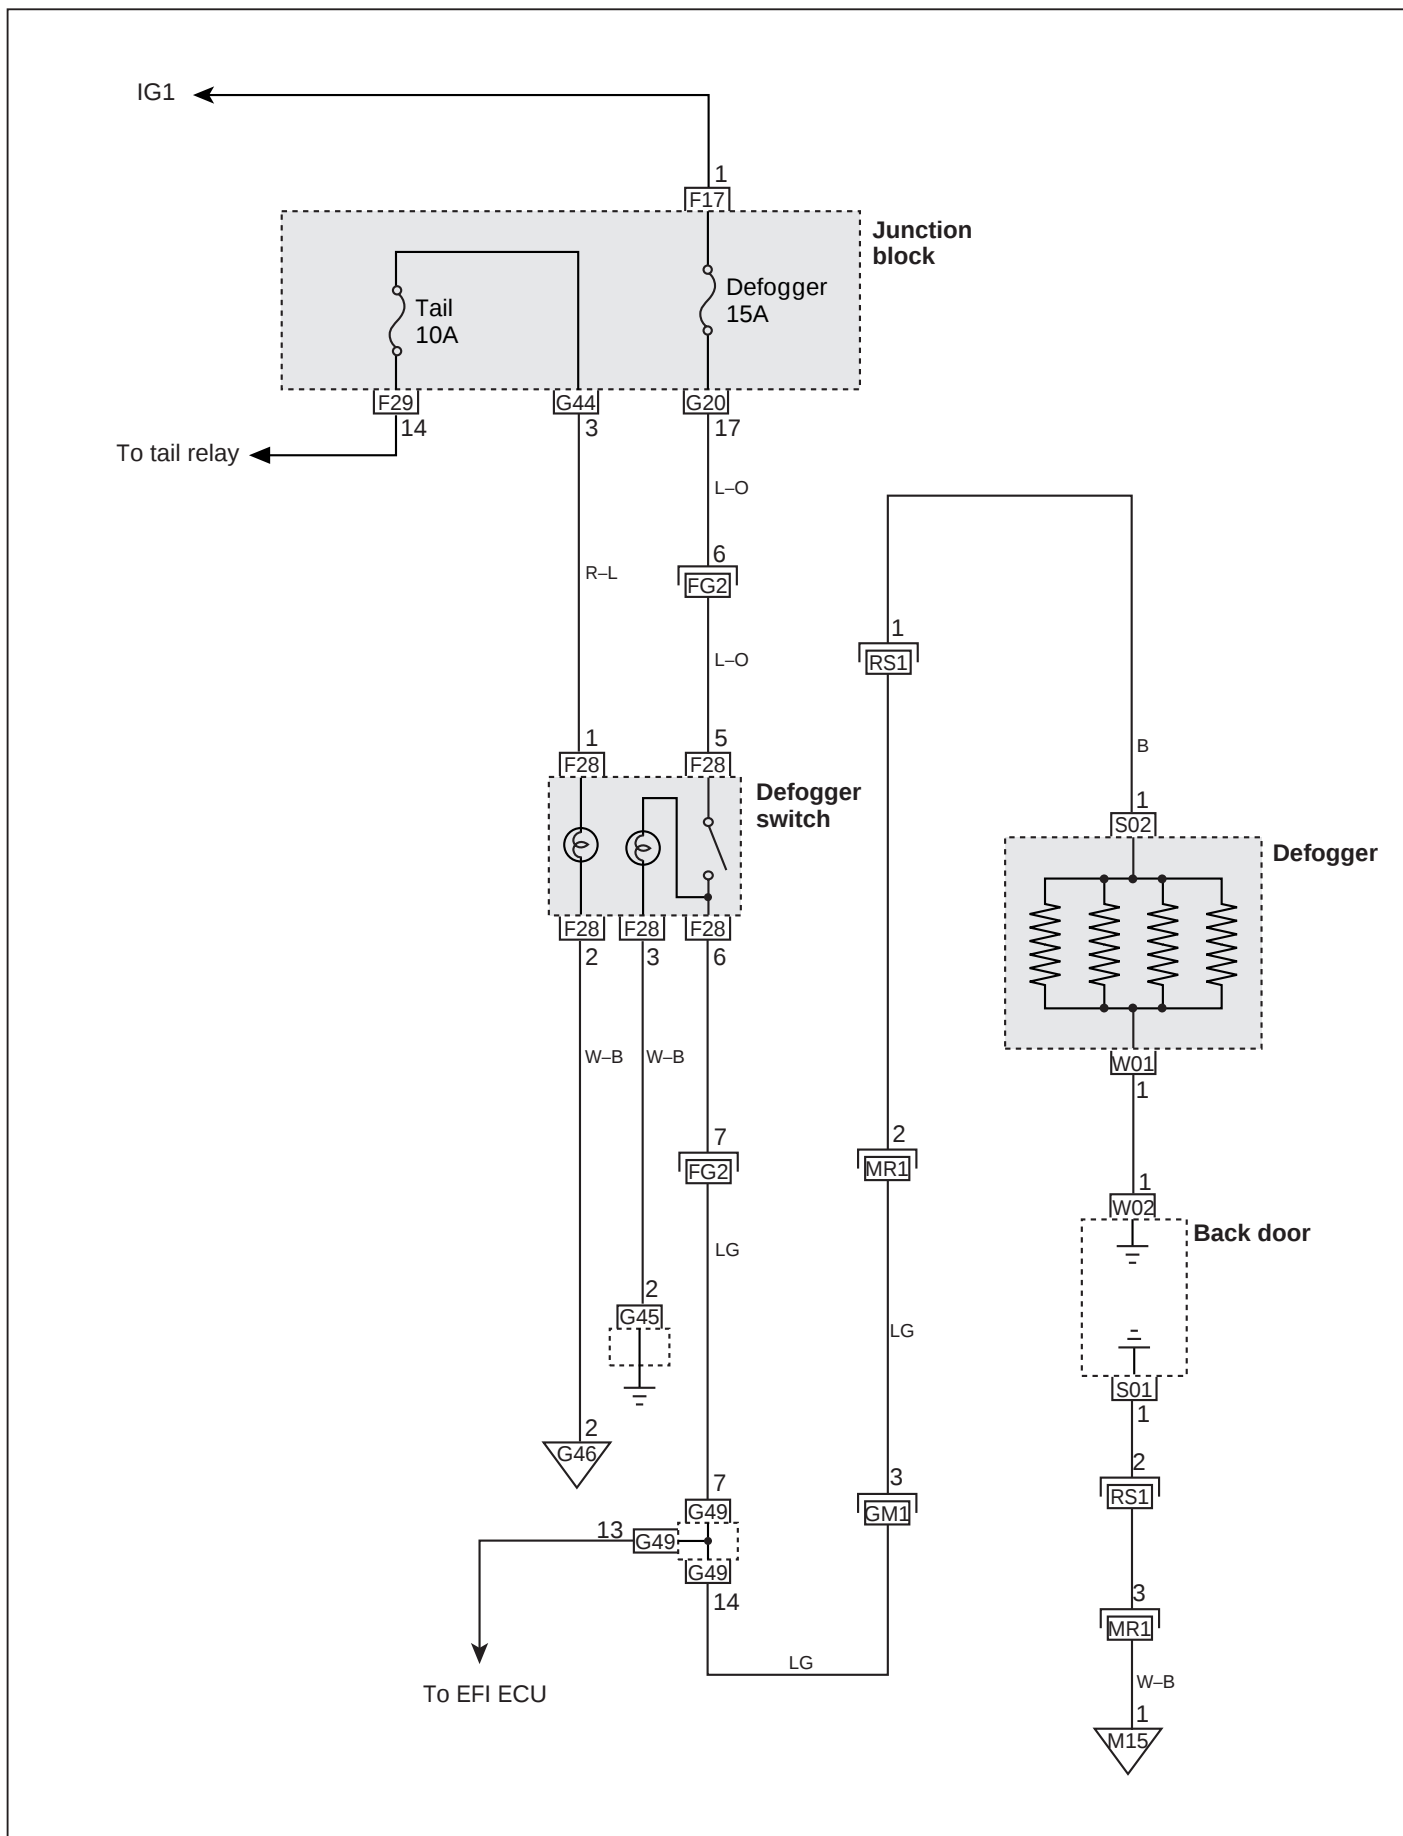


HW-110

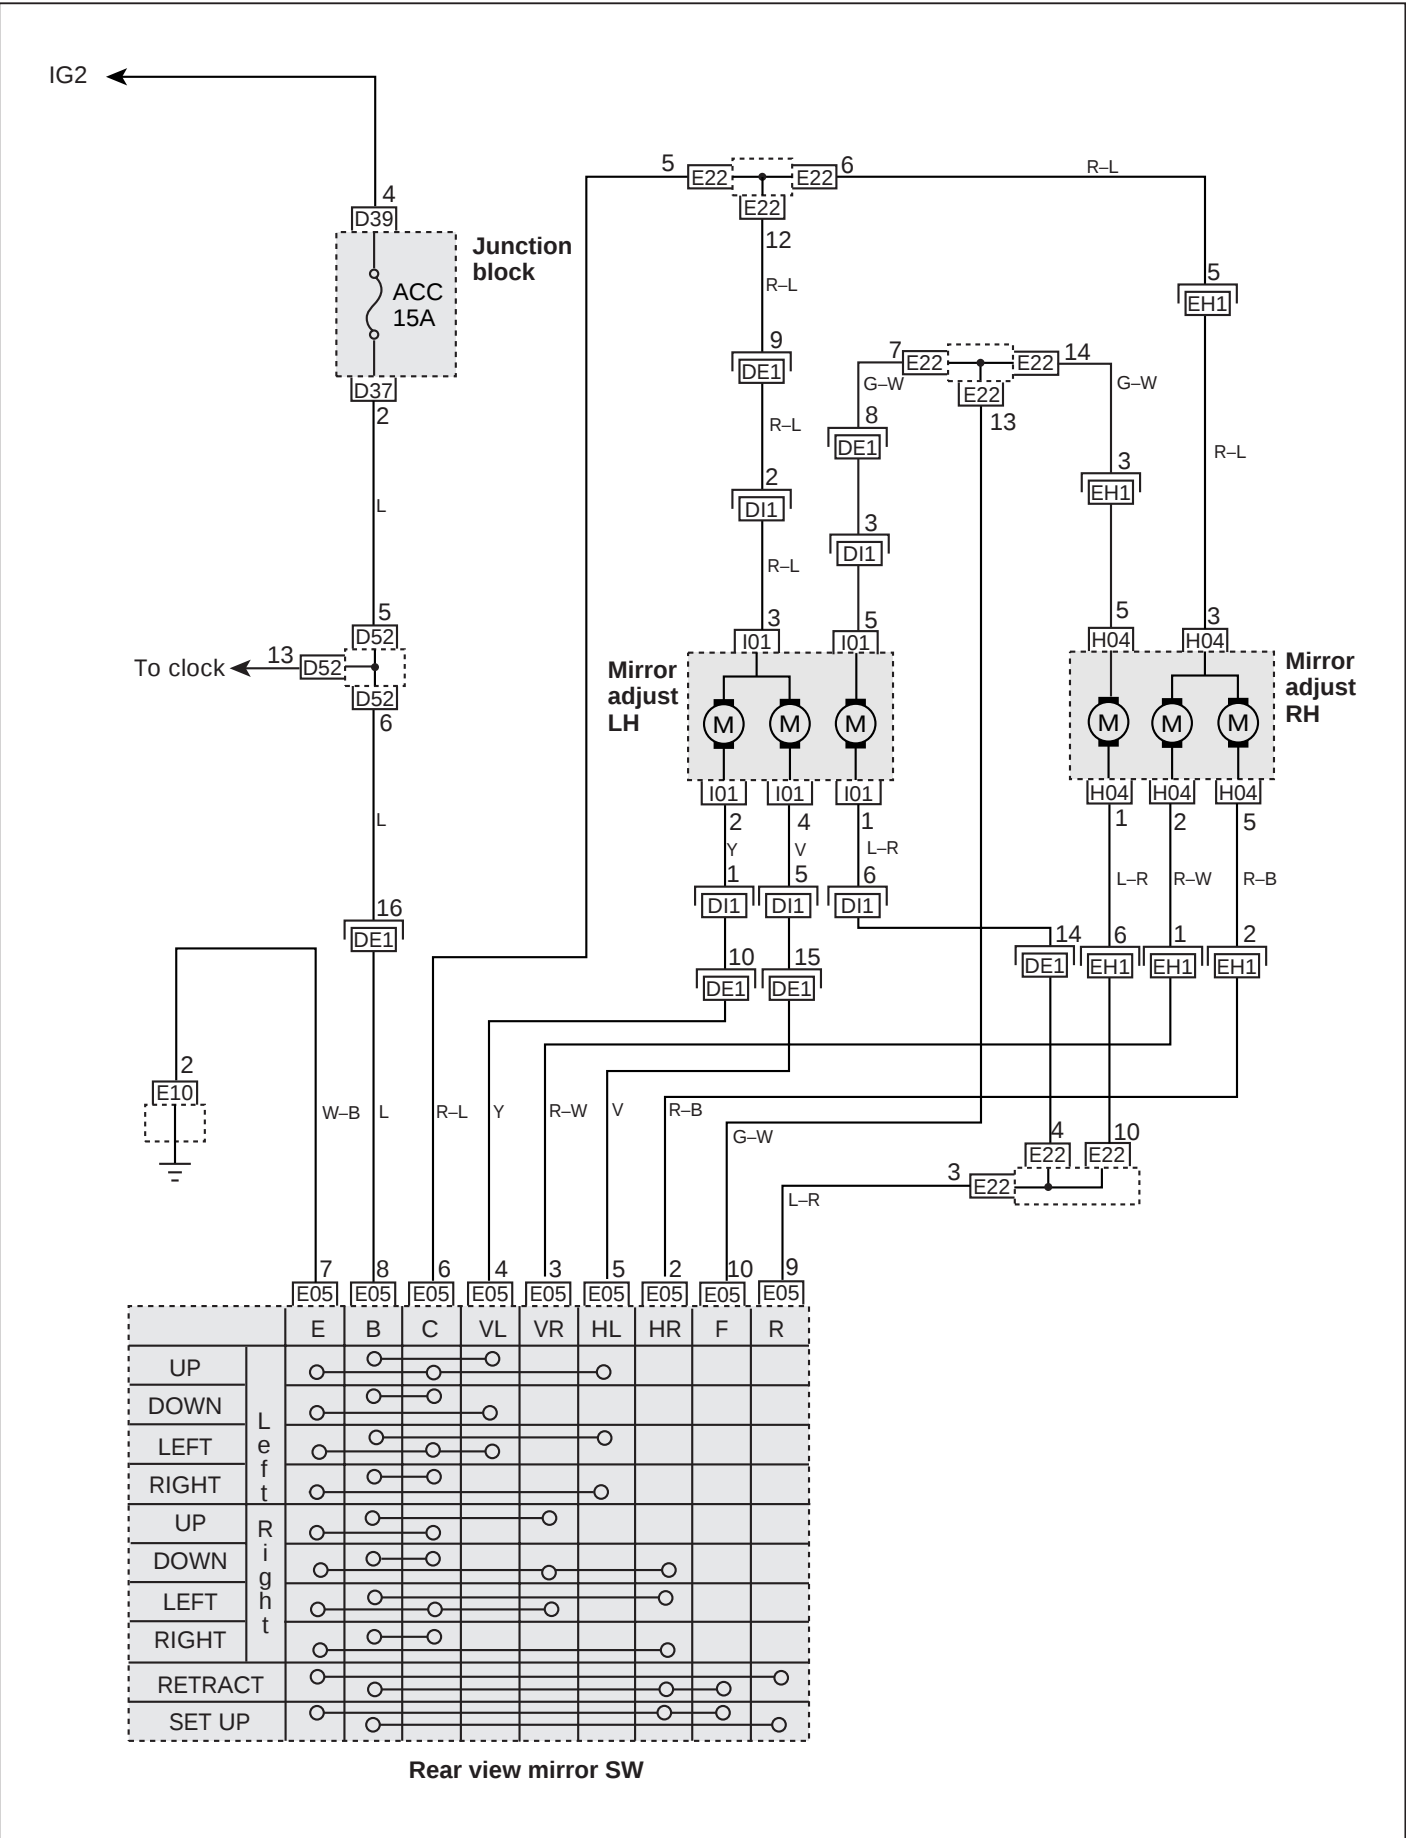REMOTE CONTROL MIRROR (RHD)




REMOTE CONTROL MIRROR (LHD)

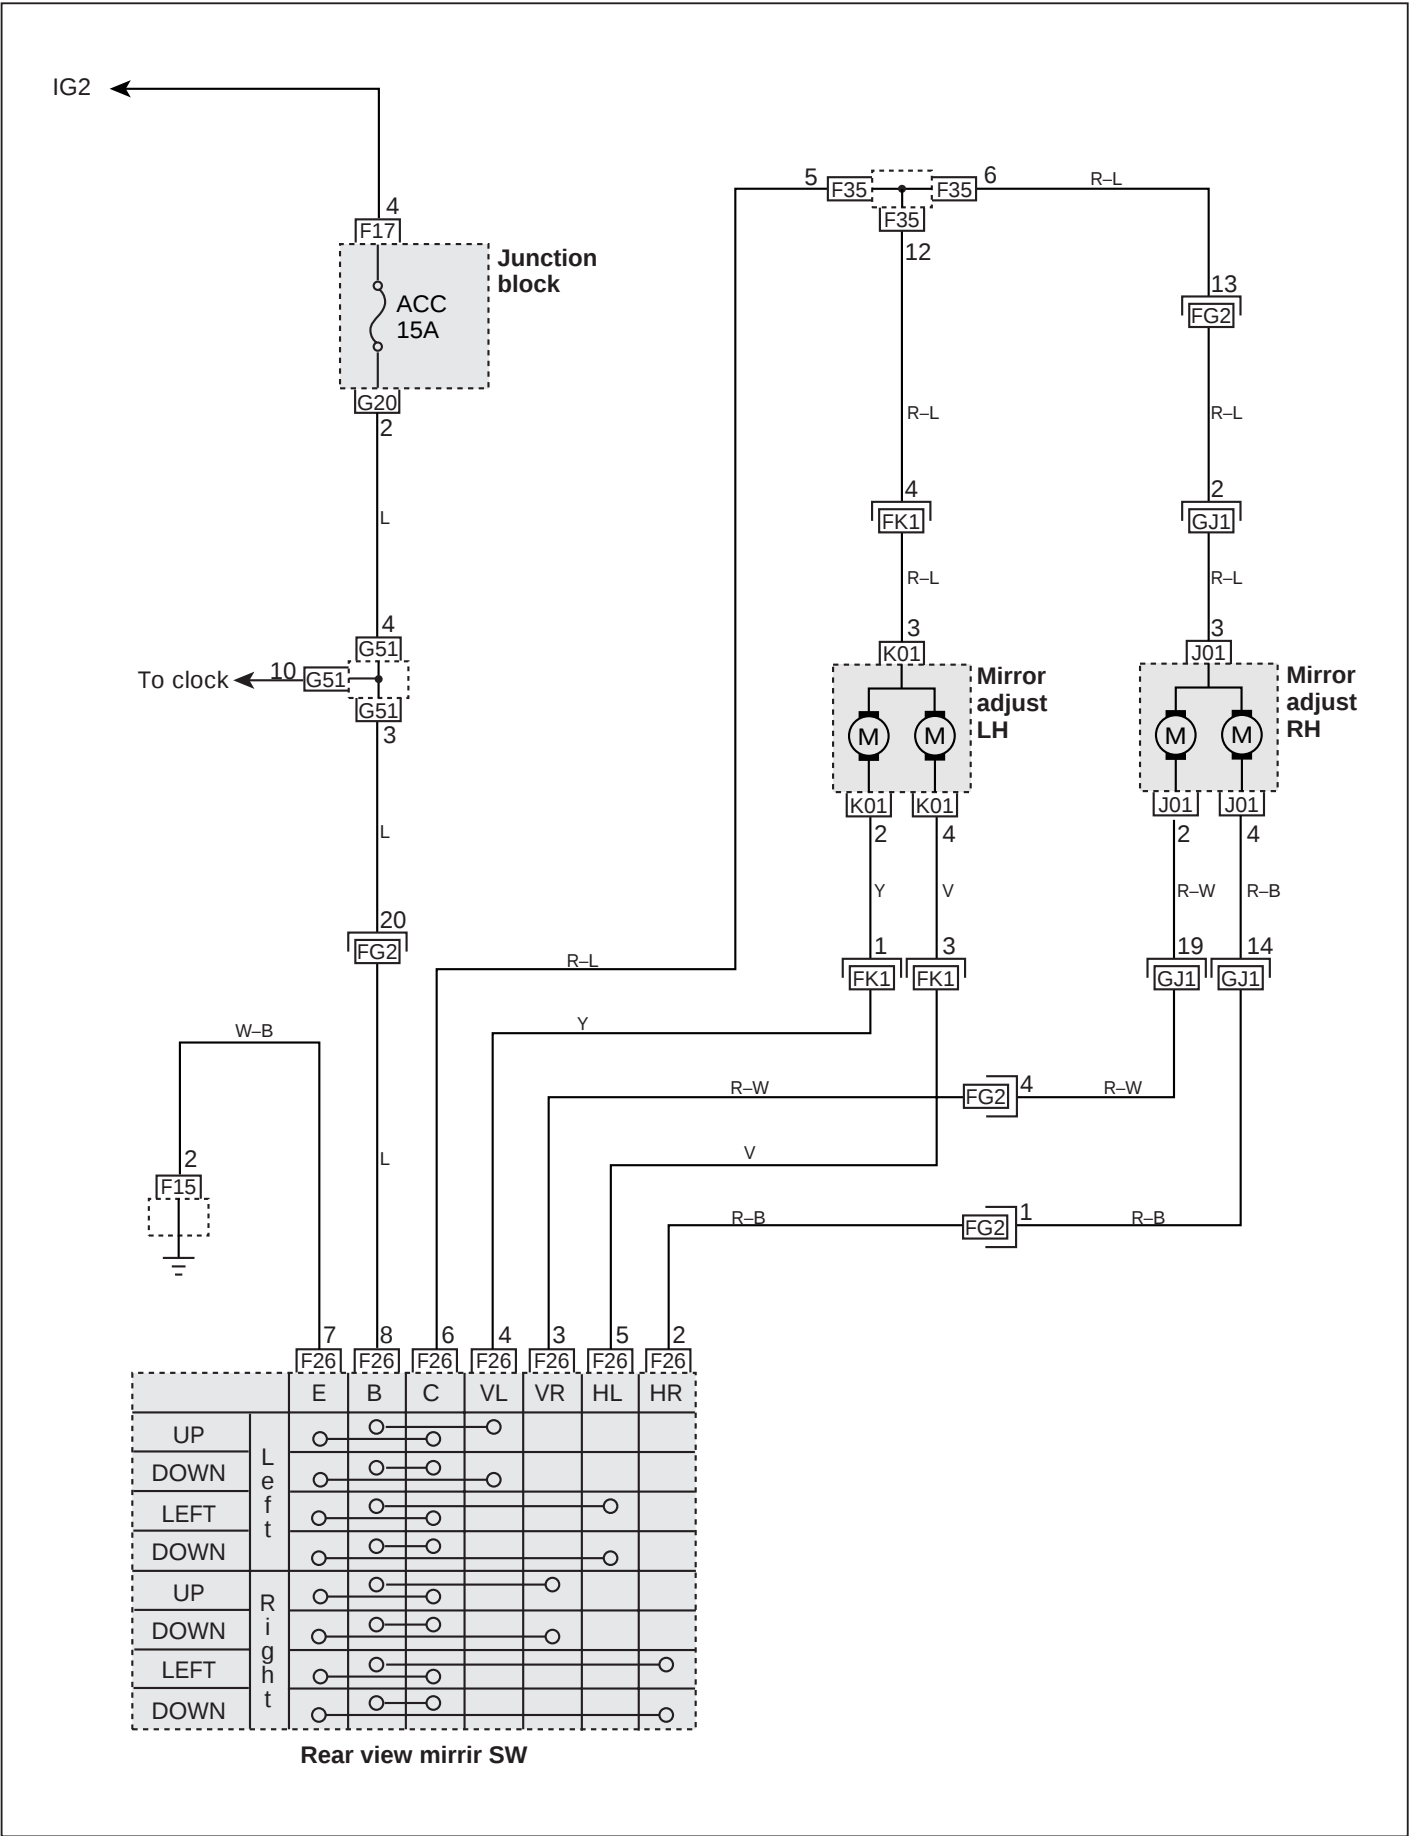


HW-112

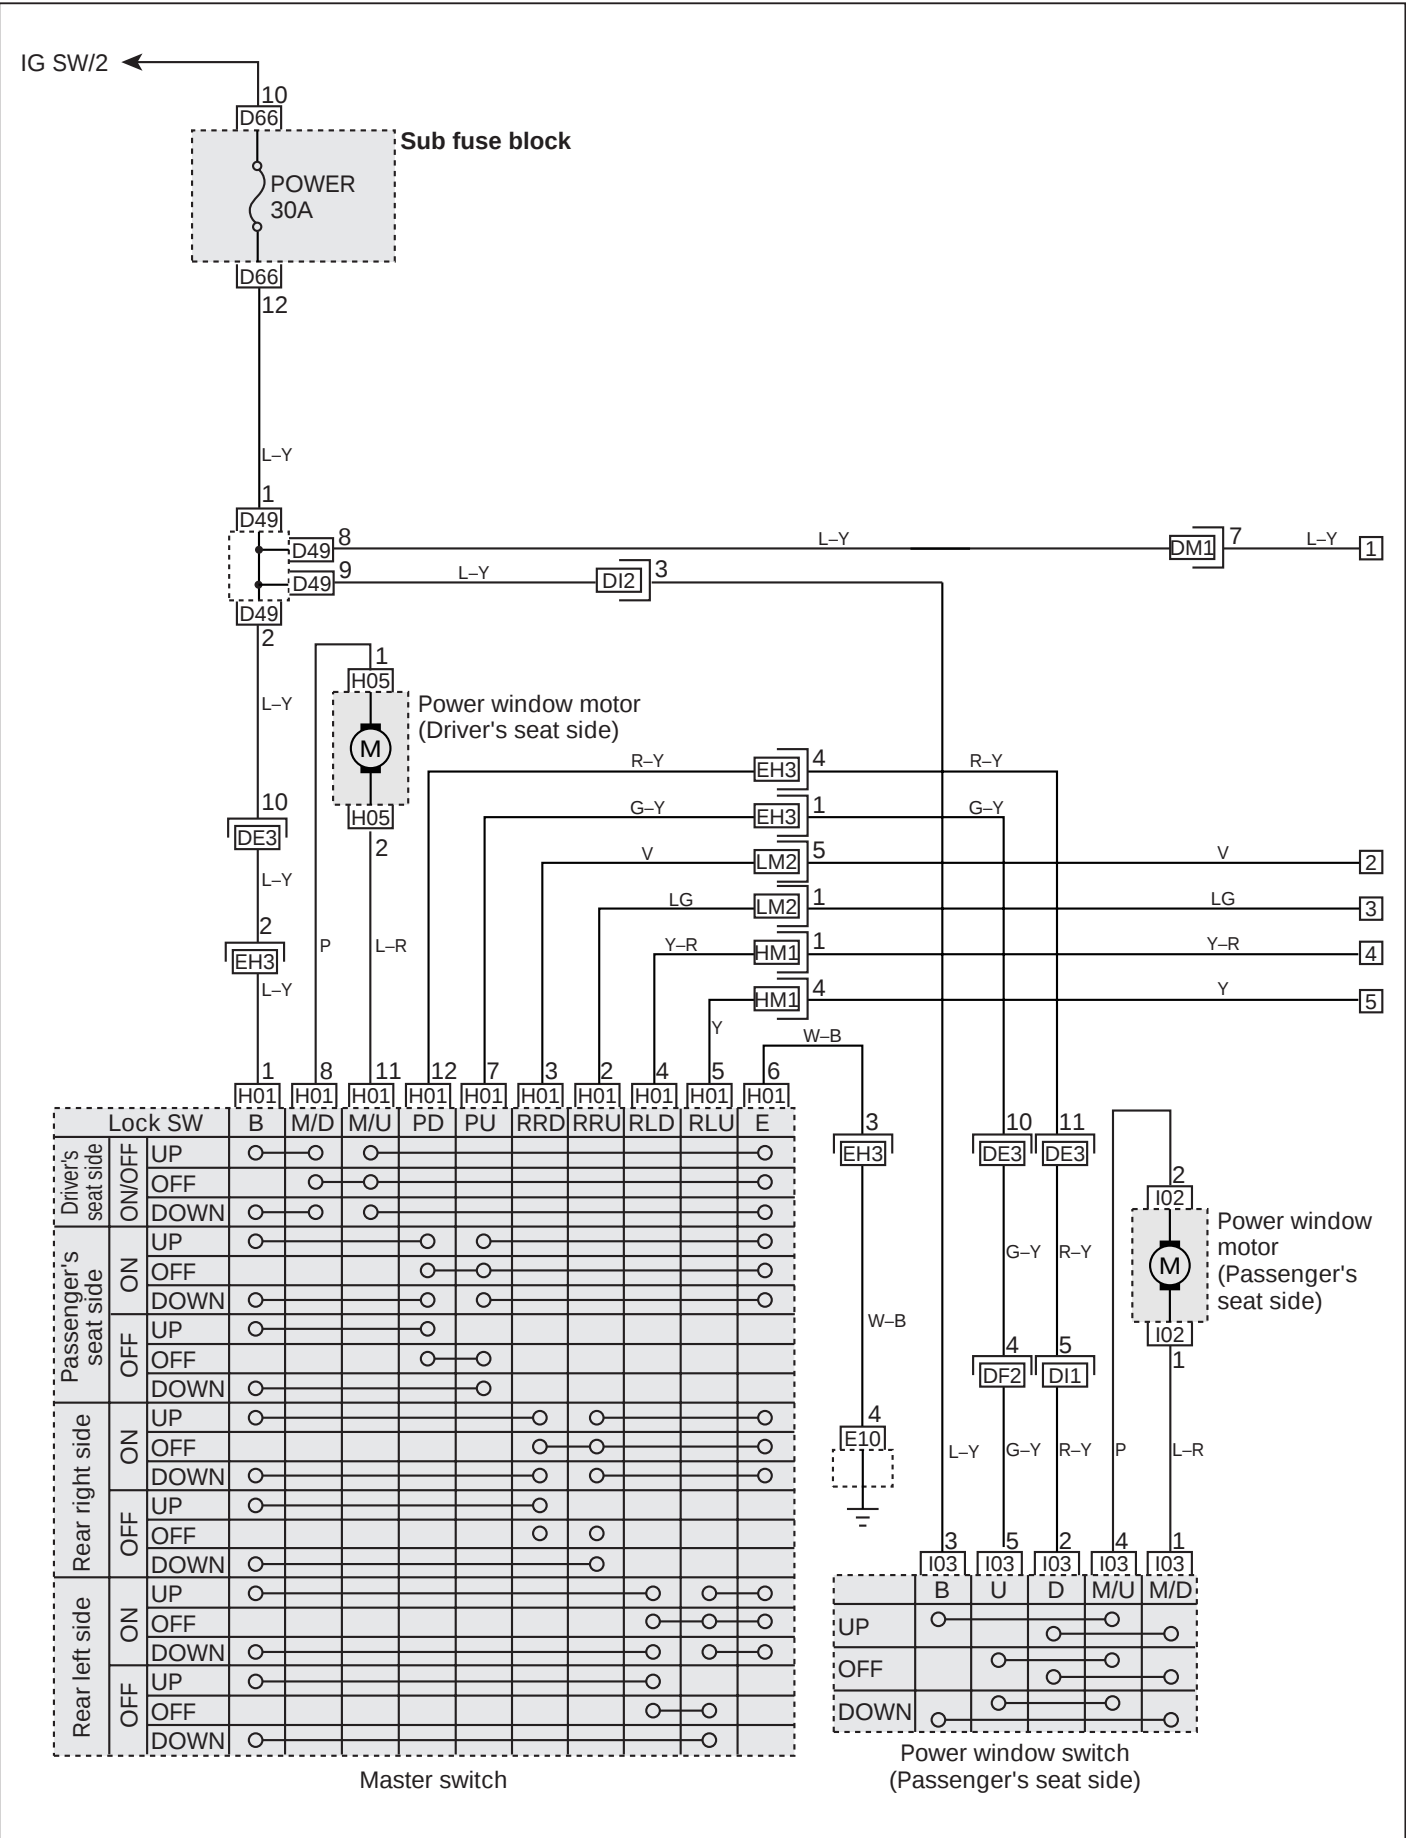POWER WINDOW (RHD) -1




POWER WINDOW (RHD) -2

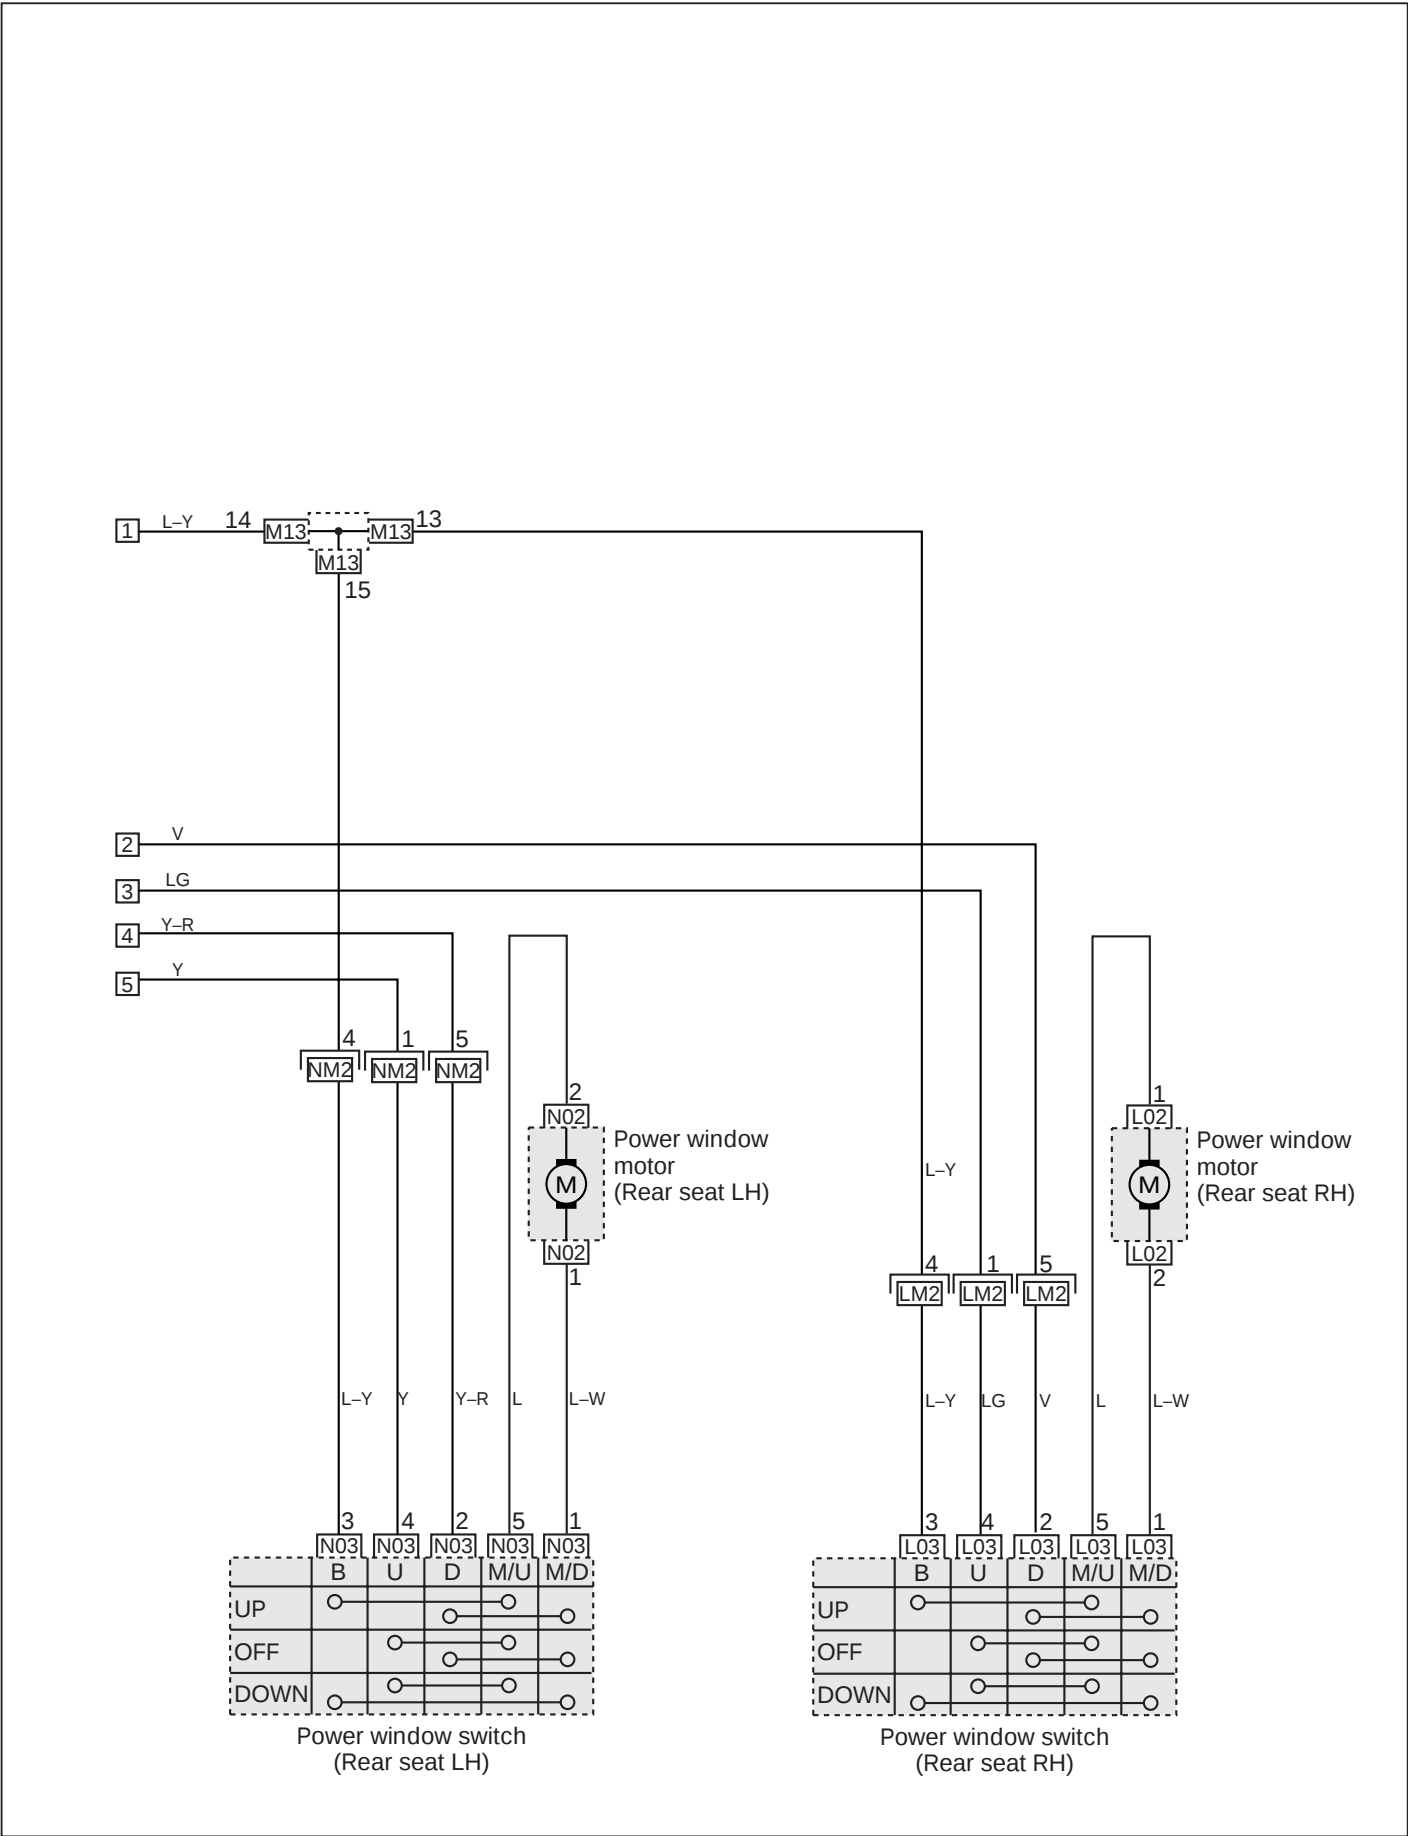


HW-114

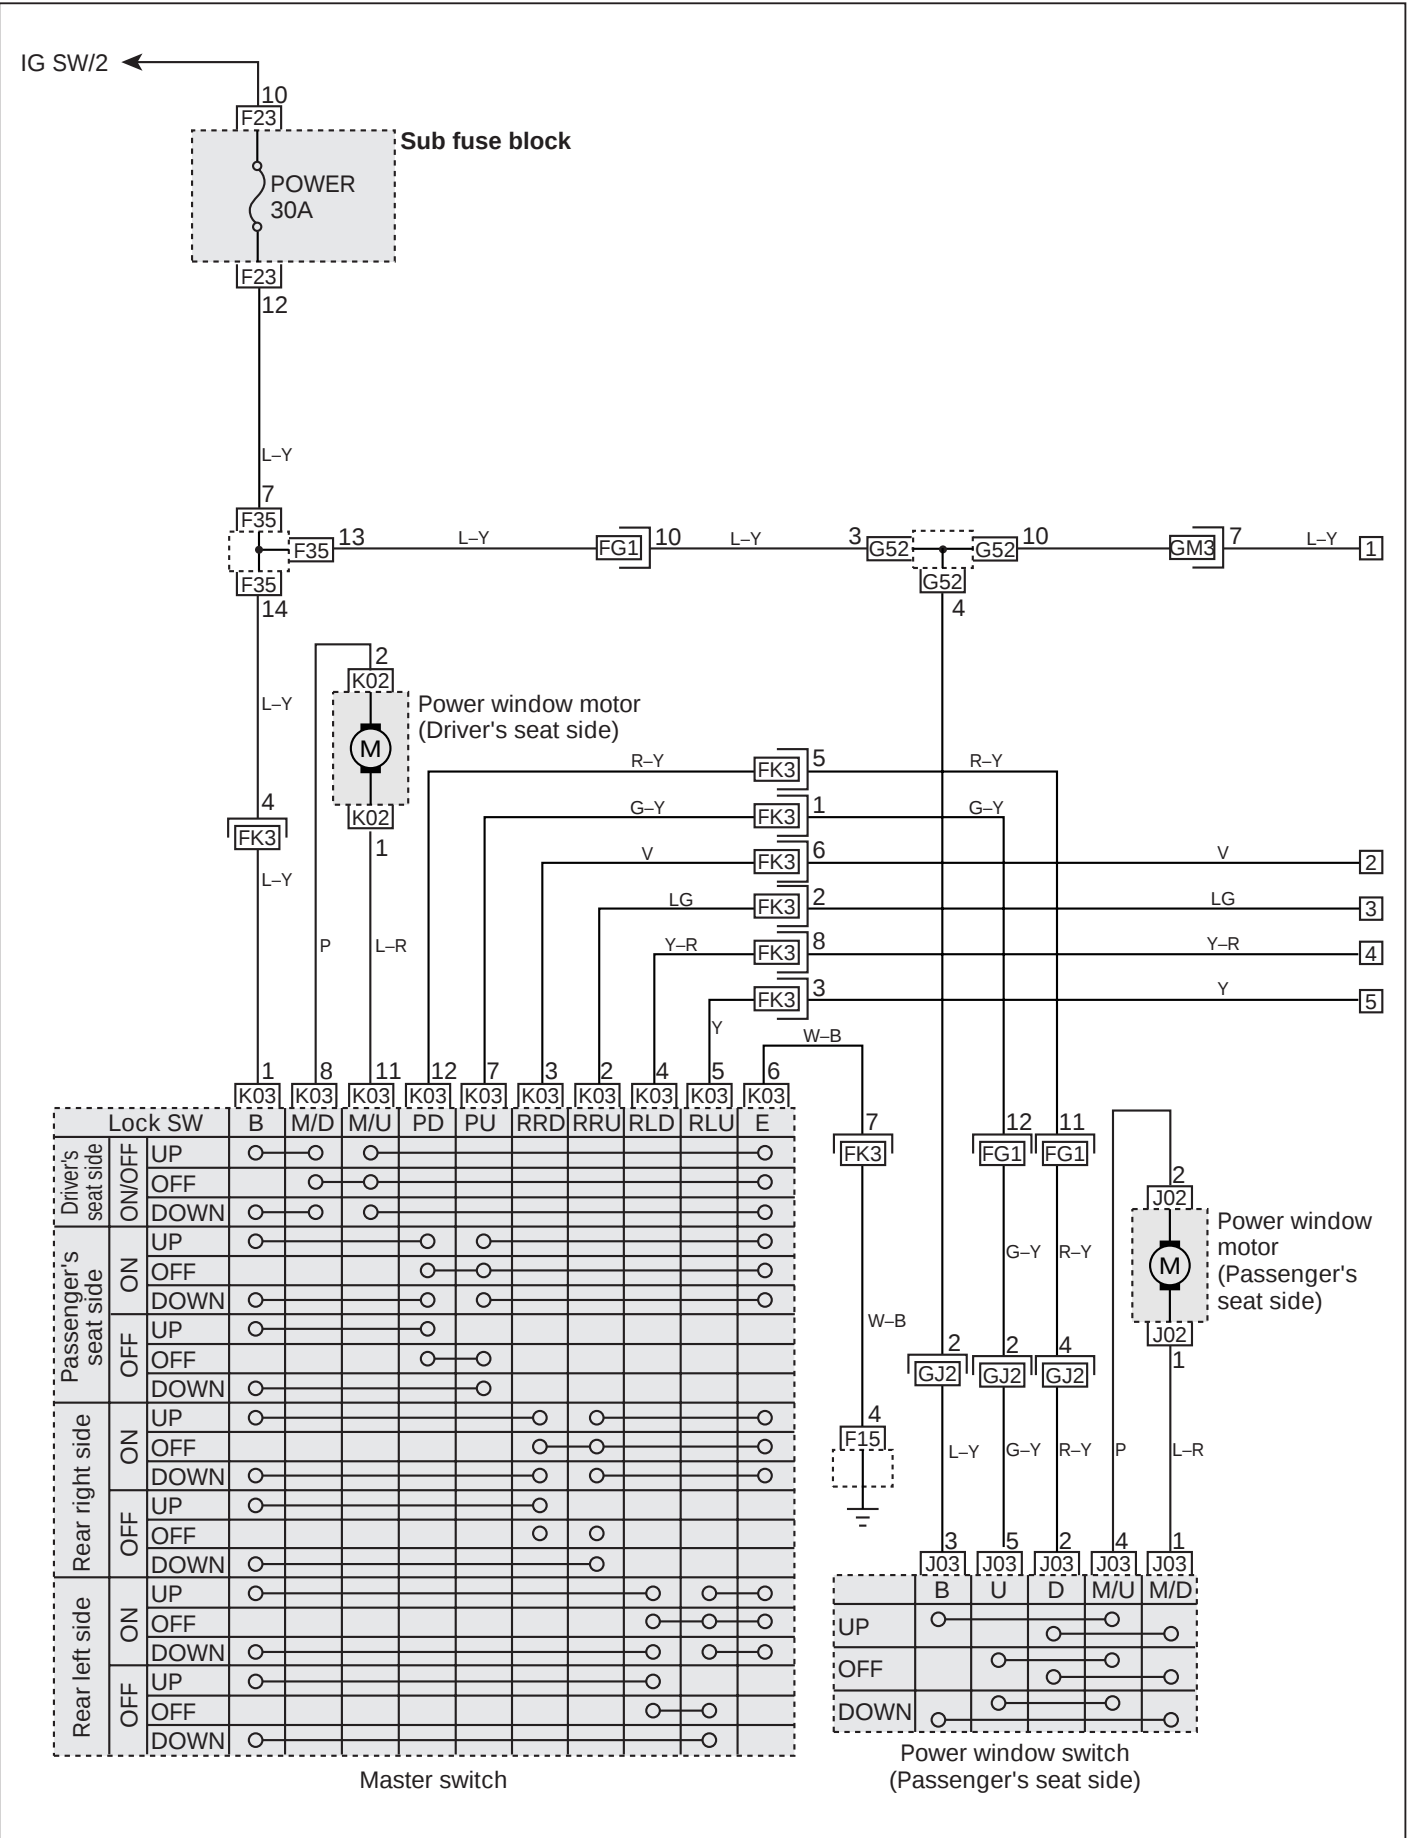POWER WINDOW (LHD) -1




POWER WINDOW (LHD) -2

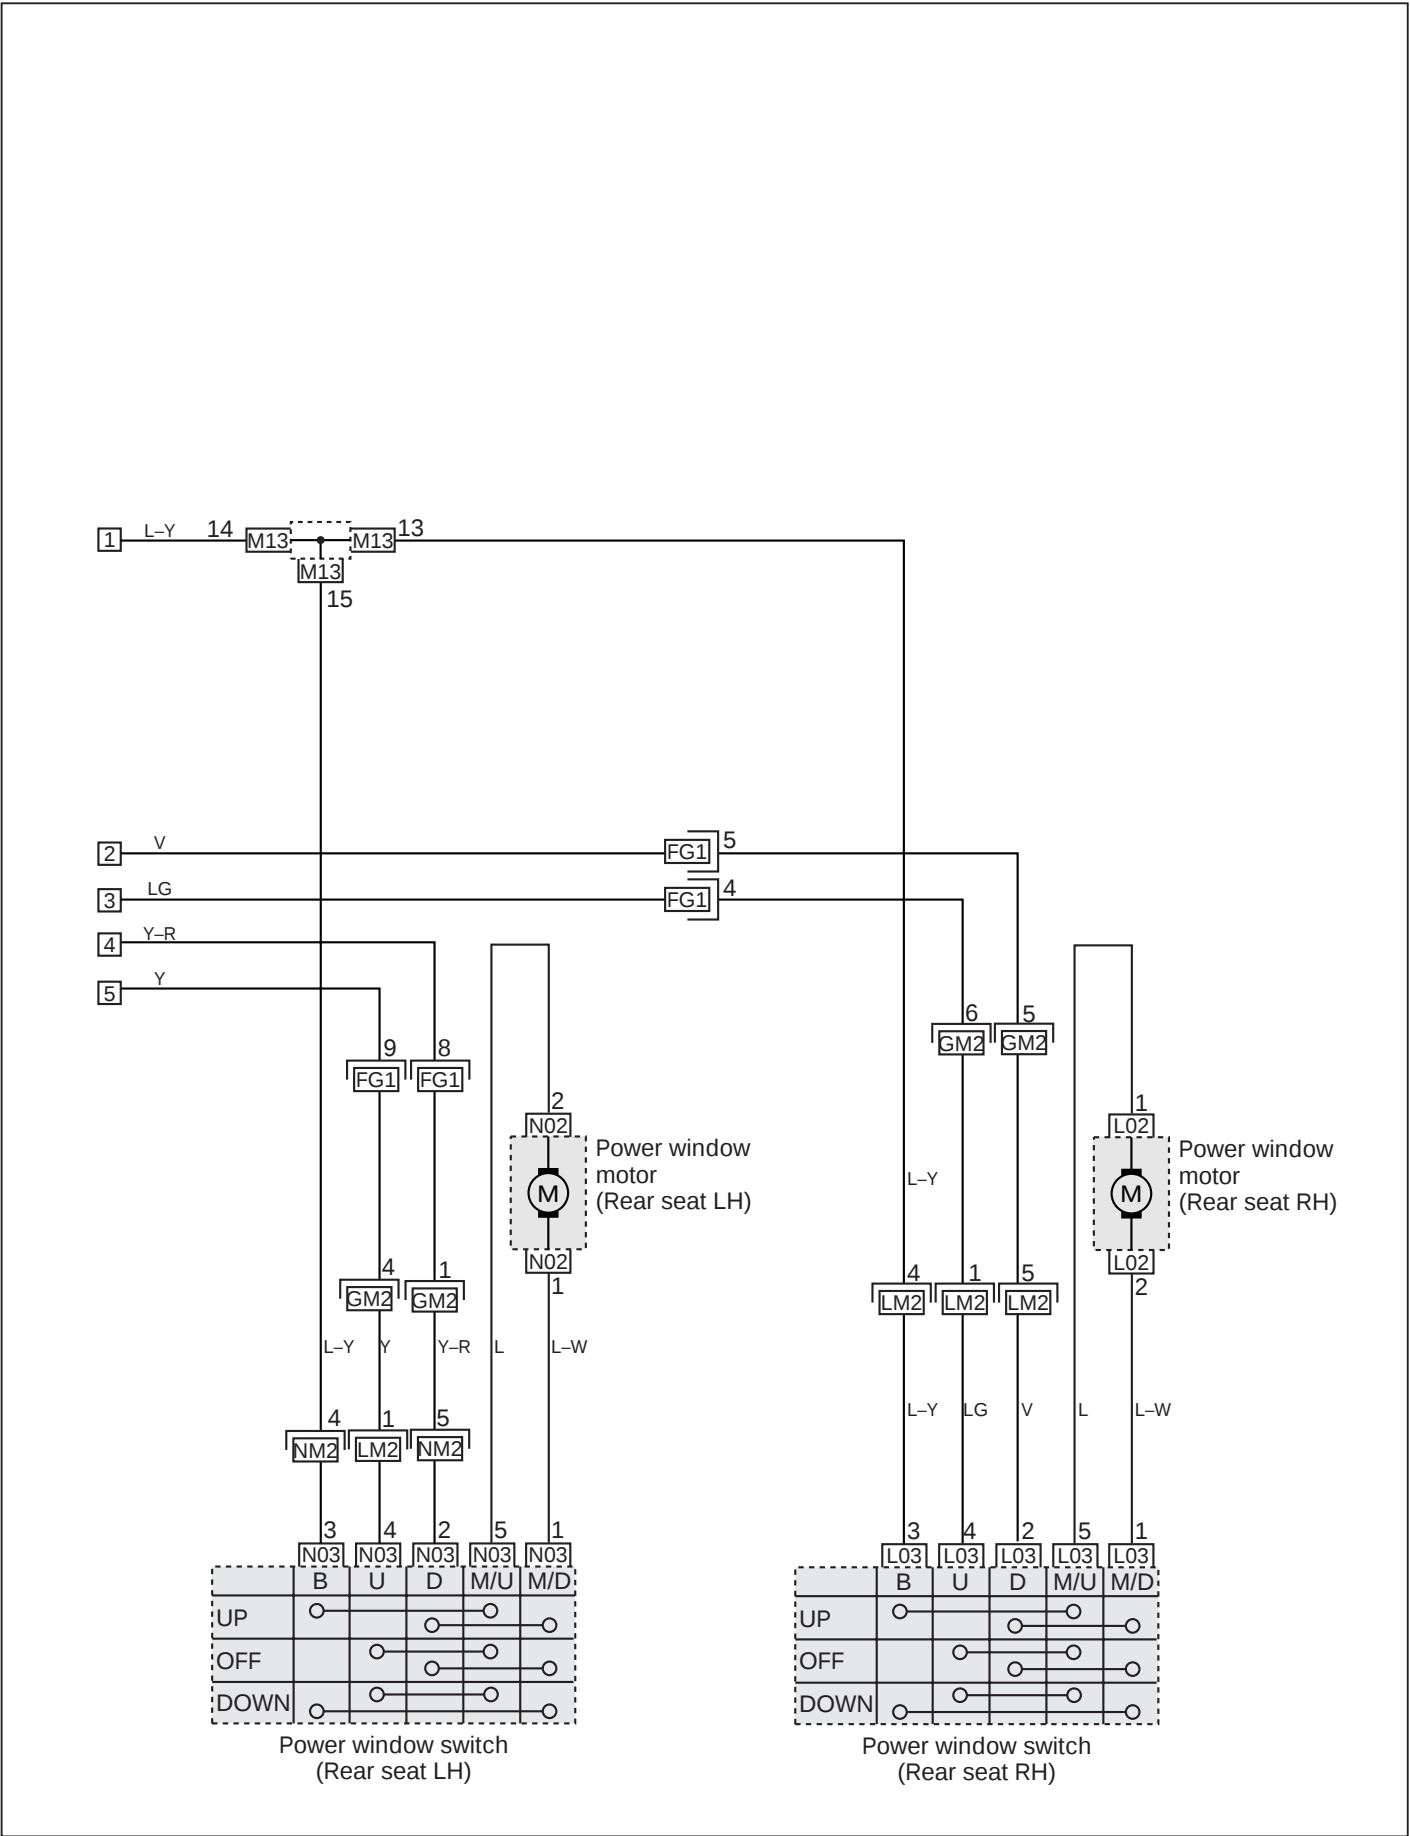

HW-116

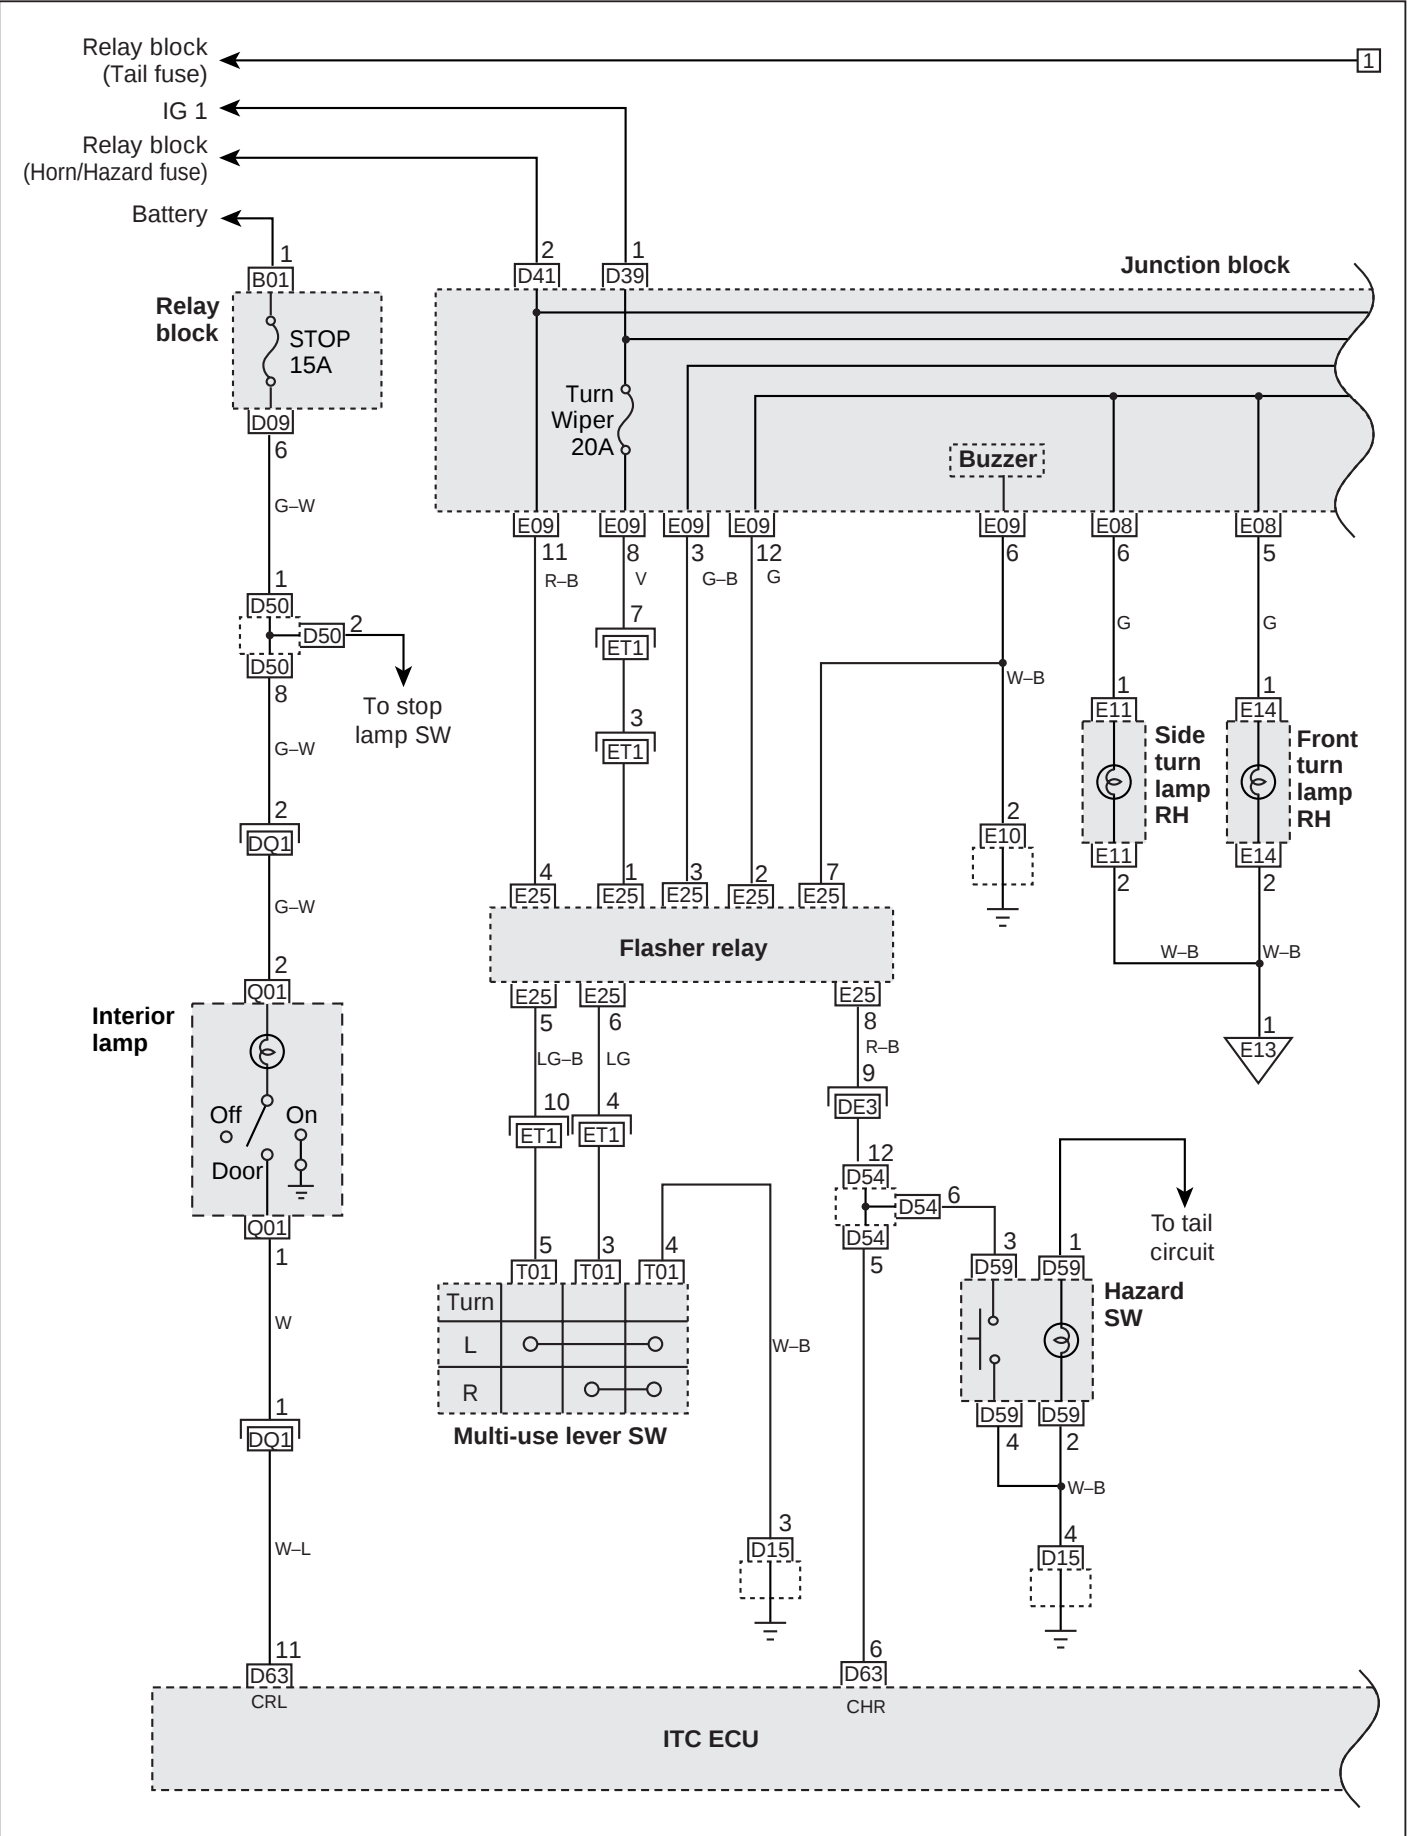
ITC SYSTEM (RHD) -1





HW-118

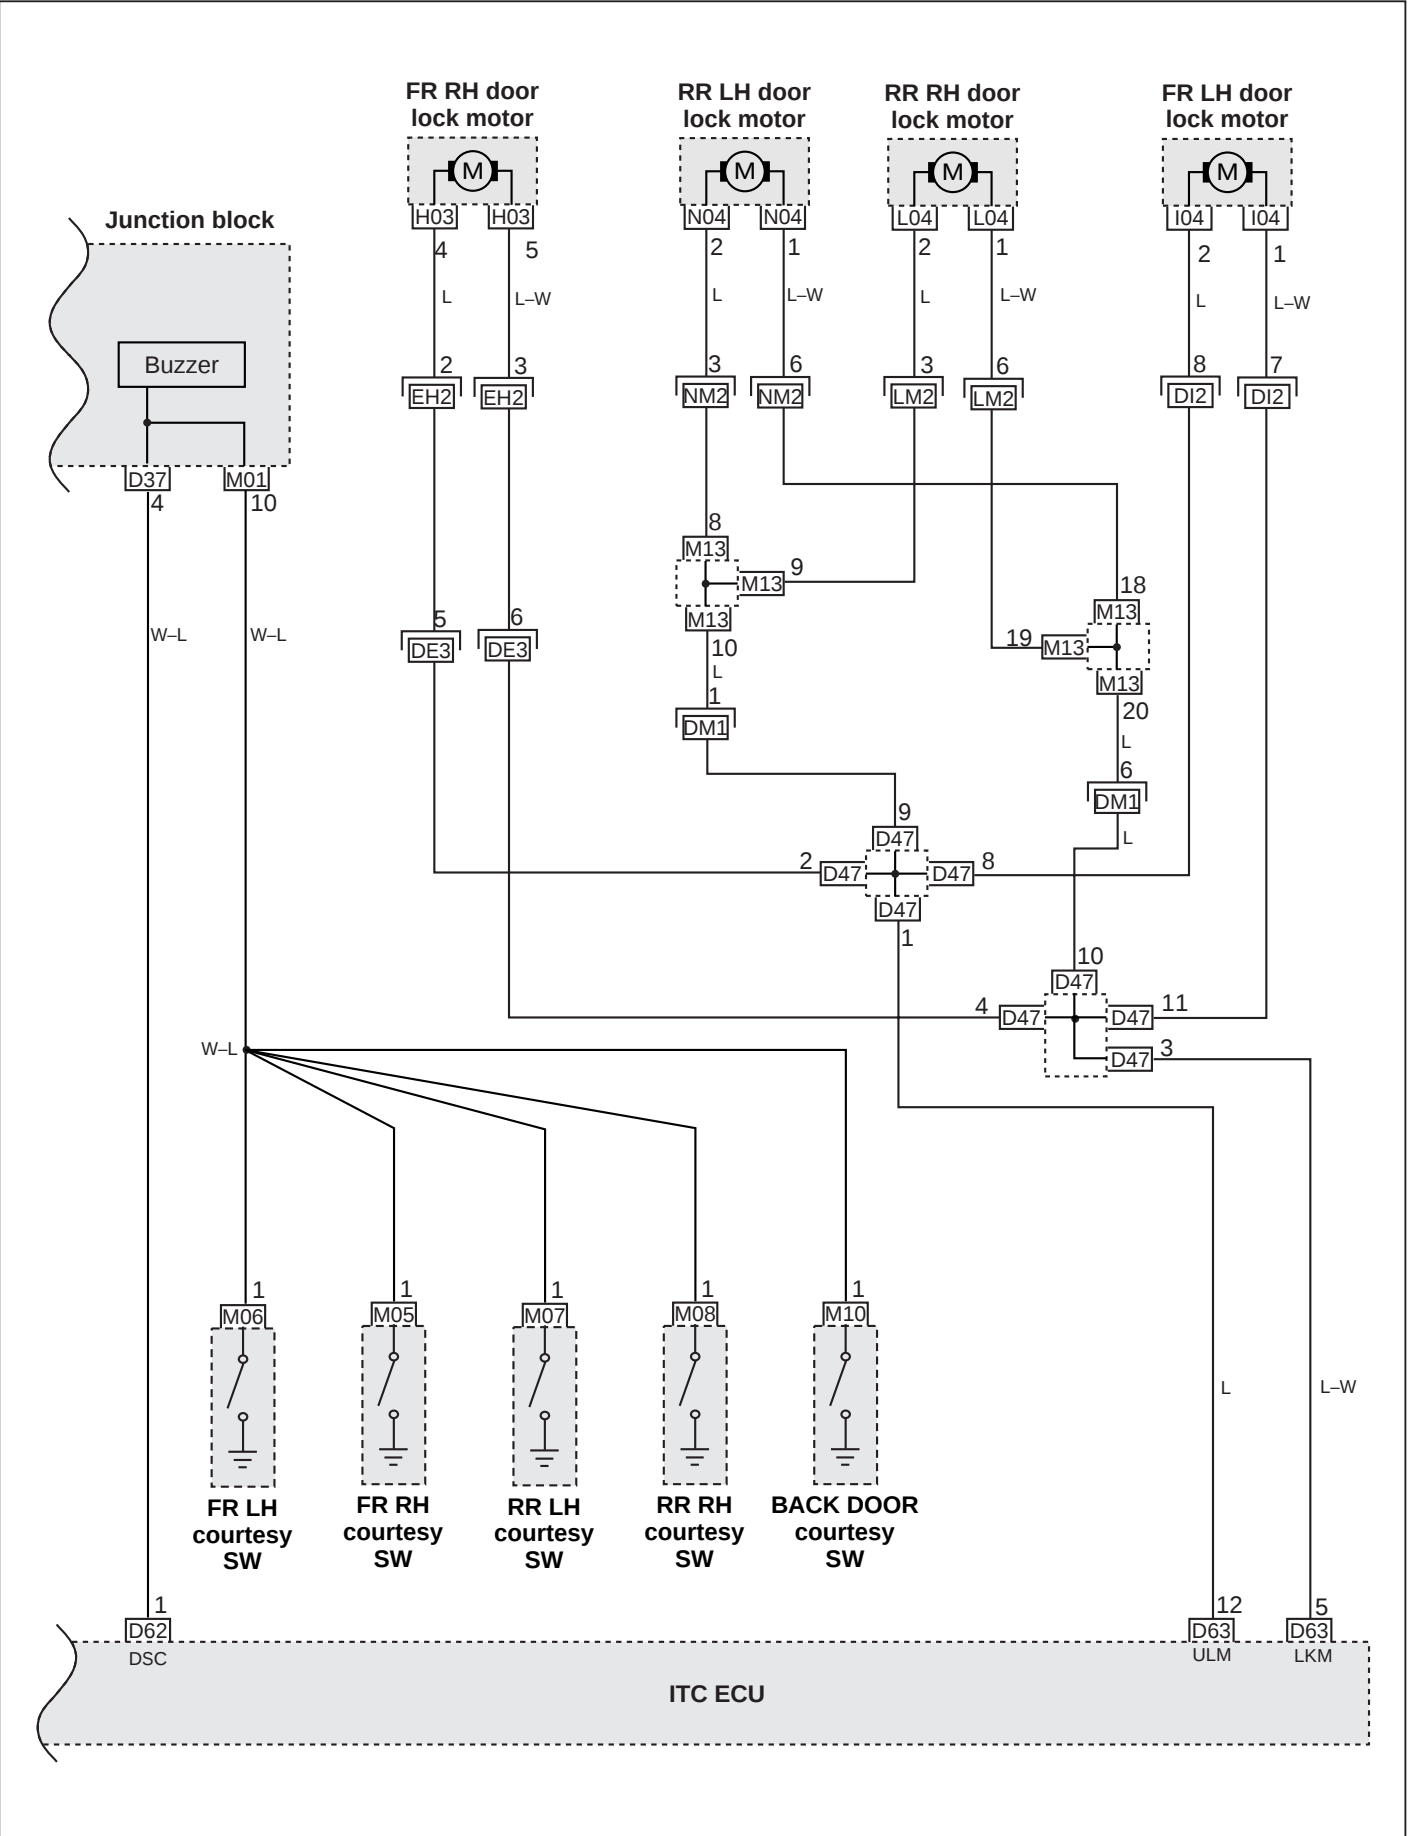
ITC SYSTEM (RHD) -3




MEMO

Handwriting practice area with 25 horizontal dashed lines.

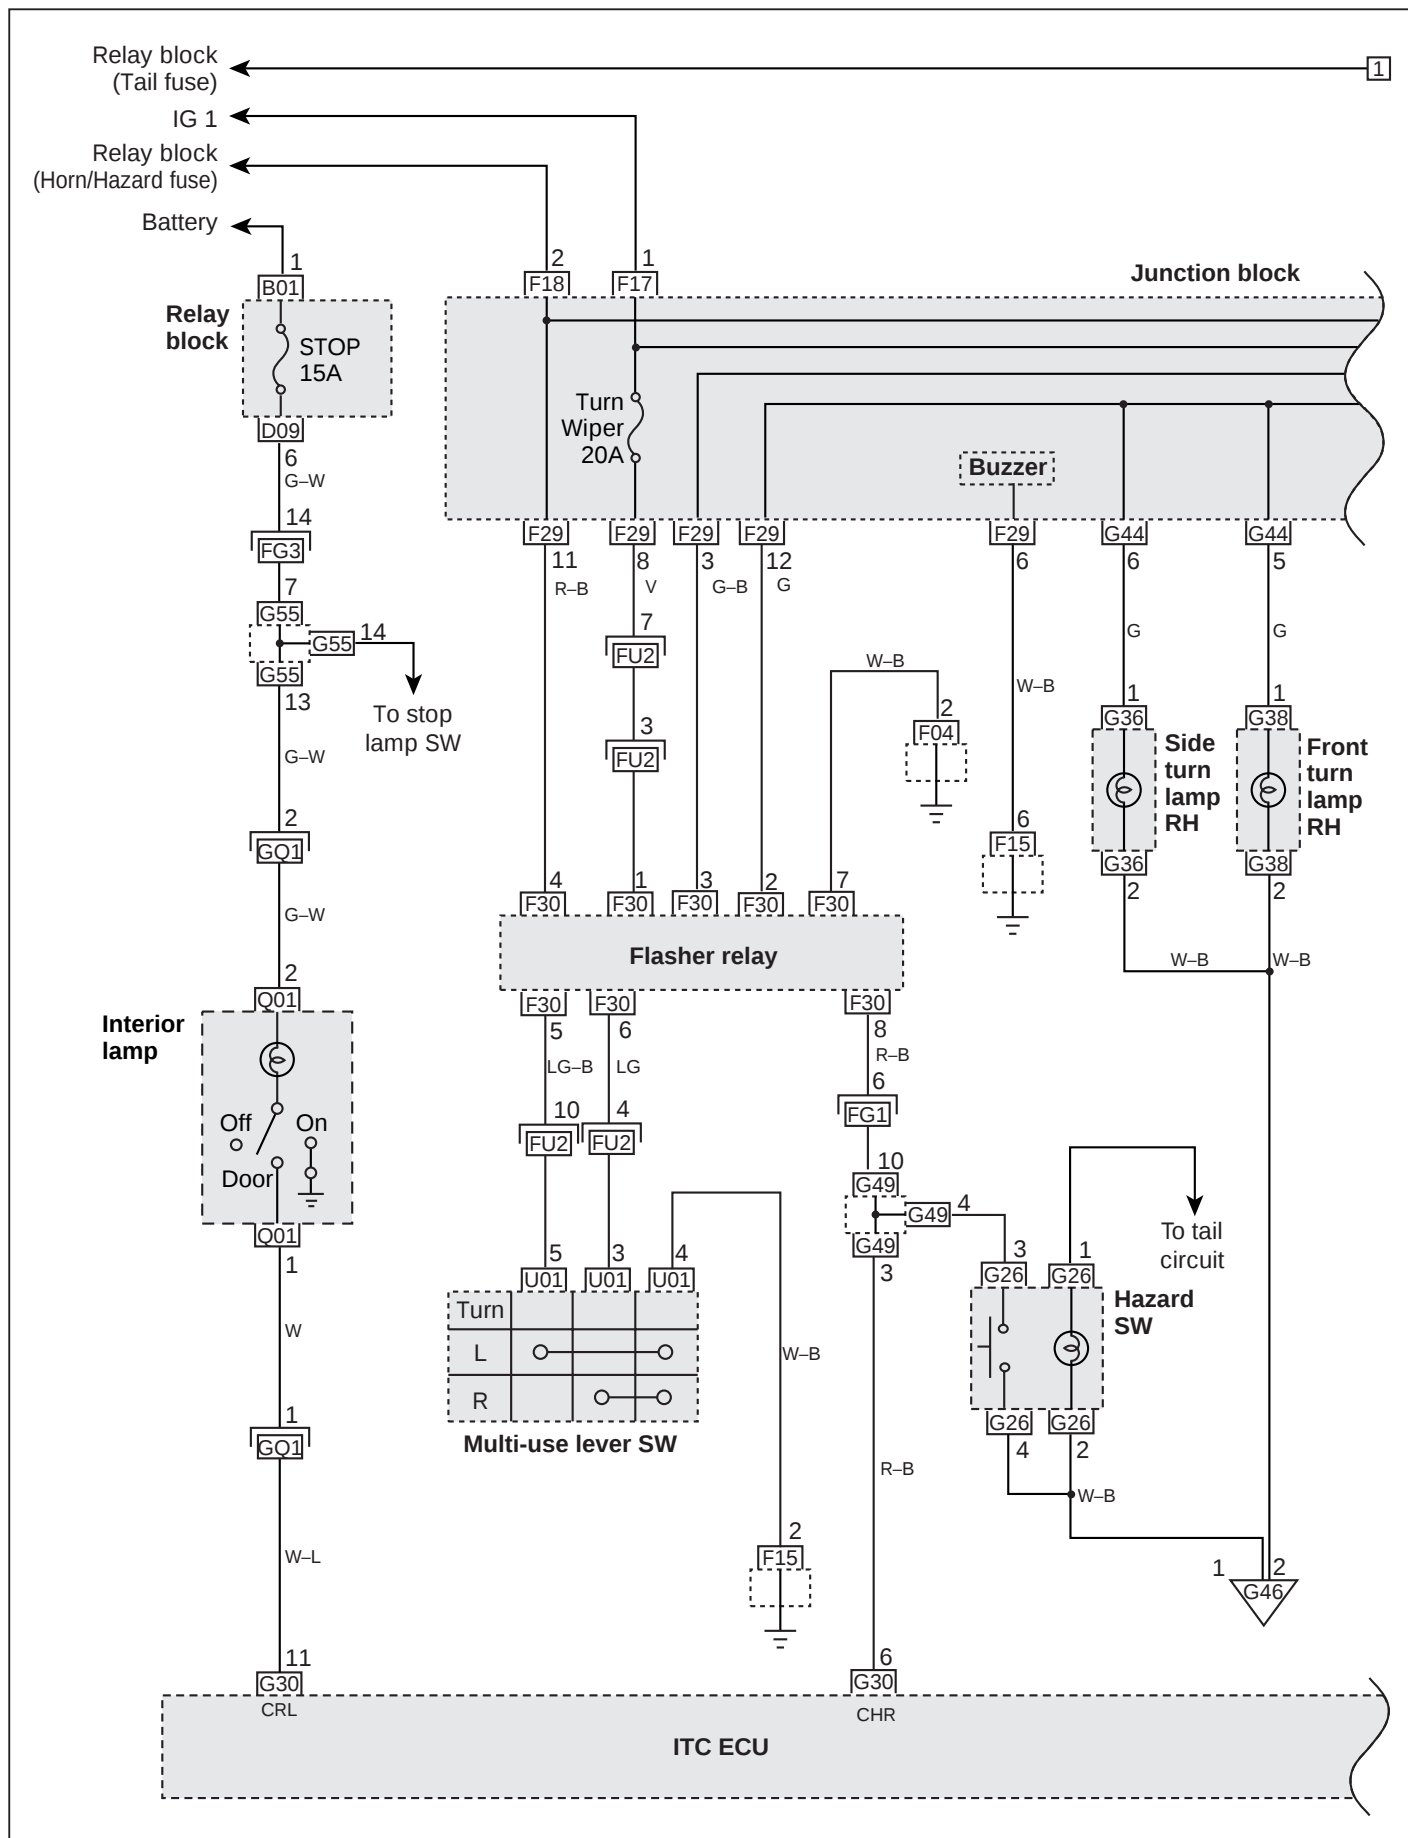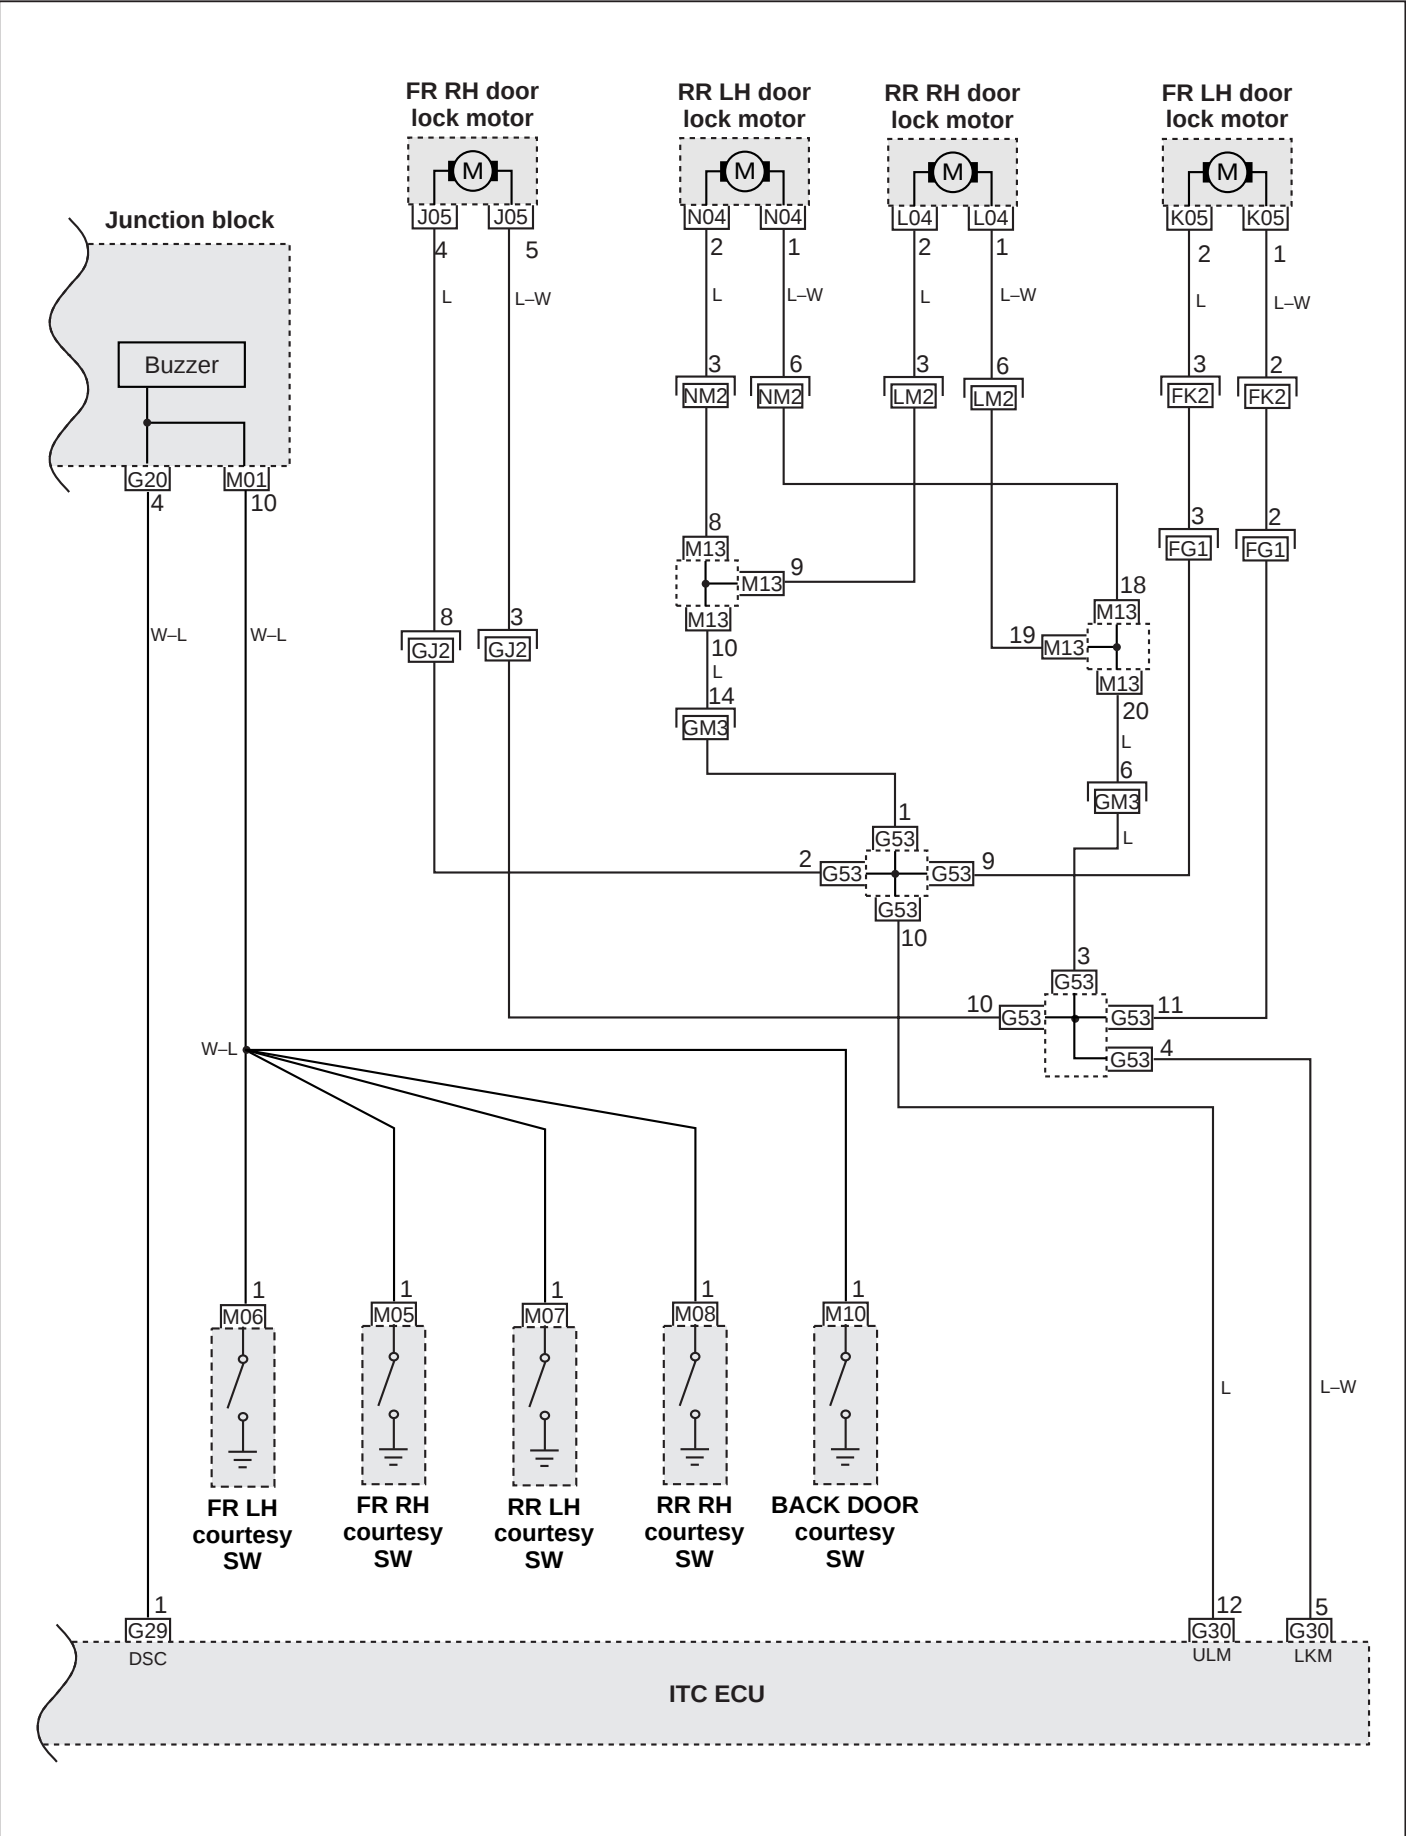ITC SYSTEM (LHD) -1








MEMO


Handwriting practice area with 25 horizontal dashed lines.

HW-124

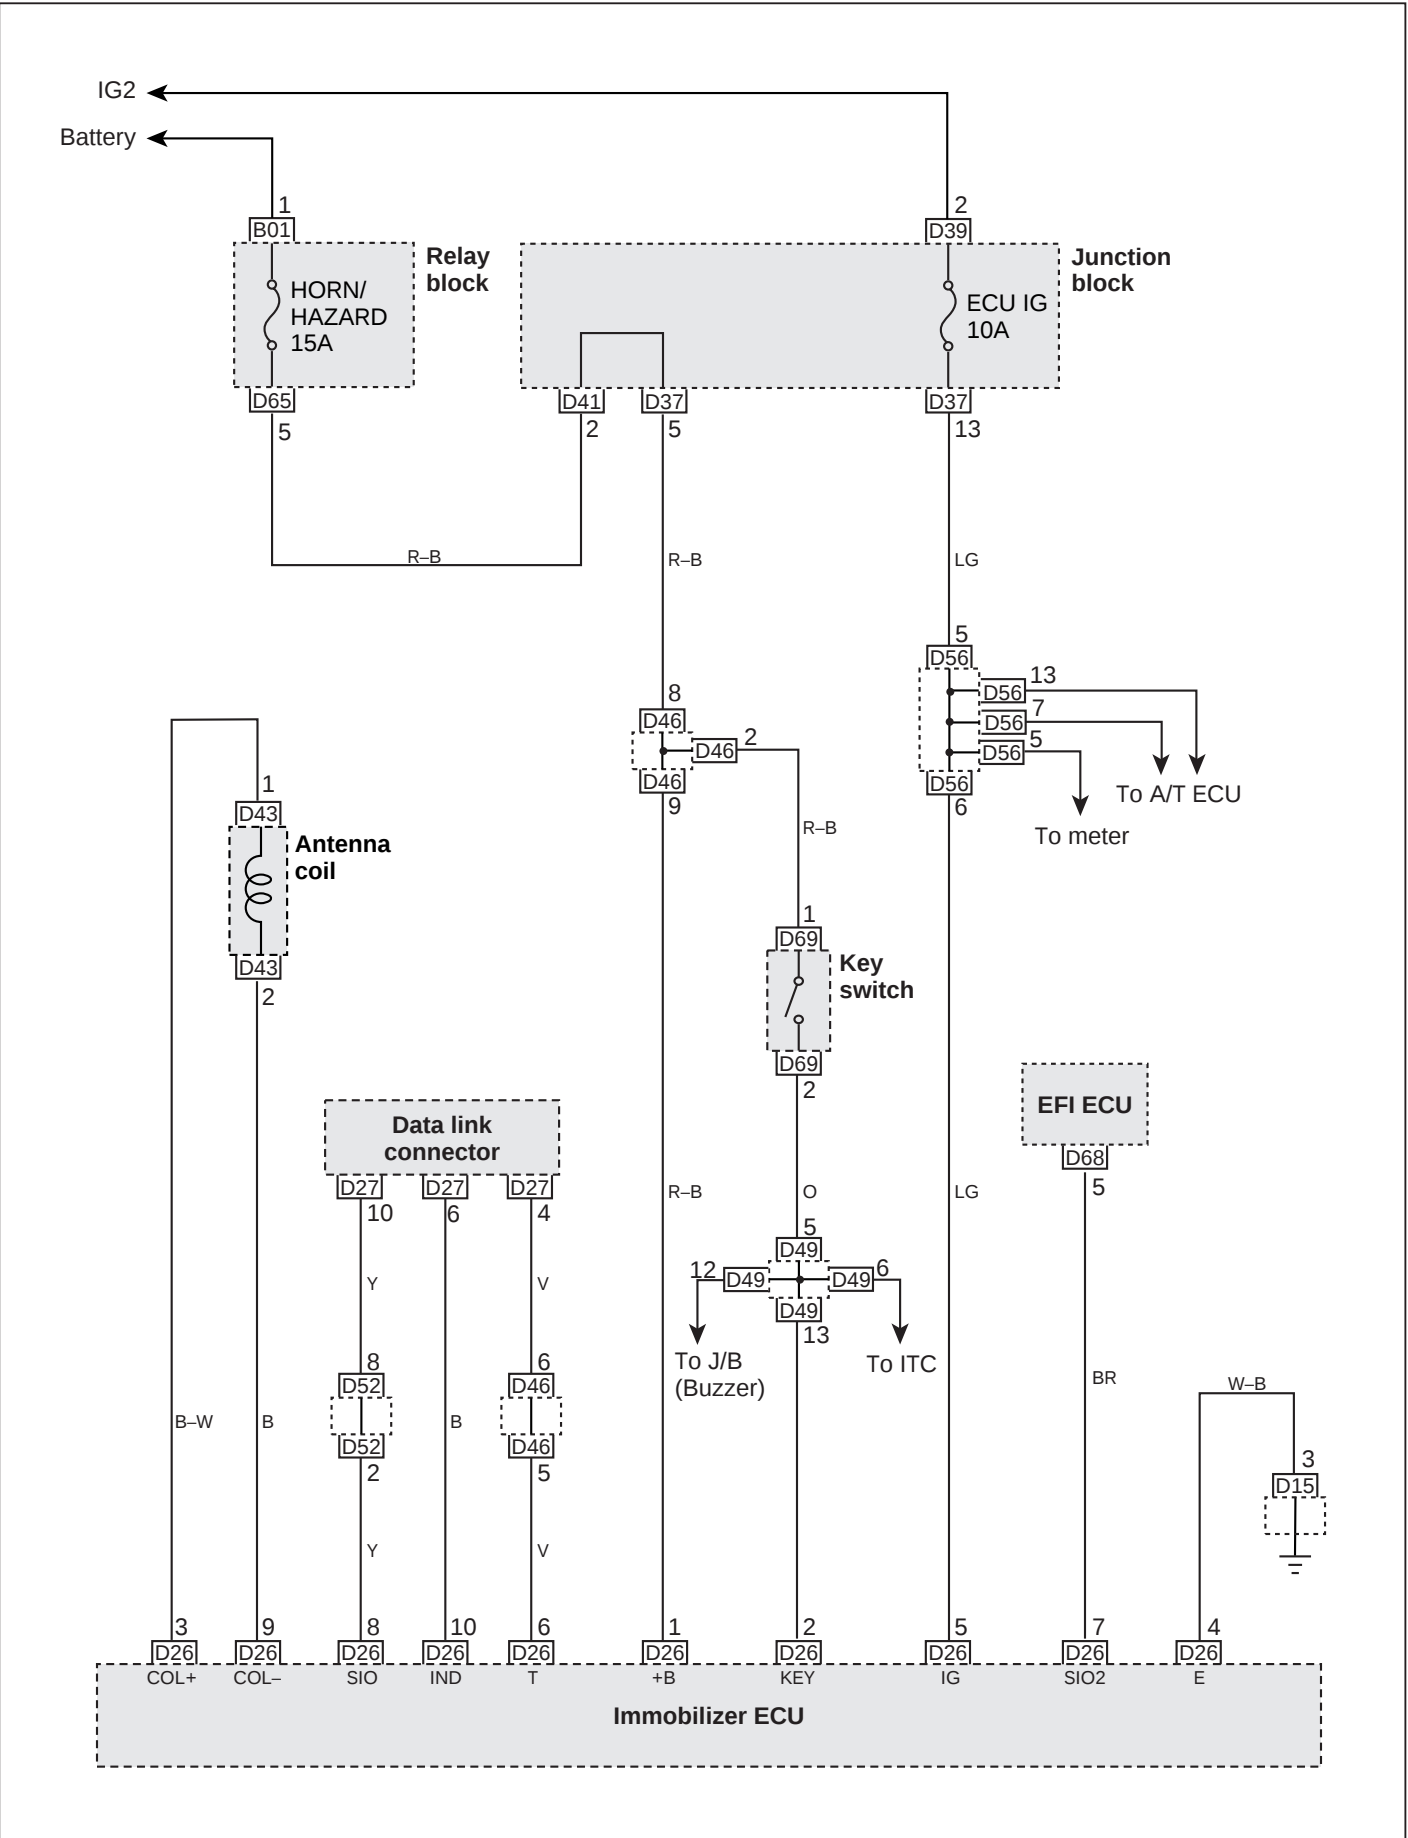IMB SYSTEM (K3-VE2 & EJ-VE ENGINE / RHD)




IMB SYSTEM (EJ-DE ENGINE / RHD)

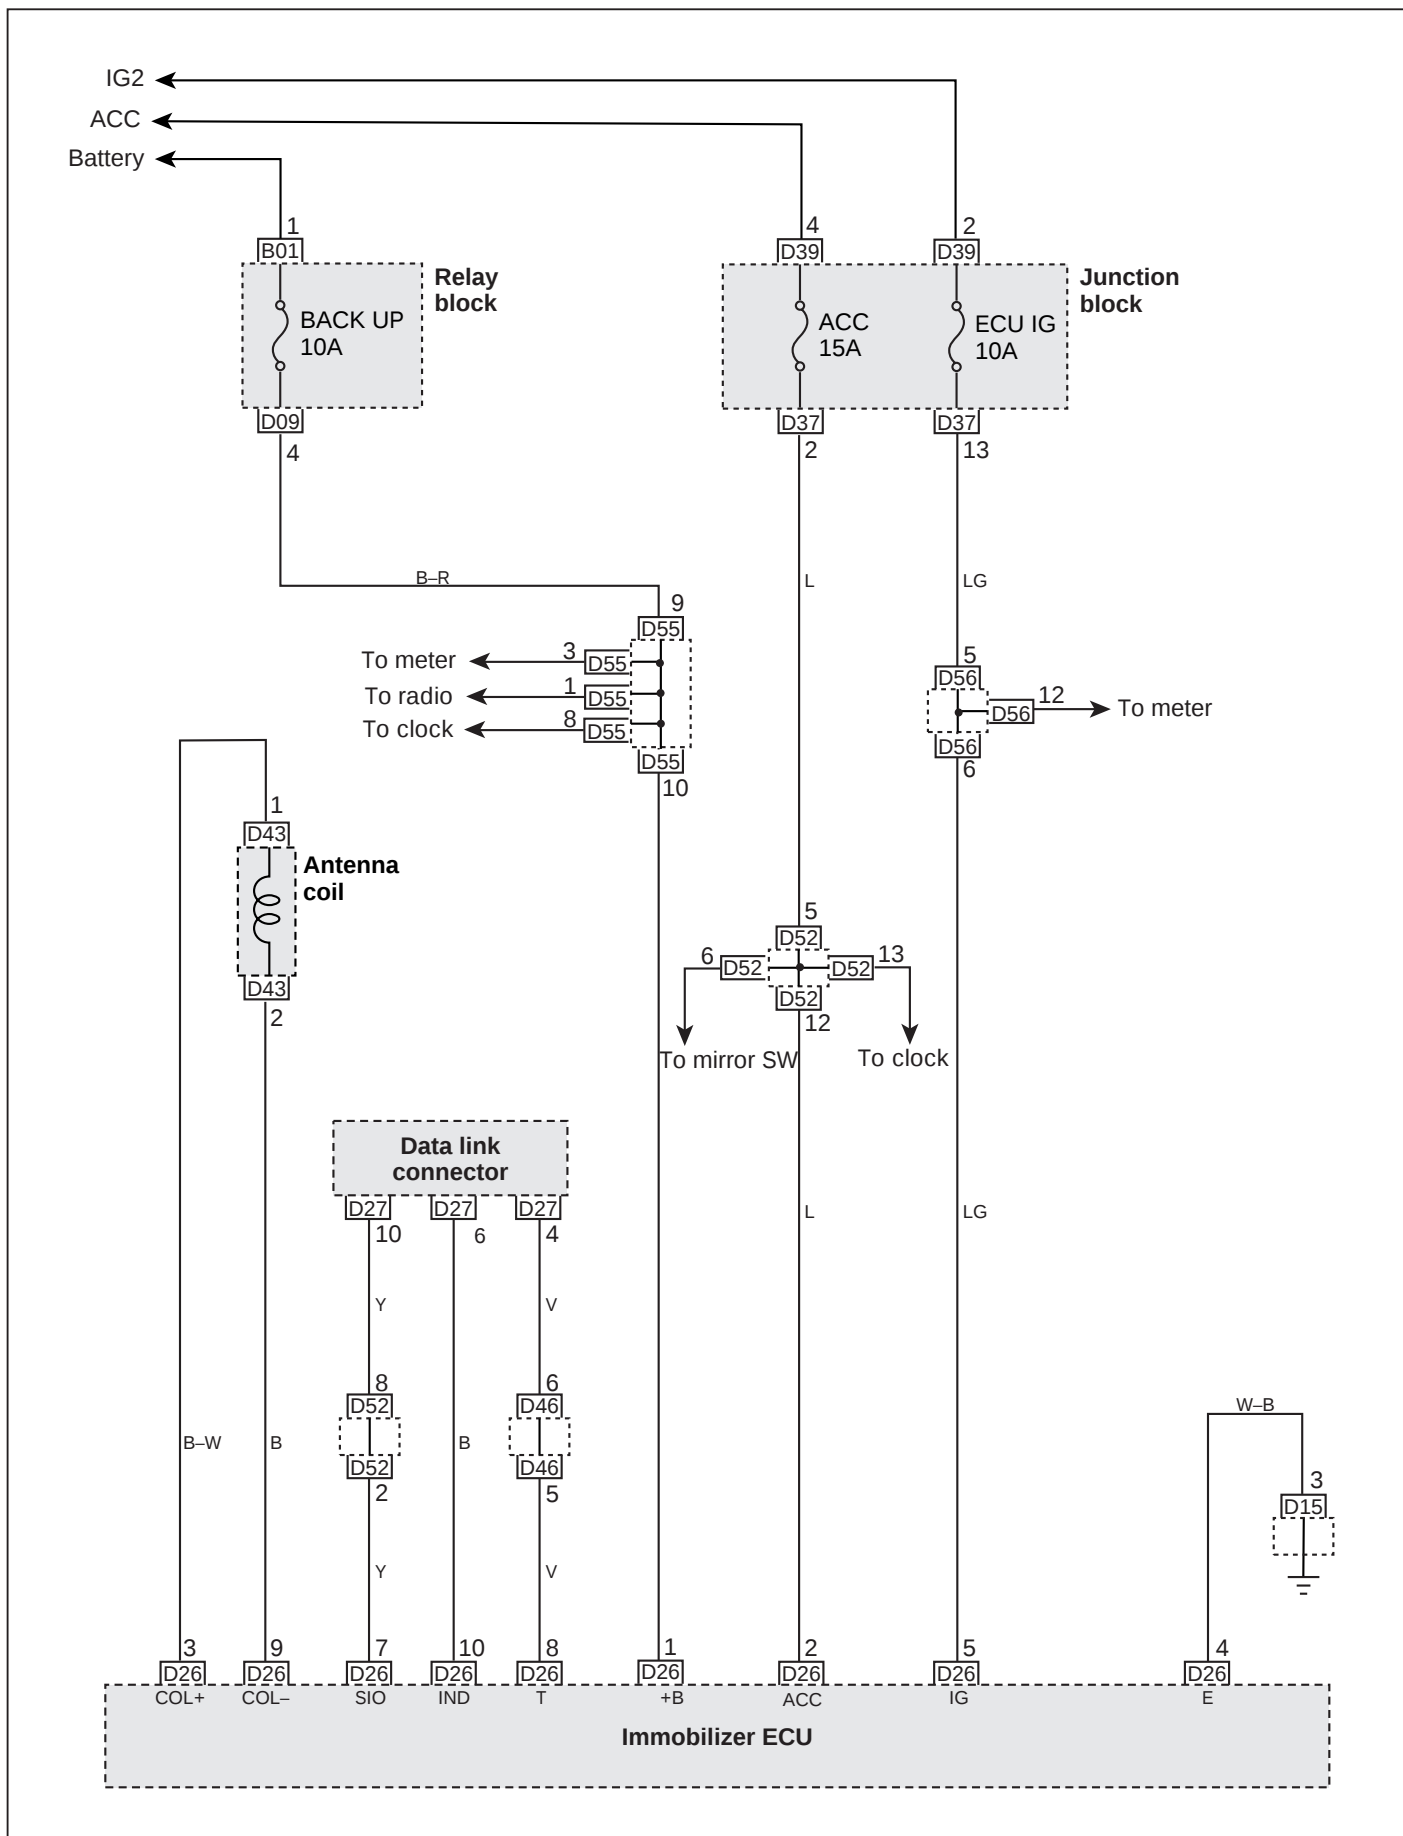


HW-126

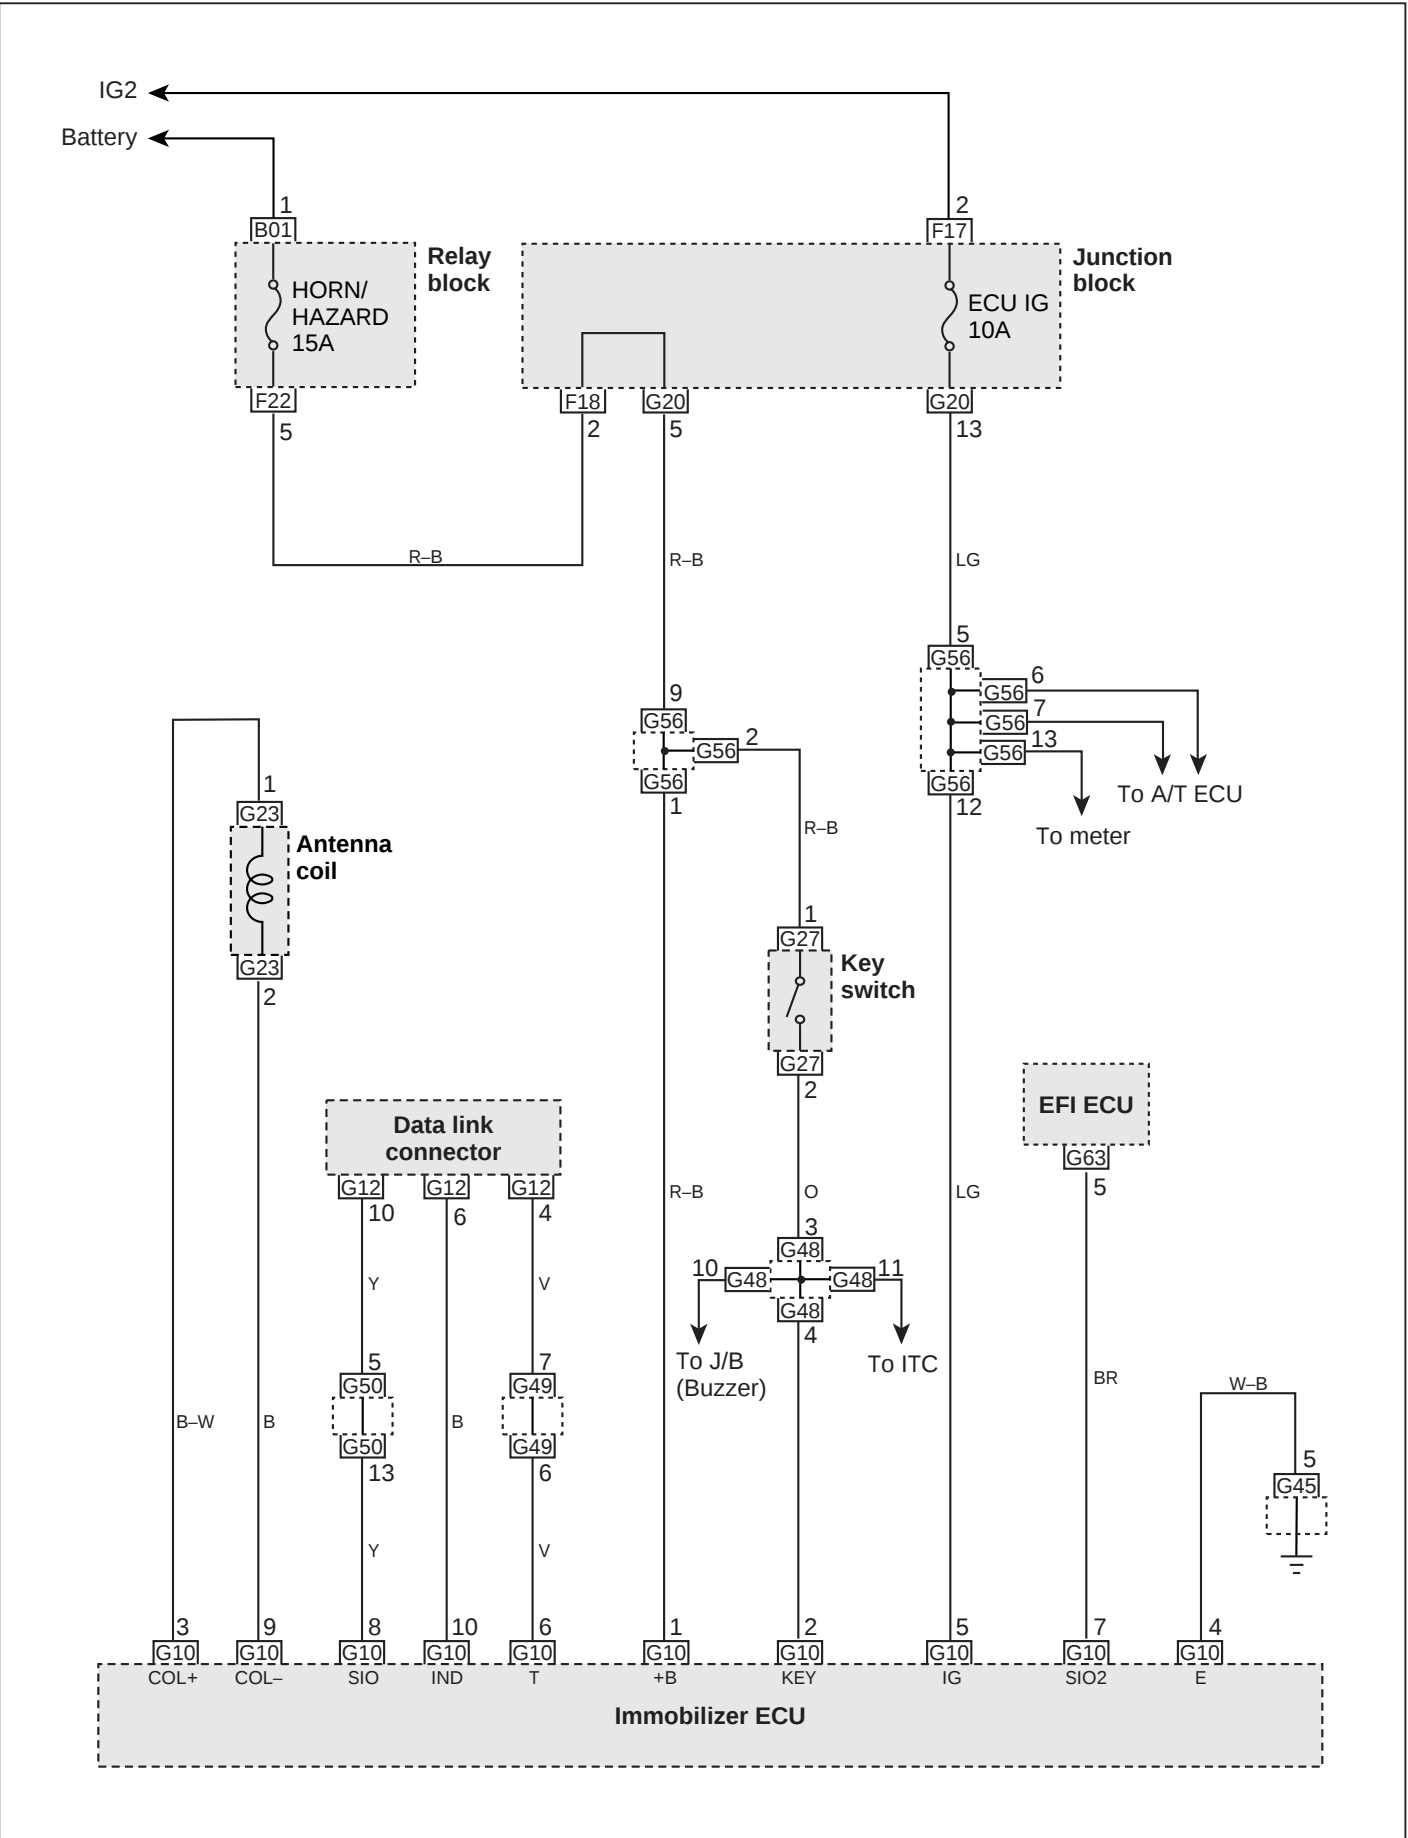IMB SYSTEM (K3-VE & EJ-VE ENGINE / LHD)




IMB SYSTEM (EJ-DE ENGINE / LHD)

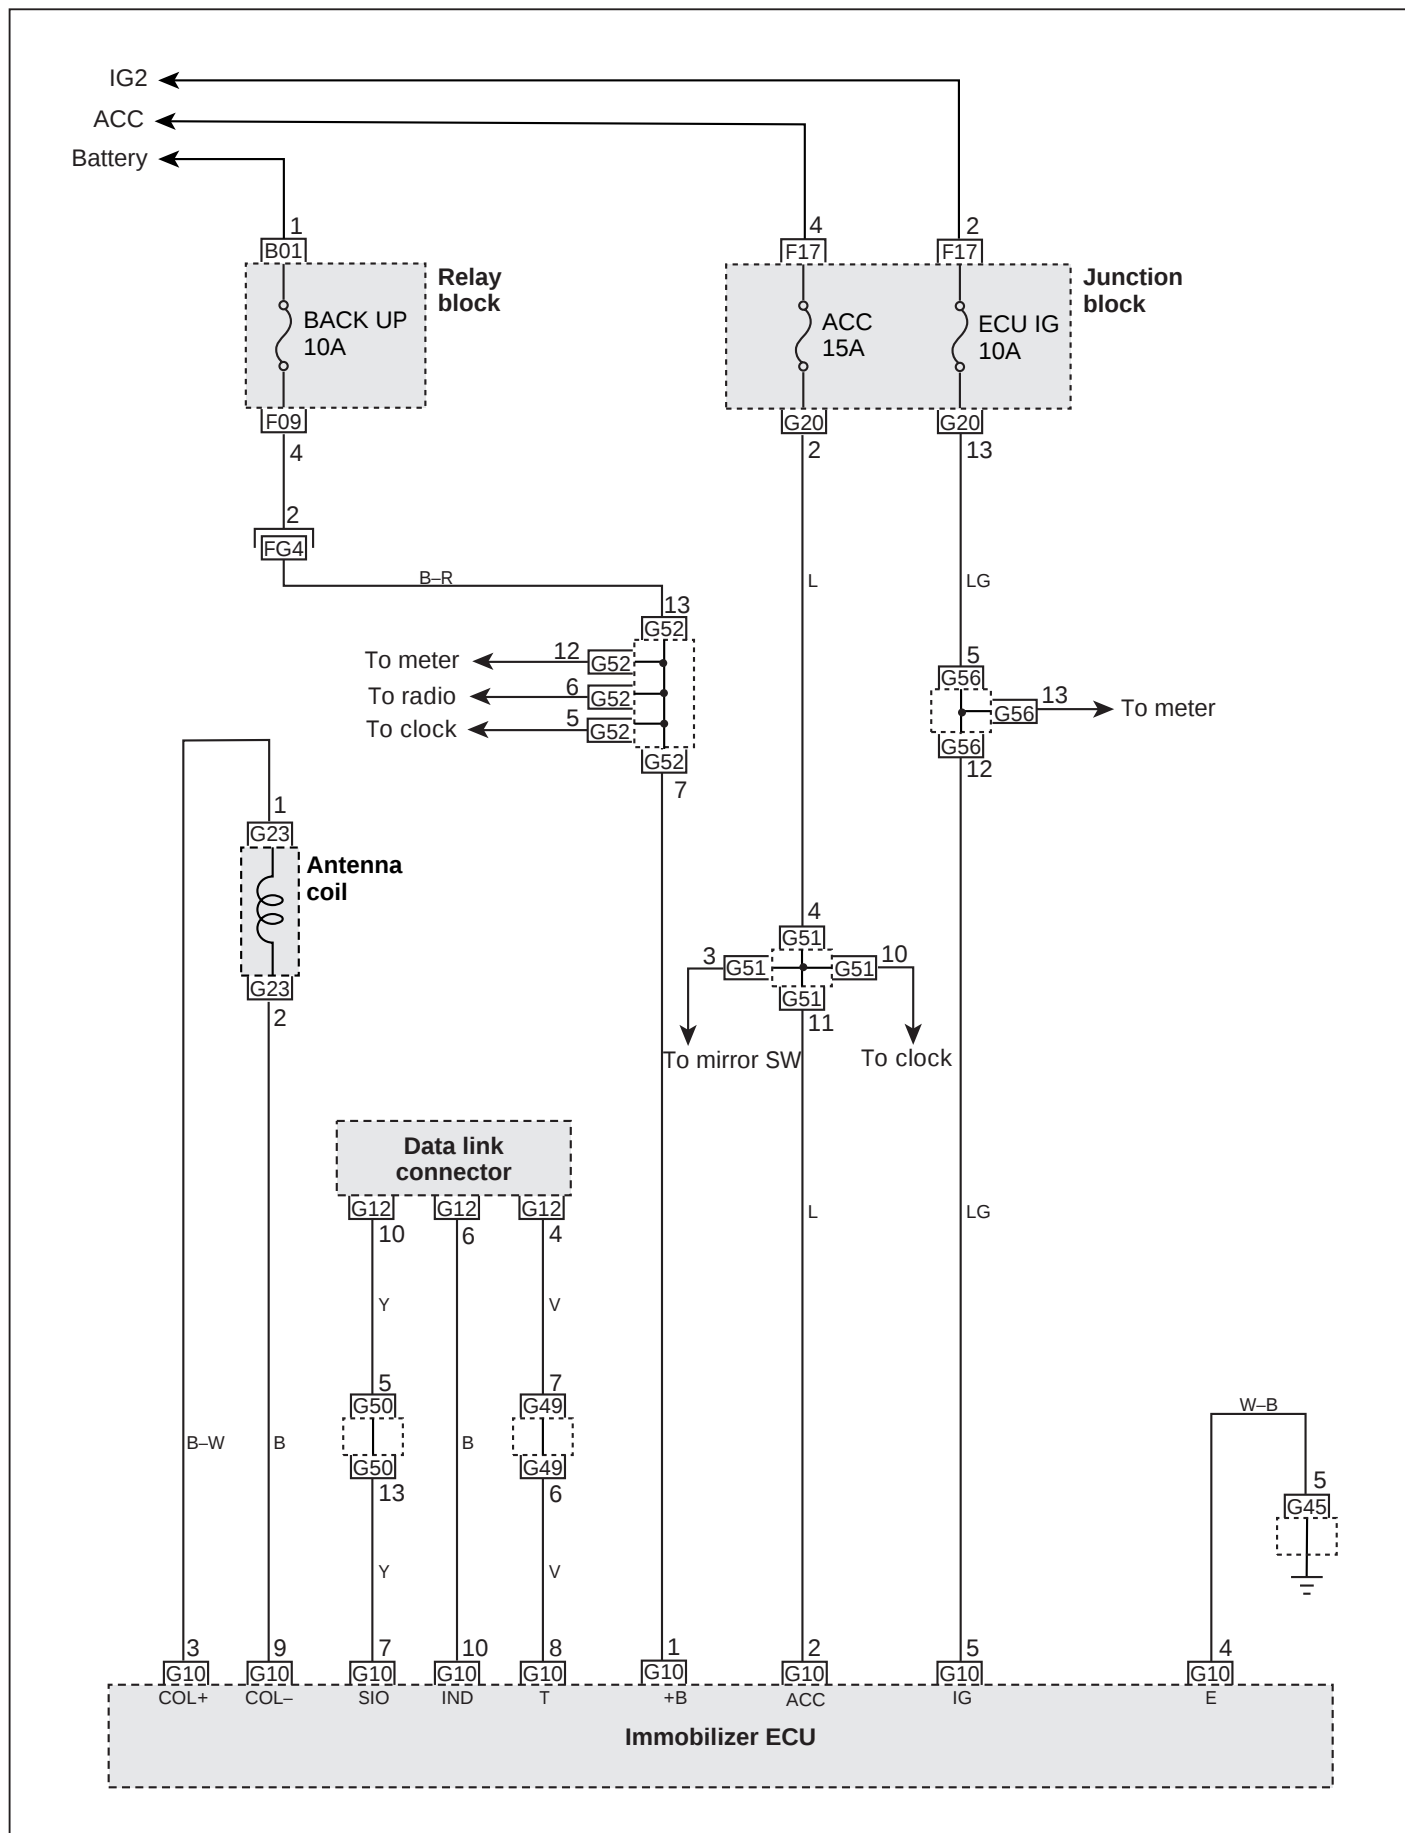


HW-128

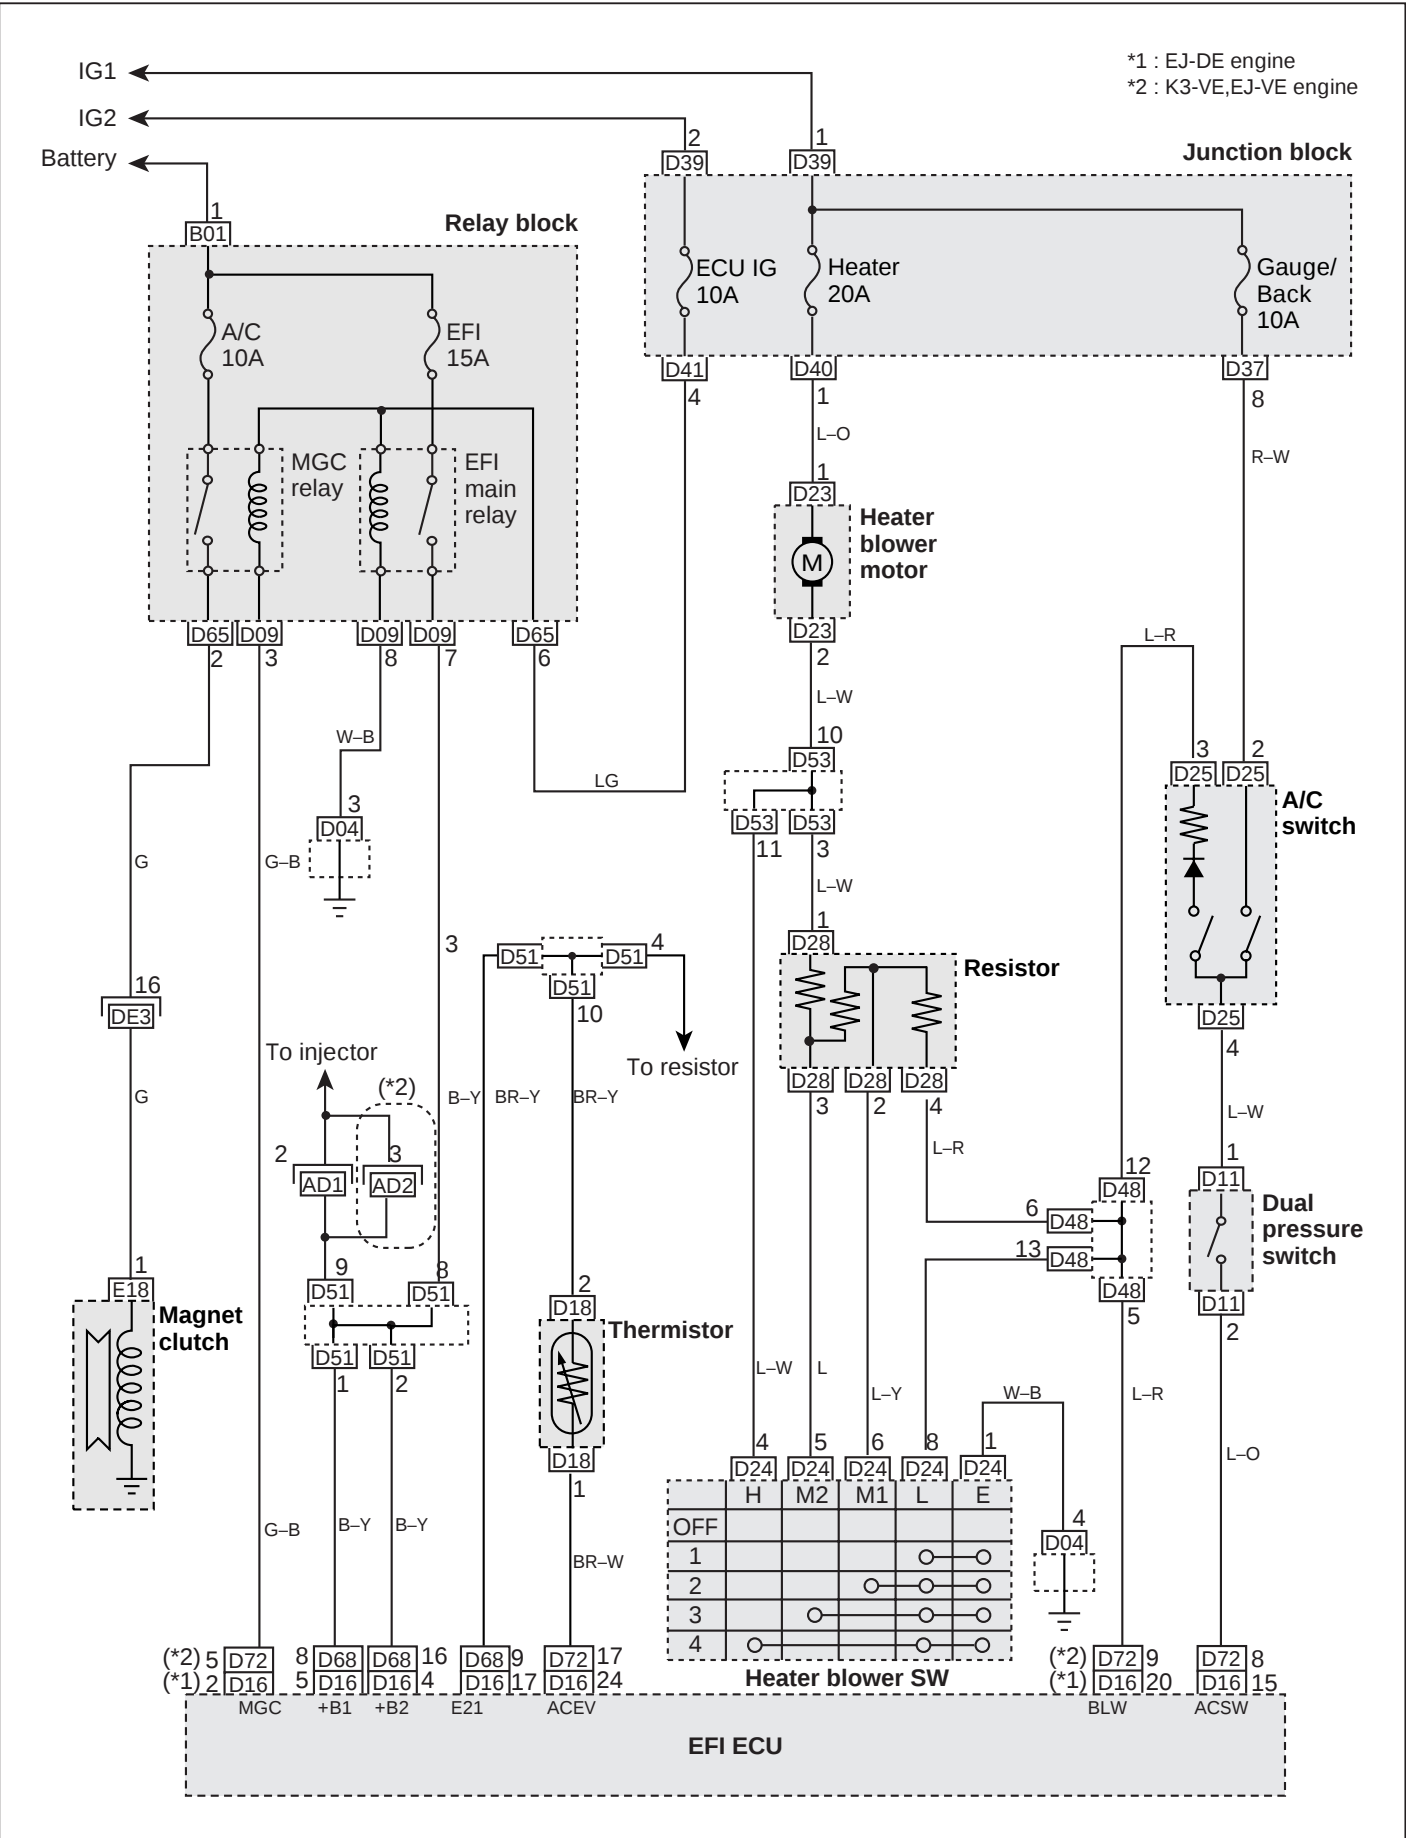
AIR CONDITIONER & HEATER (RHD)



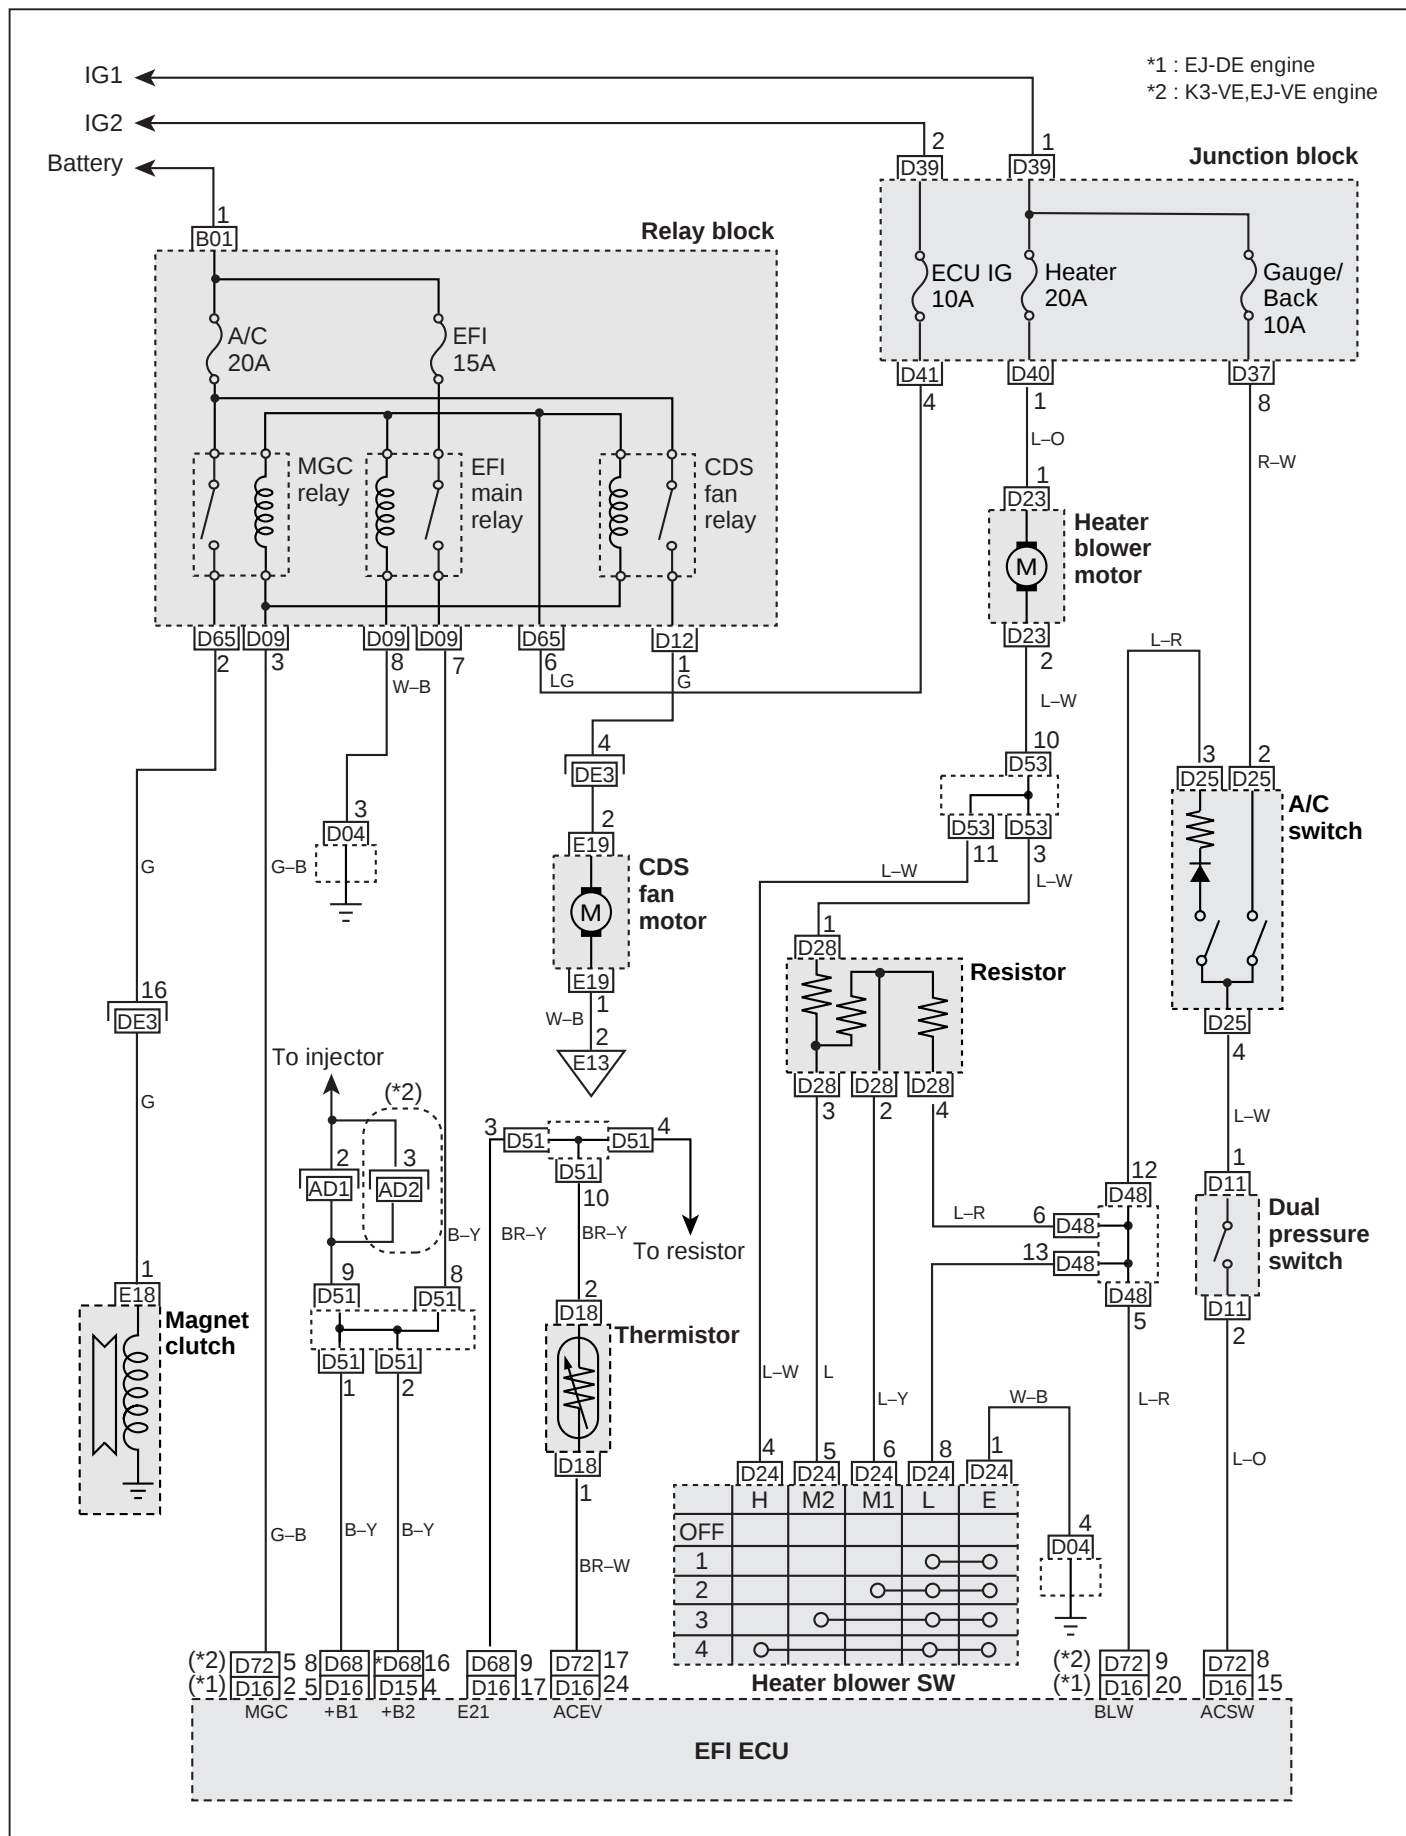
AIR CONDITIONER & HEATER (HOT-AREA SPEC / RHD)



AIR CONDITIONER & HEATER (LHD)

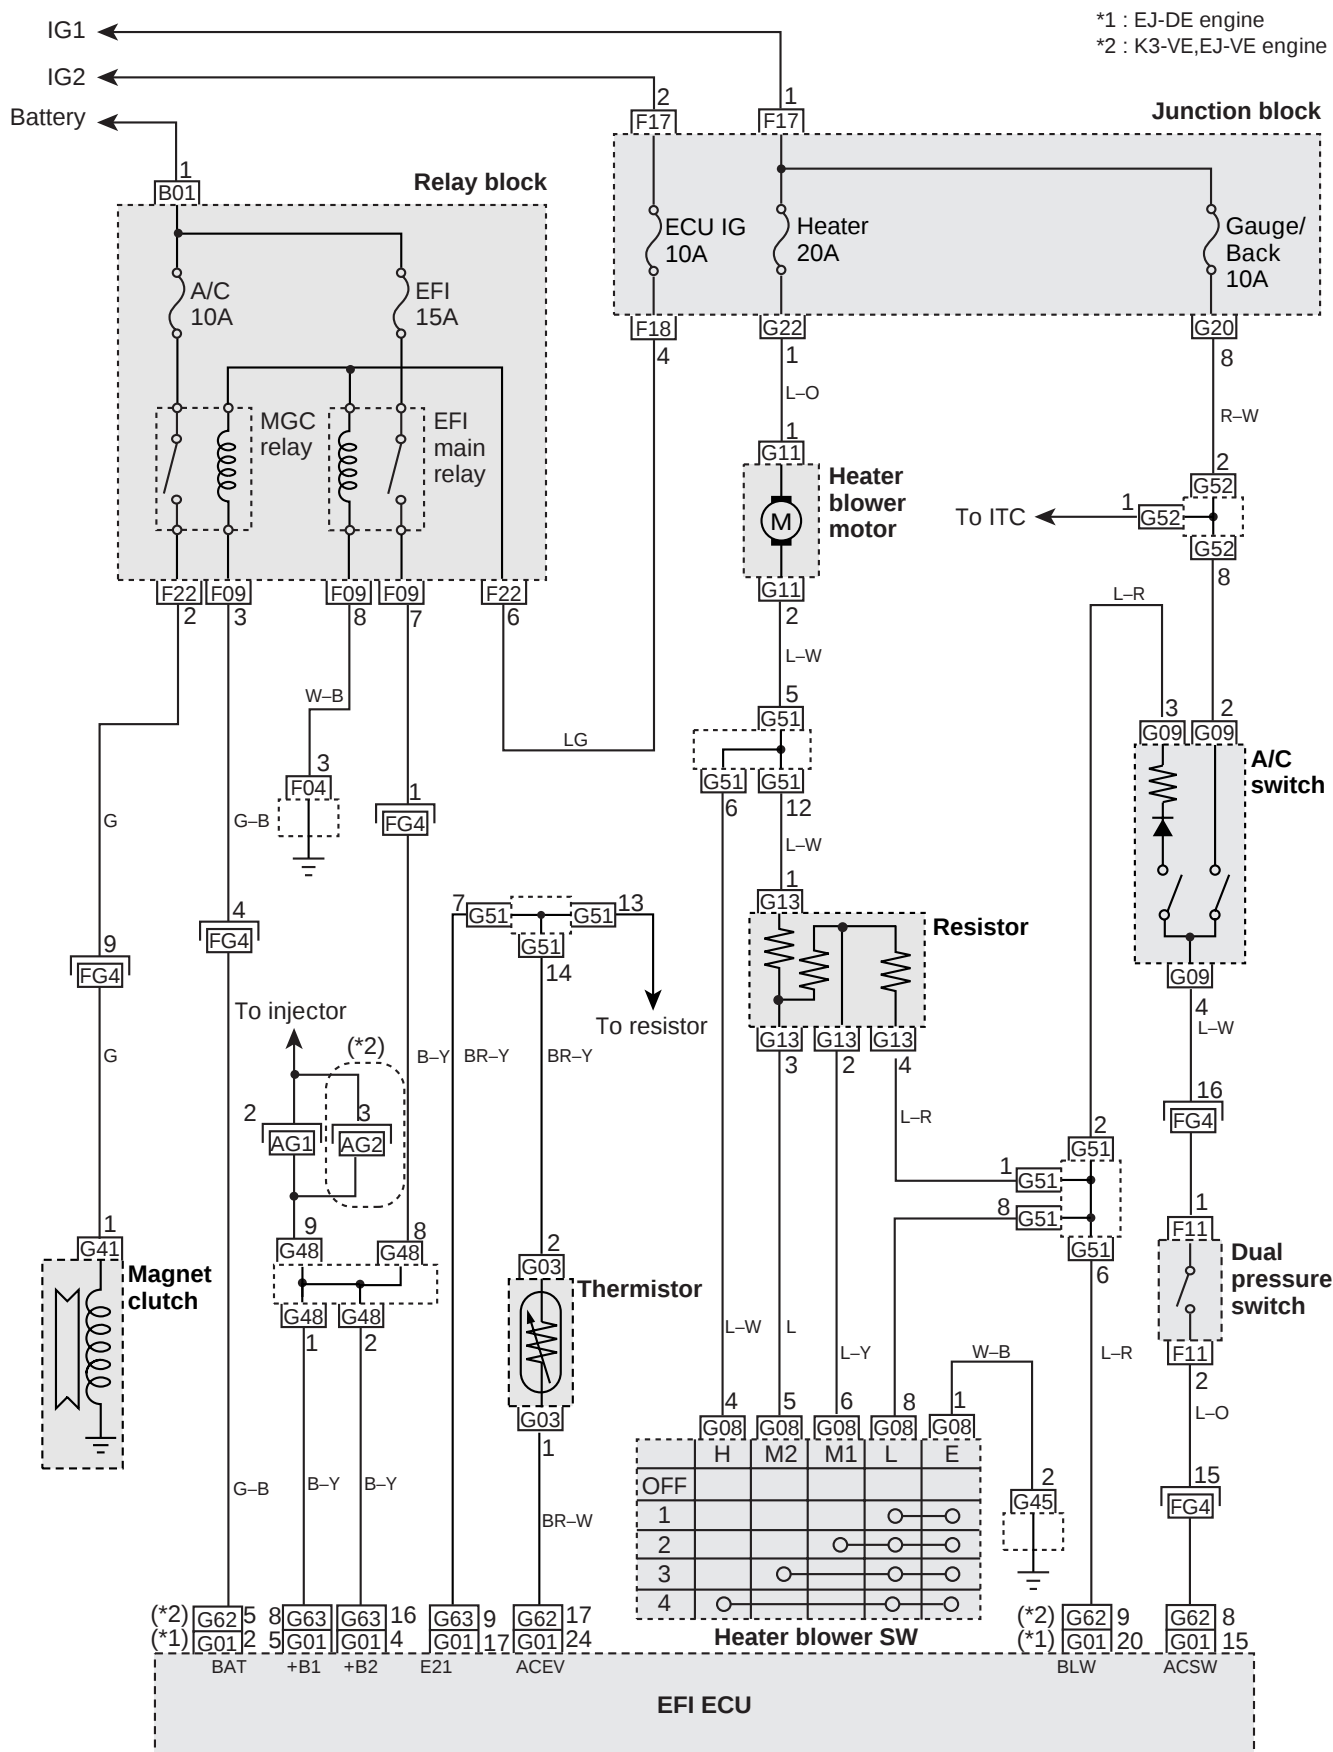


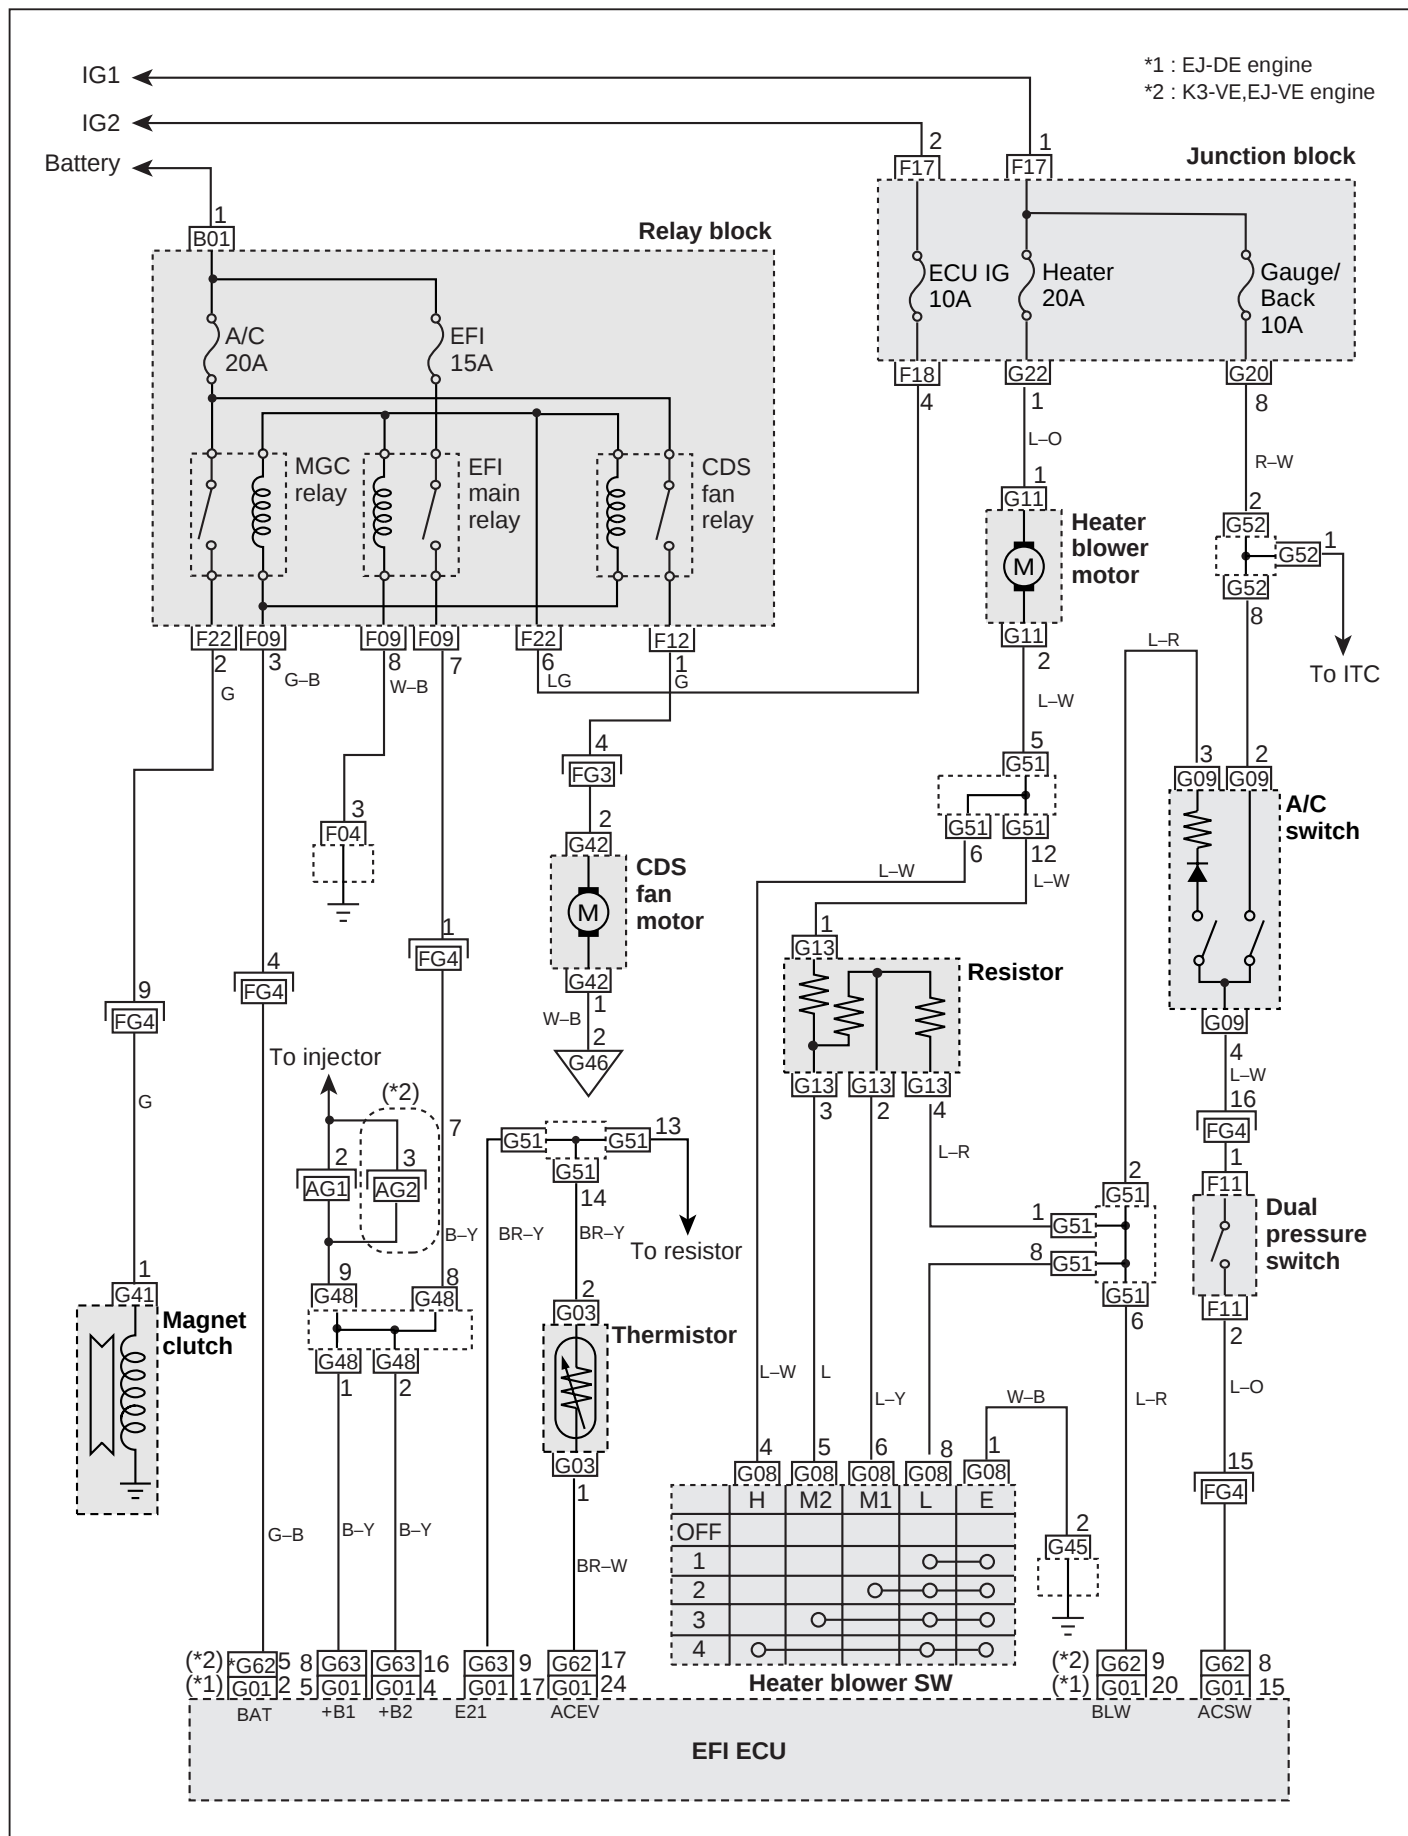AIR CONDITIONER & HEATER (HOT-AREA SPEC / LHD)




HW-132

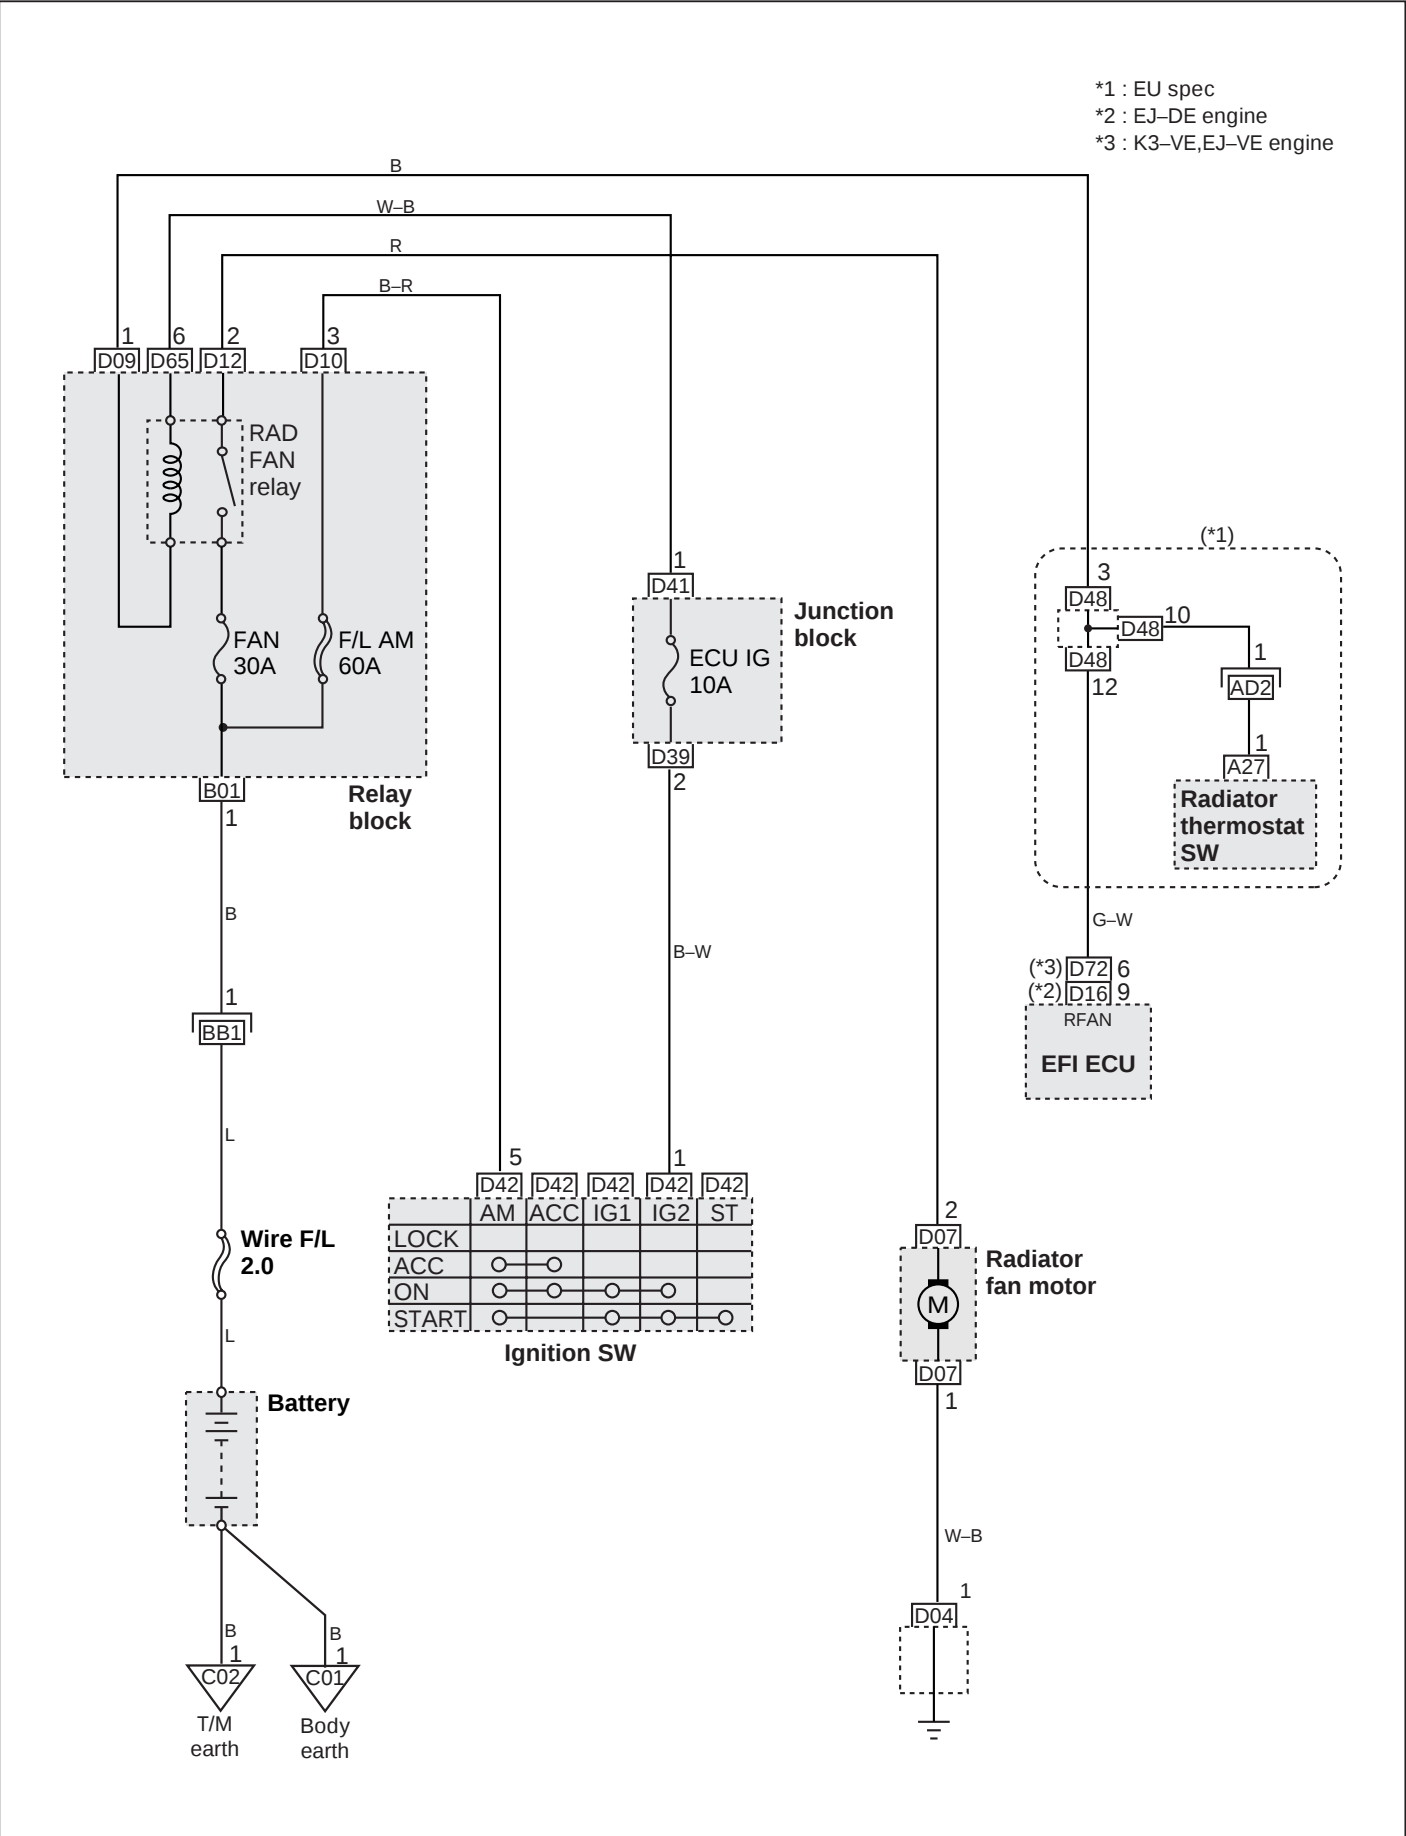RADIATOR FAN (RHD)




RADIATOR FAN (LHD)

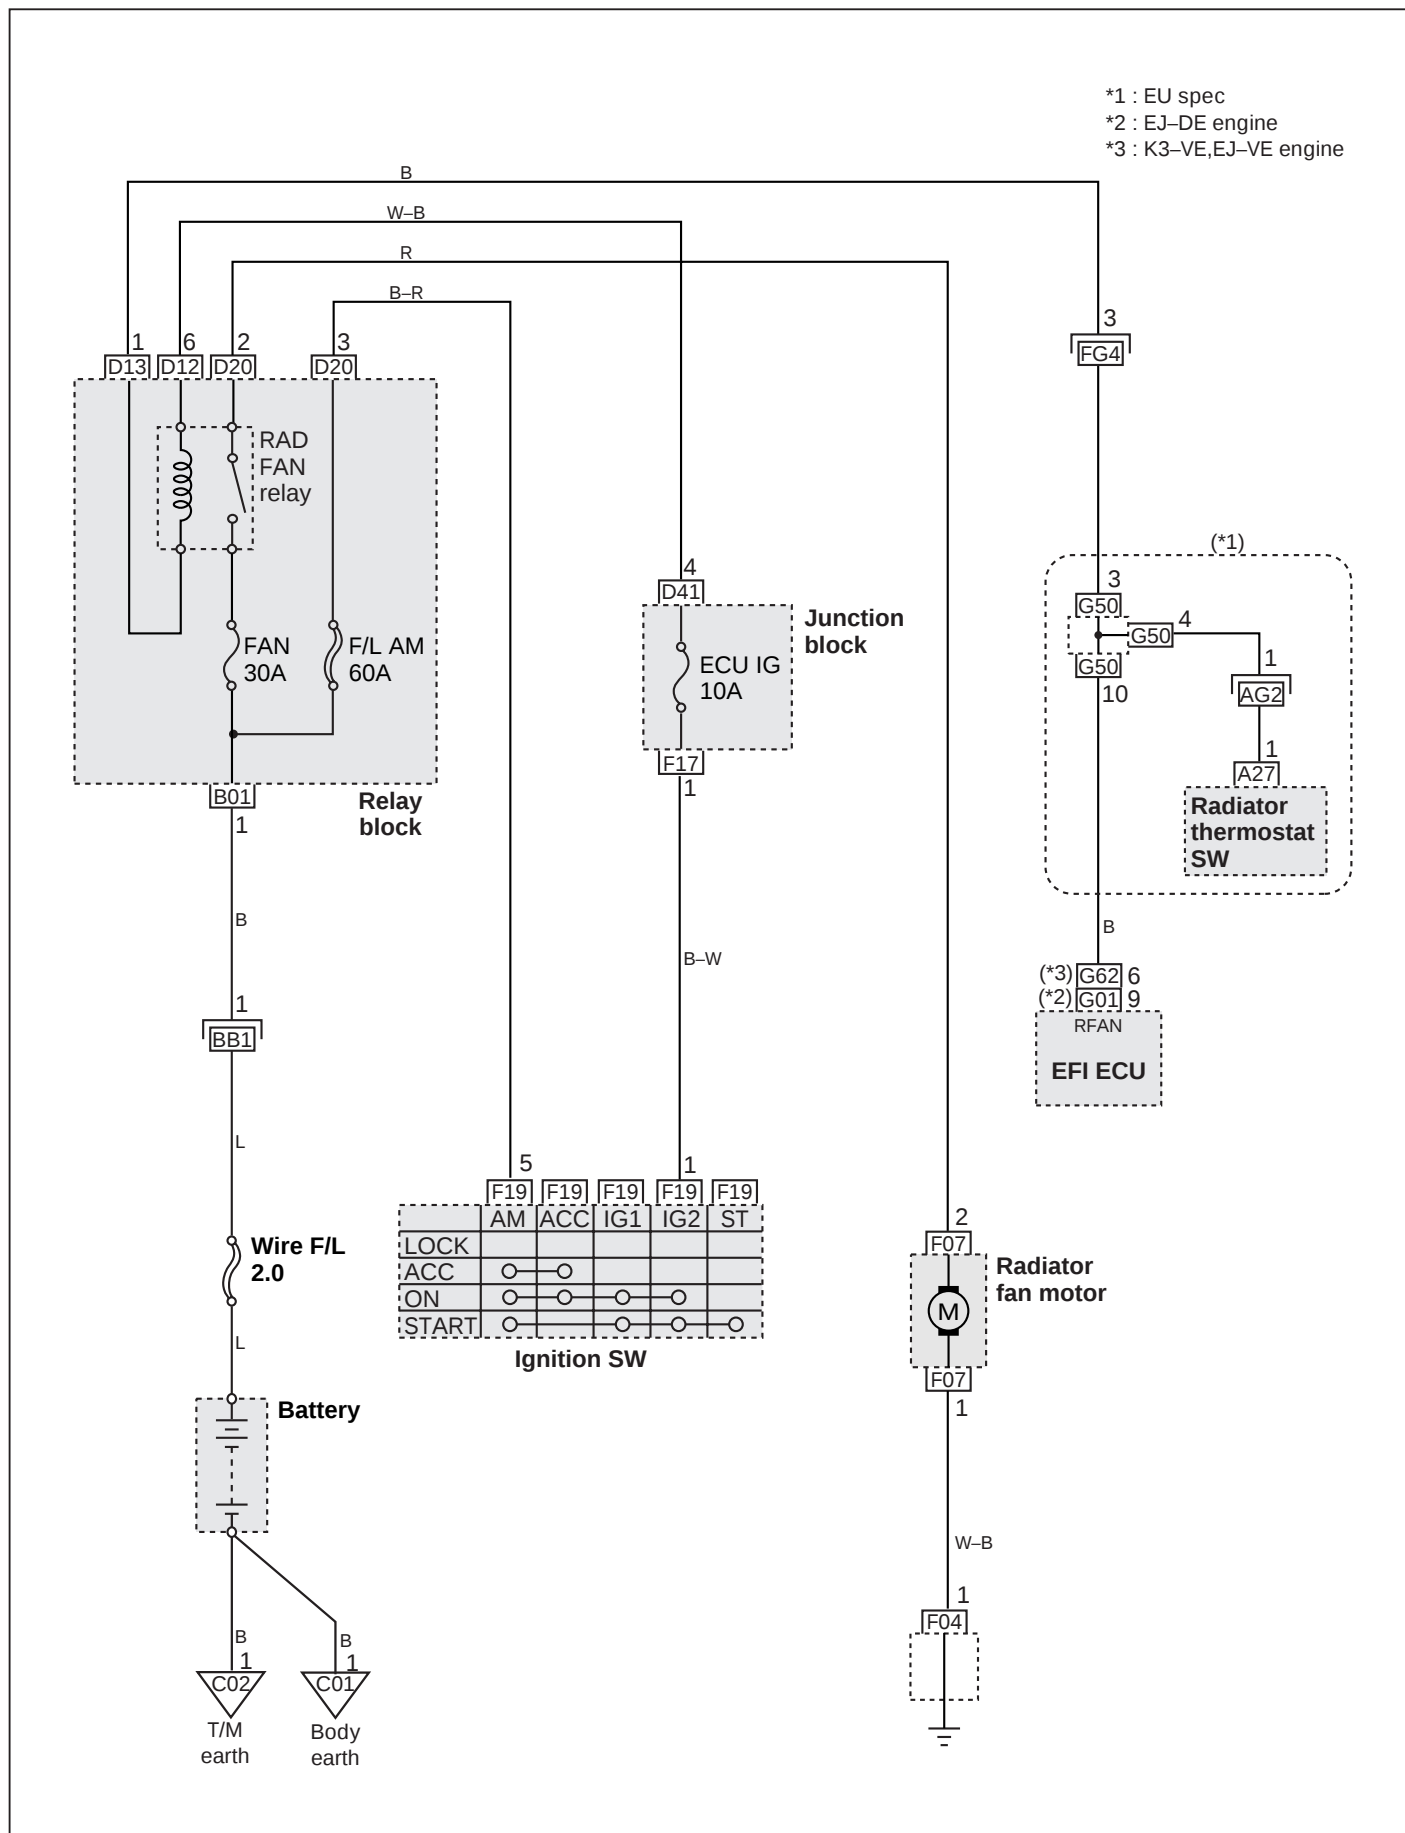


HW-134

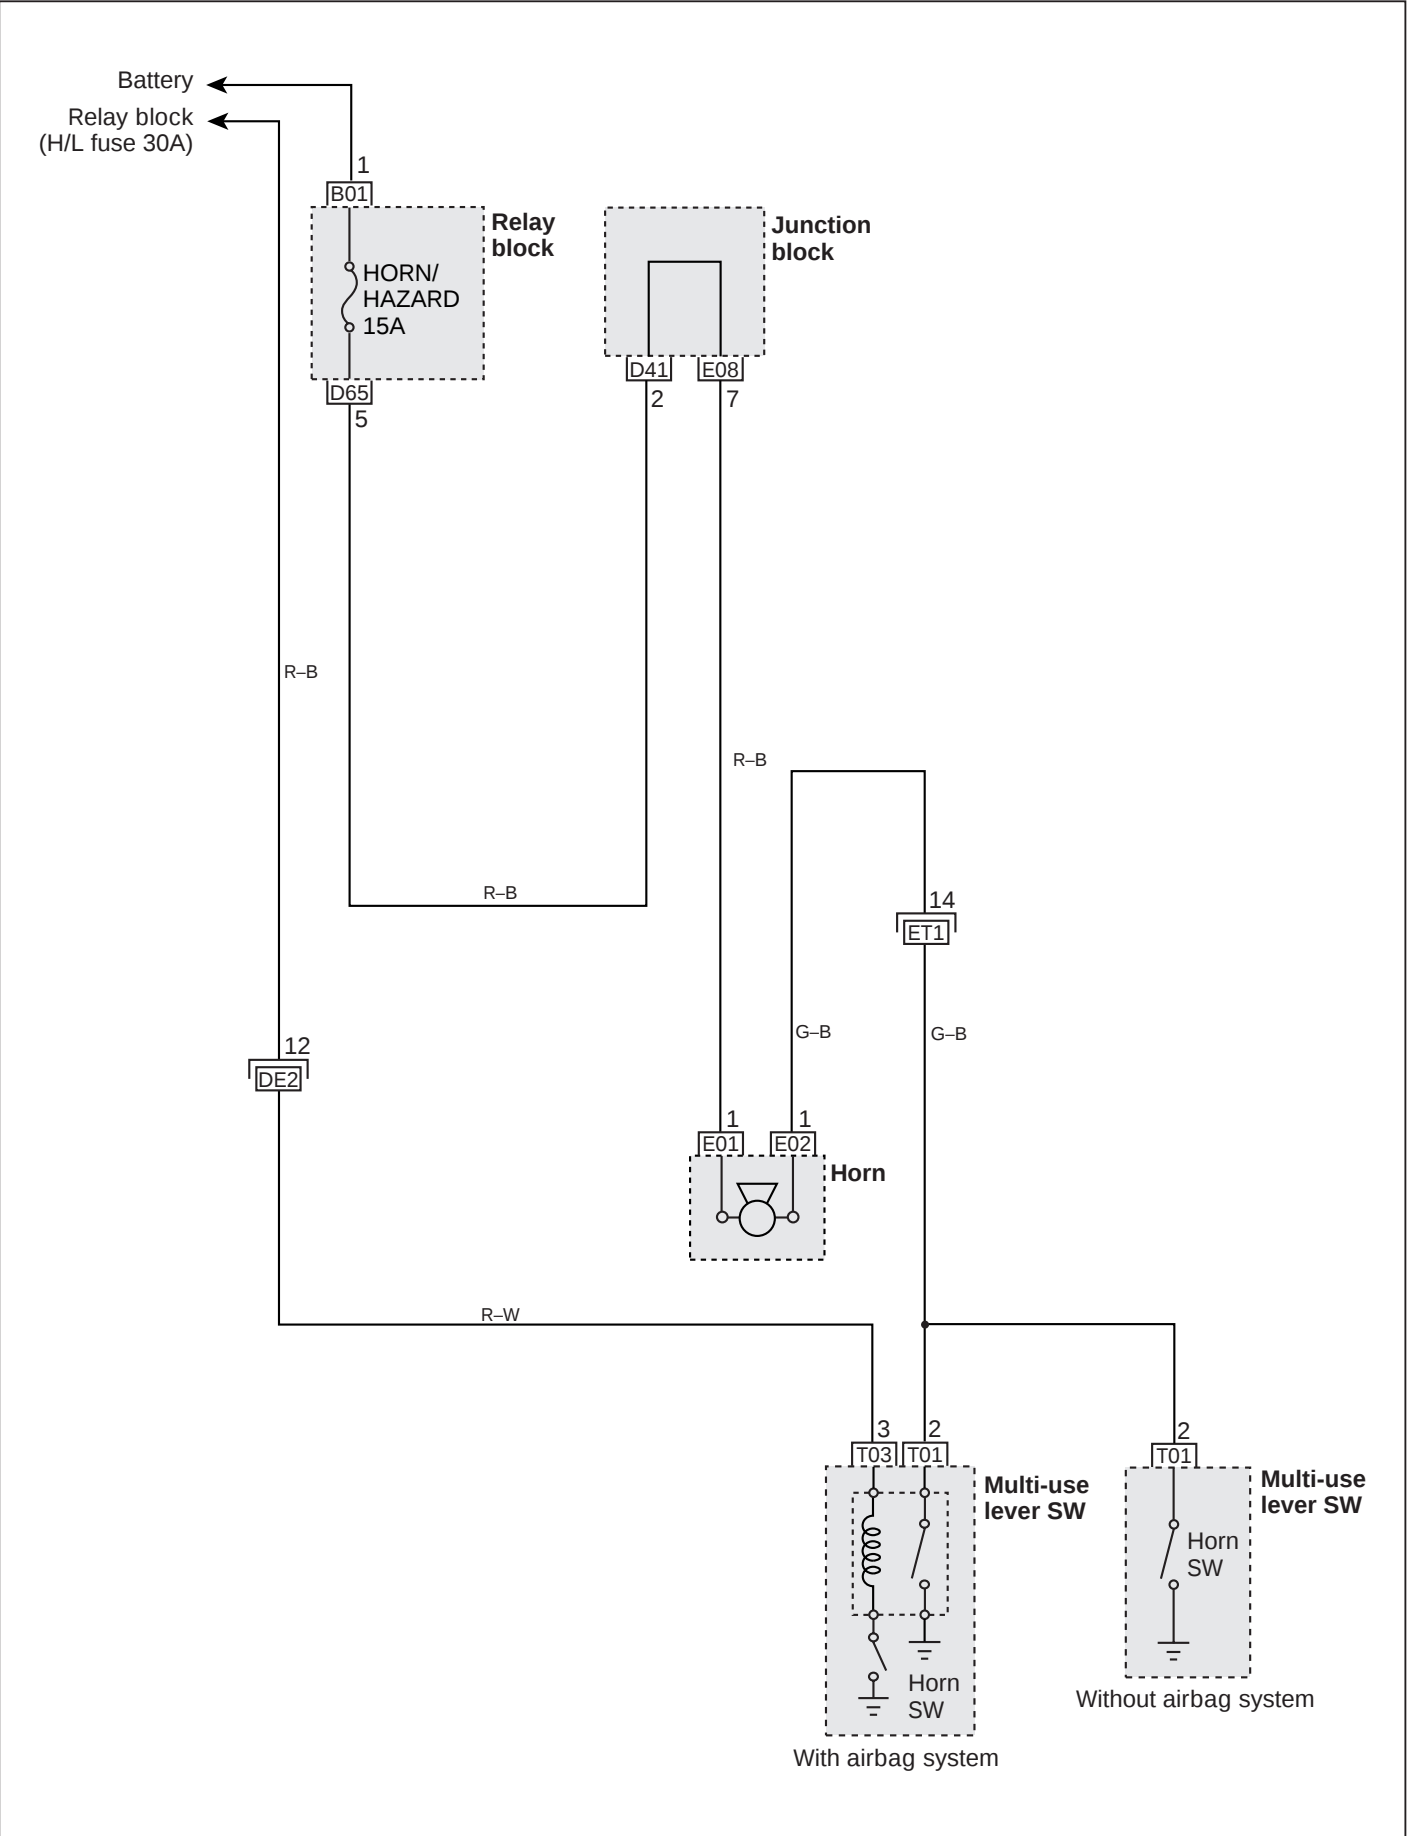HORN (RHD)




HORN (LHD)

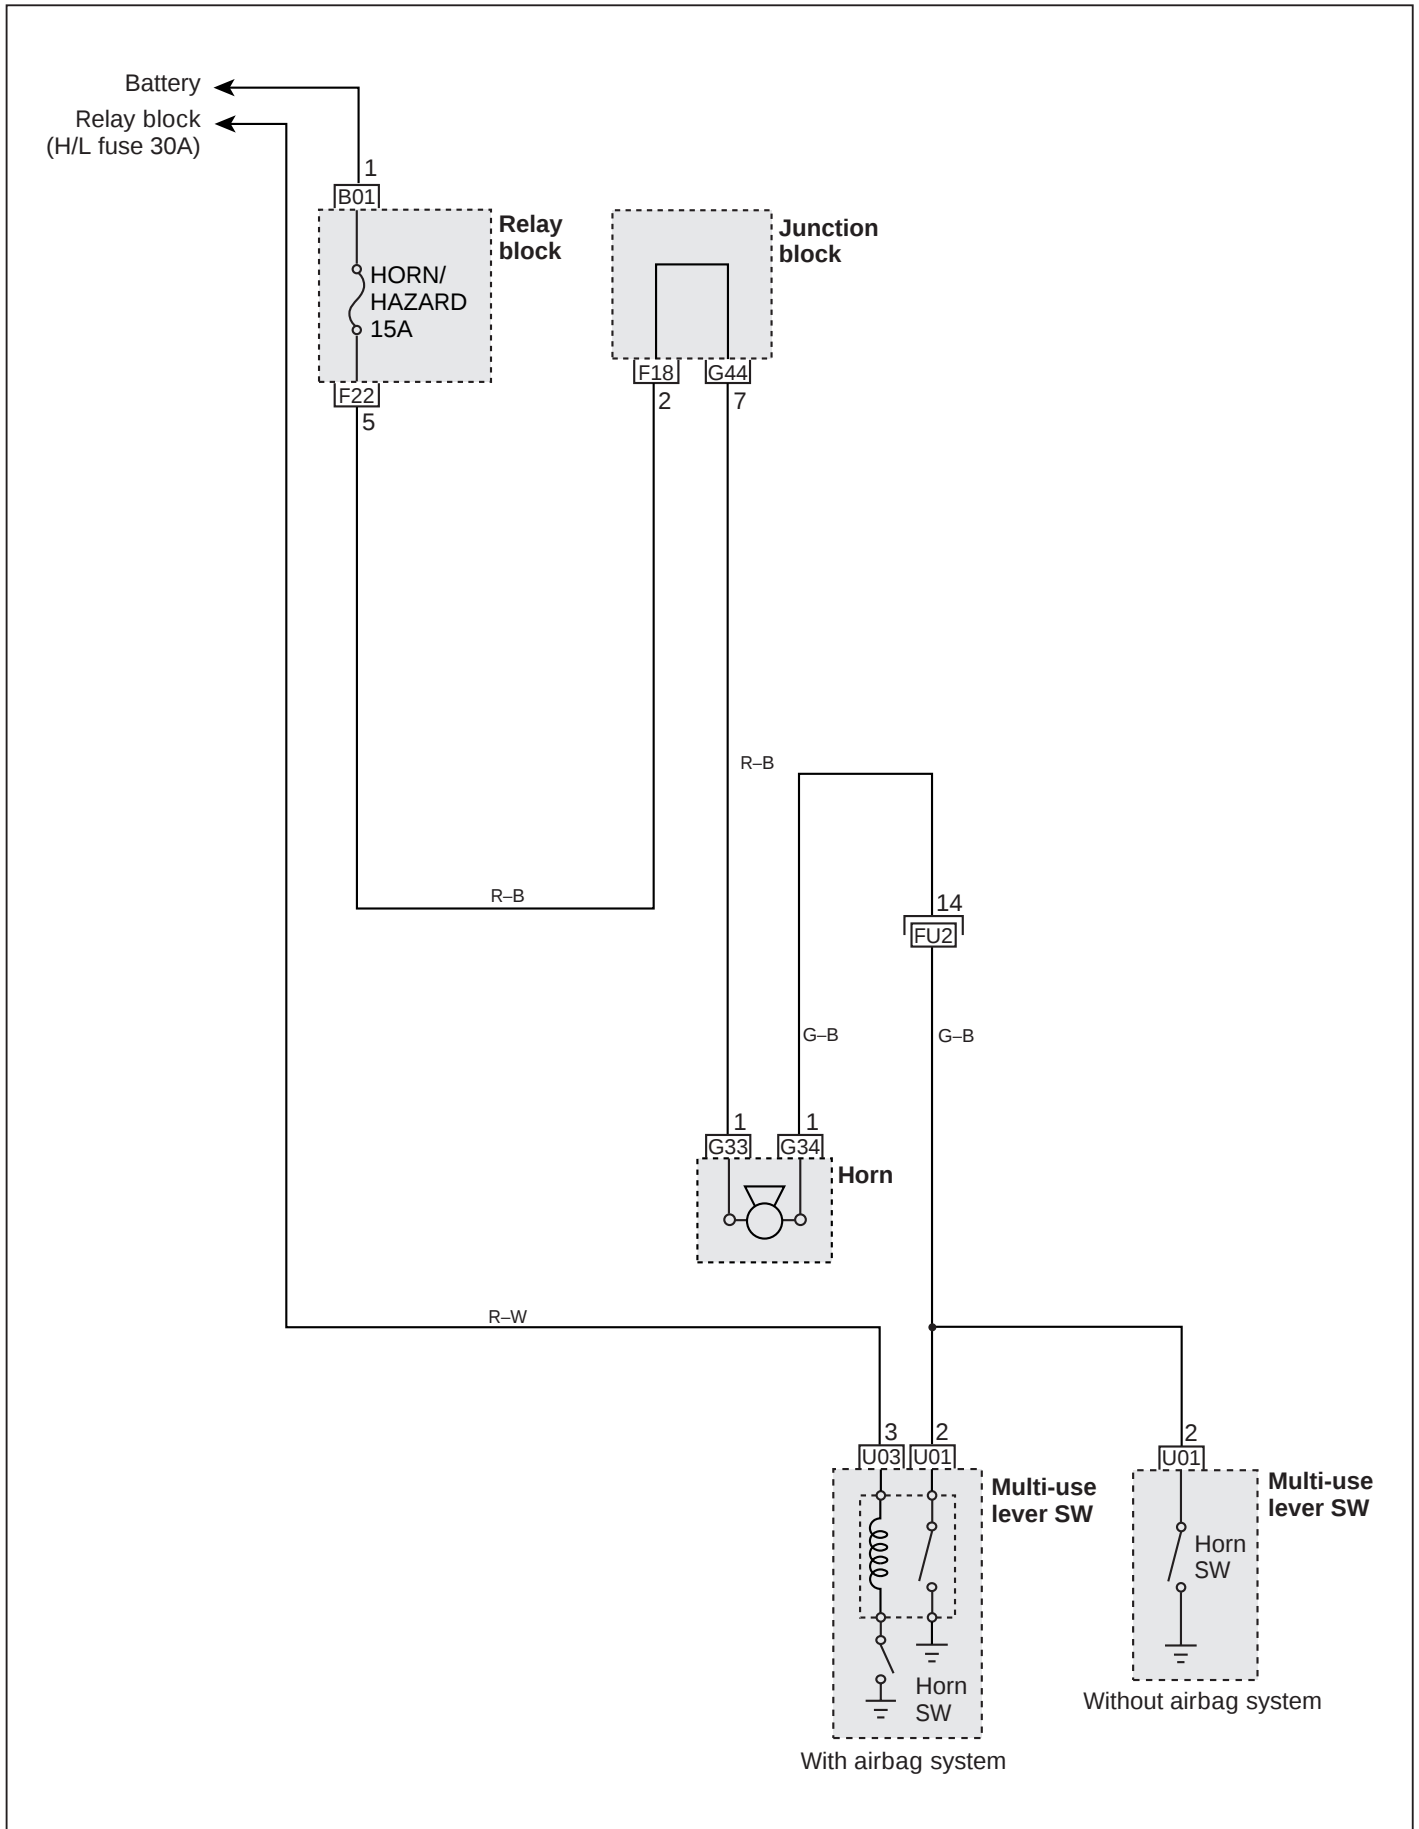


RADIO & CIGARETTE LIGHTER (RHD)



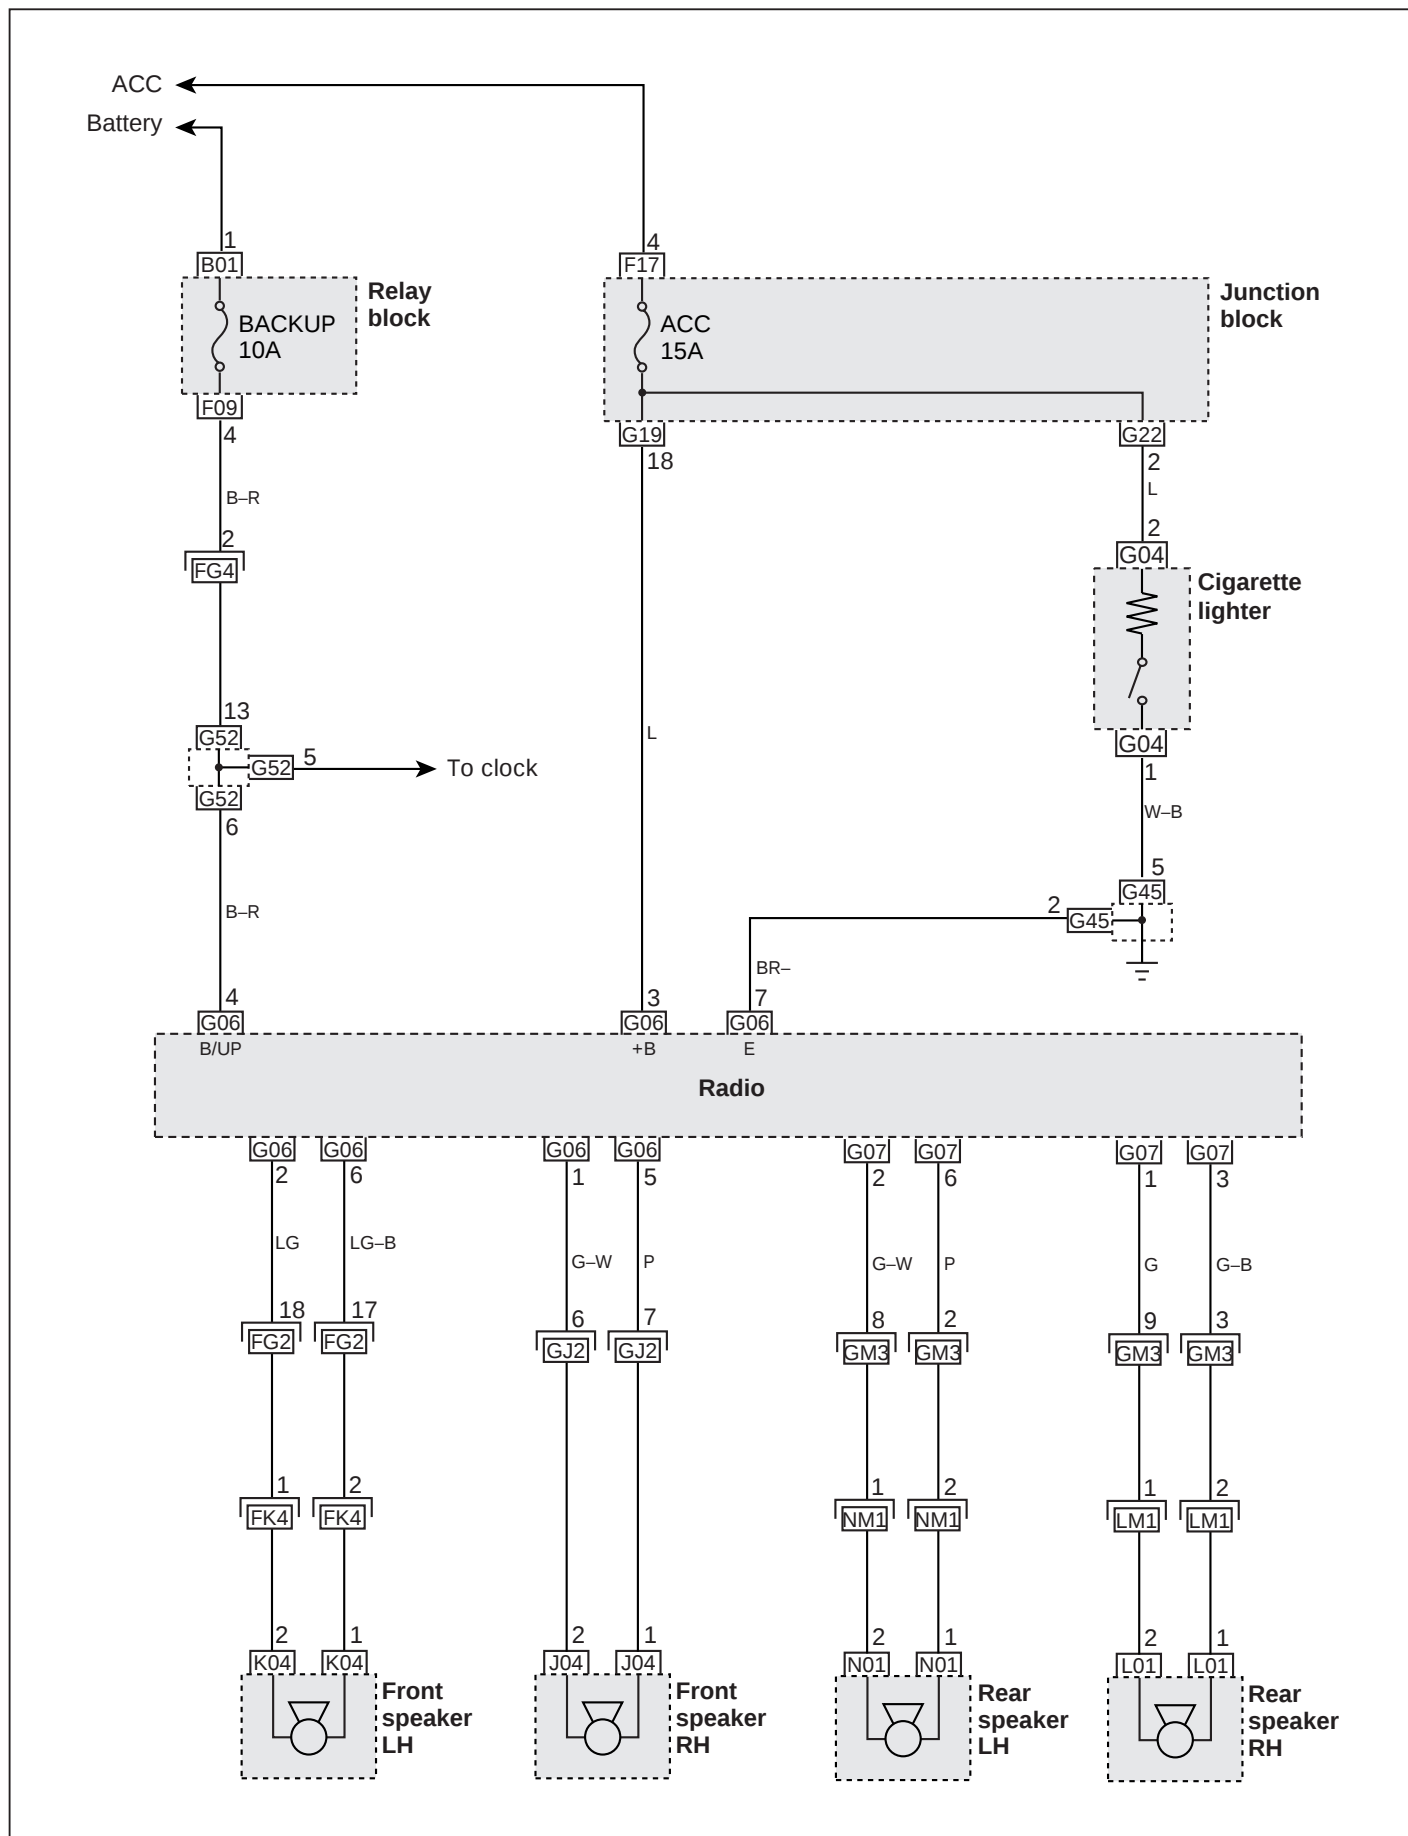
RADIO & CIGARETTE LIGHTER (LHD)



CLOCK (RHD)

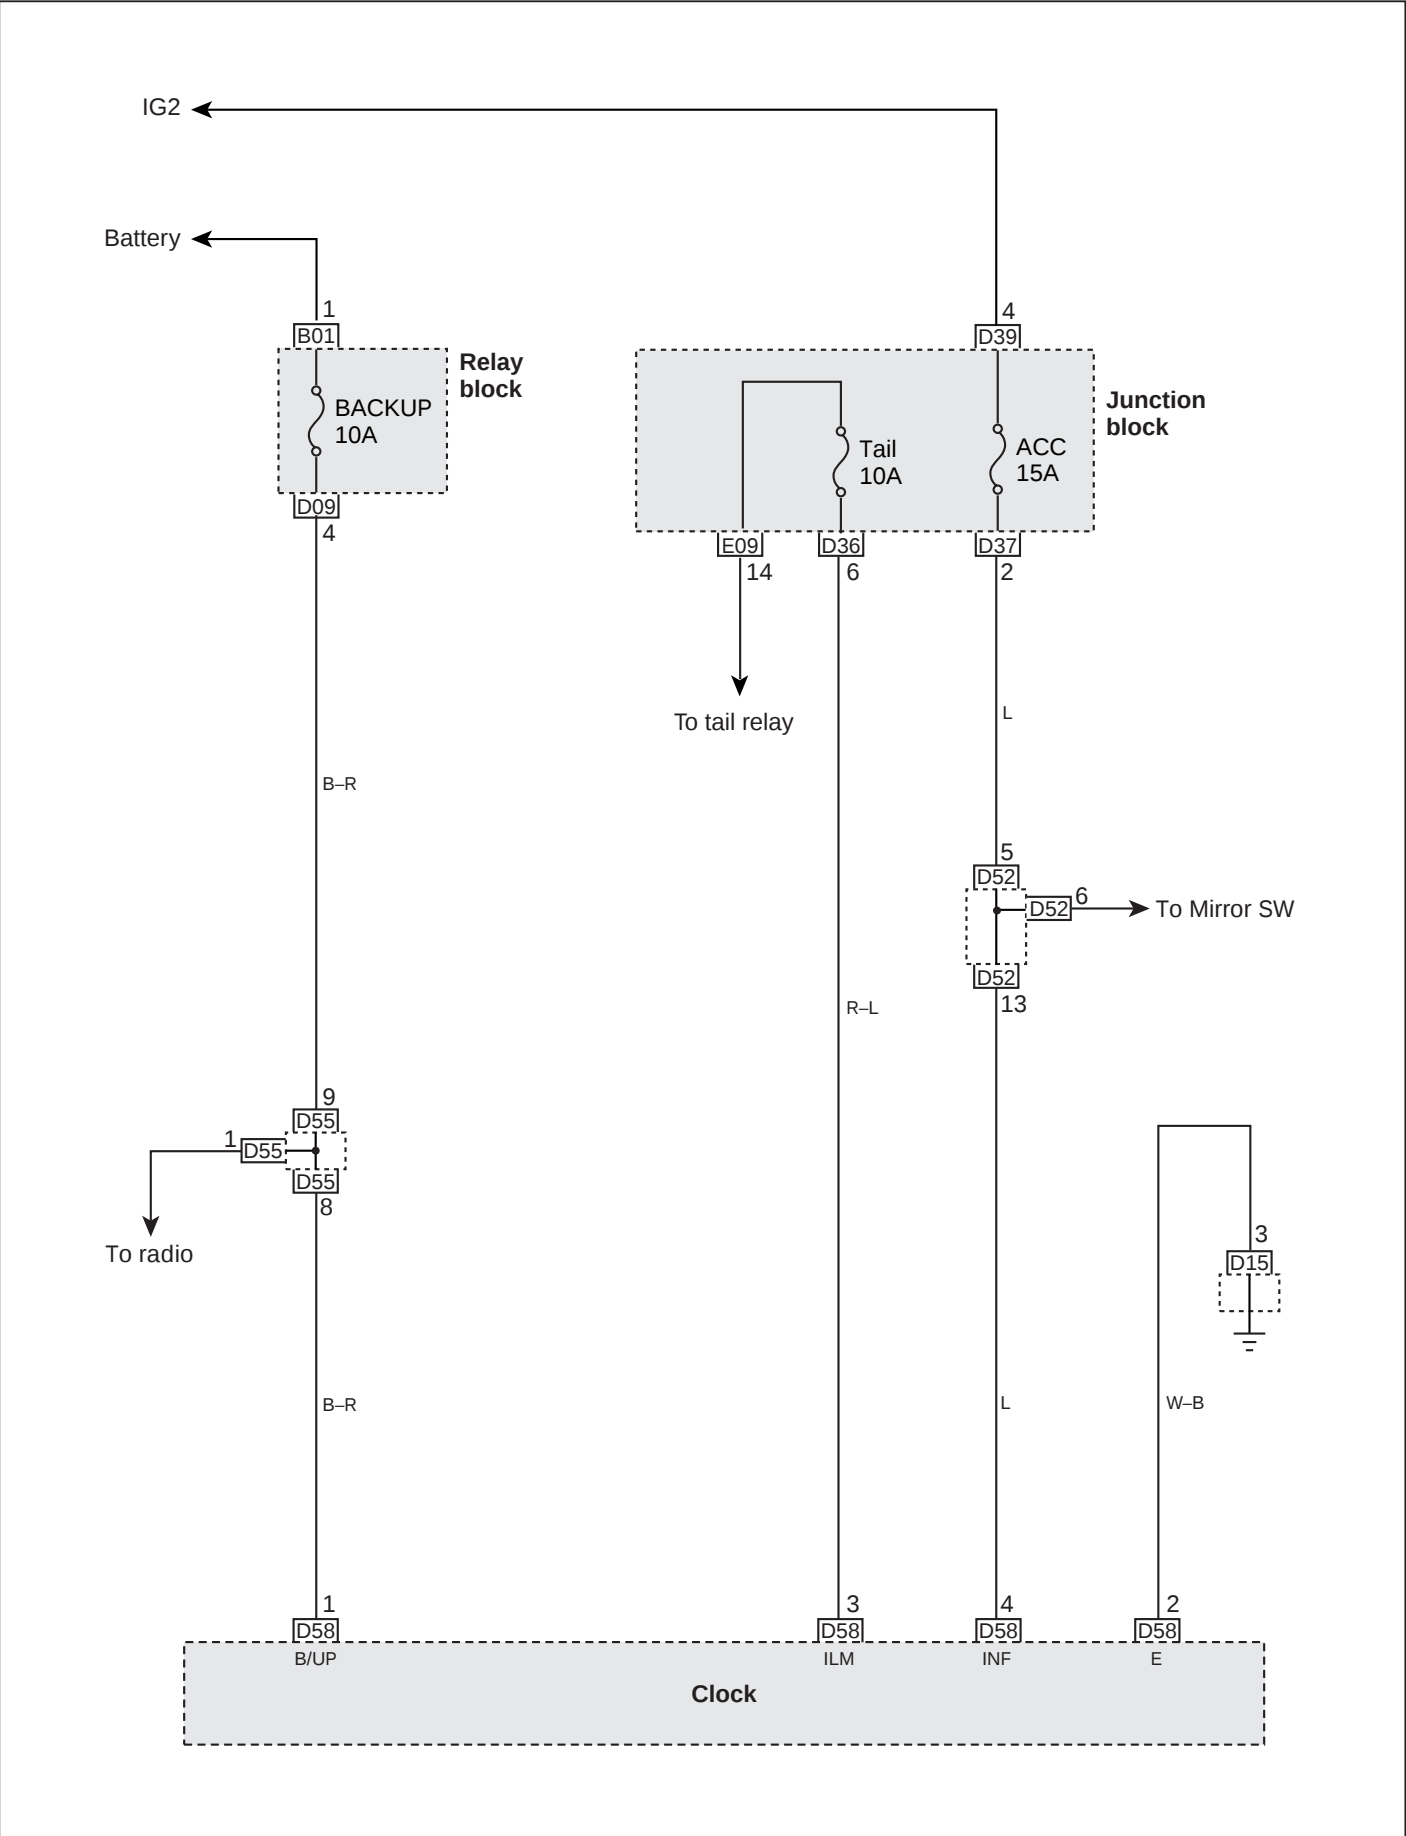


CLOCK (LHD)

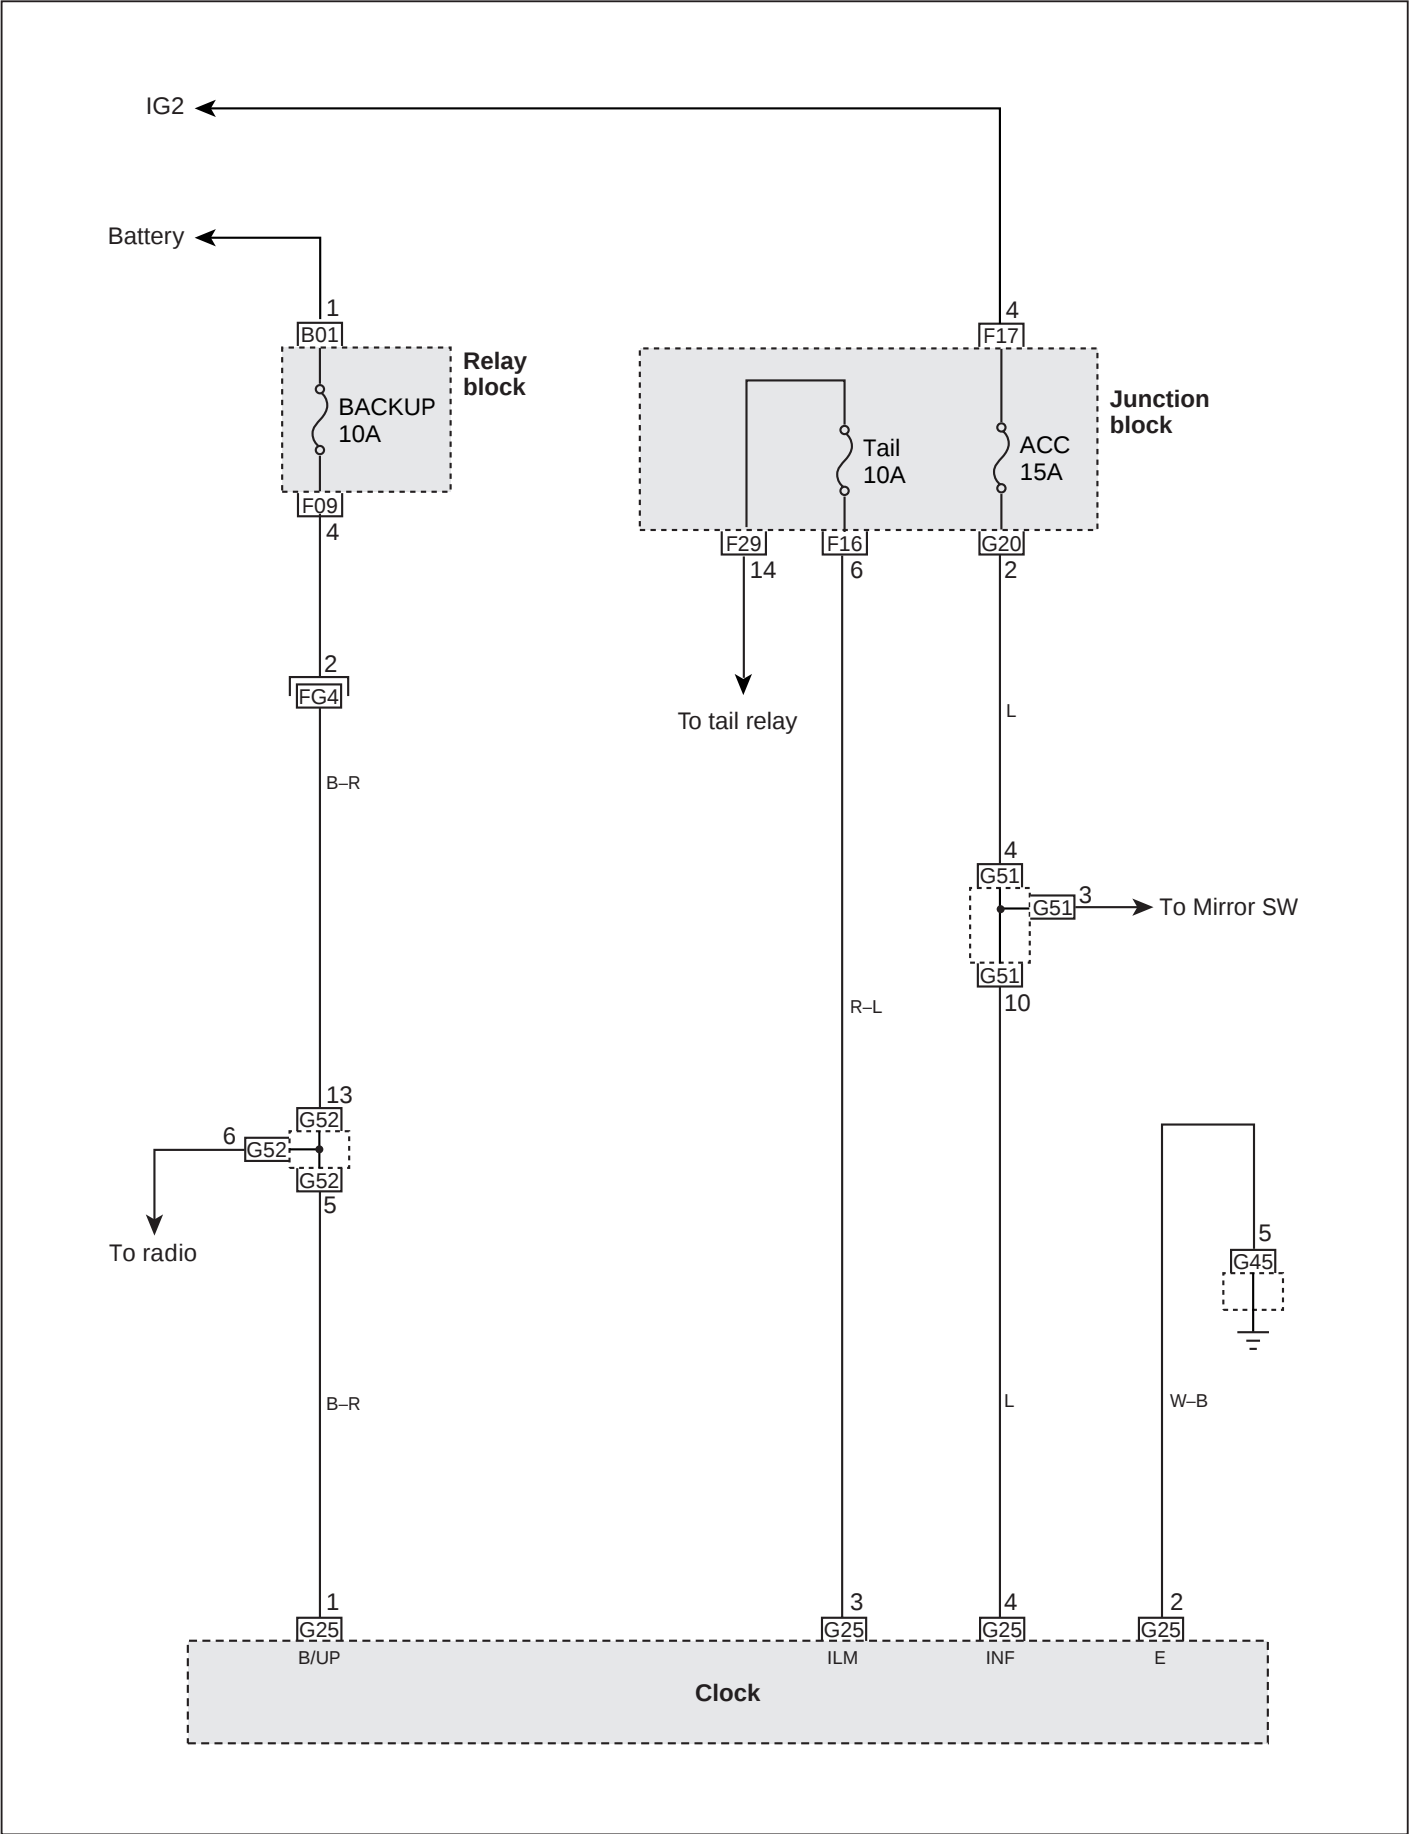


HW-140

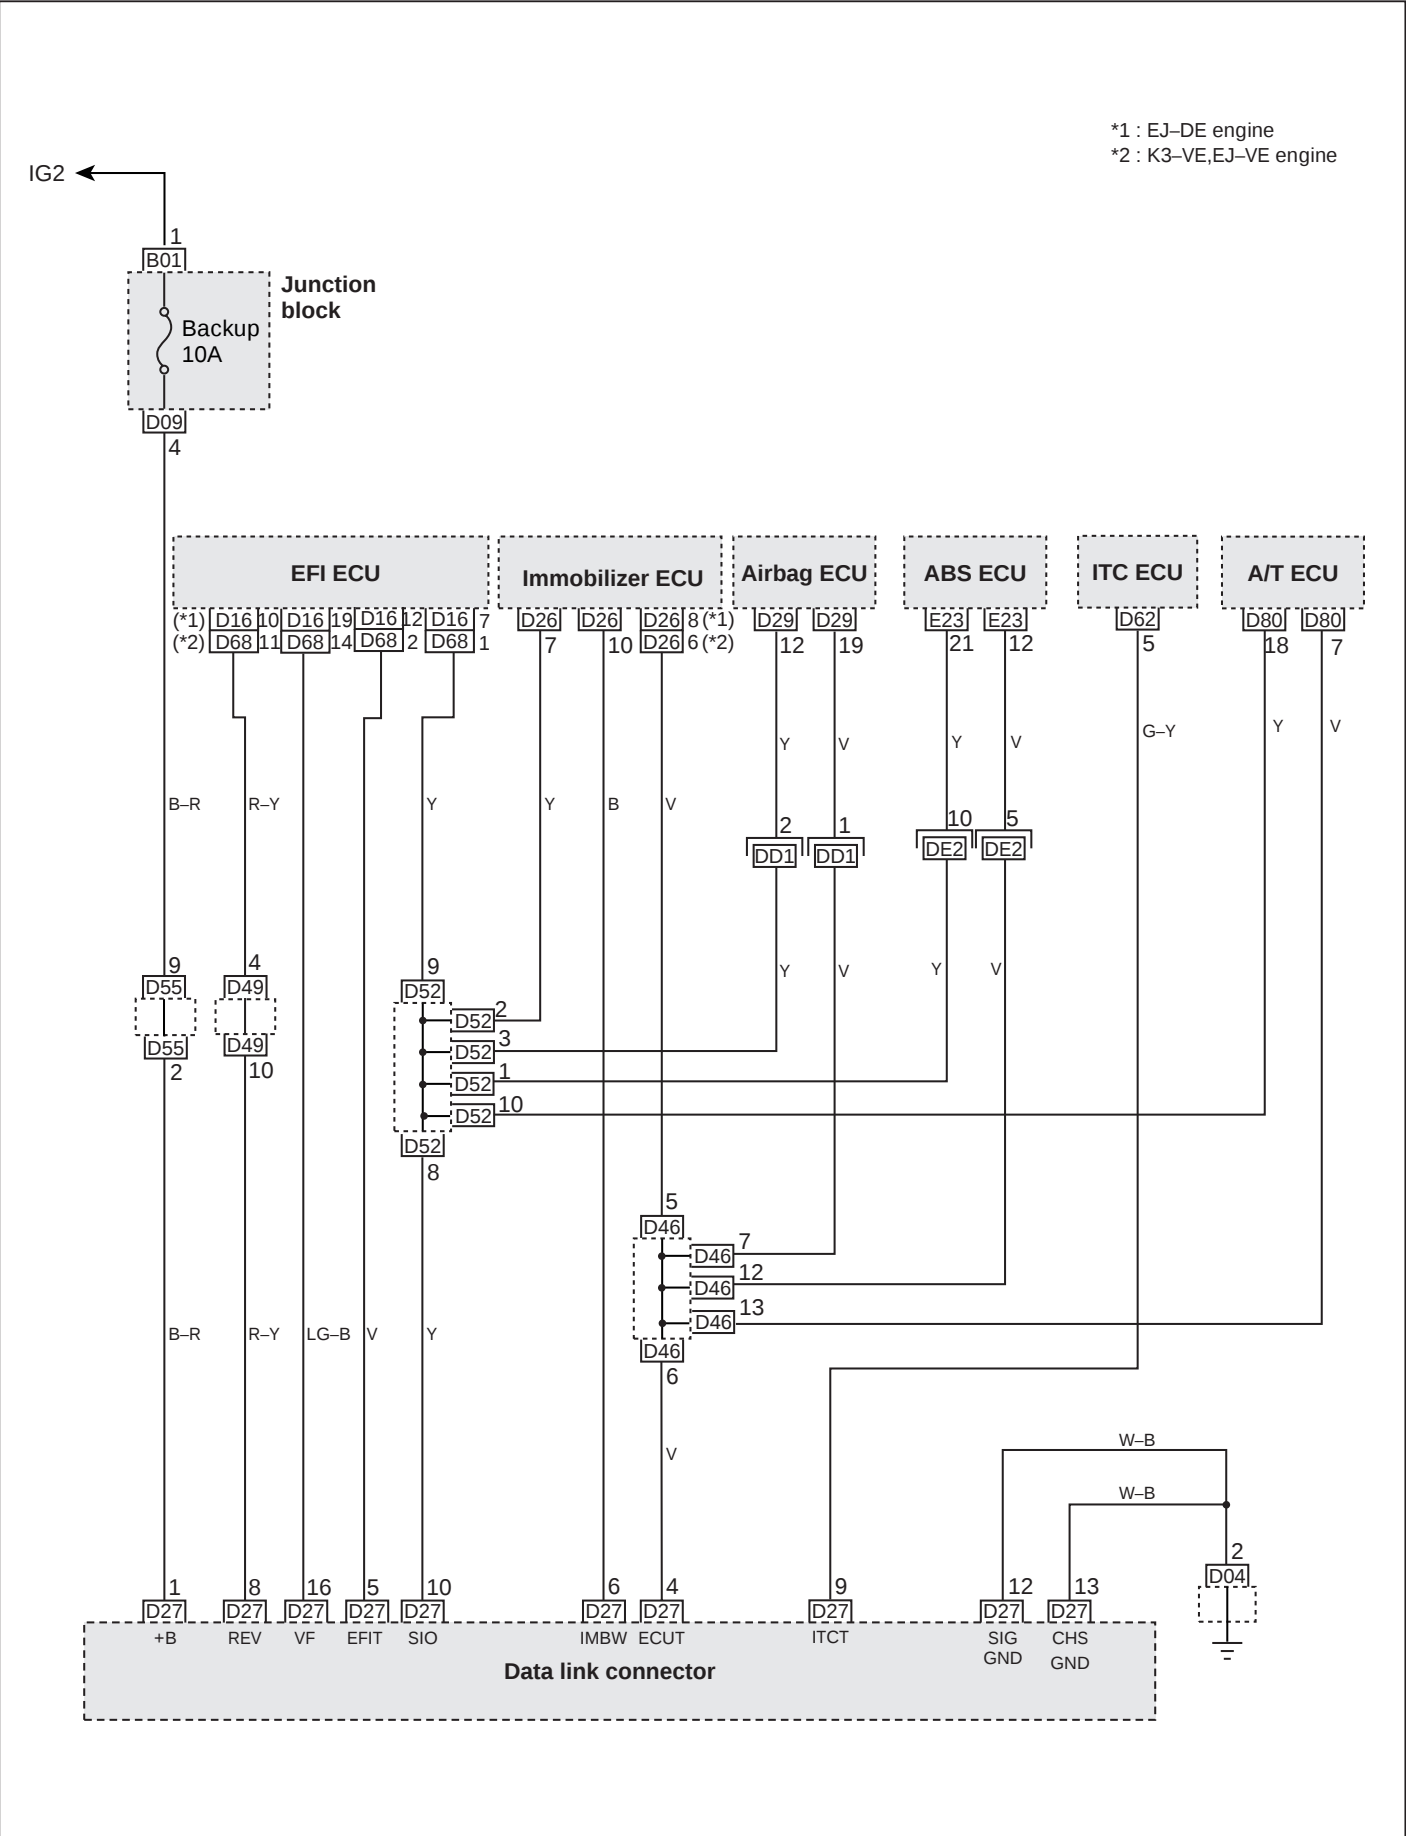DATA LINK CONNECTOR (RHD)


















DATA LINK CONNECTOR (LHD)

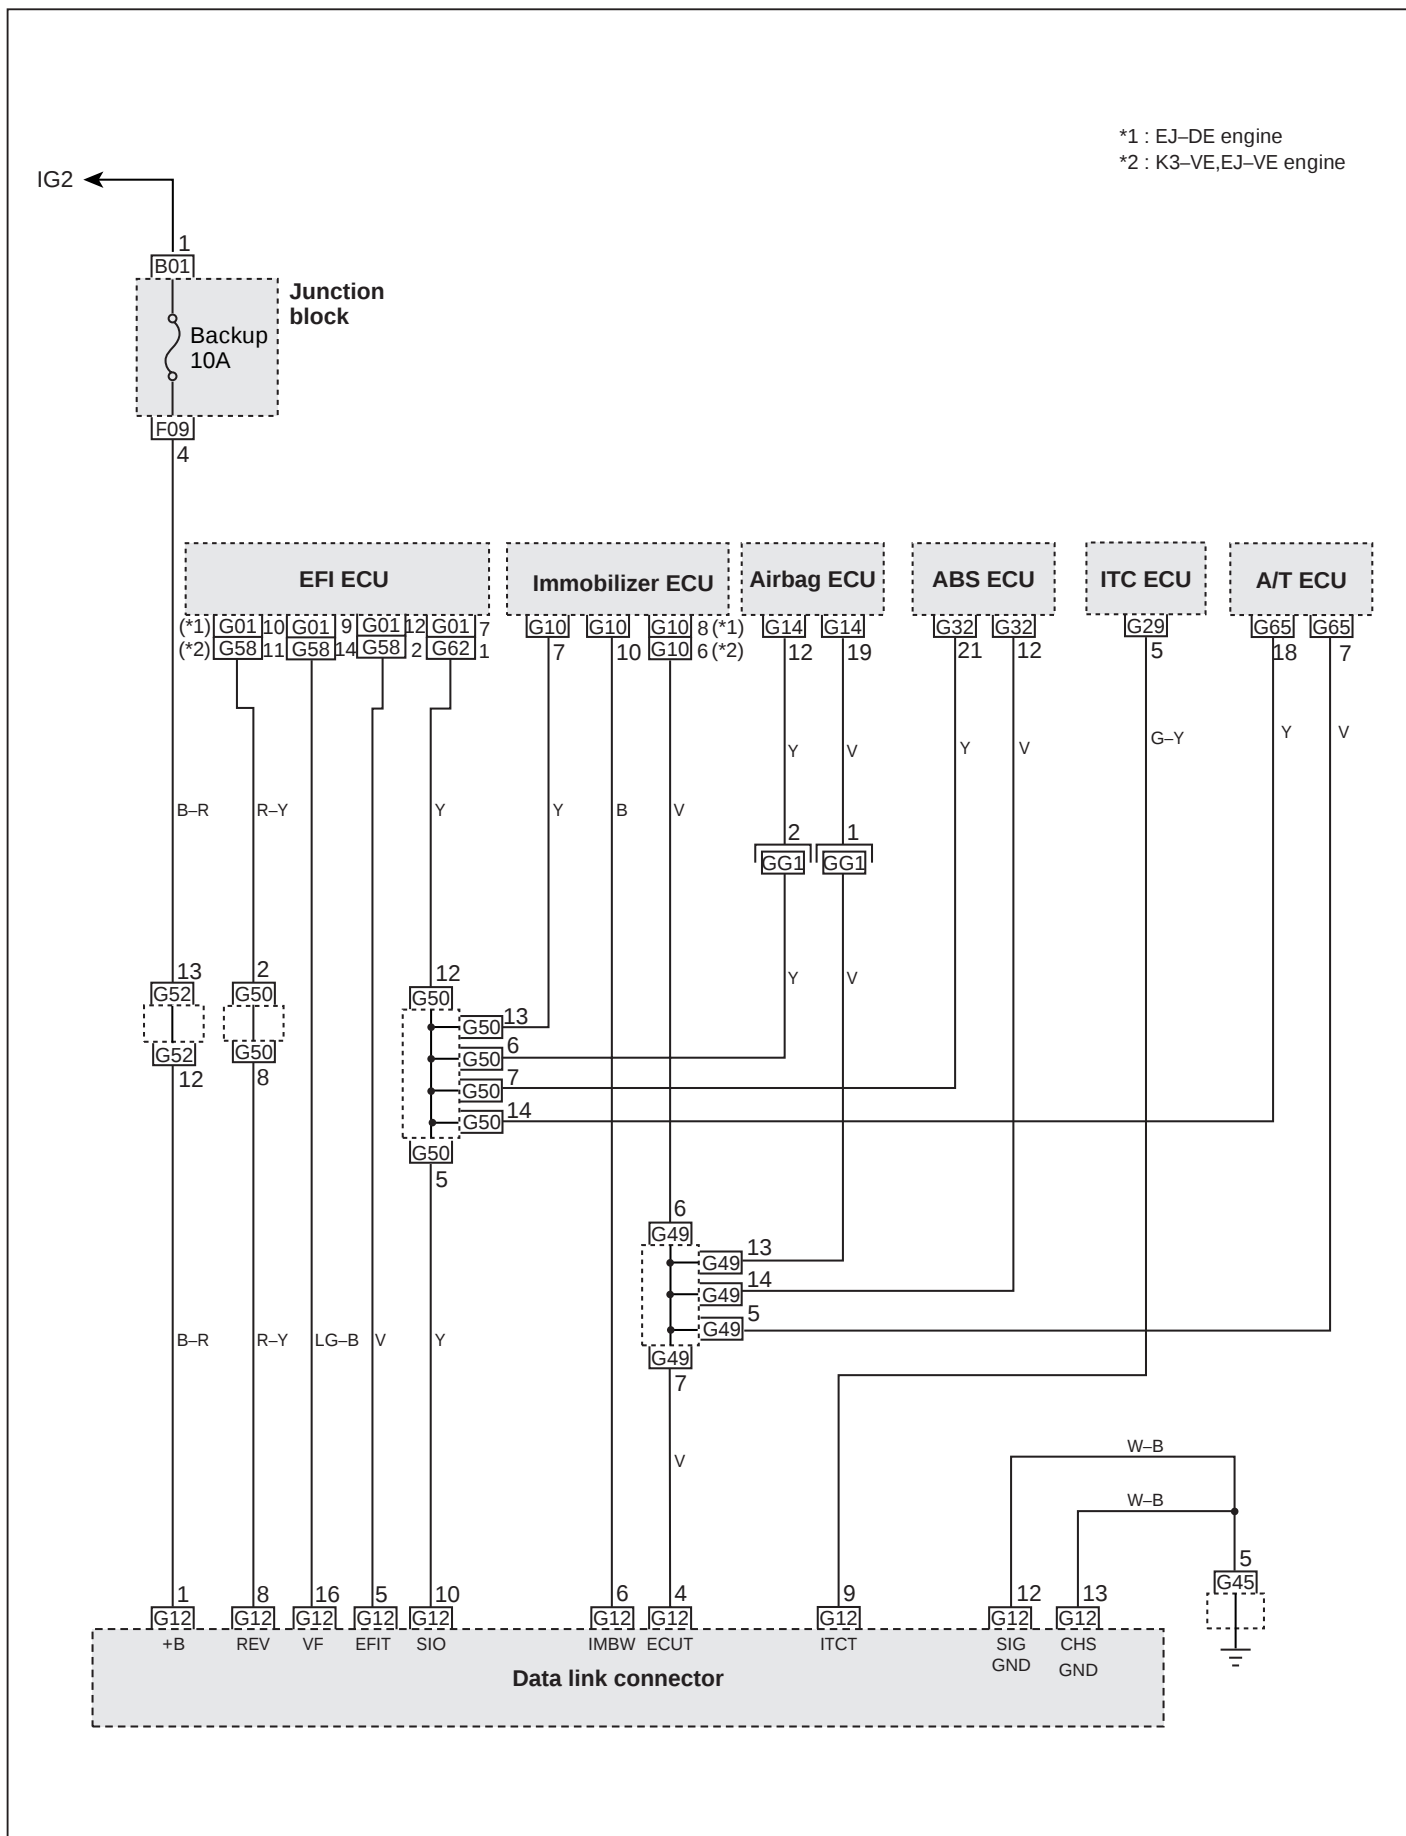

CONNECTOR LIST -1

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
A01	White		A11	Gray	
EFI ECU			Water temp sender gauge		
A02	White		A12	—	
EFI ECU			Engine earth		
A03	Green		A13	Gray	 (K3-VE2/EU) (EJ-VE)
Knock sensor			Front O ₂ sensor		
A04	White	 (K3-VE2) (EJ-VE)	A14	Gray	 (K3-VE2) (EJ-VE)
Oil control valve			Ignition coil		
A05	Black / Gray	 (EJ-VE) (EJ-DE) (K3-VE2)	A15	Gray	 (K3-VE2) (EJ-VE)
Alternator			Ignition coil		
A06	Black	 (EJ-VE) (EJ-DE) (K3-VE2)	A16	Gray	 (K3-VE2) (EJ-VE)
Pressure sensor			Ignition coil		
A07	Brown		A17	Brown	 (EJ-VE) (EJ-DE)
Throttle sensor			Fuel injector		
A08	Gray	 (K3-VE2)(EJ-VE) (EJ-DE)	A18	Gray	 (EJ-VE) (EJ-DE)
ISC			Fuel injector		
A09	White	 (K3-VE2) (EJ-VE)	A19	Brown	 (EJ-VE) (EJ-DE)
Purge VSV			Fuel injector		
A10	Gray	 (K3-VE2) (EJ-VE)	A20	Gray	 (EJ-VE) (EJ-DE) (K3-VE2)
Com position sensor			Intake air sensor		

        
 
 
 
 
 
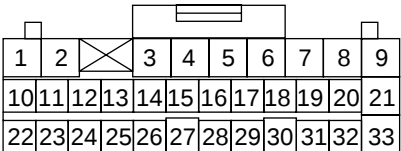
 
CONNECTOR LIST -2

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
A21	Gray Black	 (EJ-VE)	A31	Gray	 (EJ-DE)
NE sensor		 (K3-VE2)	O ₂ sensor		 (K3-VE2/GENERAL)
A22	Black		A32	White	 (EJ-DE)
Oil pressure SW			Ignition coil		
A23	Yellow	 (K3-VE2/EU) (EJ-VE)	A33	White	 (EJ-DE)
Rear O ₂ sensor			Ignition coil		
A24	Gray	 (K3-VE2/EU) (EJ-VE)	A34	White	 (EJ-DE)
Igniter			Ignition coil		
A25	Gray	 (K3-VE2/EU) (EJ-VE)	A35	Gray	 (EJ-DE)
Igniter			Cam position sensor		
A26	—	 (K3-VE2) (EJ-VE)	A36	White	 (EJ-DE)
Engine earth			Engine junction		
A27	White Green	 (EJ-VE)	A37	White	 (EJ-DE / Leaded)
Radiator thermo.		 (K3-VE2)	Engine junction		
A28	Black		A38	Gray	 (K3-VE2)
P/S SW			Ignition coil		
A29	Orange	 (K3-VE2) (EJ-VE)	A39	Brown	 (K3-VE2)
Junction			Fuel injector		
A30	White	 (EJ-DE)	A40	Gray	 (K3-VE2)
EFI ECU			Fuel injector		

CONNECTOR LIST -3

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
A41	Brown	 (K3-VE2)	B01	—	
Fuel injector			Relay block		
A42	Gray	 (K3-VE2)	B03	—	
Fuel injector			Alternator		
		_____	B04	—	
			Starter		
		_____	B05	White	
			Starter		
		_____	C01	—	
			Body earth		
		_____	C02	—	
			T/M earth		
		_____			_____
		_____			_____
		_____			_____
		_____			_____

   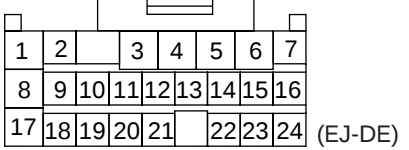    CONNECTOR LIST -4

















No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
D01	Gray		D11	Gray	
Front turn lamp LH			A/C dual pressure SW		
D02	Black		D12	Gray	
Headlamp LH			Relay block		
D03	Black		D13	Black	
Clearance lamp LH			Front wiper motor		
D04	—		D14	Gray	
Cowl LH J/C			Brake oil level SW		
D05	Gray		D15	—	
ABS speed sensor LH			Cowl LH J/C		
D06	Black		D16	White	
Side turn lamp LH			EFI ECU		
D07	Black		D17	Yellow	
Radiator fan motor			Passenger's squib		
D08	White		D18	White	
Neutral start SW			Thermistor		
D09	Black		D19	White	
Relay block			Cigarette lighter		
D10	Black		D20	White	
Relay block			Ash tray		

HW-146

CONNECTOR LIST -5

















No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
D21	White		D31	White	
Radio			Floor ILL.		
D22	White		D32	Gray	
Radio			Meter 16p		
D23	Black		D33	White	
Blower motor			Meter 13p		
D24	Black		D34	Blue	
Blower SW			Meter 10p		
			D35	Blue	
			Junction block		
D25	Black		D36	Blue	
A/C SW			Junction block		
D26	Gray Blue		D37	Blue	
IMB			Junction block		
D27	Black		D38	White	
DLC			Stop lamp SW		
D28	Black		D39	Blue	
HTR RST			Junction block		
D29	Yellow		D40	Blue	
Air bag ECU			Junction block		

                CONNECTOR LIST -6

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
D41	Blue		D51	Blue	
Junction block			Junction		
D42	Black		D52	Orange	
Ignition SW			Junction		
D43	White		D53	White	
IMB ANT			Junction		
D44	White		D54	Orange	
Back lamp SW			Junction		
D45	Blue		D55	Orange	
Resistor			Junction		
D46	White		D56	Orange	
Junction			Junction		
D47	Blue		D57	Gray	
Junction			Relay block		
D48	White		D58	Black	
Junction			Clock		
D49	White		D59	Black	
Junction			Hazard SW		
D50	White		D60	Black	
Junction			Variable resistor		

HW-148

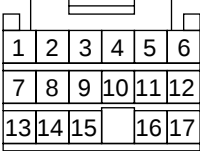  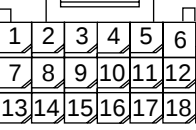     
 
 
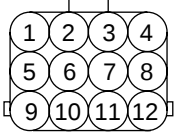
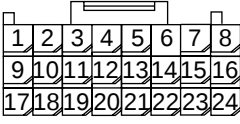
 
 
 
CONNECTOR LIST -7

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
D61	White	 (EJ-DE / Leated)	D71	White	
EFI ECU			Key less unit		
D62	White		D72	White	 (K3-VE) (EJ-VE)
ITC ECU			EFI ECU		
D63	White		D73	Black	
ITC ECU			Front fog lamp LH		
			D74	White	
			Front fog lamp SW		
D65	White		D75	Blue	
Relay block			Junction		
D66	White		D76	Blue	
Sub fuse			Junction		
D67	Gray		D77	Gray	
Head lamp leveling unit LH			A/T solenoid		
D68	White	 (K3-VE2) (EJ-VE)	D78	Black	
EFI ECU			A/T sensor		
D69	Black		D79	Black	
Key SW			A/T sensor		
D70	Black		D80	Gray	
Rear fog SW			A/T ECU		







CONNECTOR LIST -8

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
D81	Gray				_____
A/T ECU					
D82	Gray				_____
A/T ECU					
D83	—				_____
T/M earth					
D84	Gray	(K3-VE2 engine)			_____
Meter 18P					
D85	White	(K3-VE2 engine)			_____
Meter 22P					
D86	White				_____
SP mode SW					
D88	Black				_____
Vehicle speed sensor					
		_____			_____
		_____			_____
		_____			_____



 
 
 
 
 
 
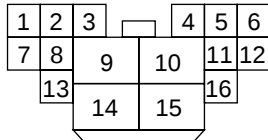
 
CONNECTOR LIST -9

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
E01	Black		E11	Black	
Horn			Side turn lamp RH		
E02	Black		E12	Green	
Horn			ABS speed sensor RH		
E03	Black		E13	——	
Front washer motor			Earth		
E04	Blue		E14	Gray	
Head lamp leveling SW			Front turn lamp RH		
E05	White		E15	Black	
Mirror SW			Headlamp RH		
E06	Brown		E16	Black	
Rear wiper SW			Clearance lamp RH		
E07	Blue		E17	Gray	
Defogger SW			Head lamp leveling unit RH		
E08	Blue		E18	White	
Junction block			MGC		
E09	Blue		E19	Black	
Junction block			CDS fam motor		
E10	——		E20	White	
Cowl LH J/C			Rear wash motor		












 
 
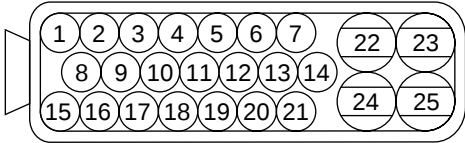
 
 
 
CONNECTOR LIST -10

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
E21	Gray				_____
Junction					
E22	Blue				_____
Junction					
E23	Black				_____
ABS ECU					
E24	Blue				_____
Junction					
E25	Black				_____
Flasher relay					
E26	Black				_____
Reostat SW					
E27	Black				_____
Front fog lamp RH					
		_____			_____
		_____			_____
		_____			_____

       
 
 
 
CONNECTOR LIST -11

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
F01	Gray		F11	Gray	
Front turn lamp LH			A/C dual pressure SW		
F02	Black		F12	Gray	
Headlamp LH			Relay block		
F03	Black		F13	Black	
Clearance lamp LH			Front wiper motor		
F04	—		F14	Gray	
Cowl LH J/C			Brake oil level SW		
F05	Gray		F15	—	
ABS speed sensor LH			Cowl LH J/C		
F06	Black		F16	Blue	
Side turn lamp LH			Junction block		
F07	Black		F17	Blue	
Radiator fan motor			Junction block		
F08	White		F18	Blue	
Neutral start SW			Junction block		
F09	Black		F19	Black	
Relay block			Ignition SW		
F10	Black		F20	Gray	
Relay block			Relay block		

      
 
 
 
 
 
 
 
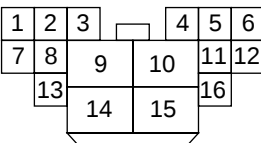
 
 
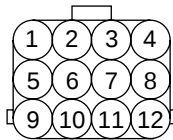
CONNECTOR LIST -12

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
F21	Black		F31	White	
Variable resistor			Day light relay		
F22	White		F32	Black	
Relay block			Day light relay		
F23	White		F33	Blue	
Sub fuse			Junction		
F24	Gray		F34	White	
Head lamp leveling unit LH			Junction		
F25	Blue		F35	Gray	
Head lamp leveling SW			Junction		
F26	White		F36	White	
Mirror SW			Seat belt SW		
F27	Brown		F37	Black	
Rear wiper SW			Front fog lamp LH		
F28	Blue		F38	White	
Rear defogger SW			Back lamp SW		
F29	Blue		F39	Blue	
Junction block			Junction		
F30	Black		F40	Gray	
Flasher relay			A/T solenoid		



 
 
 
 
CONNECTOR LIST -13

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
F41	Black				
A/T sensor					
F42	Black				
A/T sensor					
F43	——				
T/M earth					
F44	White				
SP mode SW					
F45	Black				
Vehicle speed sensor					






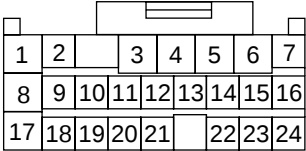
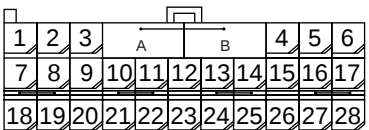
 
 
 
 
 
 
 
 
 
 
CONNECTOR LIST -14

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
G01	White		G11	Black	
EFI ECU			Blower motor		
G02	Yellow		G12	Black	
Passenger's squib			DLC		
G03	White		G13	Black	
Thermistor			HTR RST		
G04	White		G14	Yellow	
Cigarette lighter			Air bag ECU		
G05	White		G15	White	
Ash tray			Floor ILL.		
G06	White		G16	Gray	 (EJ-DE & EJ-VE engine)
Radio			Meter 16p		
G07	White		G17	White	 (EJ-DE & EJ-VE engine)
Radio			Meter 13p		
G08	Black		G18	Blue	 (EJ-DE & EJ-VE engine)
Blower SW			Meter 10p		
G09	Black		G19	Blue	
A/C SW			Junction block		
G10	Blue Gray		G20	Blue	
IMB			Junction block		





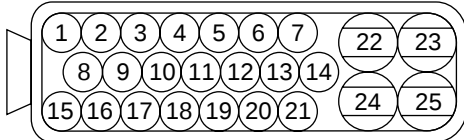
 
 
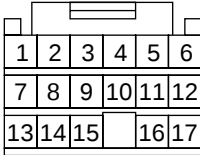
 
 
CONNECTOR LIST -15

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
G21	White		G31	White	
Stop lamp SW			Floor ill.		
G22	Blue		G32	Black	
Junction block			ABS ECU		
G23	White		G33	Black	
IMB ANT			Horn		
G24	Blue		G34	Black	
Resistor			Horn		
G25	Black		G35	Black	
Clock			Front washer motor		
G26	Black		G36	Black	
Hazard SW			Side turn lamp RH		
G27	Black		G37	Green	
Key SW			ABS speed sensor RH		
G28	White	 (EJ-DE / Leated)	G38	Gray	
EFI ECU			Front turn lamp RH		
G29	White		G39	Black	
ITC ECU			Headlamp RH		
G30	White		G40	Black	
ITC ECU			Clearance lamp RH		

            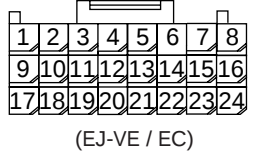    CONNECTOR LIST -16

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
G41	White		G51	Blue	
MGC			Junction		
G42	Black		G52	White	
CDS fam motor			Junction		
G43	White		G53	Blue	
Rear wash motor			Junction		
G44	Blue		G54	Blue	
Jnction block			Junction		
G45	—		G55	Blue	
Cowl LH J/C			Junction		
G46	Black		G56	White	
Body earth			Junction		
			G57	Orange	
			Junction		
G48	Blue		G58	White	 (EJ-VE / EC)
Junction			EFI ECU		
G49	White		G59	Gray	
Junction			Head lamp leveling unit RH		
G50	White		G60	Black	
Junction			Rear fog SW		

 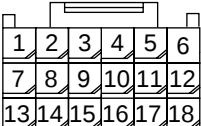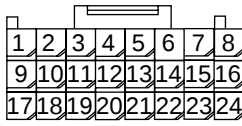      
 
CONNECTOR LIST -17

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
G61	White		G71	Black	
Key less unit			Front fog lamp RH		
G62	White	 (K3-VE2) (EJ-VE)			
EFI ECU					
G63	White	 (K3-VE2) (EJ-VE)			
EFI ECU					
G64	White				
Front fog lamp SW					
G65	Gray				
A/T ECU					
G66	Gray				
A/T ECU					
G67	Gray				
A/T ECU					
G68	Gray	 (K3-VE2 engine)			
Meter 18P					
G69	White	 (K3-VE2 engine)			
Meter 22P					
G70	Blue				
Junction					








CONNECTOR LIST -18

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
H01	White		J01	White	
Master SW			Mirror adjust RH		
H02	White		J02	White	
Front speaker RH			Front power window motor RH		
H03	Black		J03	White	
Front door lock actuator RH			Power window SW		
H04	White		J04	White	
Mirror adjust RH			Front speaker RH		
H05	White		J05	White	
Front power window motor RH			Front door lock actuator LH		
I01	White		K01	White	
Mirror adjust LH			Mirror adjust LH		
I02	Blue		K02	Blue	
Front power window motor LH			Front power window motor LH		
I03	White		K03	White	
Power window SW			Master SW		
I04	White		K04	White	
Front door lock actuator RH			Front speaker LH		
I05	White		K05	Black	
Front speaker LH			Front door lock actuator LH		






 
 
CONNECTOR LIST -19

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
L01	White		N01	White	
Rear speker RH			Rear speker LH		
L02	White		N02	Blue	
Rear power window motor RH			Rear power window motor LH		
L03	White		N03	White	
Power window SW			Power window SW		
L04	White		N04	White	
Rear door lock actuator RH			Rear door lock actuator LH		

       CONNECTOR LIST -20

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
M01	Blue		M11	White	
Junction block			Rear combination lamp LH		
M02	Blue		M12	White	
Fuel pump cut SW			Jnction		
M03	White		M13	Black	
Seat belt warning SW			Junction		
M04	Blue		M14	Blue	
Paking brake SW			ABS rear speed sensor LH		
M05	Blue		M15	—	
Front door curtesy SW RH			Body earth		
M06	Blue		M16	Black	
Front door curtesy SW LH			ABS G sensor		
M07	Blue		O01	White	
Rear door curtesy SW LH			ABS rear speed sensor RH		
M08	Blue				
Rear door curtesy SW RH					
M09	White				
Rear combination lamp RH					
M10	Blue				
Back door curtesy SW LH					

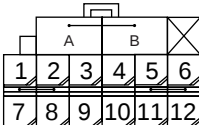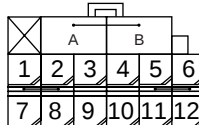     CONNECTOR LIST -21

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
P01	Yellow		Q01	White	
Air bag ECU			Interior lamp		
P02	Yellow		R01	White	
Air bag ECU			High mount stop lamp		
P03	Yellow		S01	—	
Side air bag squib LH			Body earth		
P04	Yellow		S02	White	
Satellite sensor LH			Defogger		
P05	Yellow		S03	White	
Satellite sensor RH			Rear wiper motor		
P06	Yellow		S04	Gray	
Side air bag squib RH			Licence lamp RH		
P07	Yellow		S05	Gray	
Pretensioner RH			Licence lamp LH		
P08	Yellow		S06	White	
Pretensioner LH			Hight mounted stop lamp		

CONNECTOR LIST -22

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
T01	White		U01	White	
Turn SW			Turn SW		
T02	White		U02	White	
Turn SW			Turn SW		
T03	White		U03	White	
Turn SW			Turn SW		
T04	White		U04	White	
Tail relay			Tail relay		
T05	Yellow		U05	Yellow	
Driver's squib			Driver's squib		
T06	Gray		U07	Gray	
Turn SW			Turn SW		
			U08	White	
			Dimmer relay		
			V01	Black	
			Fuel pump		
			W01	Black	
			Defogger wire		
			W02	—	
			Defogger wire		





CONNECTOR LIST -23

Connector No.	CONNECTOR DIAGRAM	Connector No.	CONNECTOR DIAGRAM
AD1 , AG1		DD2	
Blue	(EJ-DE)	White	
AD2 , AG2		DM1	
Blue	(EJ-VE / K3-VE2)	White	
BB1		DT1	
Black		Yellow	
BD1 , BF1		DE3	
Black	(M/T) (A/T)	Yellow	
DE1		DI3	
Gray		Black	
DI1		EH1	
Black		Black	
DE2		EH2	
White		Black	
DI2		EH3	
Black		Black	
DQ1		ET3	
Black		White	
DD1			
White			

CONNECTOR LIST -24

Connector No. Connector color	CONNECTOR DIAGRAM	Connector No. Connector color	CONNECTOR DIAGRAM
EM1 White		FK2 Black	
ET1 White		FK3 Black	
ET2 White		FK4 Black	
FG1 White		FU1 White	
FG2 Blue		FU2 White	
FG3 White		FU3 White	
FG4 Gray		GG1 White	
FG5 Black		GG2 White	
FK1 Black		GG3 White	
		GJ1 Black	

  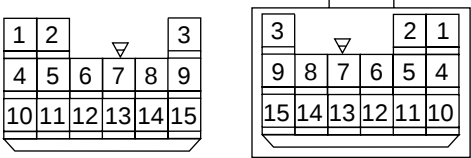 CONNECTOR LIST -25

Connector No.	CONNECTOR DIAGRAM	Connector No.	CONNECTOR DIAGRAM
Connector color		Connector color	
GJ2		NM2	
Black		Black	
GM1		MV1	
White		White	
GM2		MR1	
White		Black	
GM3		MO1	
White		White	
GM4		RS1	
Blue		White	
GQ1		RS2	
Black		Black	
GU1		HM1	
Yellow		White	
LM1			
Black			
LM2			
Black			
NM1			
Black			

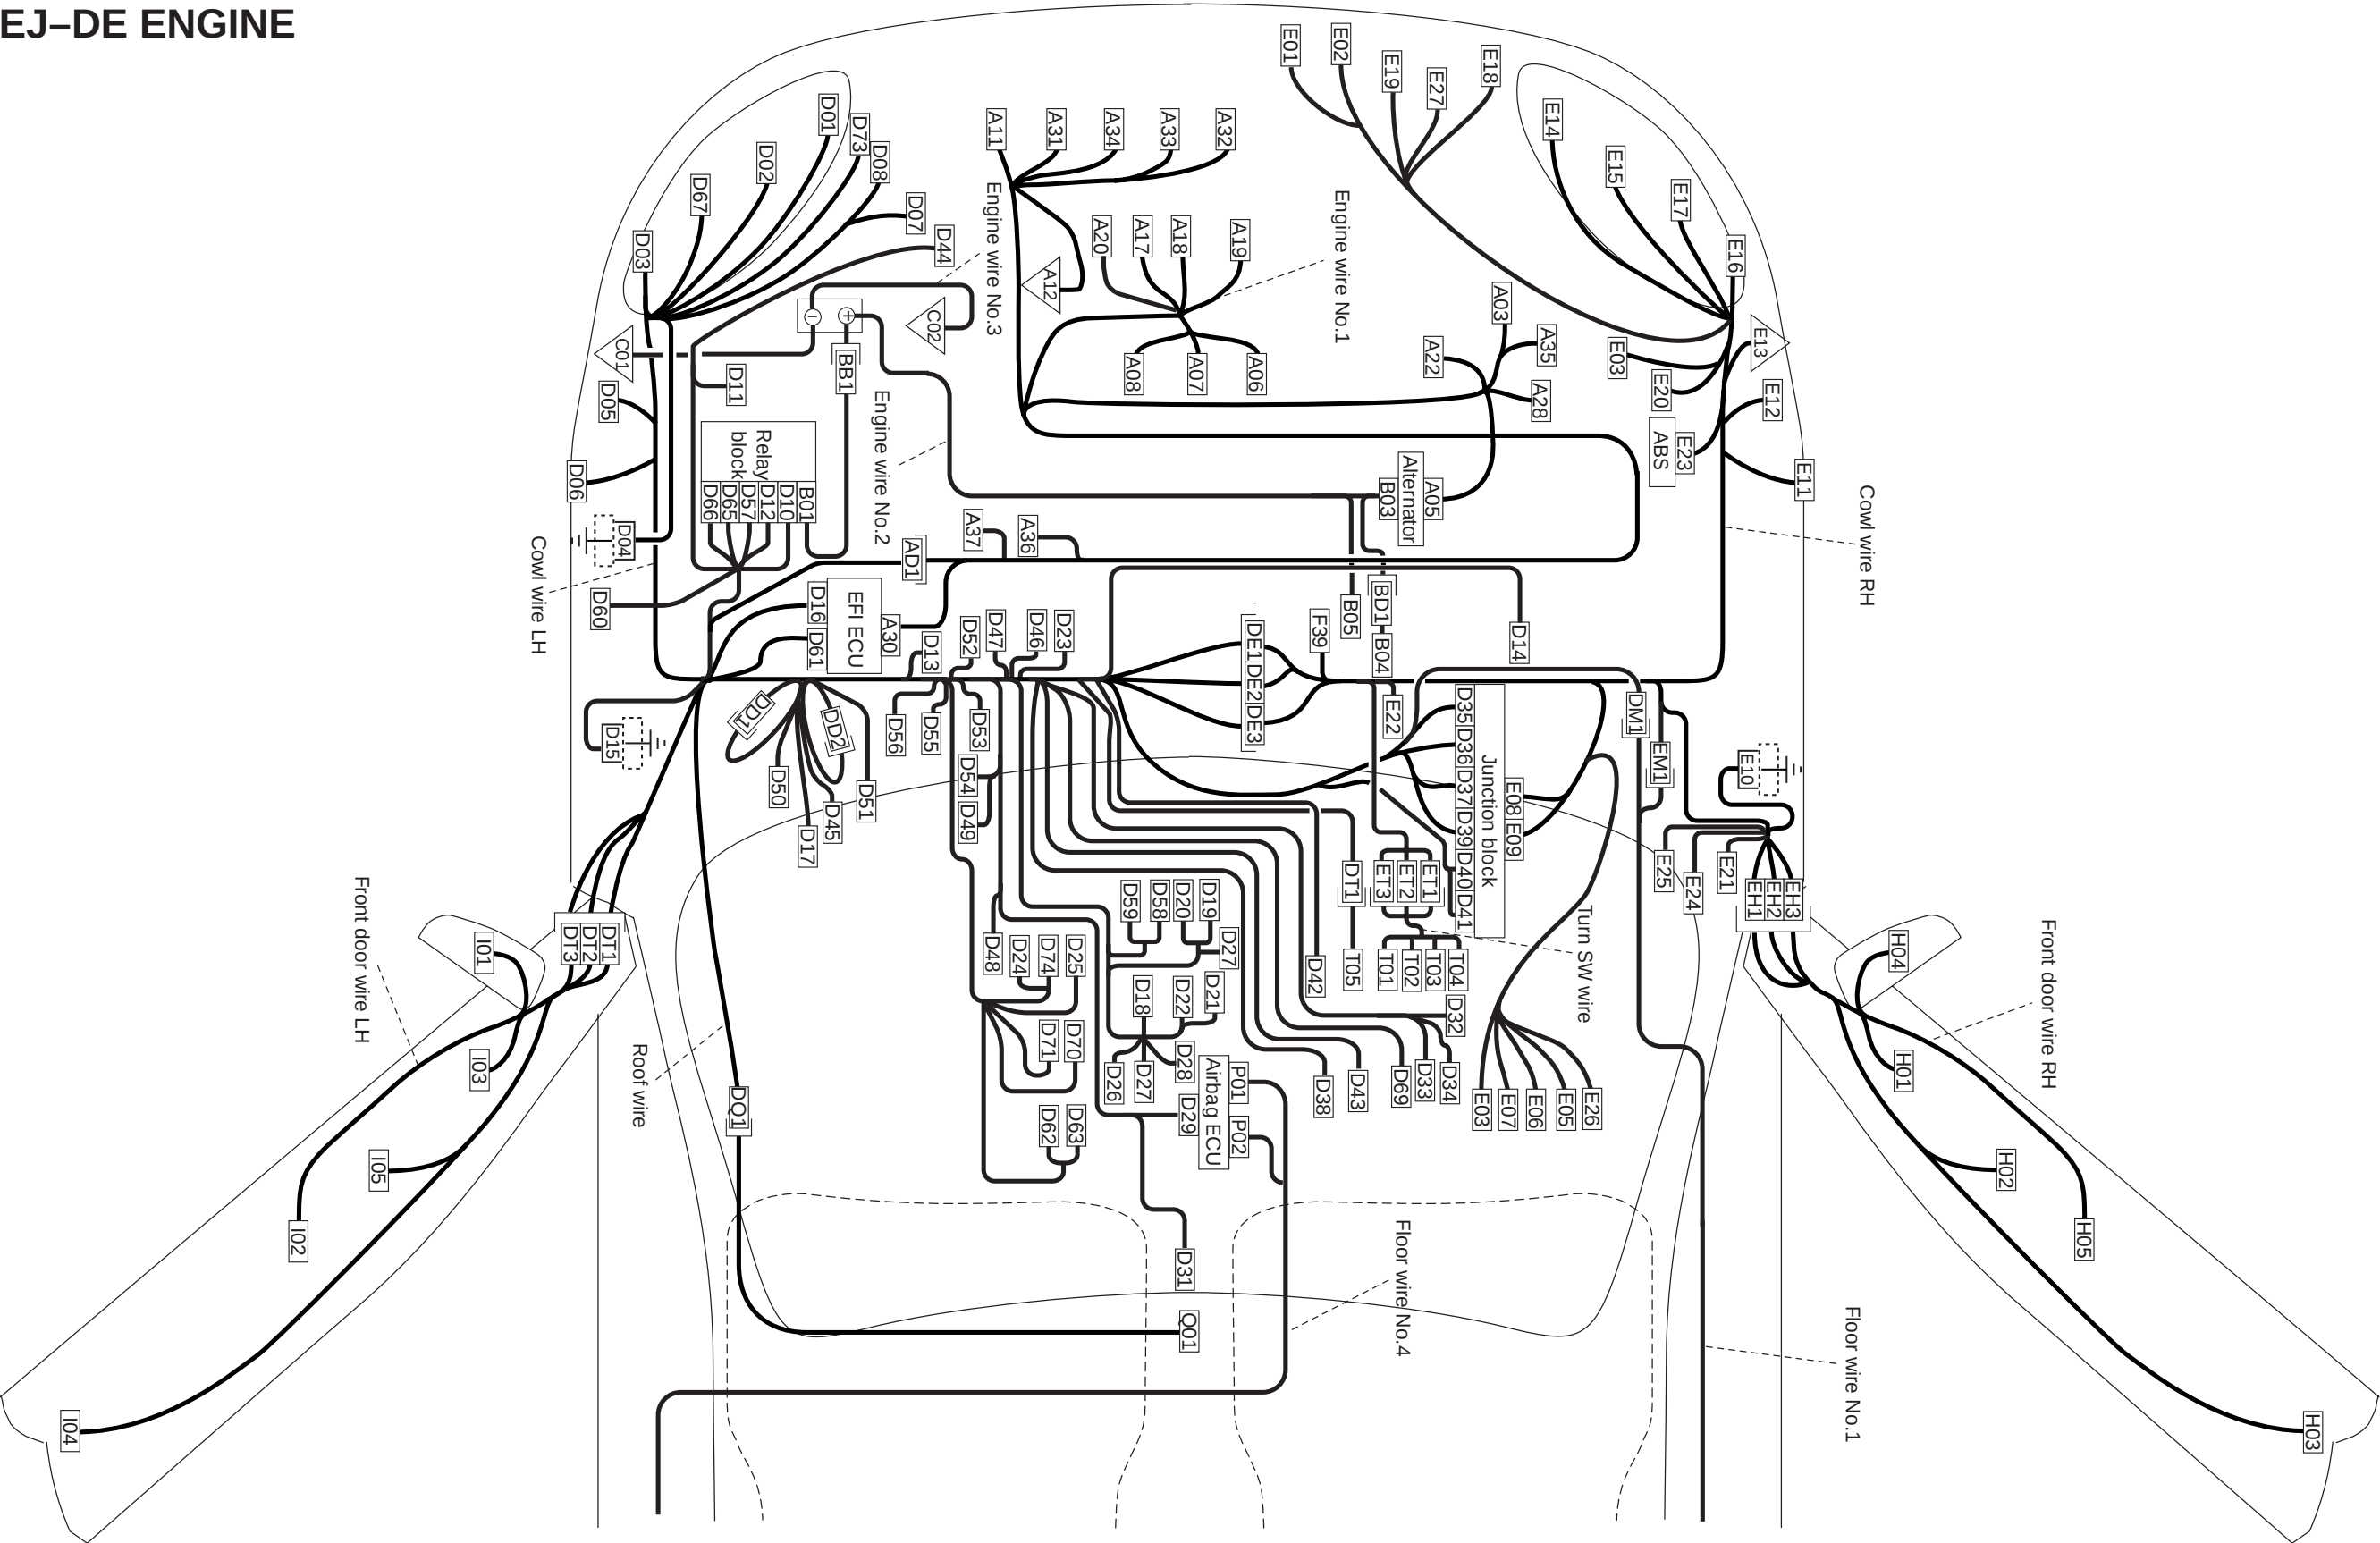
MEMO

Handwriting practice lines consisting of 28 horizontal dashed lines.

LOCATION OF CONNECTORS


RHD VEHICLE -1

EJ-DE ENGINE




RHD VEHICLE -2

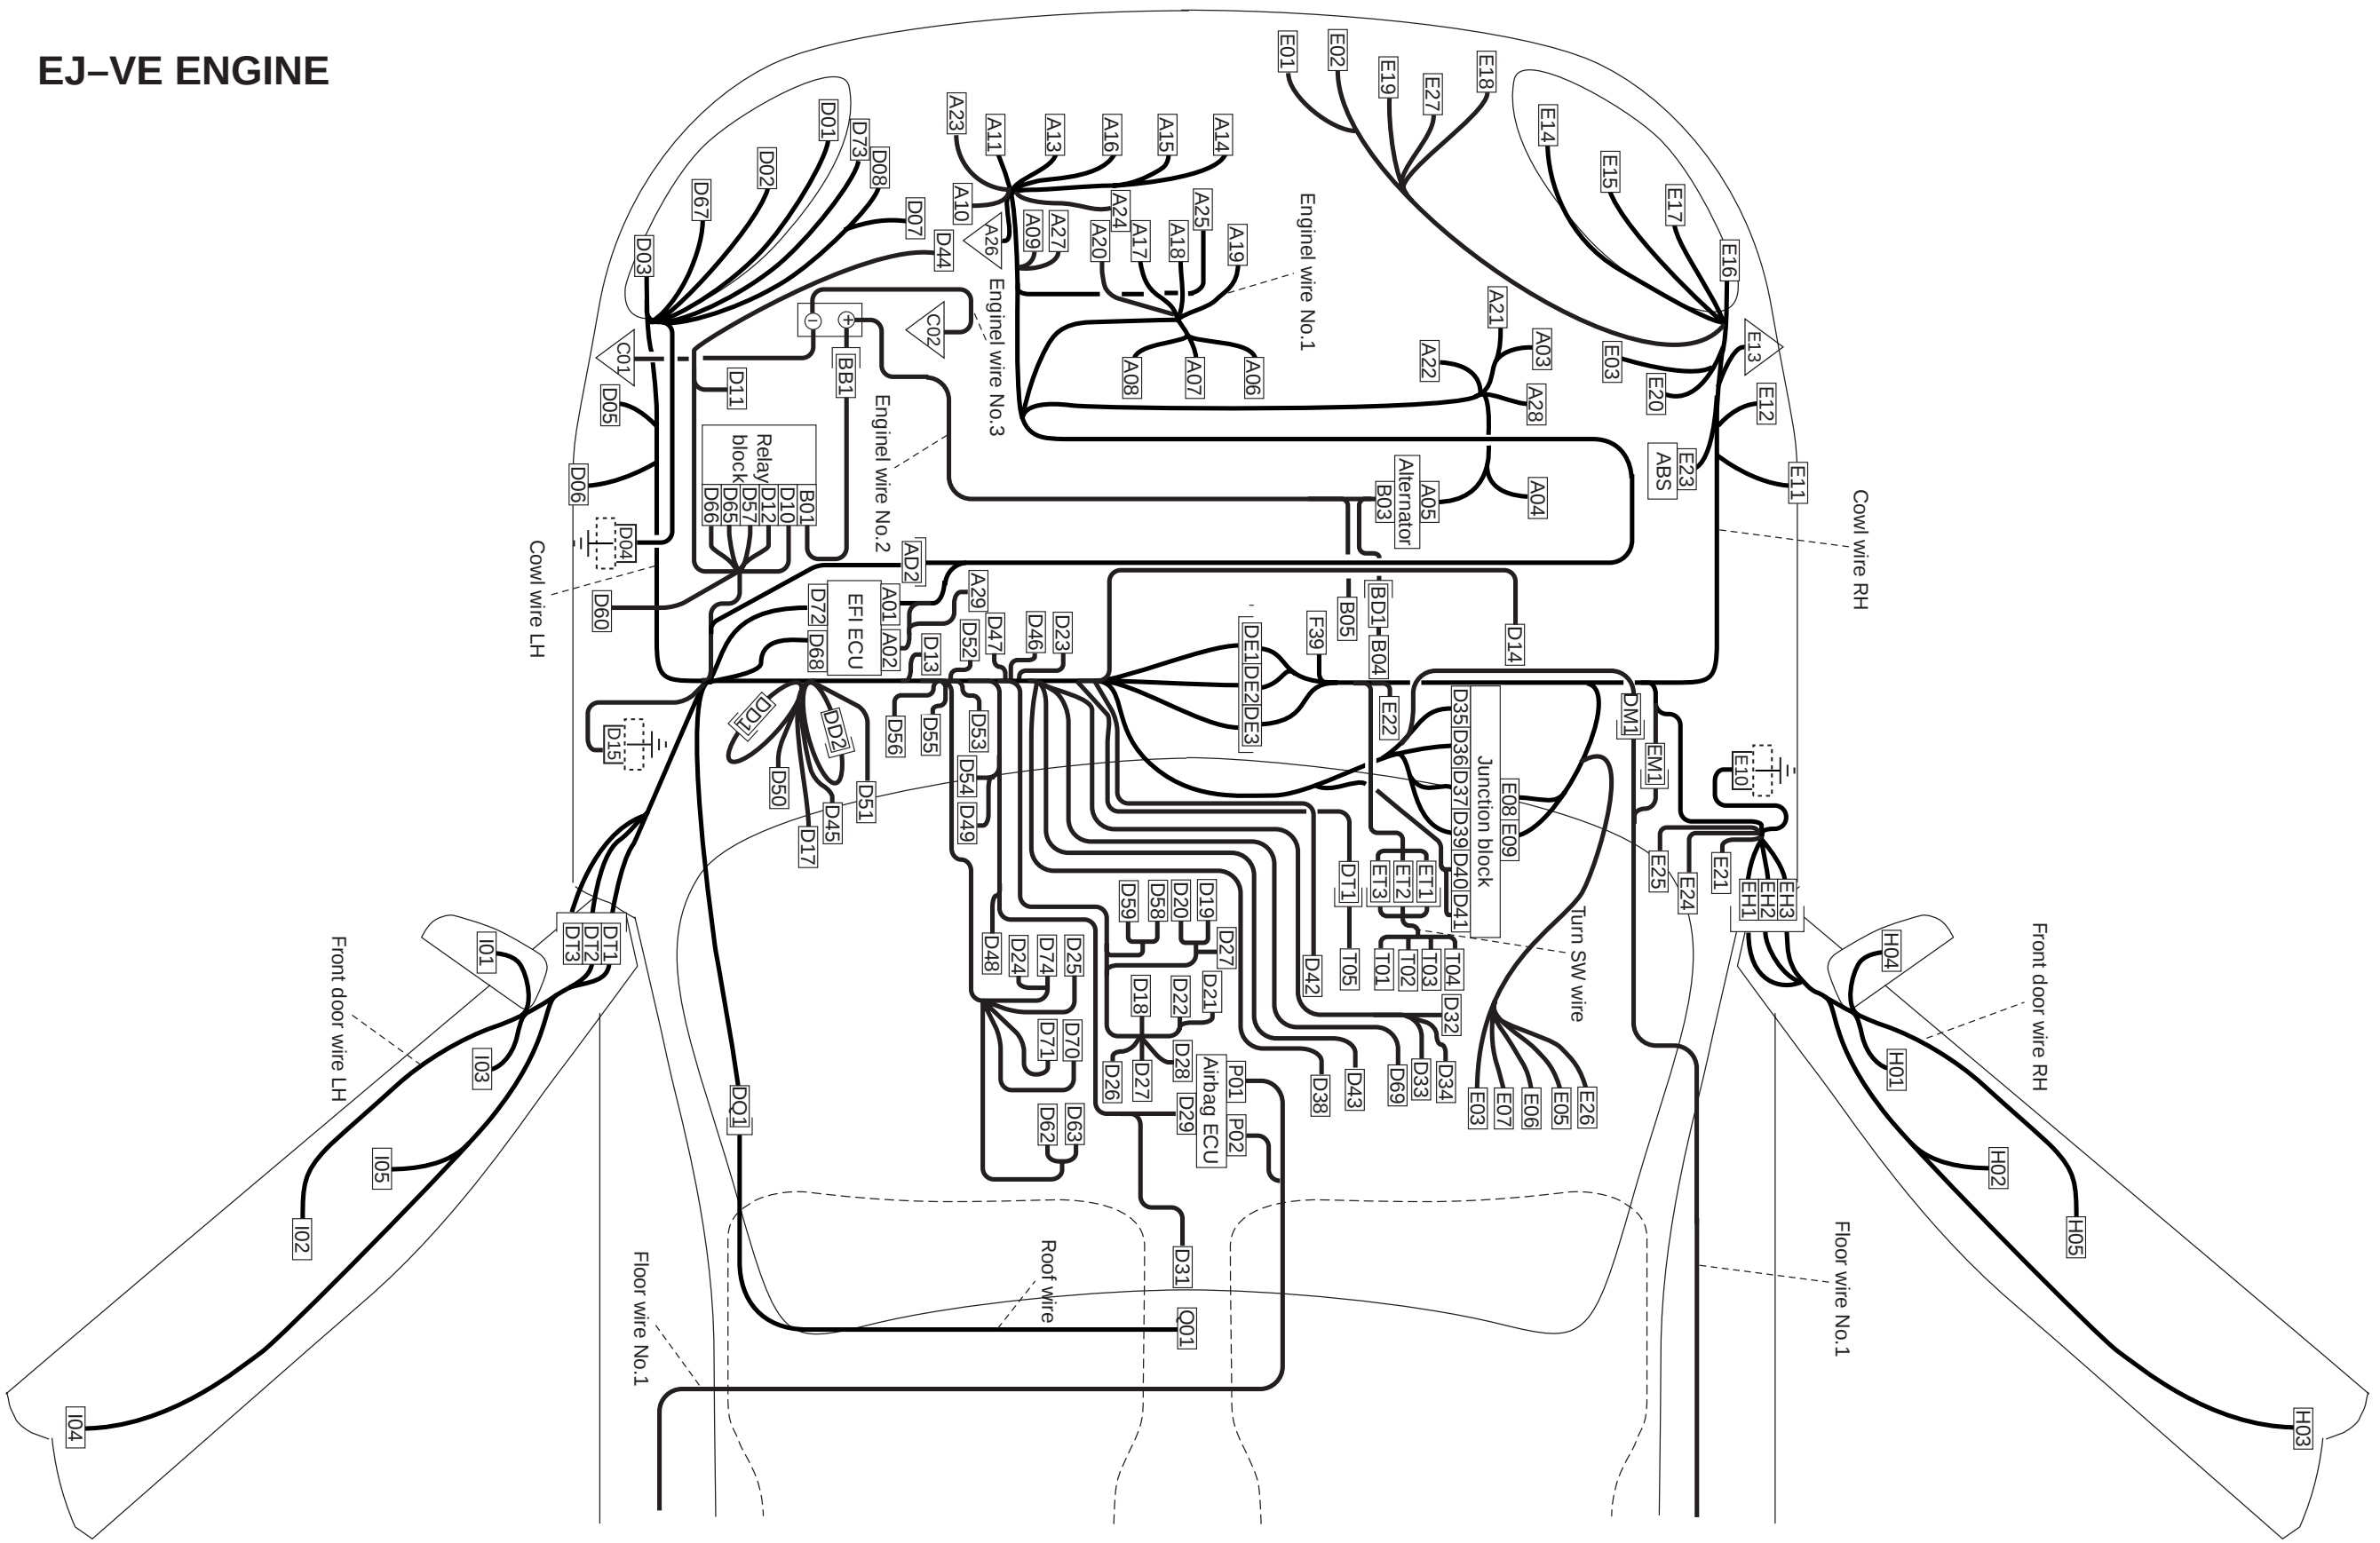
EJ-VE ENGINE



K3-VE2 ENGINE

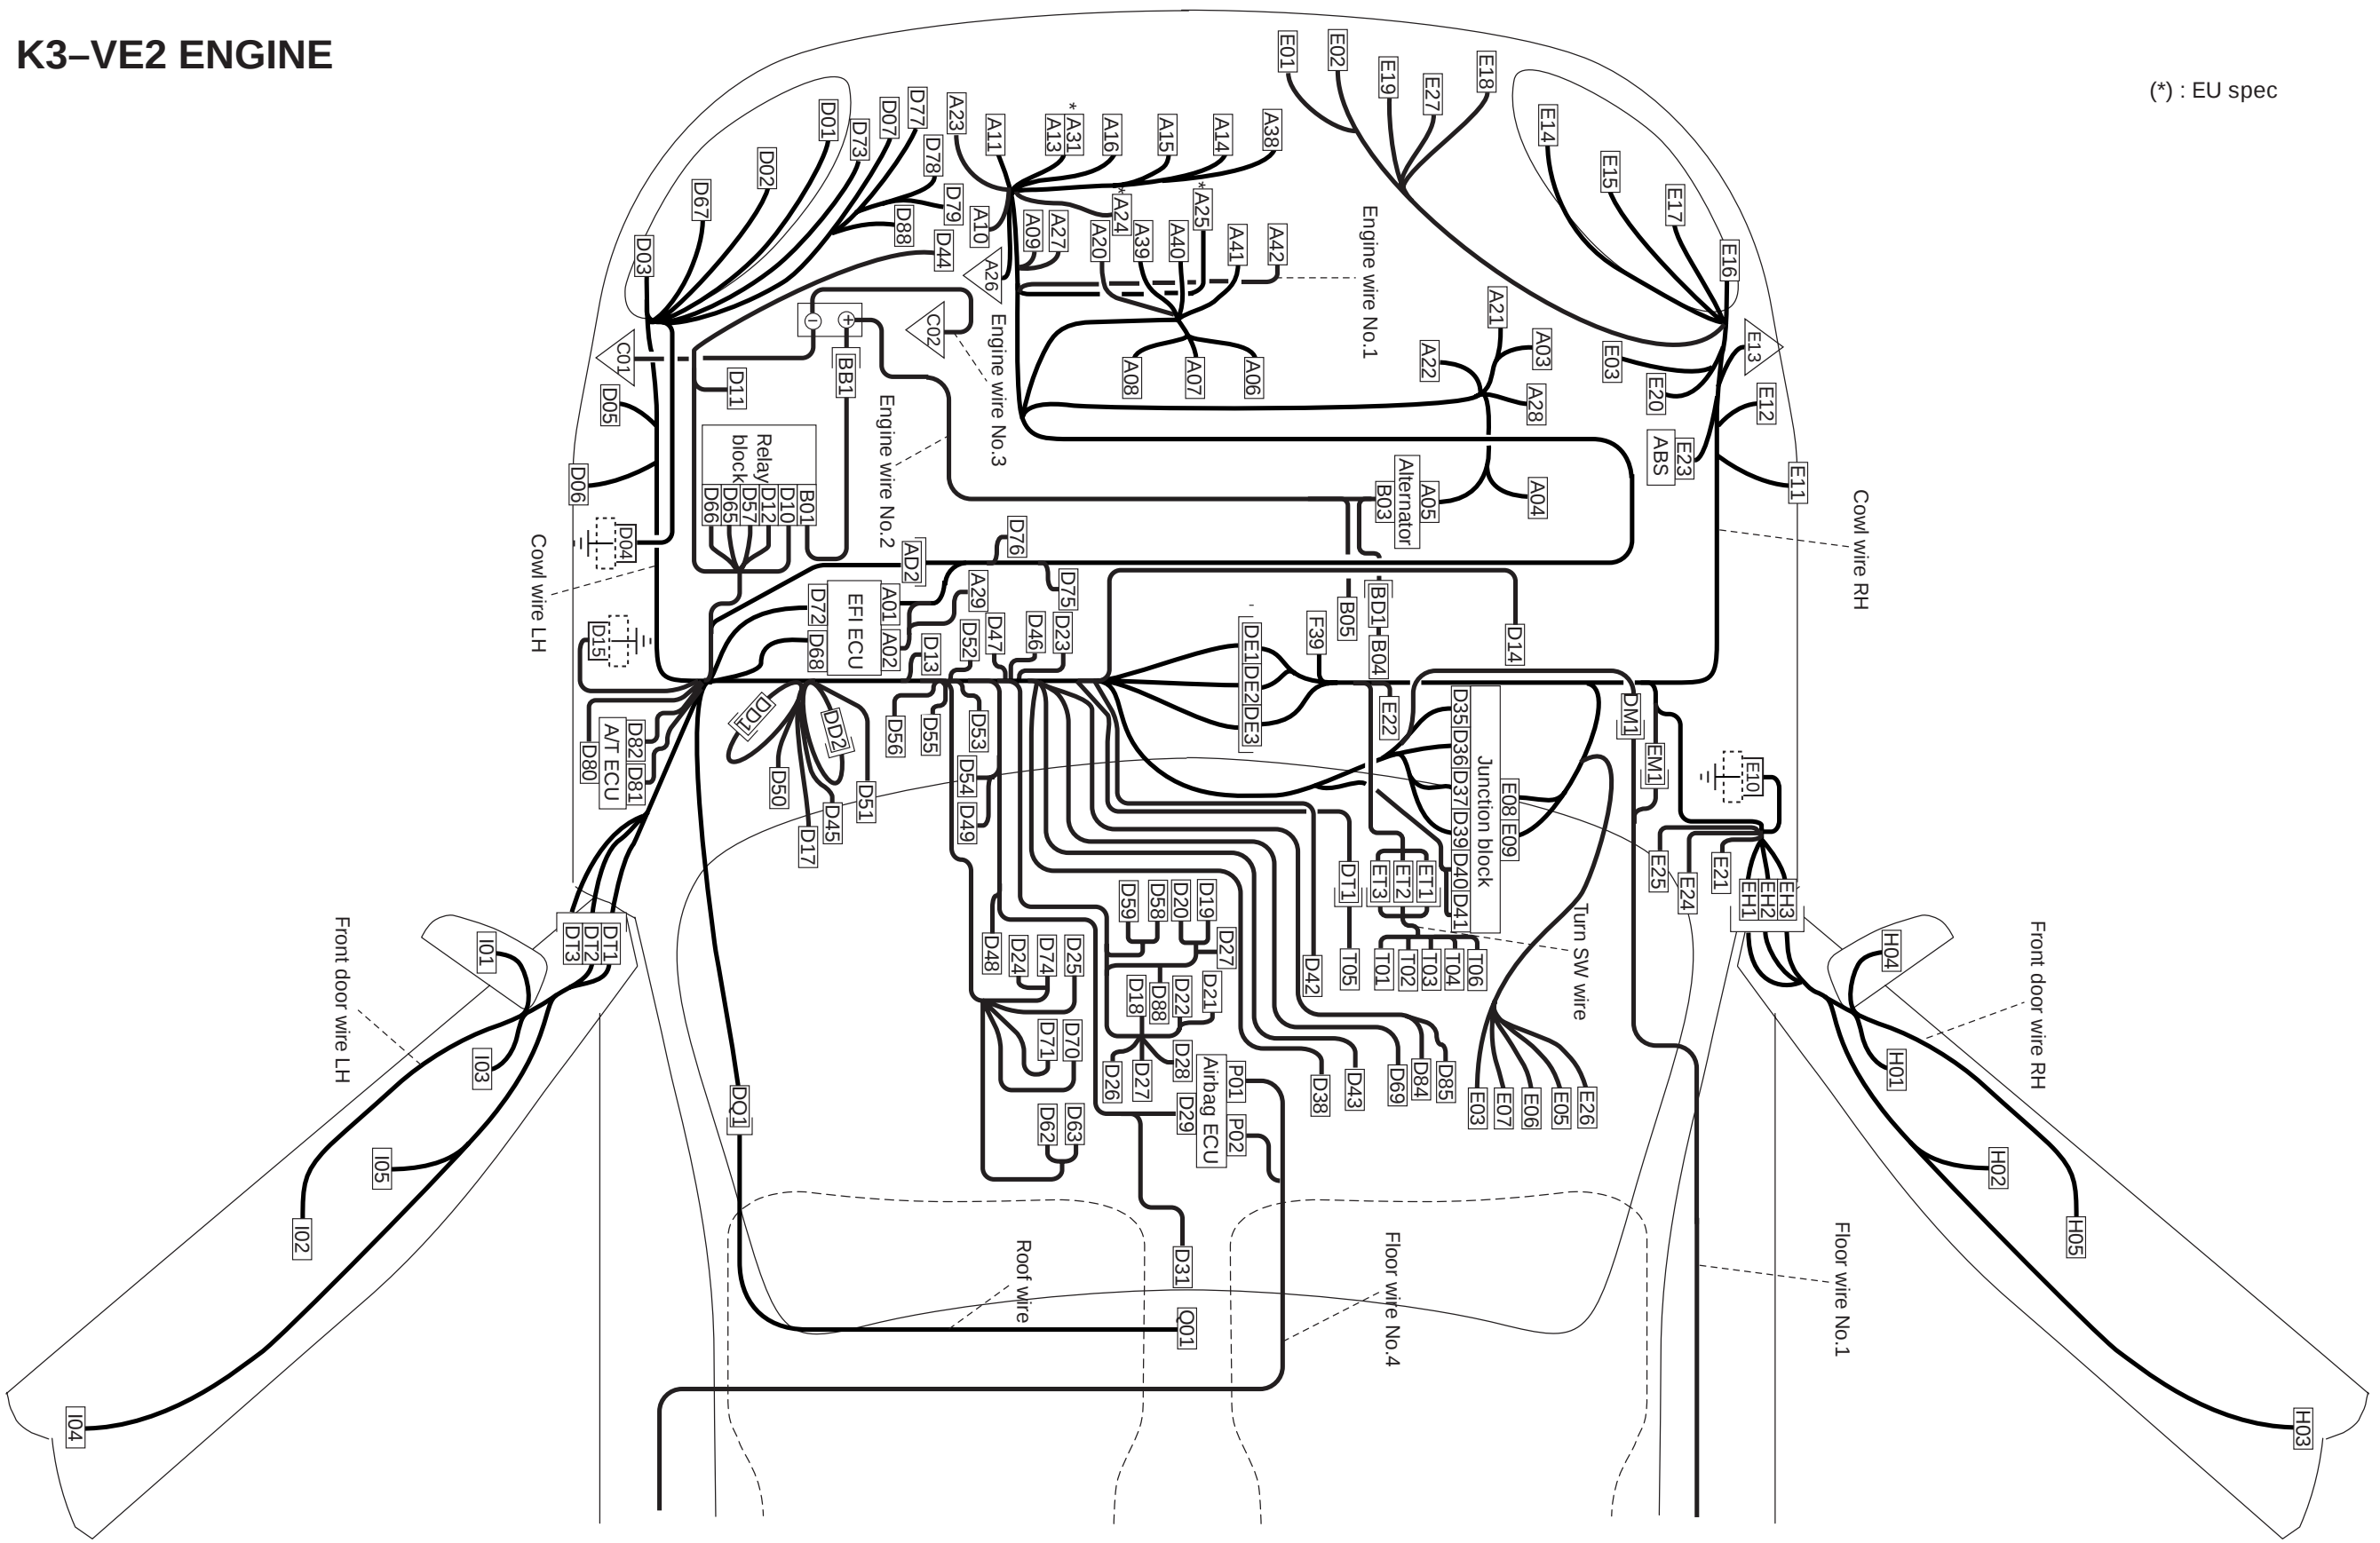 
(*) : EU spec






LHD VEHICLE -1

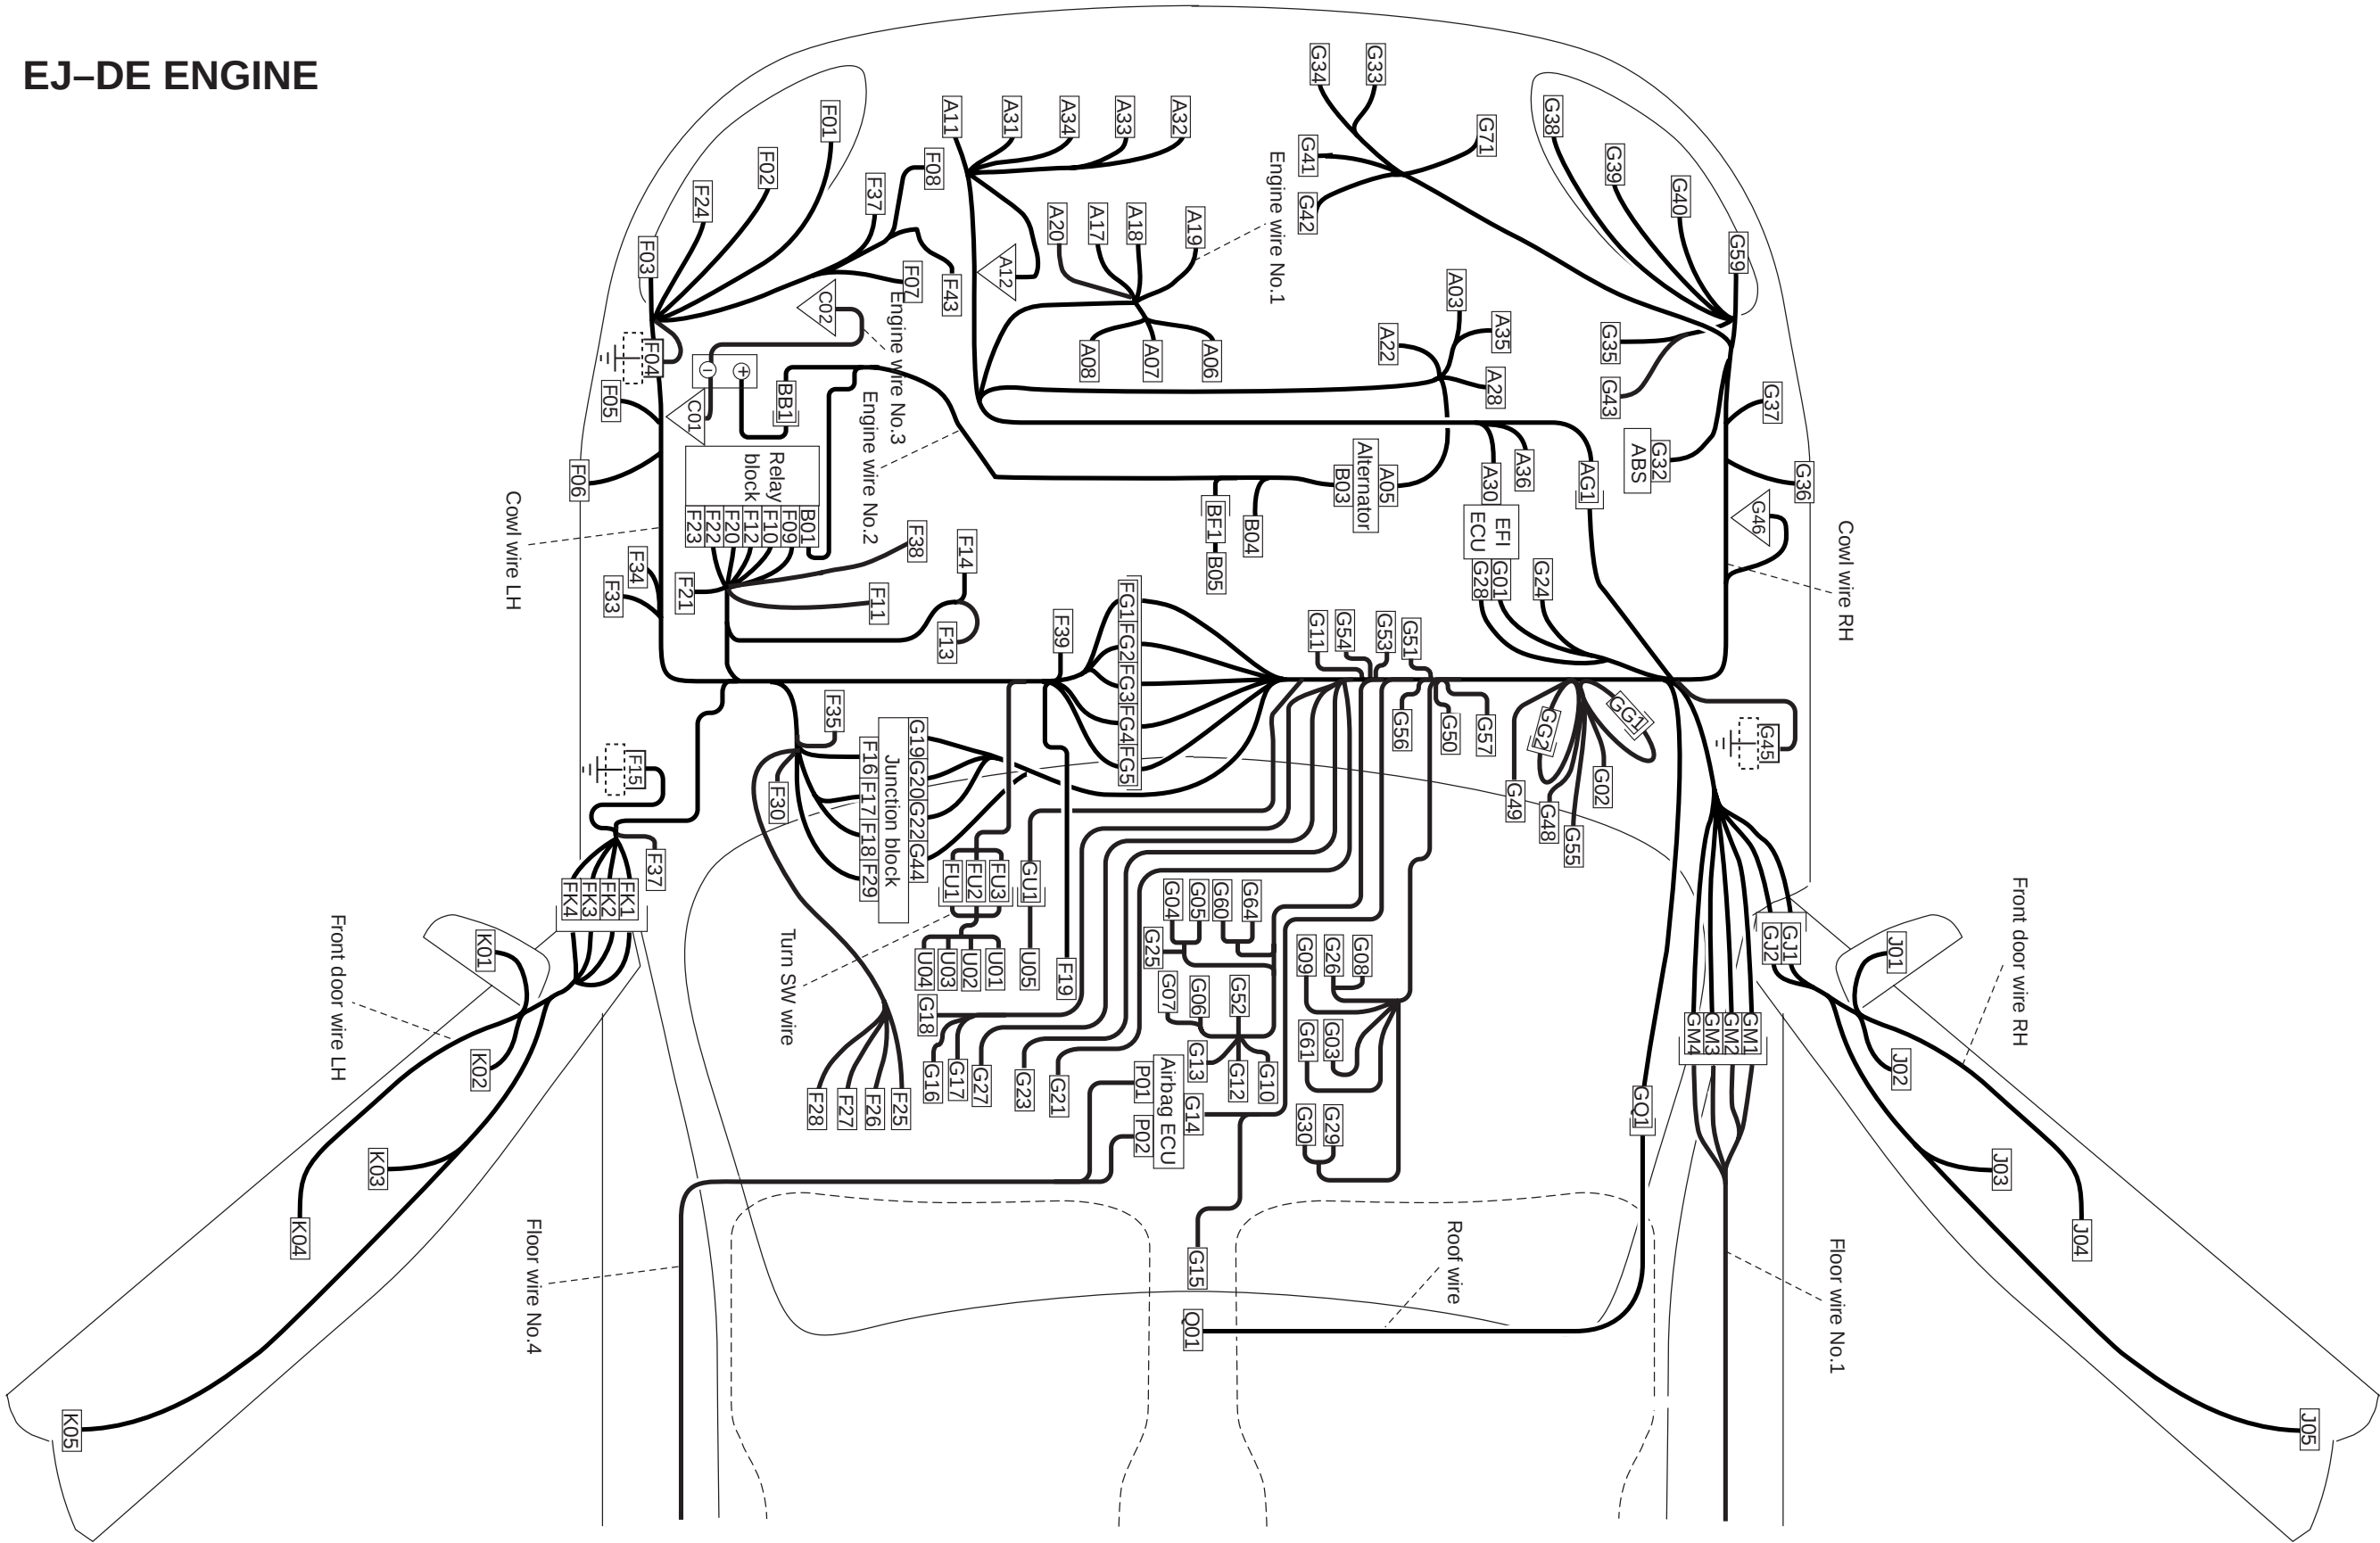EJ-DE ENGINE



LHD VEHICLE -2

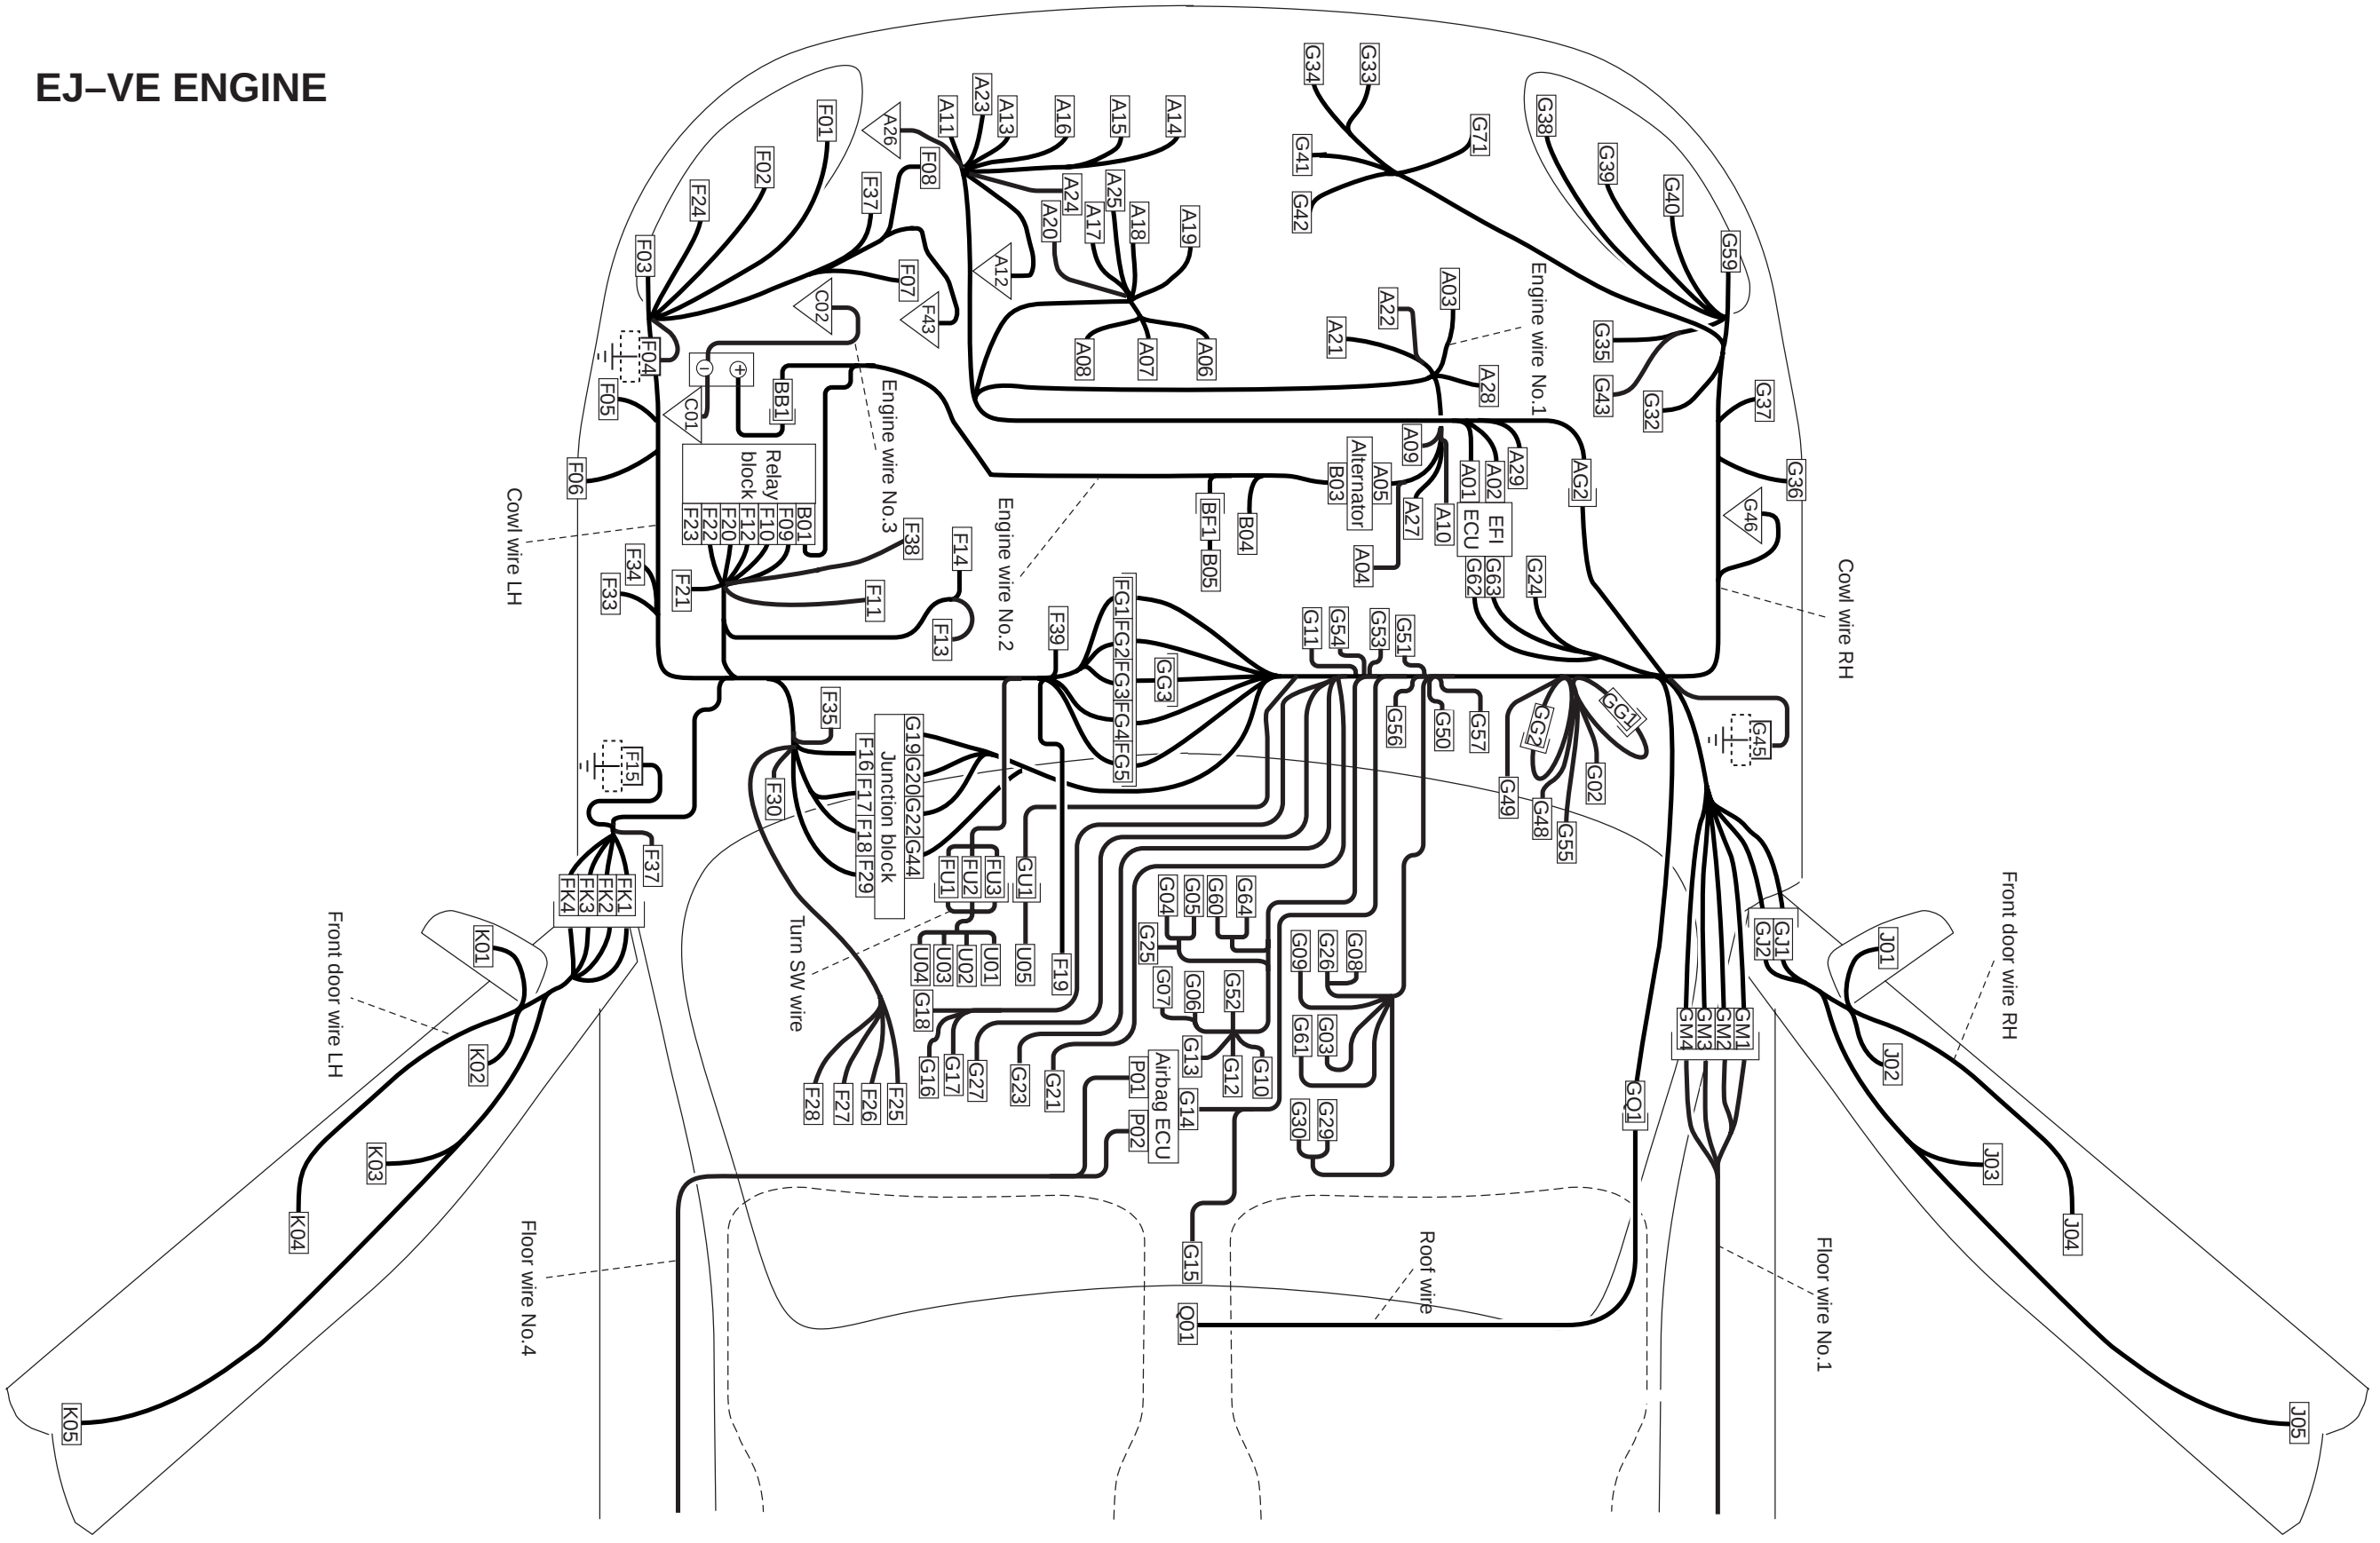
EJ-VE ENGINE




LHD VEHICLE -3

K3-VE2 ENGINE

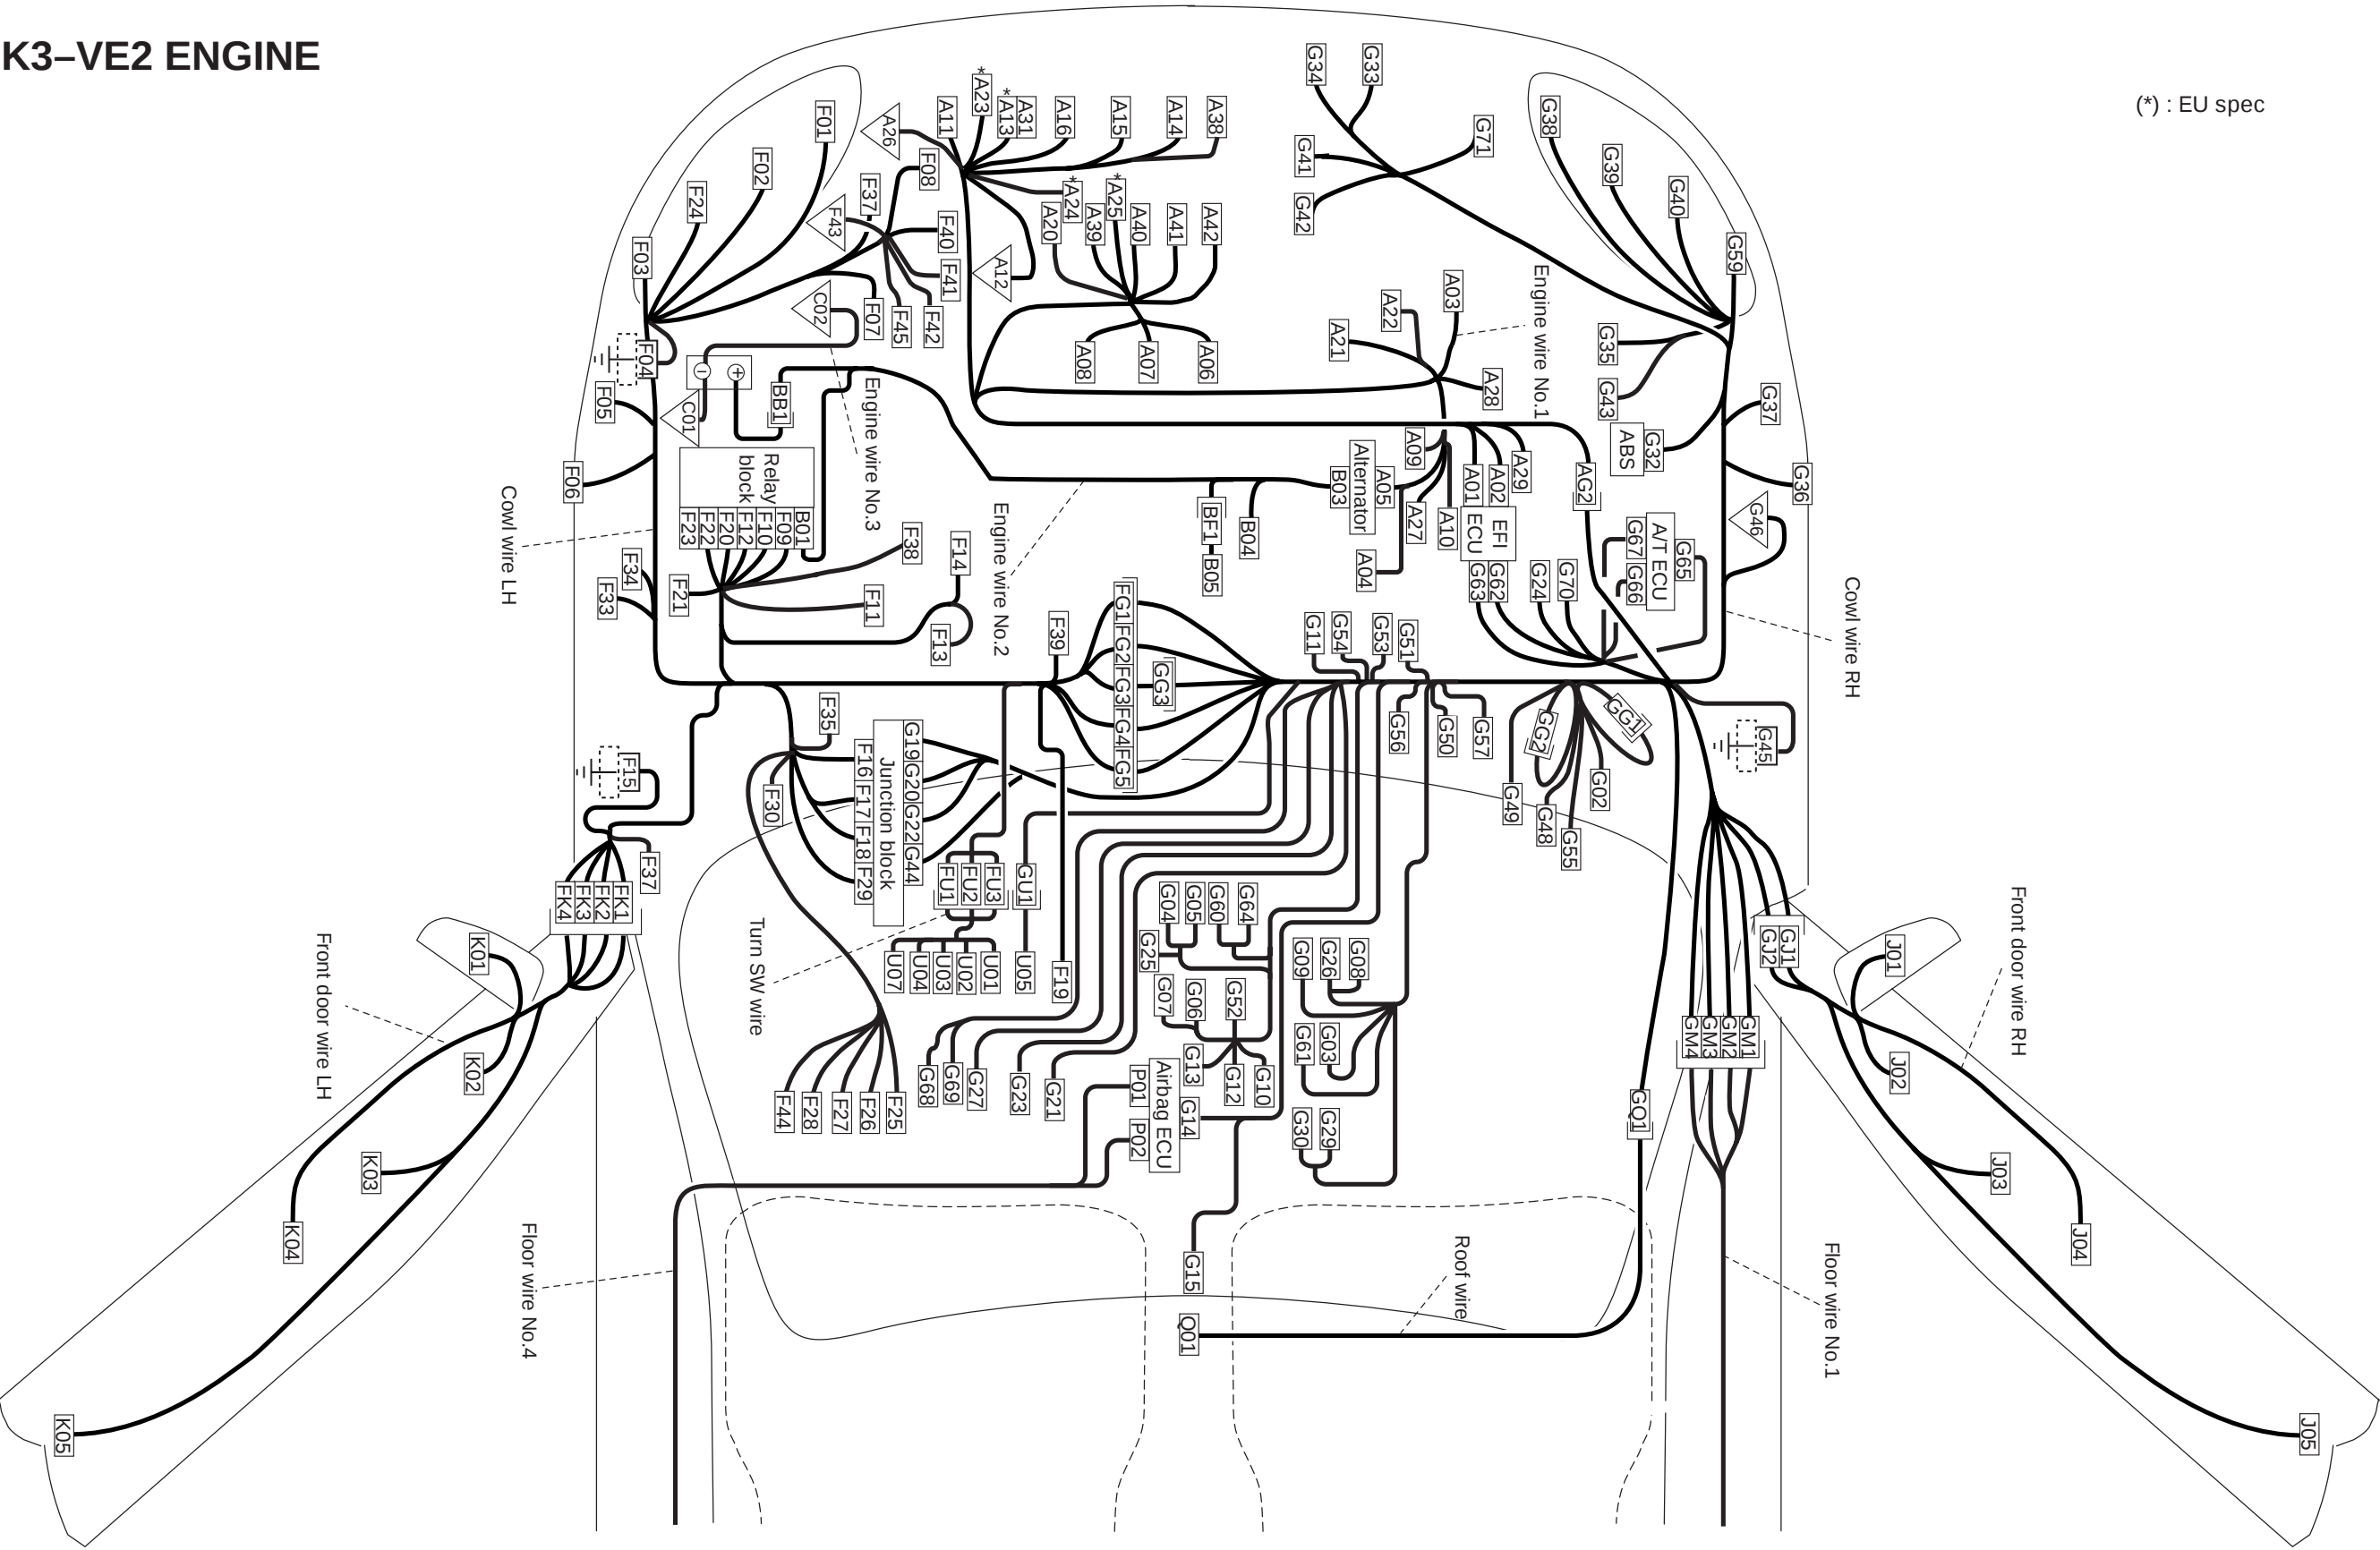(*) : EU spec



LHD VEHICLE -4

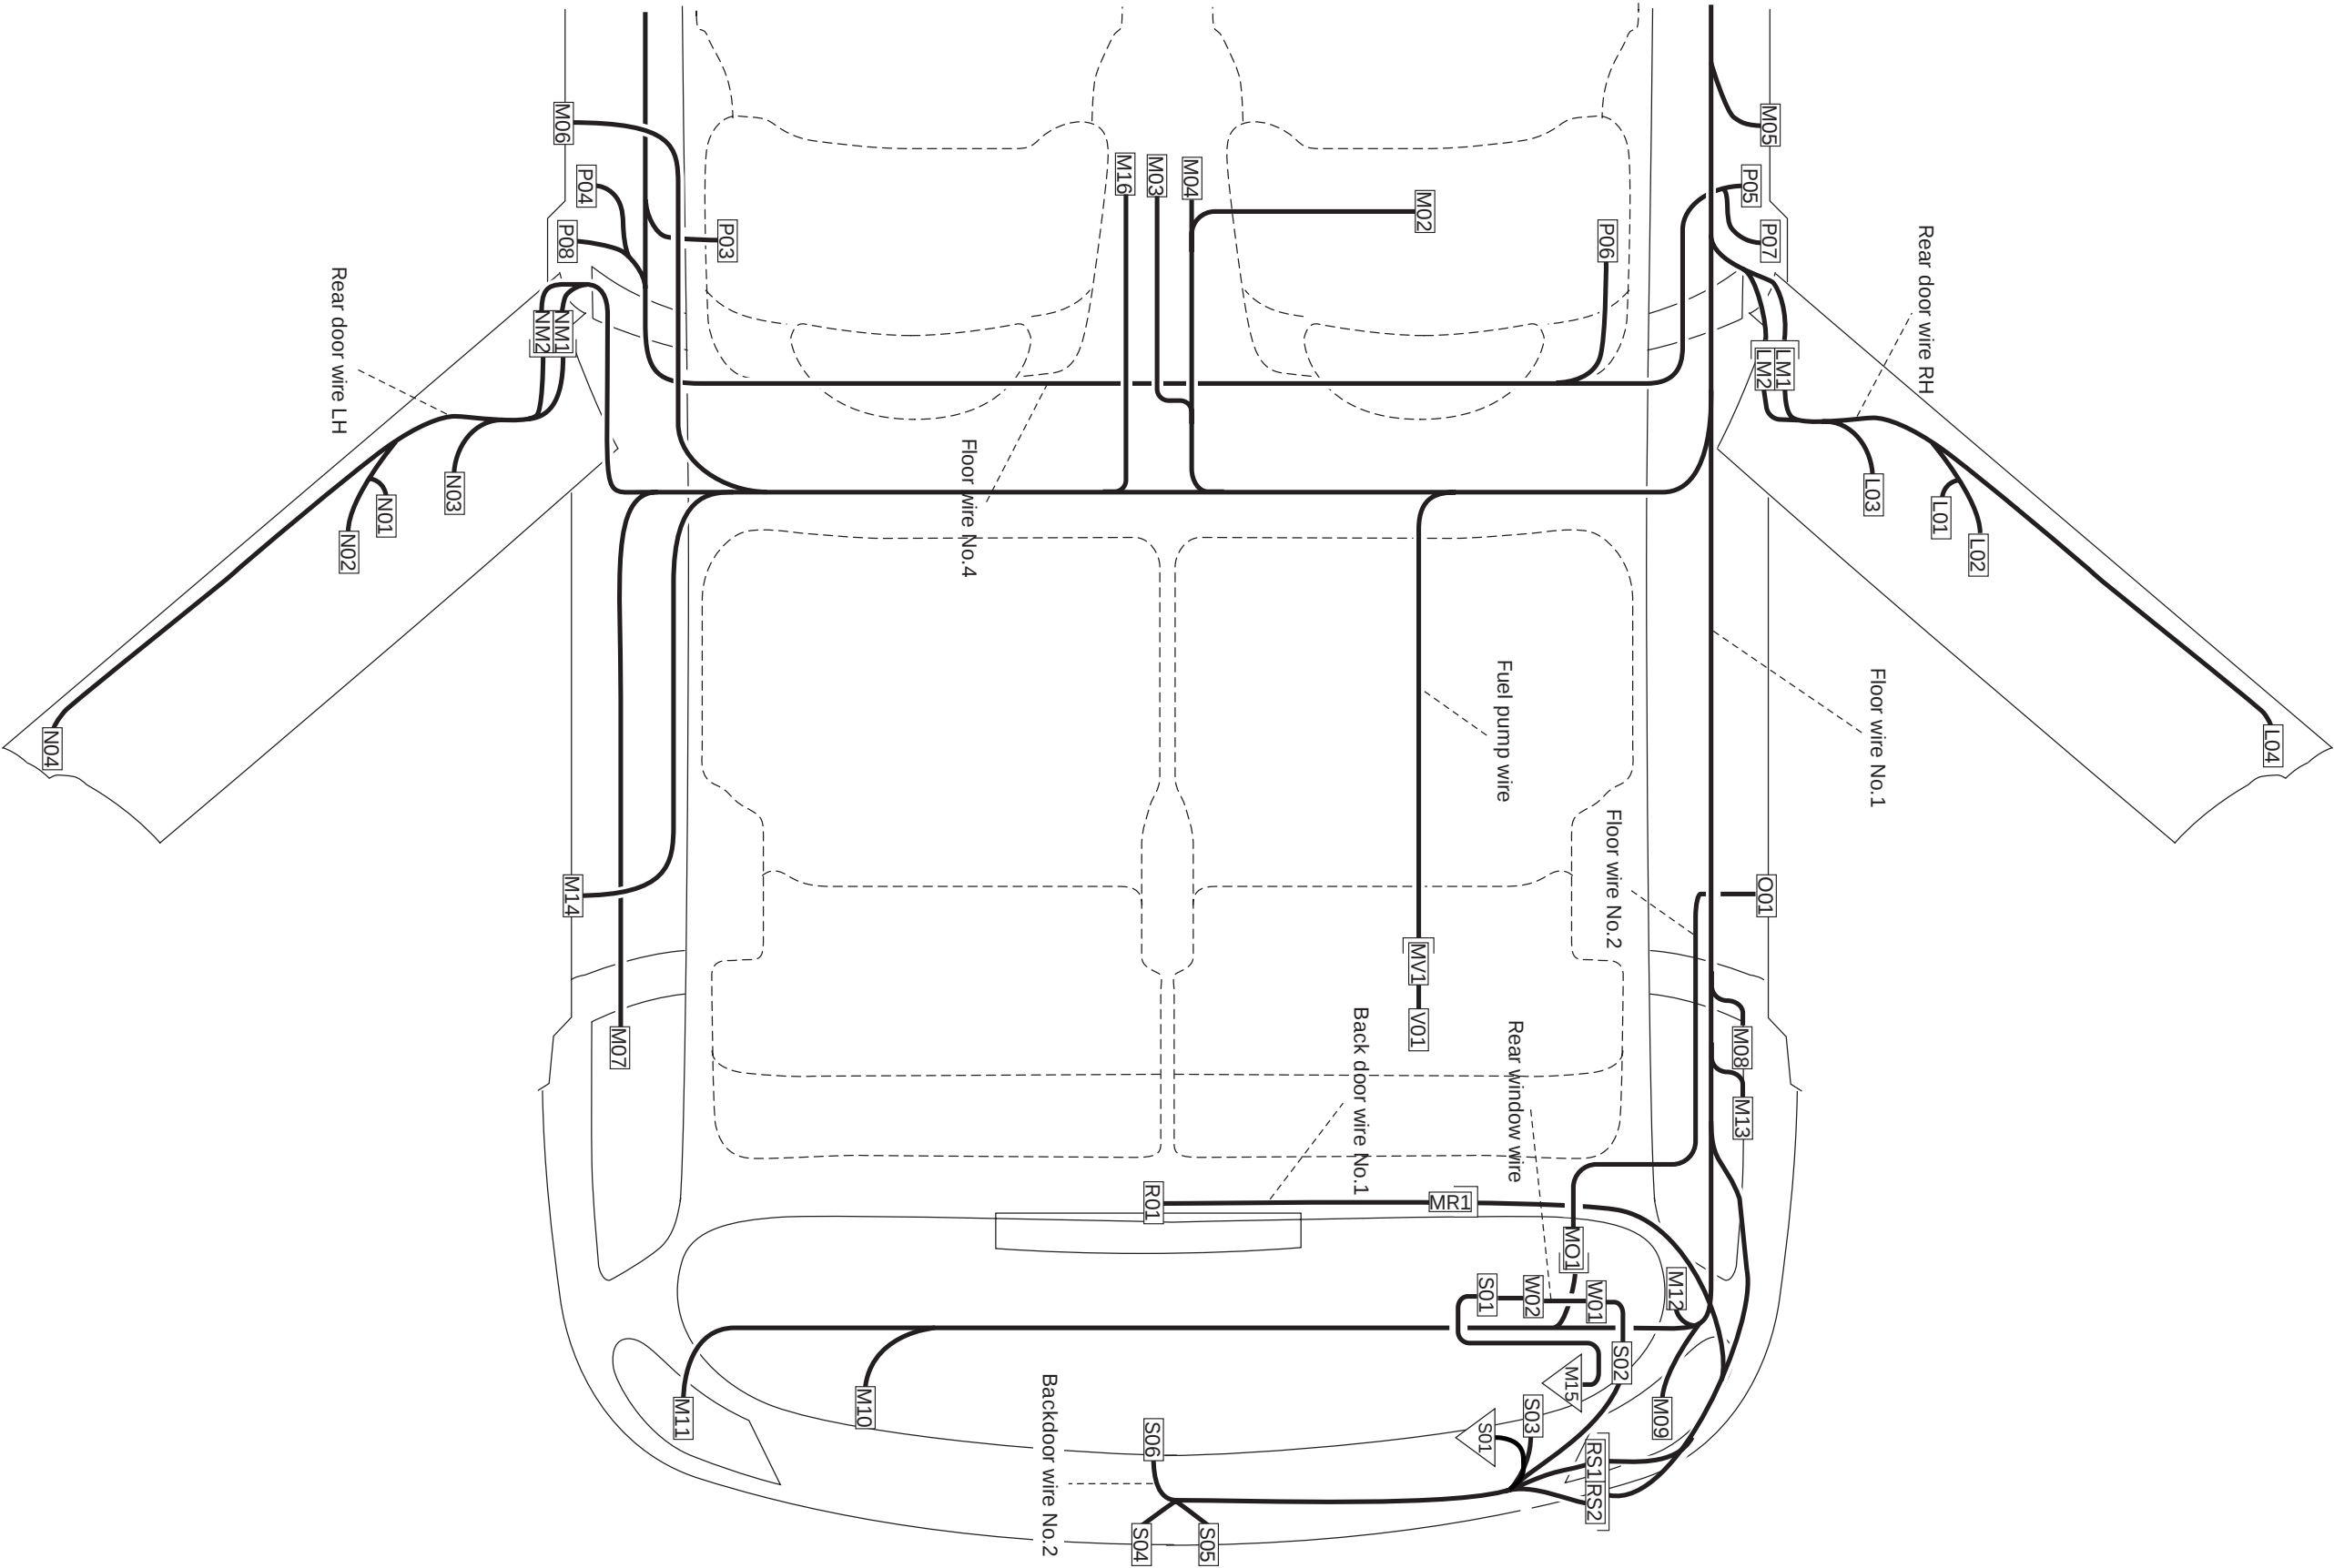

TO INDEX

TO NEXT SECTION