

IGNITION SYSTEM


IGNITION COIL.....IG-2
 REMOVAL AND INSTALLATIONIG-2
SPARK PLUG.....IG-3
 INSPECTIONIG-3

1 IGNITION COIL
1-1 REMOVAL AND INSTALLATION
1-1-1 ARTICLES TO BE PREPARED

Gauge	Torque wrench, Tester
-------	-----------------------

TIGS020002E.eps
IG-IGC-D-P-00010

1-1-2 REMOVAL AND INSTALLATION PROCEDURES
(1) COMPONENTS

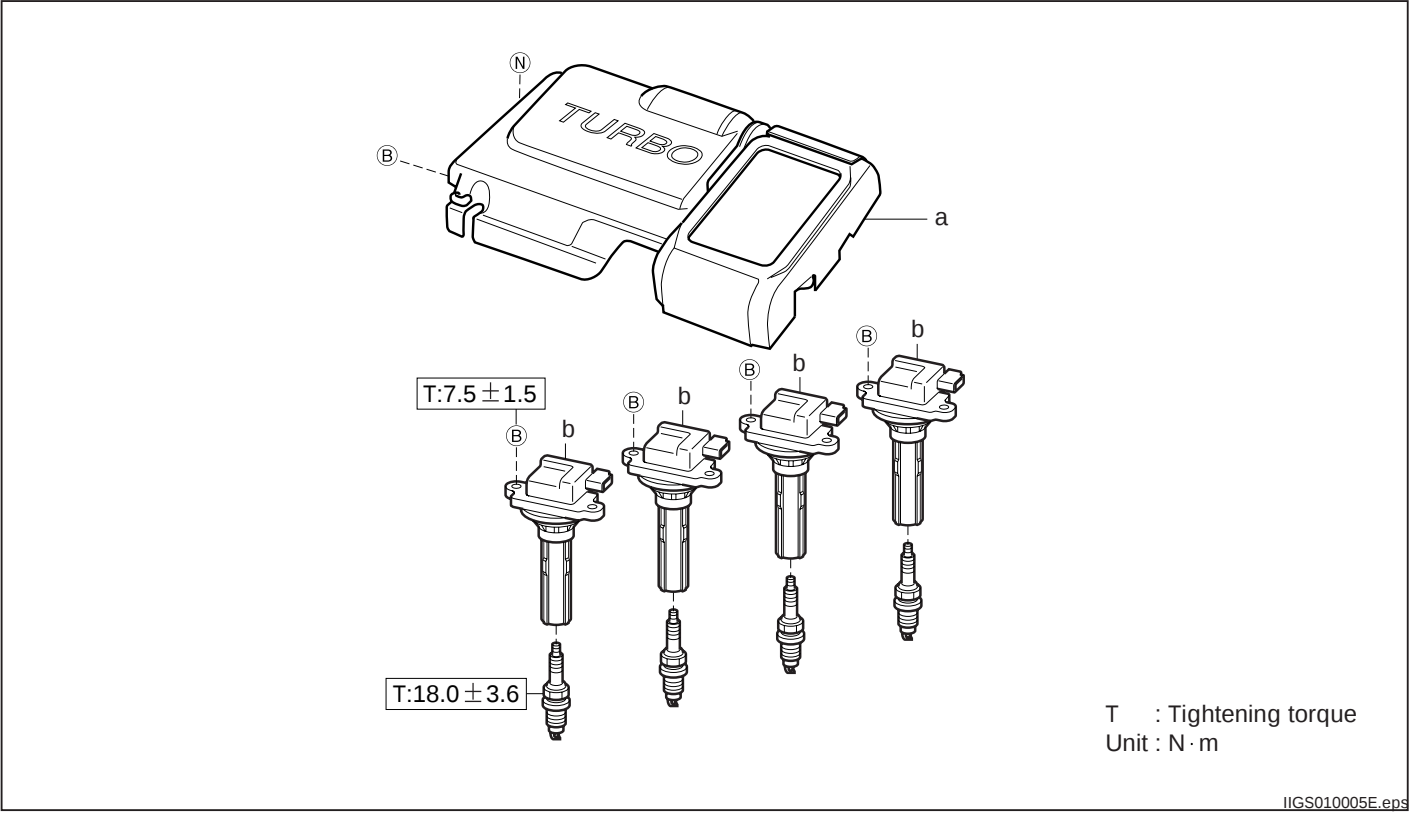

(2) REMOVAL AND INSTALLATION PROCEDURES

- 1 2 a Cover S/A, engine upper
- 2 1 b Coil, ignition

2 SPARK PLUG

2-1 INSPECTION

2-1-1 MEASUREMENT OF ELECTRODE GAP

1. Measure the electrode gap, using the plug gap gauge.

If the electrode gap is not within the specifications, adjust the gap by bending the base of the ground electrode, being careful not to touch the tip.

	K3-VET	
Manufacturer	DENSO	NGK
Type	PK20PTR-S9	BKUR6EKPA
Electrode gap (mm)	0.8 - 0.9	←
Width across flats (mm)	16	←

TIGK010001E.eps

CAUTION

- All four plugs should be the same heat range and be once manufactured by the same manufacturer.

IG-SPK-C-C-00001