

TO INDEX

REAR AXLE & SUSPENSION


COIL SPRING (TORSION BEAM TYPE) .RS-2
REMOVAL AND INSTALLATION.....RS-2

1 COIL SPRING (TORSION BEAM TYPE)

1-1 REMOVAL AND INSTALLATION

1-1-1 REMOVAL AND INSTALLATION PROCEDURES

(1) COMPONENTS

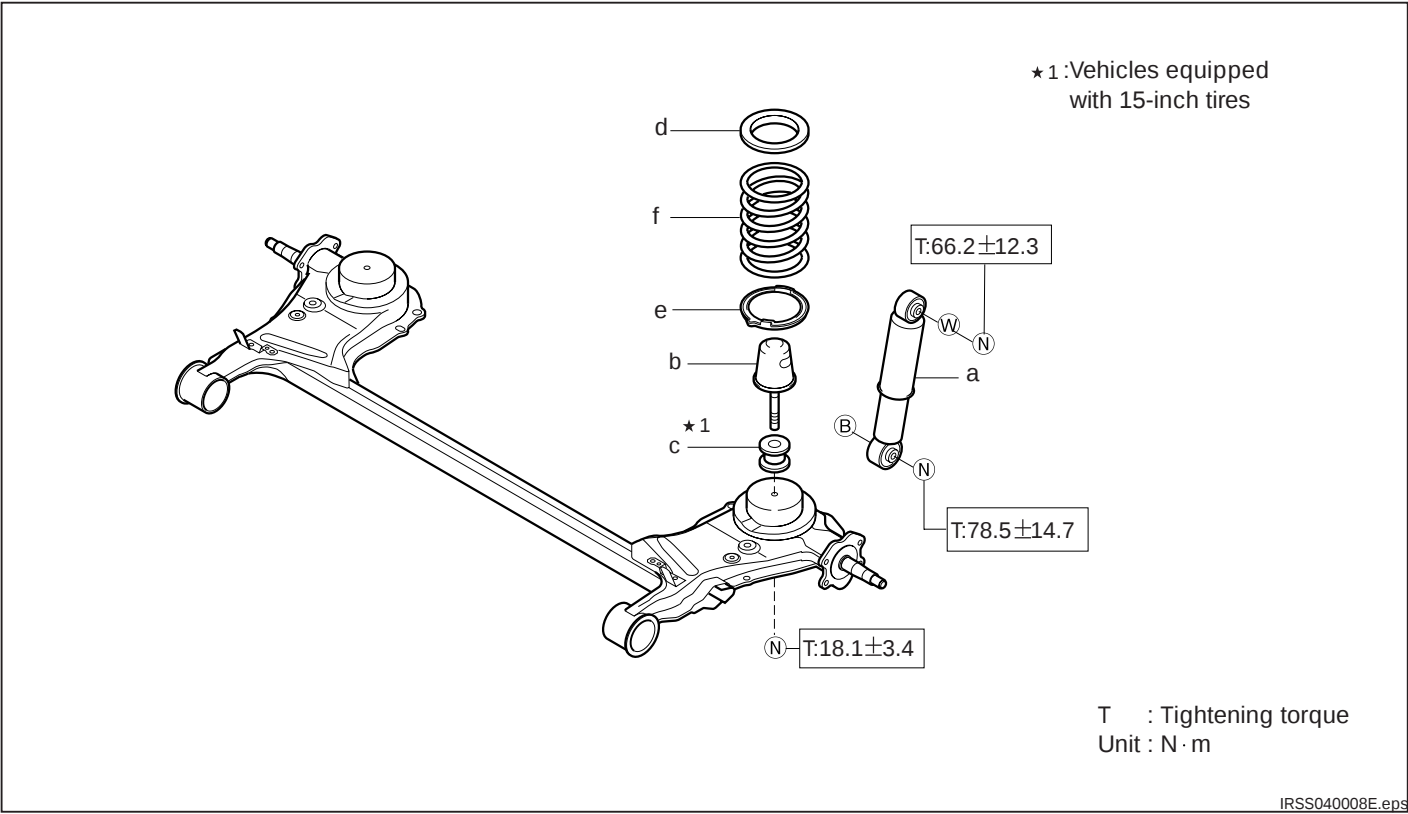

(2) REMOVAL AND INSTALLATION PROCEDURES

- 1

⑥

a

Absober, shock rear
- 2

5

b

Bumper, rear spring
- 3

4

c

Spacer, bumper block
- 4

3

d

Sheet, rear spring upper
- 5

②

e

Sheet, rear spring
- ⑥

①

f

Spring, coil rear